



YAMAHA

XP500(N)

2001

5GJ1-AE1

SERVICE MANUAL

EAS00000

**XP500 (N)
SERVICE MANUAL
©2000 by Yamaha Motor Co.Ltd.
First edition, September 2000
All rights reserved. Any reproduction or
unauthorized use without the written
permission of Yamaha Motor Co., Ltd. is
expressly prohibited.**

NOTICE

This manual was produced by the Yamaha Motor Company, Ltd. primarily for use by Yamaha dealers and their qualified mechanics. It is not possible to include all the knowledge of a mechanic in one manual. Therefore, anyone who uses this book to perform maintenance and repairs on Yamaha vehicles should have a basic understanding of mechanics and the techniques to repair these types of vehicles. Repair and maintenance work attempted by anyone without this knowledge is likely to render the vehicle unsafe and unfit for use.

Yamaha Motor Company, Ltd. is continually striving to improve all its models. Modifications and significant changes in specifications or procedures will be forwarded to all authorized Yamaha dealers and will appear in future editions of this manual where applicable.

NOTE:

Designs and specifications are subject to change without notice.

IMPORTANT INFORMATION

Particularly important information is distinguished in this manual by the following.



The Safety Alert Symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!



Failure to follow WARNING instructions could result in severe injury or death to the scooter operator, a bystander or a person checking or repairing the scooter.

CAUTION:

A CAUTION indicates special precautions that must be taken to avoid damage to the scooter.

NOTE:

A NOTE provides key information to make procedures easier or clearer.

HOW TO USE THIS MANUAL

This manual is intended as a handy, easy-to-read reference book for the mechanic. Comprehensive explanations of all installation, removal, disassembly, assembly, repair and check procedures are laid out with the individual steps in sequential order.

- ① The manual is divided into chapters. An abbreviation and symbol in the upper right corner of each page indicate the current chapter. Refer to “SYMBOLS” on the following page.
- ② Each chapter is divided into sections. The current section title is shown at the top of each page, except in Chapter 3 (“Periodic Checks and Adjustments”), where the sub-section title(-s) appears.
(In Chapter 3, “Periodic Checks and Adjustments”, the sub-section title appears at the top of each page, instead of the section title.)
- ③ Sub-section titles appear in smaller print than the section title.
- ④ To help identify parts and clarify procedure steps, there are exploded diagrams at the start of each removal and disassembly section.
- ⑤ Numbers are given in the order of the jobs in the exploded diagram. A circled number indicates a disassembly step.
- ⑥ Symbols indicate parts to be lubricated or replaced (see “SYMBOLS”).
- ⑦ A job instruction chart accompanies the exploded diagram, providing the order of jobs, names of parts, notes in jobs, etc.
- ⑧ Jobs requiring more information (such as special tools and technical data) are described sequentially.

②
①
⑥

BELT DRIVE ENG

BELT DRIVE
BELT DRIVE COVER

④

⑤

⑦

Order	Job/Part	Q'ty	Remarks
	Removing the belt drive cover		Remove the parts in the order listed.
	Side panel (right)		
	Lower cover		
	Footrest board		
1	Protector cover 1	1	
2	Protector cover 2	1	
3	Filter cover	1	
4	Filter	1	
5	Belt drive cover	1	
6	Belt drive cover gasket	1	
7	Bearing cover plate	1	
8	Bearing	1	
9	Circlip	1	
10	Oil seal	1	
11	Bearing	1	
			For installation, reverse the removal procedure.

5-44

CLUTCH ENG

REMOVING THE CLUTCH ③

1. Remove:

- generator cover ①
- Refer to “STARTER CLUTCH AND GENERATOR”.

NOTE:

Loosen each bolt 1/4 of a turn at a time, in stages and in a crisscross pattern. After all of the bolts are fully loosened, remove them.

2. Remove:

- nut ②
- clutch assembly ②
- clutch boss

3. Remove:

- circlip ①

NOTE:

Install the clutch spring holder ② onto the clutch assembly as shown. Then, compress the spring, and remove the circlip ①.

























Clutch spring holder compressor
90890-01482

4. Remove:

- spring plate stopper
- clutch spring
- pressure plate
- friction and clutch plates
- weight thrust plate
- weights
- springs

⑧

5-41

① GEN INFO 	② SPEC 	
③ CHK ADJ 	④ CHAS 	
⑤ ENG 	⑥ COOL 	
⑦ CARB 	⑧ ELEC 	
⑨ TRBL SHTG 	⑩ 	
⑪ 	⑫ 	
⑬ 	⑭ 	
⑮ 	⑯ 	⑰ 
⑱ 	⑲ 	⑳ 
㉑ 	㉒ 	㉓ 
㉔ 	㉕ New	

EAS00008

SYMBOLS

The following symbols are not relevant to every vehicle.

Symbols ① to ⑨ indicate the subject of each chapter.

- ① General information
- ② Specifications
- ③ Periodic checks and adjustments
- ④ Chassis
- ⑤ Engine
- ⑥ Cooling system
- ⑦ Carburetor(-s)
- ⑧ Electrical system
- ⑨ Troubleshooting

Symbols ⑩ to ⑰ indicate the following.

- ⑩ Serviceable with engine mounted
- ⑪ Filling fluid
- ⑫ Lubricant
- ⑬ Special tool
- ⑭ Tightening torque
- ⑮ Wear limit, clearance
- ⑯ Engine speed
- ⑰ Electrical data










Symbols ⑱ to ㉓ in the exploded diagrams indicate the types of lubricants and lubrication points.


- ⑱ Engine oil
- ⑲ Gear oil
- ⑳ Molybdenum disulfide oil
- ㉑ Wheel bearing grease
- ㉒ Lithium soap base grease
- ㉓ Molybdenum disulfide grease

Symbols ㉔ to ㉕ in the exploded diagrams indicate the following:

- ㉔ Apply locking agent (LOCTITE®)
- ㉕ Replace the part

TABLE OF CONTENTS

GENERAL INFORMATION	
	GEN INFO 1
SPECIFICATIONS	
	SPEC 2
PERIODIC CHECKS AND ADJUSTMENTS	
	CHK ADJ 3
CHASSIS	
	CHAS 4
ENGINE	
	ENG 5
COOLING SYSTEM	
	COOL 6
CARBURETORS	
	CARB 7
ELECTRICAL SYSTEM	
	ELEC 8
TROUBLESHOOTING	
	TRBL SHTG 9

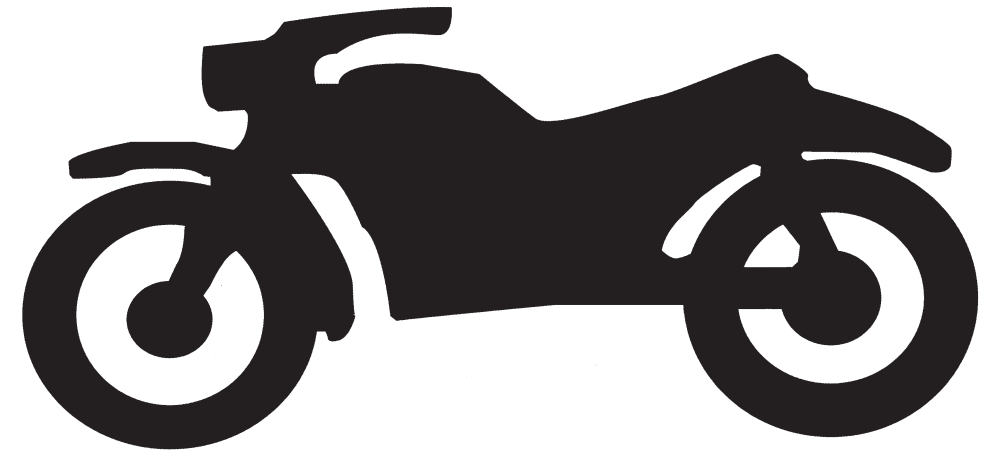


**GEN
INFO**

1

CHAPTER 1 GENERAL INFORMATION

SCOOTER IDENTIFICATION	1-1
VEHICLE IDENTIFICATION NUMBER	1-1
MODEL CODE	1-1
FEATURES	1-2
CRANKSHAFT AND BALANCER SHAFT	1-2
CHAIN DRIVE	1-2
SWINGARM AND REAR SUSPENSION	1-3
IMPORTANT INFORMATION	1-4
PREPARATION FOR REMOVAL AND DISASSEMBLY	1-4
REPLACEMENT PARTS	1-4
GASKETS, OIL SEALS AND O-RINGS	1-4
LOCK WASHERS/PLATES AND COTTERPINS	1-5
BEARINGS AND OIL SEALS	1-5
CIRCLIPS	1-5
CHECKING THE CONNECTIONS	1-6
SPECIAL TOOLS	1-7

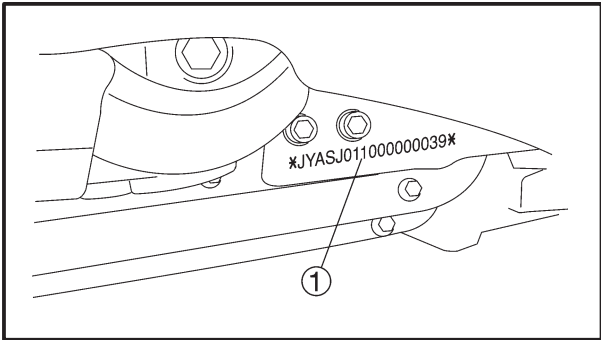


EAS00015

GENERAL INFORMATION SCOOTER IDENTIFICATION

EAS00017

VEHICLE IDENTIFICATION NUMBER

The vehicle identification number ① is stamped into the right side of the frame.

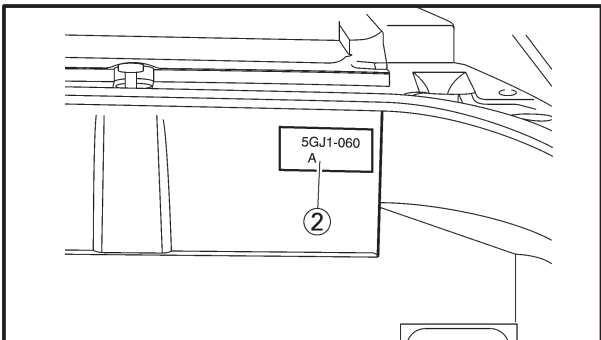

EAS00018

MODEL CODE


The model code label ② is affixed to the luggage Box. This information will be needed to order spare parts.



FEATURES


CRANKSHAFT AND BALANCER SHAFT

An integrated crankshaft of a new design is used. Horizontally opposed reciprocating balancers are used. Layout free from primary inertial force, secondary inertial force, and a couple of force, and significant vibration reduction are implemented.

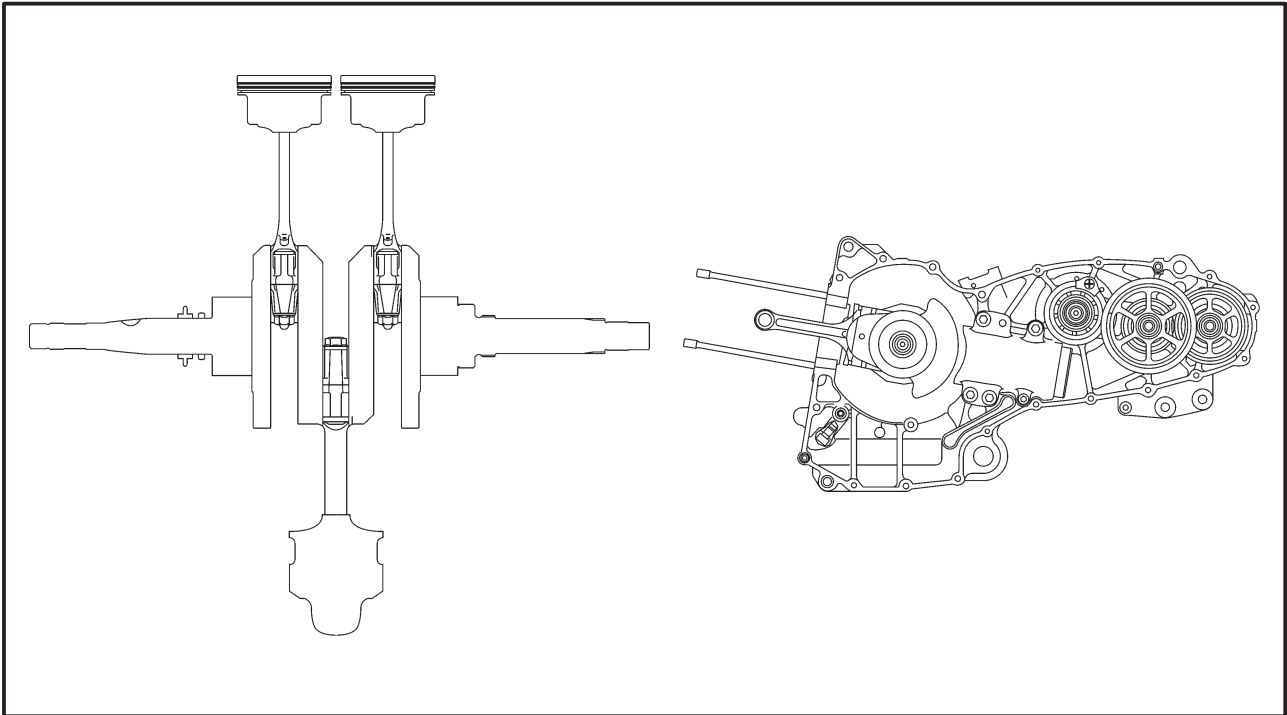

CHAIN DRIVE


The chain drive is newly designed. A non adjustable z-stage silent chain is used. A backlash free pivot coaxial drive is used. The drive and the swingarm at the right are integrated to create rigidity. The rear wheel swing system ensures high speed stability.

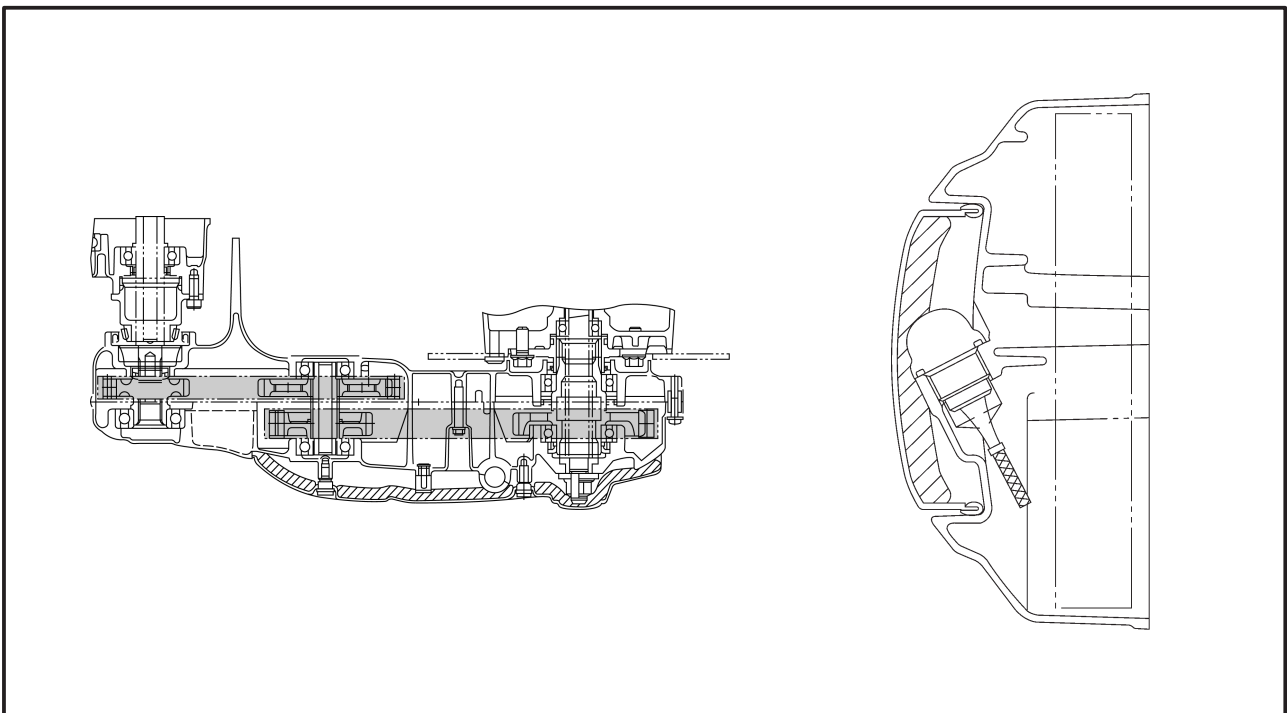




SWINGARM AND REAR SUSPENSION

A newly designed swingarm is used. A pull-type monocross suspension is used. These components are located out under the engine.


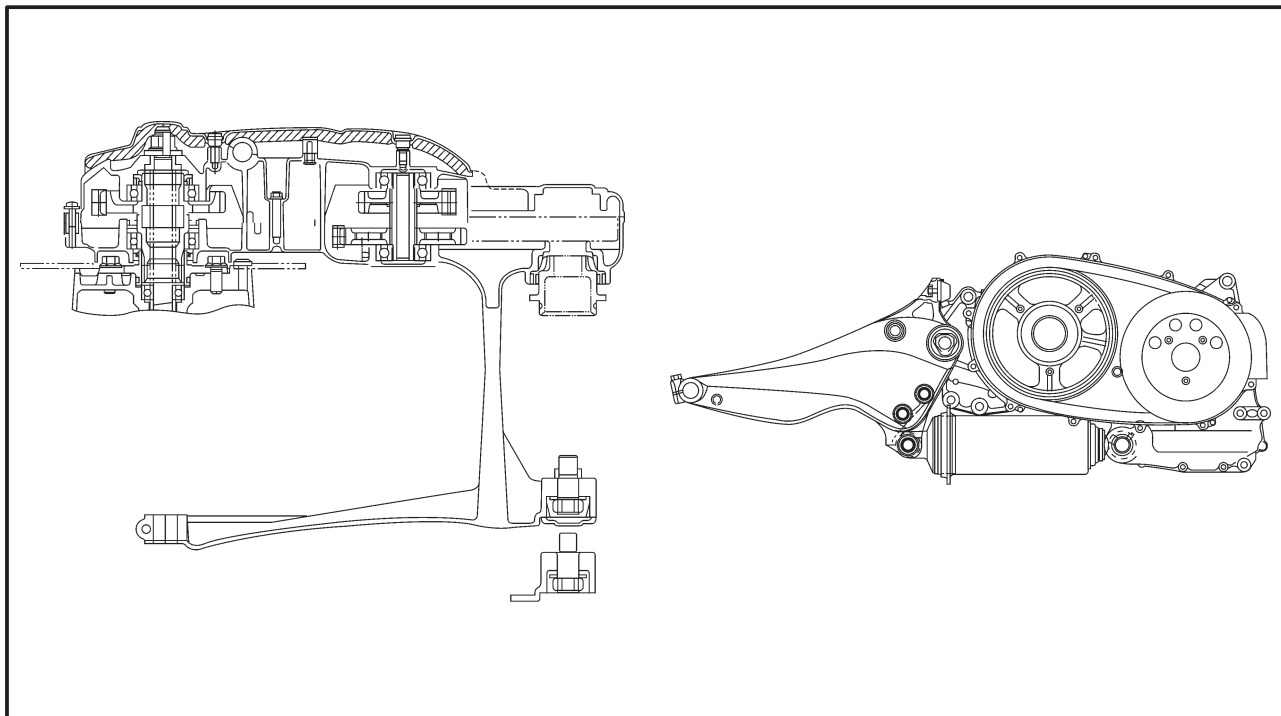


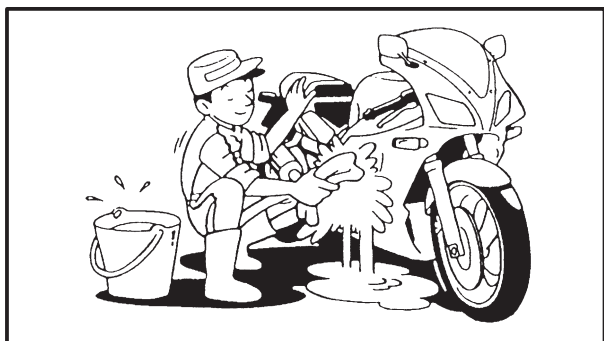

EAS00020

IMPORTANT INFORMATION PREPARATION FOR REMOVAL AND DIS- ASSEMBLY

1. Before removal and disassembly, remove all dirt, mud, dust and foreign material.
2. Use only the proper tools and cleaning equipment.
Refer to the "SPECIAL TOOLS".
3. When disassembling, always keep mated parts together. This includes gears, cylinders, pistons and other parts that have been "mated" through normal wear. Mated parts must always be reused or replaced as an assembly.
4. During disassembly, clean all of the parts and place them in trays in the order of disassembly. This will speed up assembly and allow for the correct installation of all parts.
5. Keep all parts away from any source of fire.

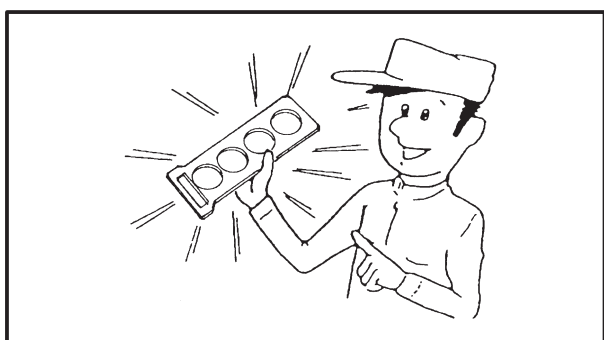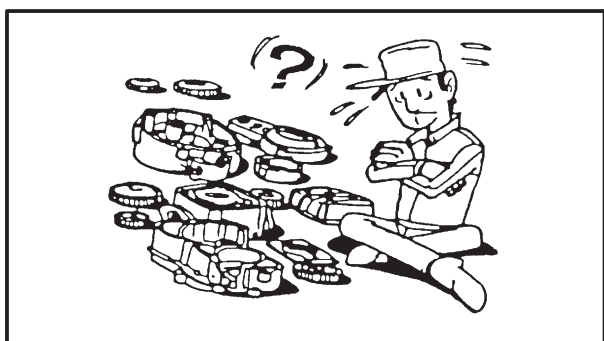

EAS00021


REPLACEMENT PARTS

Use only genuine Yamaha parts for all replacements. Use oil and grease recommended by Yamaha for all lubrication jobs. Other brands may be similar in function and appearance, but inferior in quality.

EAS00022

GASKETS, OIL SEALS AND O-RINGS


1. When overhauling the engine, replace all gaskets, seals and O-rings. All gasket surfaces, oil seal lips and O-rings must be cleaned.
2. During reassembly, properly oil all mating parts and bearings and lubricate the oil seal lips with grease.

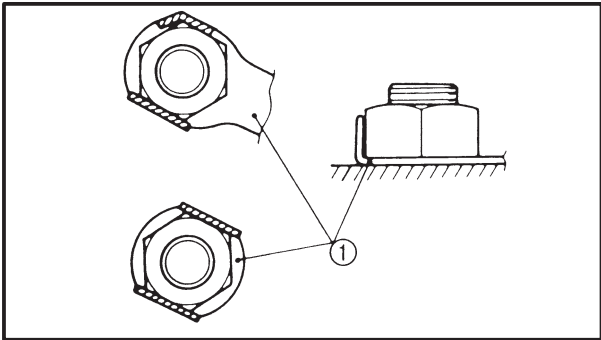

EAS00023

LOCK WASHERS/PLATES AND COTTER PINS

After removal, replace all lock washers/plates ① and cotter pins. After the bolt or nut has been tightened to specification, bend the lock washer tabs and the cotter pin ends along a flat of the bolt or nut.

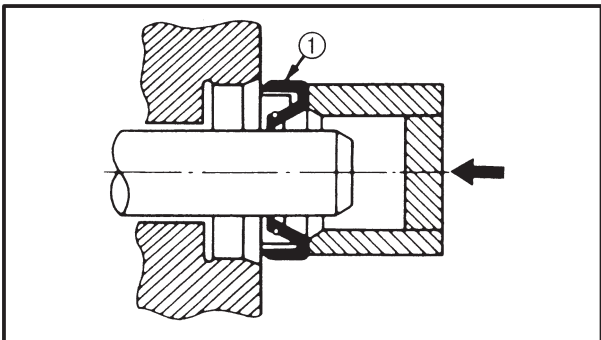


EAS00024

BEARINGS AND OIL SEALS

1. Install bearings and oil seals so that the manufacturer's marks or numbers are visible. When installing oil seals, lubricate the oil seal lips with a light coat of lithium soap base grease. Oil bearings liberally when installing, if appropriate.


① Oil seal

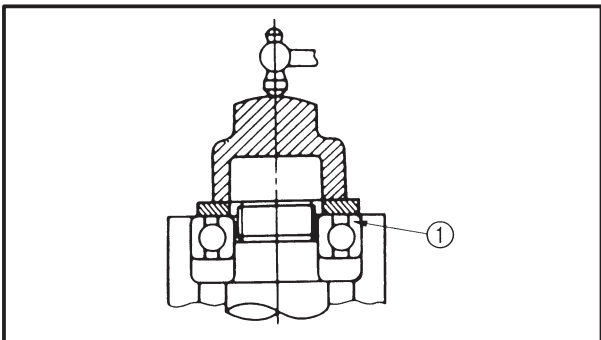

CAUTION: _____

Do not spin the bearing with compressed air because this will damage the bearing surfaces.

① Bearing

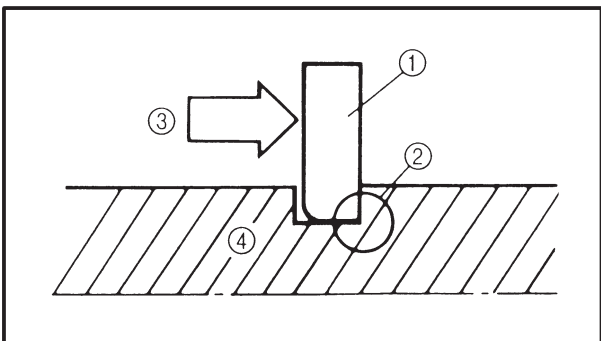

EAS00025

CIRCLIPS

Before reassembly, check all circlips carefully and replace damaged or distorted circlips. Always replace piston pin clips after one use. When installing a circlip ①, make sure the sharp-edged corner ② is positioned opposite the thrust ③ that the circlip receives.

④ Shaft


EAS00026

CHECKING THE CONNECTIONS

Check the leads, couplers, and connectors for stains, rust, moisture, etc.

1. Disconnect:

- lead
- coupler
- connector

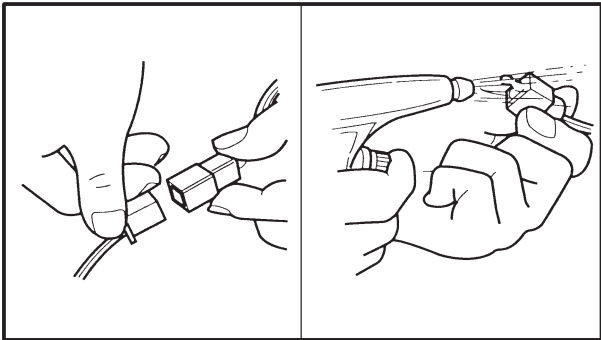


2. Check:

- lead
- coupler
- connector

Moisture → Dry with an air blower.

Rust/stains → Connect and disconnect several times.

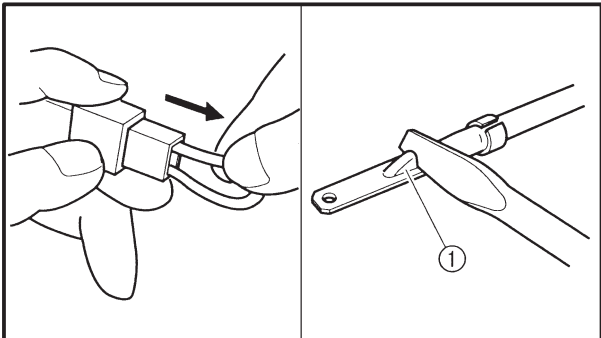


3. Check:

- all connections

Loose connection → Connect properly.

NOTE: _____

If the pin ① on the terminal is flattened, bend it up.

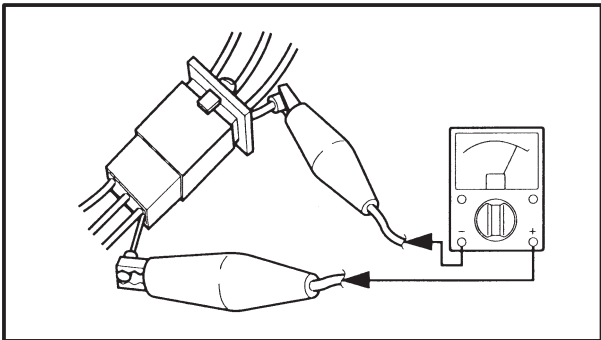

4. Connect:


- lead
- coupler
- connector

NOTE: _____

Make sure all connections are tight.


5. Check:

- continuity
(with the pocket tester)

	Pocket tester 90890-03112
---	-------------------------------------

NOTE: _____

- If there is no continuity, clean the terminals.
- When checking the wire harness, perform steps (1) to (3).
- As a quick remedy, use a contact revitalizer available at most part stores.


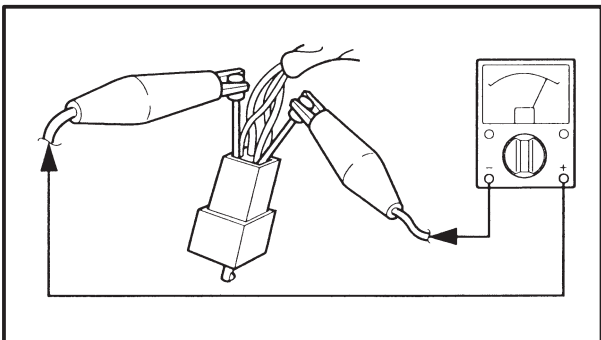

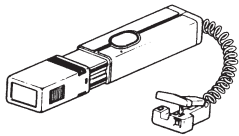
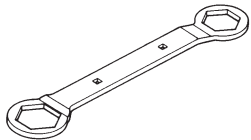
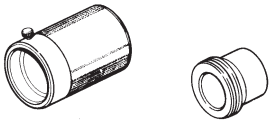
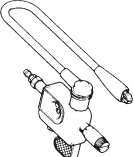
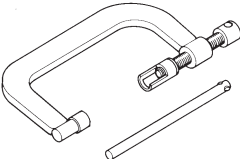




EAS00027

SPECIAL TOOLS








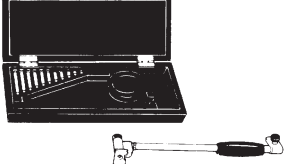
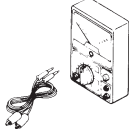
The following special tools are necessary for complete and accurate tune-up and assembly. Use only the appropriate special tools as this will help prevent damage caused by the use of inappropriate tools or improvised techniques. Special tools, part numbers or both may differ depending on the country. When placing an order, refer to the list provided below to avoid any mistakes.

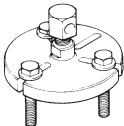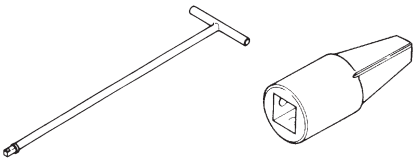Tool No.	Tool name/Function	Illustration
90890-01362	Flywheel puller This tool is used to remove the generator rotor.	
T-handle 90890-01326 Damper rod holder 90890-01294	T-handle Damper rod holder These tools are used to hold the cartridge cylinder when loosening or tightening the cartridge cylinder bolt.	
90890-01312	Fuel level gauge This tool is used to measure the fuel level in the float chamber.	
90890-03141	Timing light This tool is used to check the ignition timing.	
90890-03148	Locknut wrench This tool is used to remove the sheave or install the secondary sheave nut.	
Fork seal driver weight 90890-01367 Adapter 90890-01372	Fork seal driver weight Adapter These tools are used to install the front fork's oil seal and dust seal.	
90890-06754	Ignition checker This tool is used to check the ignition system components.	
90890-04019	Valve spring compressor This tool is used to remove or install the valve assemblies.	








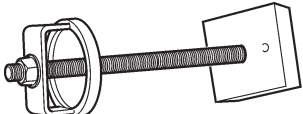
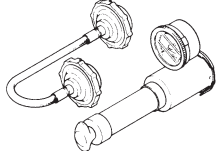
SPECIAL TOOLS

**GEN
INFO**

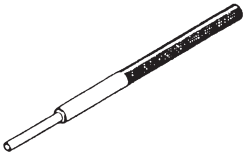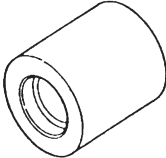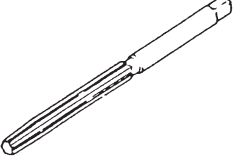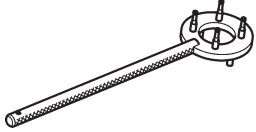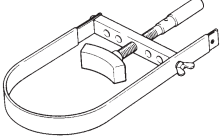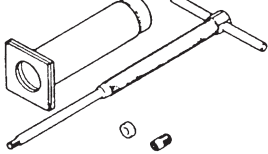


Tool No.	Tool name/Function	Illustration
90890-04111	<p>Valve guide remover (4 mm)</p> <p>This tool is used to remove or install the valve guides.</p>	
90890-04112	<p>Valve guide installer</p> <p>This tool is used to install the valve guides.</p>	
90890-04113	<p>Valve guide reamer</p> <p>This tool is used to rebores the new valve guides.</p>	
90890-01481	<p>Primary/secondary sheave holder</p> <p>This tool is used to hold the sheave assembly when removing or installing the primary and secondary sheave.</p>	
90890-01701	<p>Sheave holder</p> <p>This tool is used for hold the generator rotor when removing or installing the generator rotor bolt, generator shaft bolt or pickup coil rotor bolt.</p>	
90890-01304	<p>Piston pin puller set</p> <p>This tool is used to remove the piston pins.</p>	
90890-03008	<p>Micrometer (50~75 mm)</p> <p>This tool is used to measure the piston skirt diameter.</p>	
90890-03017	<p>Cylinder bore gauge (50~100 mm)</p> <p>This tool is used to measure the cylinder bore.</p>	
90890-03112	<p>Pocket tester</p> <p>This tool is used to check the electrical system.</p>	

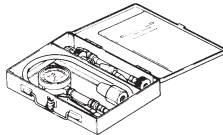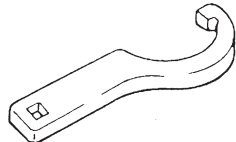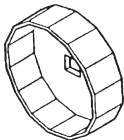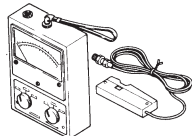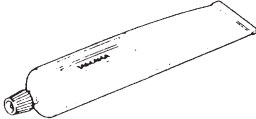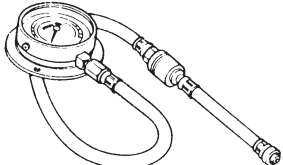

Tool No.	Tool name/Function	Illustration
Compression gauge 90890-03081 Compression gauge adapter 90890-04082	Compression gauge These tools are used to measure engine compression.	
90890-01403	Steering nut wrench This tool is used to loosen or tighten the steering stem ring nuts.	
90890-01469	Oil filter wrench This tool is needed to loosen or tighten the oil filter cartridge.	
90890-03113	Engine tachometer This tool is used to check engine speed.	
90890-85505	Yamaha bond No. 1215 This sealant is used to seal two mating surfaces (e.g., crankcase mating surfaces).	
Oil pressure gauge 90890-03153 Adapter 90890-03124	Oil pressure gauge This tool is used to measure the engine oil pressure.	
90890-01439	Plane bearing installer/remover This tool is used to install or remove the bearing.	
Sheave spring compressor 90890-04134 Sheave fixed block 90890-04135	Sheave spring compressor Sheave fixed block This tool is used to remove spring.	
90890-01325	Radiator cap tester This tool is used to check the cooling system.	

SPECIAL TOOLS**GEN
INFO**

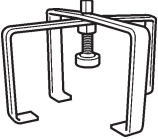Tool No.	Tool name/Function	Illustration
90890-01482	Clutch spring compressor This tool is used to remove or install the nut.	 A technical line drawing of a clutch spring compressor. It consists of two vertical legs connected at the top by a horizontal bar. A central vertical rod passes through the horizontal bar, with a nut and a spring attached to its lower end.



S P E E C

2

CHAPTER 2 SPECIFICATIONS

GENERAL SPECIFICATIONS	2-1
ENGINE SPECIFICATIONS	2-2
CHASSIS SPECIFICATIONS	2-10
ELECTRICAL SPECIFICATIONS	2-13
CONVERSION TABLE	2-16
TIGHTENING TORQUES	2-16
GENERAL TIGHTENING TORQUES	2-16
ENGINE TIGHTENING TORQUES	2-17
CHASSIS TIGHTENING TORQUES	2-21
LUBRICATION POINTS AND LUBRICANT TYPES	2-23
OIL FLOW DIAGRAMS	2-24
COOLANT FLOW DIAGRAMS	2-28
CABLE ROUTING	2-29



SPECIFICATIONS

GENERAL SPECIFICATIONS


Item	Standard	Limit
Model code	XP500 (N) : 5GJ1 (EUR) 5GJ2 (GBR) 5GJ3 (OCE)	...
Dimensions		
Overall length	2235 mm	...
Overall width	775 mm	...
Overall height	1410 mm	...
Seat height	795 mm	...
Wheelbase	1575 mm	...
Minimum ground clearance	130 mm	...
Minimum turning radius	2800 mm	...
Weight		
Wet (with oil and a full fuel tank)	205 kg	...
Dry (without oil and fuel)	197 kg	...
Maximum load (total of cargo, rider, passenger, and accessories)	183 kg	...








ENGINE SPECIFICATIONS

Item	Standard	Limit
Engine		
Engine type	Liquid-cooled, 4-stroke, DOHC	...
Displacement	499 cm ³	...
Cylinder arrangement		...
Bore × stroke	66 × 73 mm	...
Compression ratio	10.1	...
Engine idling speed	1150 ~ 1250 r/min	...
Vacuum pressure at engine idling speed	35 kPa (3.5 kg/cm ²)	...
Standard compression pressure (at sea level)	1450 kPa (14.5 kg/cm ²) at 360 r/min	...
Fuel		
Recommended fuel	Regular unleaded gasoline	...
Fuel tank capacity		
Total (including reserve)	14L	...
Engine oil		
Lubrication system	Dry sump	...
Recommended oil		...
	SAE10W30 or SAE10W40 API service SE, SF, SG type or higher	...
Quantity		
Total amount	3.6 L	...
Without oil filter cartridge replacement	2.8 L	...
With oil filter cartridge replacement	2.9 L	...
Oil pressure (hot)	150 kPa at 1200 r/min (1.50 kgf/cm ² at 1200 r/min)	...
Relief valve opening pressure	450 ~ 550 kPa (4.5 ~ 5.5 kgf/cm ²)	...

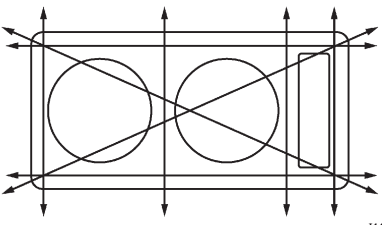



Item	Standard	Limit
Oil filter Oil filter type Bypass valve opening pressure	Cartridge (paper) 80 ~ 120 kPa (0.8 ~ 1.2 kgf/cm ²)
Oil pump Oil pump type Inner-rotor-to-outer-rotor-tip clearance Outer-rotor-to-oil-pump-housing clearance	Trochoidal 0.04 ~ 0.12 mm 0.045 ~ 0.085 mm	... 0.20 mm 0.15 mm
Cooling system Radiator capacity Radiator cap opening pressure Radiator core Width Height Depth Coolant reservoir Capacity Water pump Water pump type Reduction ratio	1.5 L 107.9 ~ 137.3 kPa (1.079 ~ 1.373 kgf/cm ²) 330 mm 138 mm 24 mm 0.6 L Single-suction centrifugal pump 23/19 (1.210)
Starting system type	Electric starter	
Spark plugs Model (manufacturer) × quantity Spark plug gap	CR 7E/NGK × 2 0.7 ~ 0.8 mm
Cylinder head Max. warpage 	...	0.10 mm

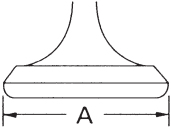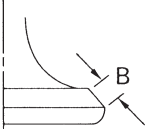
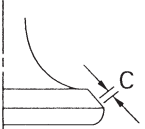
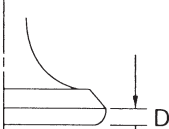
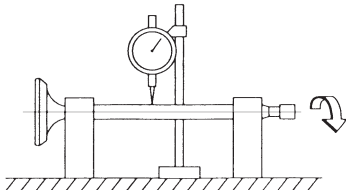


Item	Standard	Limit
Timing chain		
Model/number of links	SCR-0409SDH/132	•••
Tensioning system	Automatic	•••
Valves, valve seats, valve guides		
Valve clearance (cold)		
Intake	0.15 ~ 0.20 mm	•••
Exhaust	0.25 ~ 0.30 mm	•••
Valve dimensions		
   		
Head Diameter		
Face Width		
Seat Width		
Margin Thickness		
Valve head diameter A		
Intake	24.9 ~ 25.1 mm	•••
Exhaust	21.9 ~ 22.1 mm	•••
Valve face width B		
Intake	1.14 ~ 1.98 mm	•••
Exhaust	1.14 ~ 1.98 mm	•••
Valve seat width C		
Intake	0.9 ~ 1.1 mm	1.6 mm
Exhaust	0.9 ~ 1.1 mm	1.6 mm
Valve margin thickness D		
Intake	0.6 ~ 0.8 mm	0.5 mm
Exhaust	0.6 ~ 0.8 mm	0.5 mm
Valve stem diameter		
Intake	3.975 ~ 3.990 mm	3.95 mm
Exhaust	3.960 ~ 3.975 mm	3.935 mm
Valve guide inside diameter		
Intake	4.000 ~ 4.012 mm	4.05 mm
Exhaust	4.000 ~ 4.012 mm	4.05 mm
Valve-stem-to-valve-guide clearance		
Intake	0.010 ~ 0.037 mm	0.08 mm
Exhaust	0.025 ~ 0.052 mm	0.1 mm
Valve stem runout	•••	0.04 mm
		
Valve seat width		
Intake	0.9 ~ 1.1 mm	1.6 mm
Exhaust	0.9 ~ 1.1 mm	1.6 mm

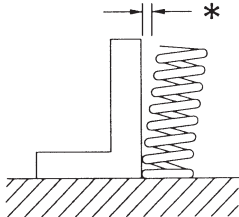


Item	Standard	Limit
<p>Valve springs</p> <p>Free length</p> <p>Intake</p> <p>Exhaust</p> <p>Installed length (valve closed)</p> <p>Intake</p> <p>Exhaust</p> <p>Compressed spring force (installed)</p> <p>Intake</p> <p>Exhaust</p> <p>Spring tilt</p>  <p>Intake (inner)</p> <p>Exhaust</p> <p>Winding direction (top view)</p> <p>Intake</p> <p>Exhaust</p>	<p>35.59 mm</p> <p>35.59 mm</p> <p>30.39 mm</p> <p>30.39 mm</p> <p>91.1 ~ 104.9 N (9.3 ~ 10.7 kgf) at 30.4 mm</p> <p>91.1 ~ 104.9 N (9.3 ~ 10.7 kgf) at 30.4 mm</p> <p>•••</p> <p>•••</p> <p>Clockwise</p> <p>Clockwise</p> 	<p>33.81 mm</p> <p>33.81 mm</p> <p>•••</p> <p>•••</p> <p>•••</p> <p>•••</p> <p>2.5°/1.6 mm</p> <p>2.5°/1.6 mm</p> <p>•••</p> <p>•••</p>
<p>Cylinders</p> <p>Cylinder arrangement</p> <p>Bore × stroke</p> <p>Compression ratio</p> <p>Bore</p> <p>Max. taper</p> <p>Max. out-of-round</p>	<p>Forward-included parallel-2 cylinder</p> <p>66.0 × 73.0 mm</p> <p>10.1</p> <p>66.00 ~ 66.01 mm</p> <p>•••</p> <p>•••</p>	<p>•••</p> <p>•••</p> <p>•••</p> <p>•••</p> <p>0.05 mm</p> <p>0.05 mm</p>

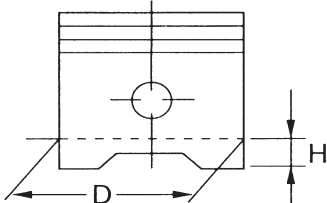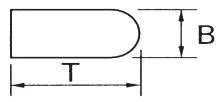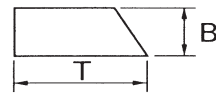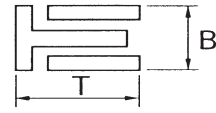

Item	Standard	Limit
Pistons		
Piston-to-cylinder clearance Diameter D	0.020 ~ 0.045 mm 65.965 ~ 65.980 mm	0.15 mm ...
 Height H	9 mm	...
Piston pin bore (in the piston)		
Diameter	16.002 ~ 16.013 mm	...
Offset	0.5 mm	...
Offset direction	Intake side	...
Piston pins		
Outside diameter	15.991 ~ 16.000 mm	...
Piston-pin-to-piston-pin-bore clearance	0.002 ~ 0.022 mm	0.072 mm
Piston rings		
Top ring		
		
Ring type	Barrel	...
Dimensions (B × T)	0.80 × 2.45 mm	...
End gap (installed)	0.15 ~ 0.25 mm	0.50 mm
Ring side clearance	0.030 ~ 0.065 mm	0.115 mm
2nd ring		
		
Ring type	Plain	...
Dimensions (B × T)	0.8 × 2.5 mm	...
End gap (installed)	0.4 ~ 0.5 mm	0.75 mm
Ring side clearance	0.020 ~ 0.055 mm	0.105 mm
Oil ring		
		
Dimensions (B × T)	1.5 × 2.0 mm	...
End gap (installed)	0.10 ~ 0.35 mm	...

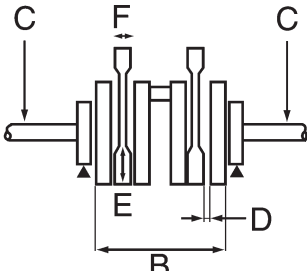

Item	Standard	Limit
Connecting rods Crankshaft-pin-to-big-end-bearing clearance Bearing color code	0.026 ~ 0.050 mm 1 = Blue 2 = Black 3 = Brown 4 = Green
Crankshaft  Width B Max. runout C Big end side clearance D Big end radial clearance E Small end free play F Crankshaft-journal-to-crankshaft-journal-bearing clearance Bearing color code	118.55 ~ 118.60 mm 0.160 ~ 0.262 mm 0.026 ~ 0.050 mm 0.32 ~ 0.50 mm 0.040 ~ 0.082 mm 1 = Blue 2 = Black 3 = Brown 4 = Green	... 0.03 mm
Clutch Clutch type Clutch release method Friction plates Thickness Plate quantity Friction plate Thickness Plate quantity Max. warpage Clutch plate Thickness Plate quantity Max. warpage Clutch springs Free length Spring quantity	Wet, multiple disc automatic Automatic 2.75 ~ 3.05 mm 5 1.8 ~ 2.0 mm 2 ... 1.3 ~ 1.5 mm 4 ... 25.9 mm 6	... 2.65 mm 1.7 mm ... 0.1 mm 25.4 mm ...
V-belt V-belt width	32 mm	30.5 mm



Item	Standard	Limit
Transmission		
Primary reduction system	Spur gear/helical gear	...
Primary reduction ratio	52/32 × 36/22 (2.659)	...
Secondary reduction system	Chain drive	...
Secondary reduction ratio	41/25 × 40/29 (2.262)	...
Max. main axle runout	...	0.08 mm
Max. drive axle runout	...	0.08 mm
Air filter type	Dry element	...
Fuel pump		
Pump type	Electrical	...
Model (manufacturer)	3LN (MITSUBISHI)	...
Output pressure	8.3 ~ 12.3 kPa (0.83 ~ 0.123 kgf/cm ²)	...
Carburetors		
Model (manufacturer) × quantity	BS30 (MIKUNI) × 2	...
Throttle cable free play (at the flange of the throttle grip)	3 ~ 5 mm	...
ID mark	5GJ1 00	...
Main jet	#102.5	...
Main air jet	#100	...
Jet needle	4DK4-3/5	...
Needle jet	0-OM (#893)	...
Pilot air jet	#85	...
Pilot air jet	#170	...
Pilot outlet	0.8	...
Pilot jet	#22.5	...
Bypass 1	0.8	...
Bypass 2	0.8	...
Bypass 3	0.8	...
Pilot screw turns out	2	...
Valve seat size	1.0	...
Fuel level (below the line on the float chamber)	5.5 ~ 6.5 mm	...





CHASSIS SPECIFICATIONS

Item	Standard	Limit
Frame		
Frame type	Diamond	•••
Caster angle	28°	•••
Trail	95 mm	•••
Front wheel		
Wheel type	Cast wheel	•••
Rim		
Size	14 × MT3.50	•••
Material	Aluminum	•••
Wheel travel	120 mm	•••
Wheel runout		
Max. radial wheel runout	•••	1 mm
Max. lateral wheel runout	•••	0.5 mm
Rear wheel		
Wheel type	Cast wheel	•••
Rim		
Size	14 × MT4.50	•••
Material	Aluminum	•••
Wheel travel	120 mm	•••
Wheel runout		
Max. radial wheel runout	•••	1 mm
Max. lateral wheel runout	•••	0.5 mm
Front tire		
Tire type	Tubeless	•••
Size	120/70-14	•••
Model (manufacturer)	BRIDGESTONE HOOP B03 DUNLOP D305FA	••• •••
Tire pressure (cold)		
0 ~ 90 kg	200 kPa (2.0 kg/cm ² , 2.0 bar)	•••
90 ~ 197 kg	225 kPa (2.25 kg/cm ² , 2.25 bar)	•••
High-speed riding	225 kPa (2.25 kg/cm ² , 2.25 bar)	•••
Min. tire tread depth	•••	1.6 mm

CHASSIS SPECIFICATIONS

SPEC

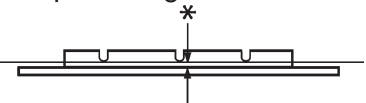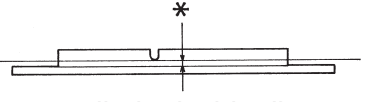
Item	Standard	Limit
Rear tire		
Tire type	Tubeless	•••
Size	150/70-14	•••
Model (manufacturer)	BRIDGESTONE HOOP B02 DUNLOP D305	•••
Tire pressure (cold)		
0 ~ 90 kg	225 kPa (2.25 kg/cm ² , 2.25 bar)	•••
90 ~ 197 kg	250 kPa (2.50 kg/cm ² , 2.50 bar)	•••
High-speed riding	250 kPa (2.5 kg/cm ² , 2.5 bar)	•••
Min. tire tread depth		1.6 mm
Front brakes		
Brake type	Single-disc brake	•••
Operation	Right-hand operation	•••
Recommended fluid	DOT 4	•••
Brake discs		
Diameter × thickness	282 × 5 mm	•••
Min. thickness	•••	4.5 mm
Max. deflection	•••	0.15 mm
Brake pad lining thickness	6.0 mm	0.8 mm
		
Master cylinder inside diameter	14 mm	•••
Caliper cylinder inside diameter	30.16 mm and 33.34 mm	•••
Rear brake		
Brake type	Single-disc brake	•••
Operation	Left-hand operation	•••
Recommended fluid	DOT 4	•••
Brake discs		
Diameter × thickness	267 × 5 mm	•••
Min. thickness	•••	3.5 mm
Max. deflection	•••	0.15 mm
Brake pad lining thickness	8.3 mm	0.8 mm
		
Master cylinder inside diameter	12.7 mm	•••
Caliper cylinder inside diameter	38.1 mm	•••

CHASSIS SPECIFICATION

SPEC



Item	Standard	Limit
Front suspension		
Suspension type	Telescopic fork	...
Front fork type	Coil spring/oil damper	...
Front fork travel	120 mm	...
Spring		
Free length	428.5 mm	419.9 mm
Spacer length	129.6 mm	...
Installed length	419.5 mm	...
Spring rate (K1)	11.8 N/mm (1.2 kgf/mm)	...
Spring rate (K2)	15.7 N/mm (1.6kgf/mm)	...
Spring rate (K3)	19.6 N/mm (2 kgf/mm)	...
Spring stroke (K1)	0 ~ 19 mm	...
Spring stroke (K2)	19 ~ 83 mm	...
Spring stroke (K3)	83 ~ 120 mm	...
Optional spring available	No	...
Fork oil		
Recommended oil	Suspension oil "01" or equivalent	...
Quantity (each front fork leg)	402 cm ³	...
Level (from the top of the innertube, with the inner tube fully compressed, and without the fork spring)	135 mm	...
Steering		
Steering bearing type	Angular ball bearings	...
Rear suspension		
Suspension type	Swingarm (link suspension)	...
Rear shock absorber assembly type	Coil spring/gas-oil damper	...
Rear shock absorber assembly travel	44.5 mm	...
Spring		
Free length	190 mm	...
Installed length	180 mm	...
Spring rate (K1)	226 N/mm (23.05 kgf/mm)	...
Spring rate (K2)	294 N/mm (29.98 kgf/mm)	...
Spring stroke (K1)	0 ~ 30 mm	...
Spring stroke (K2)	30.0 ~ 44.5 mm	...
Optional spring available	No	...
Standard spring preload gas/air pressure	4.9 kPa (0.05 kg/cm ²)	...
Drive chain		
Model (manufacturer)	23RH303.5-82ASM (Borg warner)	...
Link quantity	82	...
Primary chain		
Model (manufacturer)	89HV302.5RCF-66 (Borg warner)	...
Link quantity	66	...



ELECTRICAL SPECIFICATIONS

Item	Standard	Limit
System voltage	12 V	...
Ignition system		
Ignition system type	T.C.I.	...
Ignition timing	10° BTDC at 1200 r/min	...
Advancer type	Digital	...
Pickup coil resistance/color	189 ~ 231 Ω/Gy-B	...
Transistorized coil ignition unit model (manufacturer)	J4T120 (MITSUBISHI)	...
Ignition coils		
Model	J0313	...
Minimum ignition spark gap	6 mm	...
Primary coil resistance	1.87 ~ 2.53 Ω	...
Secondary coil resistance	12 ~ 18 kΩ	...
Throttle position sensor standard resistance	4 ~ 6 kΩ	...
Charging system		
System type	AC magneto	...
Model (manufacturer)	F4T373 (MITSUBISHI)	...
Nominal output	14 V/305W at 5,000 r/min	...
Stator coil resistance	0.375 Ω	...
Voltage regulator		
Regulator type	Semiconductor, short circuit type	...
Model (manufacturer)	SH650A-12 (SHINDENGEN)	...
No-load regulated voltage	14.1 ~ 14.9 V	...
Rectifier		
Model	SH650A-12	...
Rectifier capacity	18 A	...
Withstand voltage	200 V	...
Battery		
Battery type	GT9B-4	...
Battery voltage/capacity	12 V/8 Ah	...
Headlight type	Halogen bulb	...
Bulbs (voltage/wattage × quantity)		
Headlight	12 V 60 W/55 W + 55 W	...
Auxiliary light	12 V 5 W × 2	...
Tail/brake light	12 V 5 W/21 W × 2	...
Turn signal light (Front)	12 V 21 W/5 W × 2	...
Turn signal light (Rear)	12 V 21 W × 2	...

ELECTRICAL SPECIFICATIONS

SPEC



Item	Standard	Limit
License plate light	12 V 5 W × 1	...
Meter light	12 V 1.7 W × 3	...
High beam indicator light	12 V 1.7 W × 1	...
Oil level indicator light	12 V 1.7 W × 1	...
Turn signal indicator light	12 V 3.4 W × 2	...
Electric starting system		
System type	Constant mesh	...
Starter motor		
Model (manufacturer)	SM-13 (MITSUBA)	...
Power output	0.7 kW	...
Brushes		
Overall length	12 mm	4.0 mm
Spring force	7.65 ~ 10.01 N (780 ~ 1021 gf)	...
Commutator resistance	0.0015 ~ 0.0025 Ω	...
Commutator diameter	28 mm	27 mm
Mica undercut	0.7 mm	...
Starter relay		
Model (manufacturer)	MS5F-561 (JIDECO)	...
Amperage	180 A	...
Coil resistance	4.18 ~ 4.62 Ω	...
Horn		
Horn type	Plain	...
Model (manufacturer) × quantity	YF-12 (NIKKO) × 2	...
Max. amperage	3 A	...
Flasher relay		
Relay type	Full-transistor	...
Model (manufacturer)	FE246BH (DENSO)	...
Self-cancelling device built-in	No	...
Turn signal blinking frequency	75 ~ 95 cycles/min.	...
Wattage	21 W × 2 + 3.4 W	...
Fuel sender		
Model (manufacturer)	5GJ (NIPPON SEIKI)	...
Resistance		
(Full)	4 ~ 10 Ω	...
(Empty)	90 ~ 100 Ω	...
Sidestand relay		
Model	ACA12115-1	...
Coil resistance	70 ~ 90 Ω	...
Fuel pump maximum amperage	1 A	...
Fuel pump relay model	ACA12115 MC2	...
Resistance	70 ~ 90 Ω	...
Thermo switch model (manufacturer)	5GH, 5GJ (NIPPON TERMOSTAT)	...

ELECTRICAL SPECIFICATIONS



Item	Standard	Limit
Temperature sender		
Resistance	69 Ω at 80°C 22 Ω at 120°C
Fuses (amperage × quantity)		
Main fuse	30 A × 1	...
Headlight fuse	15 A × 1	...
Signaling system fuse	15 A × 1	...
Ignition fuse	10 A × 1	...
Radiator fan fuse	15 A × 1	...
Backup fuse (odometer)	10 A × 1	...
Reserve fuse	30 A × 1	...
	15 A × 1	...
	10 A × 1	...

CONVERSION TABLE/TIGHTENING TORQUES

SPEC



EB201000

EB202001

CONVERSION TABLE

All specification data in this manual are listed in SI and METRIC UNITS. Use this table to convert METRIC unit data to IMPERIAL unit data.
Ex.

METRIC		MULTIPLIER	=	IMPERIAL
**mm	×	0.03937	=	**in
2 mm	×	0.03937	=	0.08 in


CONVERSION TABLE

METRIC TO IMPERIAL			
	Metric unit	Multiplier	Imperial unit
Tightening torque	m•kg	7.233	ft•lb
	m•kg	86.794	in•lb
	cm•kg	0.0723	ft•lb
	cm•kg	0.8679	in•lb
Weight	kg	2.205	lb
	g	0.03527	oz
Speed	km/hr	0.6214	mph
Distance	km	0.6214	mi
	m	3.281	ft
	m	1.094	yd
	cm	0.3937	in
Volume/ Capacity	cc (cm ³)	0.03527	oz (IMP liq.)
	cc (cm ³)	0.06102	cu•in
	lt (liter)	0.8799	qt (IMP liq.)
	lt (liter)	0.2199	gal (IMP liq.)
Misc.	kg/mm	55.997	lb/in
	kg/cm ²	14.2234	psi (lb/in ²)
	Centigrade (°C)	9/5 + 32	Fahrenheit (°F)

TIGHTENING TORQUES

GENERAL TIGHTENING TORQUES

This chart specifies tightening torques for standard fasteners with a standard ISO thread pitch. Tightening torque specifications for special components or assemblies are provided for each chapter of this manual. To avoid warpage, tighten multi-fastener assemblies in a crisscross pattern and progressive stages until the specified tightening torque is reached. Unless otherwise specified, tightening torque specifications require clean, dry threads. Components should be at room temperature.

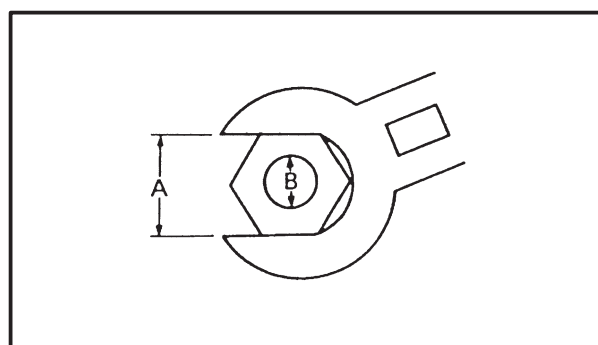

A: Width across flats

B: Thread diameter

A (nut)	B (bolt)	General tightening torques	
		Nm	m•kg
10 mm	6 mm	6	0.6
12 mm	8 mm	15	1.5
14 mm	10 mm	30	3.0
18 mm	12 mm	55	5.5
19 mm	14 mm	85	8.5
22 mm	16 mm	130	13.0

TIGHTENING TORQUES

SPEC



ENGINE TIGHTENING TORQUES

Item	Part name	Thread size	Q'ty	Tightening torque		Remarks
				Nm	m•kg	
Spark plug	—	M10	2	12.5	1.25	
Cylinder head cover	Bolt	M6	10	10	1.0	
Camshaft cap	Bolt	M6	12	10	1.0	
Cylinder head and cylinder body	Nut	M9	4	35	3.5	
Cylinder head and cylinder body	Nut	M9	2	46	4.6	
Cylinder head and cylinder body	Bolt	M6	2	10	1.0	
Cylinder head (exhaust pipe)	Stud bolt	M8	4	15	1.5	
Cylinder body	Bolt	M6	1	10	1.0	
Cylinder head (AI System)	Stud bolt	M6	4	7	0.7	
Connecting rod cap	Nut	M7	4	See NOTE*1		
Connecting rod cap (balancer)	Nut	M9	2	60	6.0	
Cylinder (balancer)	Bolt	M10	4	58	5.8	
Generator rotor	Nut	M18	1	See NOTE*2		
Chain tensioner	Bolt	M6	2	10	1.0	
Chain tensioner cap bolt	Bolt	M6	1	10	1.0	
Chain guide (intake side)	Bolt	M6	2	10	1.0	
Water pump housing cover	Bolt	M6	2	10	1.0	
Water pump assembly	Bolt	M6	2	10	1.0	
Coolant pipe	Bolt	M6	2	10	1.0	
Thermostat cover	Bolt	M6	2	10	1.0	
Oil pump assembly	Bolt	M6	3	10	1.0	
Oil strainer assembly	Bolt	M6	2	10	1.0	
Oil cooler assembly	Bolt	M20	1	63	6.3	
Oil filter	—	M20	1	17	1.7	
Oil delivery pipe	Bolt	M6	1	10	1.0	
Carburetor intake manifold	Bolt	M6	4	10	1.0	
Silencer assembly	Bolt	M6	2	8.5	0.85	
Air filter case assembly	Bolt	M6	3	8.5	0.85	
Exhaust pipe	Nut	M8	4	20	2.0	

TIGHTENING TORQUES

SPEC



Item	Part name	Thread size	Q'ty	Tightening torque		Remarks
				Nm	m•kg	
Muffler	Nut	M10	1	48	4.8	
Muffler protector	Bolt	M6	3	7	0.7	
A.I.System pipe	Nut	M6	4	10	1.0	
A.I.System reed valve assembly	Bolt	M6	3	10	1.0	
Air cut valve assembly	Bolt	M6	1	7	0.7	
Crankcase	Bolt	M6	13	10	1.0	
Crankcase	Bolt	M8	8	24	2.4	
Engine oil drain bolt	Bolt	M14	1	43	4.3	
Engine oil sub tank cover	Bolt	M6	7	10	1.0	
Stator coil base	Screw	M6	3	12	1.2	
Timing plug	Plug	M16	1	8	0.8	
Generator cover	Bolt	M6	19	10	1.0	
Belt drive cover	Bolt	M6	4	10	1.0	
Belt drive cover	Bolt	M8	6	24	2.4	
Plate	Bolt	M6	3	10	1.0	
Crankcase cover	Bolt	M8	2	24	2.4	
Protector cover	Bolt	M6	3	7	0.7	
Belt drive filter	Bolt	M6	2	7	0.7	
Starter clutch	Bolt	M8	3	30	3.0	
Clutch boss nut	Nut	M36	1	90	9.0	
Clutch housing assembly	Nut	M16	1	65	6.5	
Chian drive holder assembly	Bolt	M8	3	30	3.0	
Chian drive drain bolt	Bolt	M12	1	20	2.0	
Chian drive caes (outer)	Bolt	M6	18	10	1.0	
Chian drive case cover	Bolt	M6	2	7	0.7	
Stopper	Bolt	M5	8	6	0.6	
Primary sheave assembly	Nut	M20	1	160	16	
Secondary sheave spring seat	Nut	M36	1	90	9.0	
Secondary sheave assembly	Nut	M18	1	90	9.0	

TIGHTENING TORQUES

SPEC



Item	Part name	Thread size	Q'ty	Tightening torque		Remarks
				Nm	m•kg	
Primary bearing cover plate	Screw	M6	1	10	1.0	
Secondary bearing cover plate	Screw	M6	1	12	1.2	
Stator coil assembly	Bolt	M6	3	10	1.0	
Pickup coil	Bolt	M5	2	7	0.7	
Starter motor	Bolt	M6	2	10	1.0	
Thermo switch	–	M18	2	18	1.8	
Thermo unit	–	PT 1/8	1	8	0.8	
Ignitor unit	Screw	M6	2	3	0.3	

NOTE:

*1: After tightening to 16 Nm (1.6 m•kg), tighten another 90°.


*2: After tightening to 60 Nm (6,0 m•kg), tighten another 120°.

TIGHTENING TORQUES

SPEC




Crankcase tightening sequence:

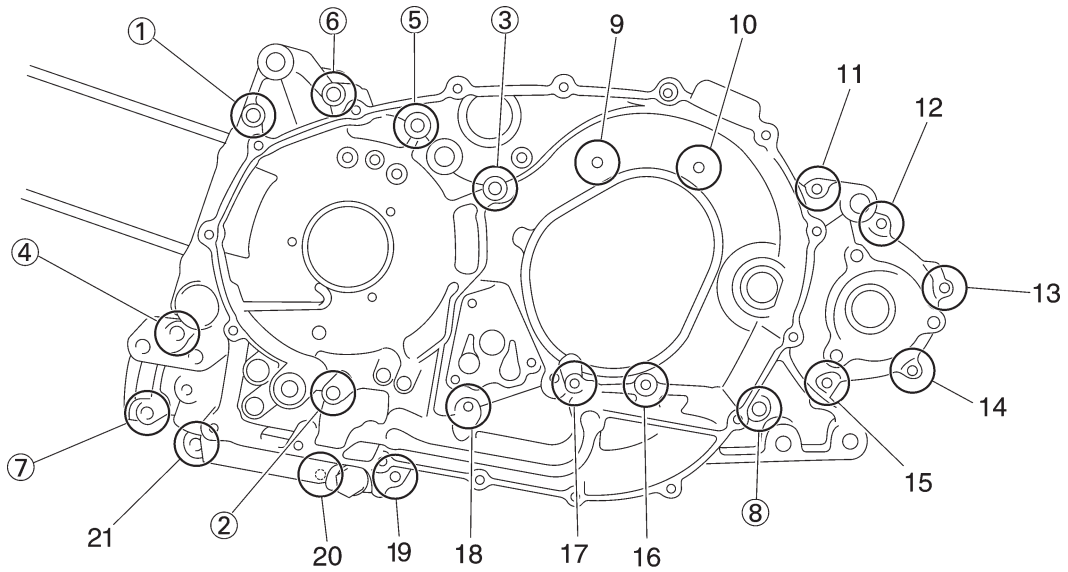

① ~ ⑧ M8 Bolt
9 ~ 21 M6 Bolt

Cylinder head tightening sequence:

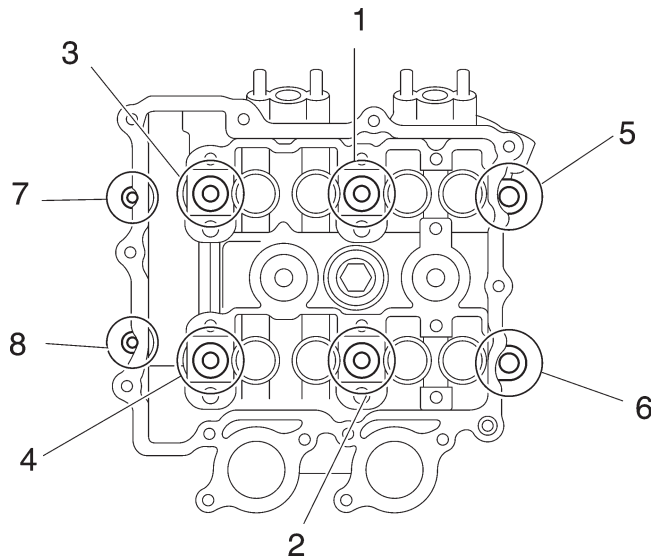

TIGHTENING TORQUES

SPEC



CHASSIS TIGHTENING TORQUES

Item	Thread size	Tightening torque		Remarks
		Nm	m•kg	
Upper bracket pinch bolt	M8	30	3.0	See NOTE
Steering stem nut	M22	110	11.0	
Lower ring nut	M25	19	1.9	
Front fork cap bolt		45	4.5	
Handlebar upper holder	M8	23	2.3	
Brake hose union bolt	M10	30	3.0	
Brake master cylinder holder	M6	10	1.0	
Master cylinder reservoir cap	M4	1	0.1	
Handlebar grip end	M16	26	2.6	
Engine mounting				
Front mounting nut (upper)	M12	87	8.7	
Front mounting bolt (lower)	M10	48	4.8	
Front wheel axle shaft	M14	59	5.9	
Front wheel axle shaft pinch bolt	M8	20	2.0	
Rear wheel axle nut	M14	104	10.4	
Rear wheel axle shaft pinch bolt	M8	17	1.7	
Front brake caliper bracket	M10	27	2.7	
Front brake caliper bolt	M10	40	4.0	
Front brake disc	M6	18	1.8	
Rear brake caliper bracket	M10	27	2.7	
Rear brake caliper bolt	M10	40	4.0	
Rear brake disc	M6	18	1.8	
Brake caliper bleed screw	M7	6	0.6	
Swingarm and pivot shaft	M22	7	0.7	
Pivot shaft and lock nut	M22	100	10.0	
Chain drive and swingarm	M10	40	4.0	
Rear shock absorber (front)	M12	67	6.7	
Rear shock absorber (rear)	M16	52	5.2	

TIGHTENING TORQUES

SPEC



Item	Thread size	Tightening torque		Remarks
		Nm	m•kg	
Fuel tank	M6	10	1.0	
Fuel sender	M5	4	0.4	
Grab bar	M8	15	1.5	
Seat lock	M6	7	0.7	
Box	M6	10	1.0	
Cover and panel	M8	15	1.5	
Cover and panel	M6	7	0.7	
Windshield	M5	0.4	0.04	
Coolant reservoir tank	M6	4	0.4	
Mainstand bracket	M10	55	5.5	
Mainstand	M10	55	5.5	
Sidestand (bolt and frame)	M10	8	0.8	
Sidestand (bolt and nut)	M10	40	4.0	
Rear footrest	M8	23	2.3	

NOTE:

1. First, tighten the ring nut to approximately 52 Nm (5.2 m•kg) with a torque wrench, then loosen the ring nut completely.
2. Retighten the ring nut to specification.




LUBRICATION POINTS AND LUBRICANT TYPES

Lubrication point	Lubricant
Oil seal lips	
O-rings	
Bearing and bushes	
Crankshaft pins	
Piston surfaces	
Piston pins	
Balancer surface	
Connecting rod bolts and nuts	
Crankshaft journals	
Camshaft lobes	
Camshaft journals	
Camshaft cap	
Valve stems (intake and exhaust)	
Valve stem ends (intake and exhaust)	
Cylinder head nut	
Oil pump shaft	
Oil pump rotors (inner and outer)	
Oil pump housing	
Oil cooler union bolt	
Starter clutch idle gear inner surface	
Starter clutch	
Drive axle spline	
Drive sprocket	
Primary sheave spacer	Shell BT grease 3 [®]
Primary sheave nut	Shell BT grease 3 [®]
Secondary sheave nut	
Secondary sheave	BEL-RAY assembly lube [®]
Swingarm pivot shaft bearing	
Belt drive cover bearing	
Crankcase mating surface	YAMAHA bond No.1215
A.C. magneto lead	YAMAHA bond No.1215




OIL FLOW DIAGRAMS

- ① Oil pump
- ② Oil tank
- ③ Oil strainer
- ④ Relief valve
- ⑤ Oil cooler
- ⑥ Oil filter
- ⑦ Exhaust camshaft
- ⑧ Intake camshaft
- ⑨ Oil pipe
- ⑩ Oil delivery pipe


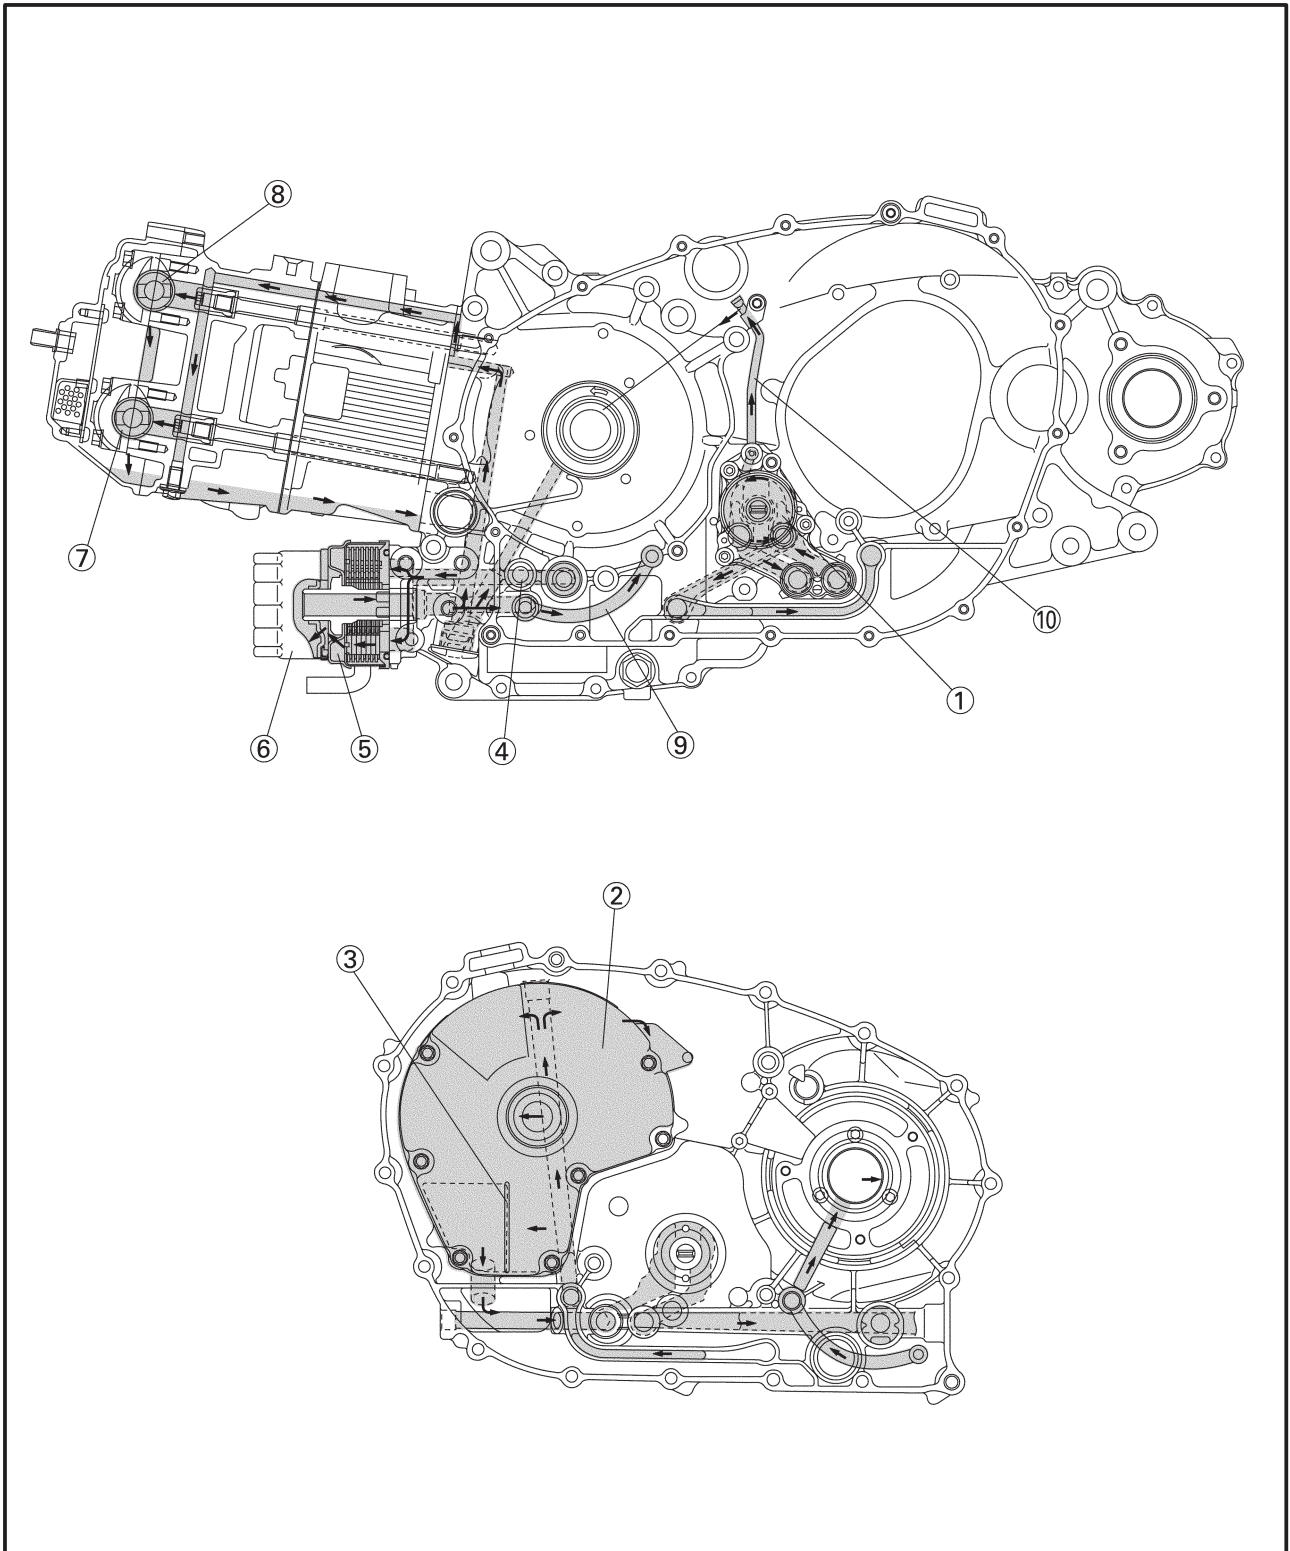



- ① Oil pan
- ② Oil strainer
- ③ Crankshaft

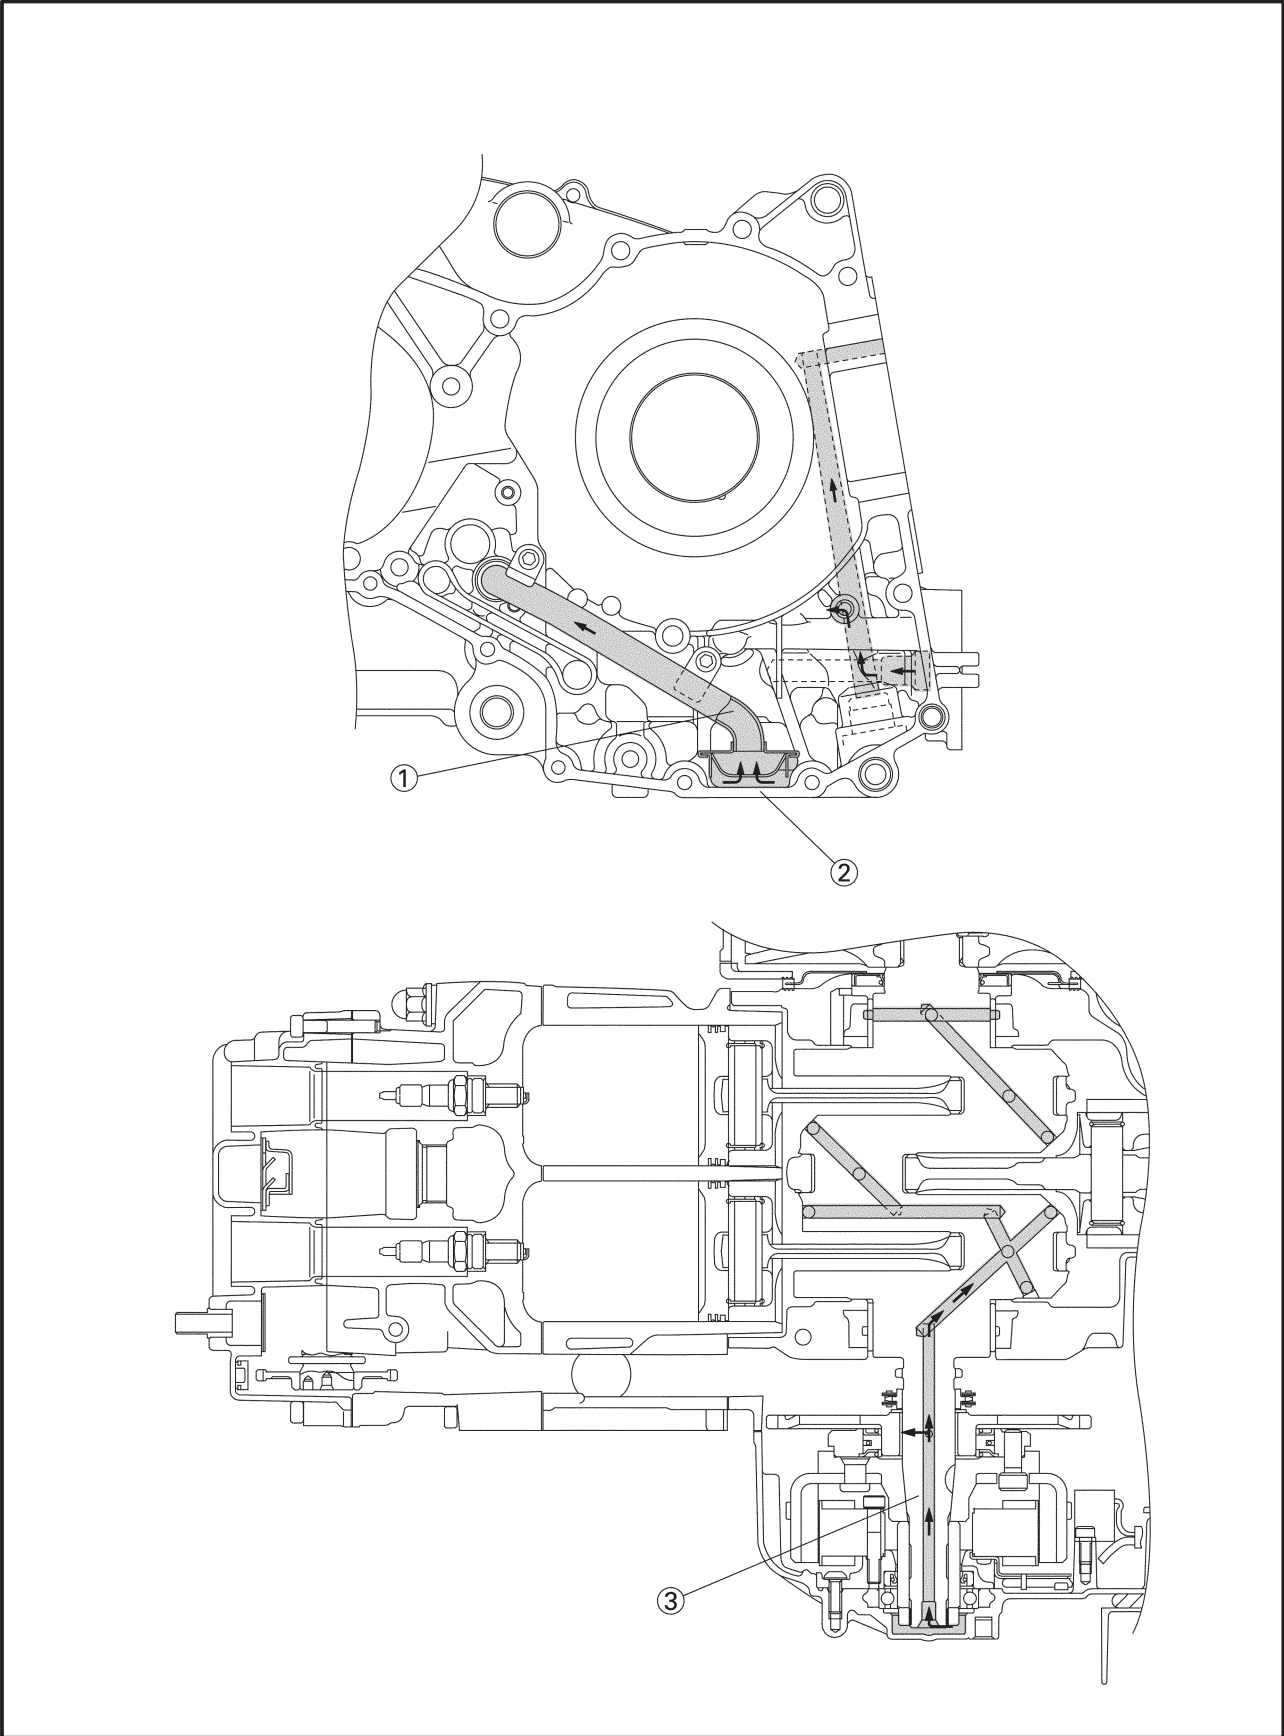



- ① Clutch
- ② Right main journal bearing
- ③ Main gallery bolt

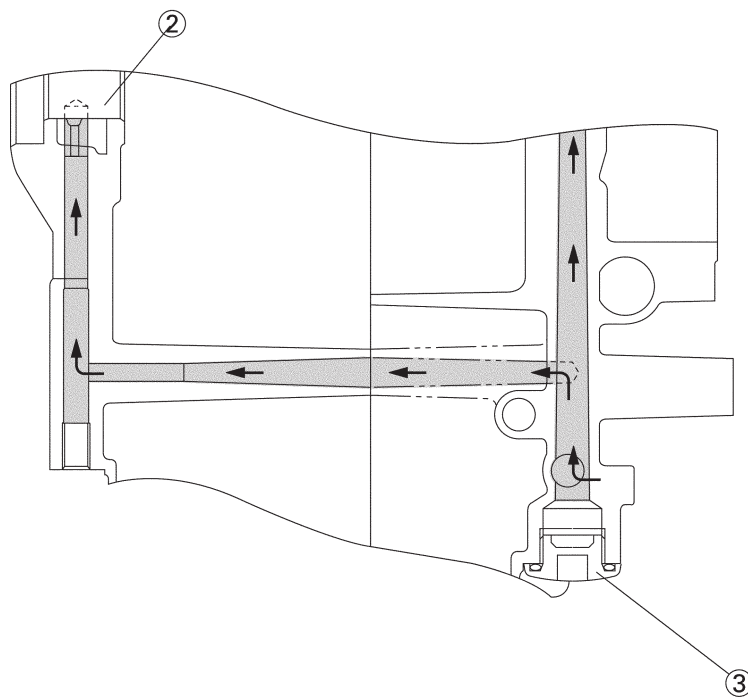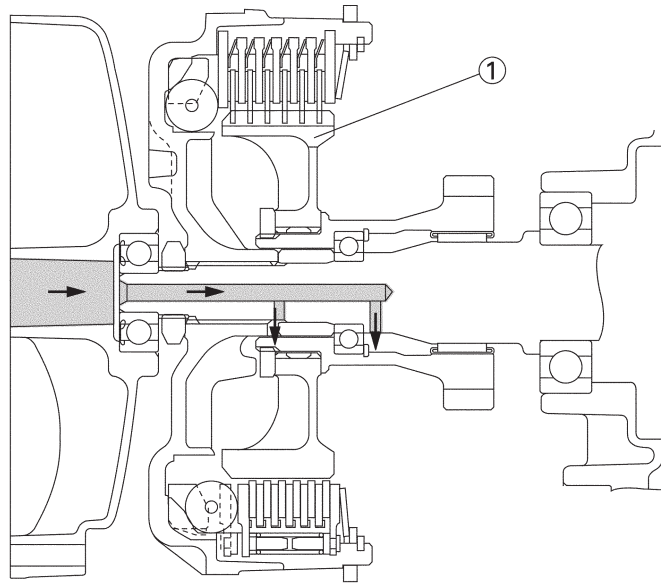


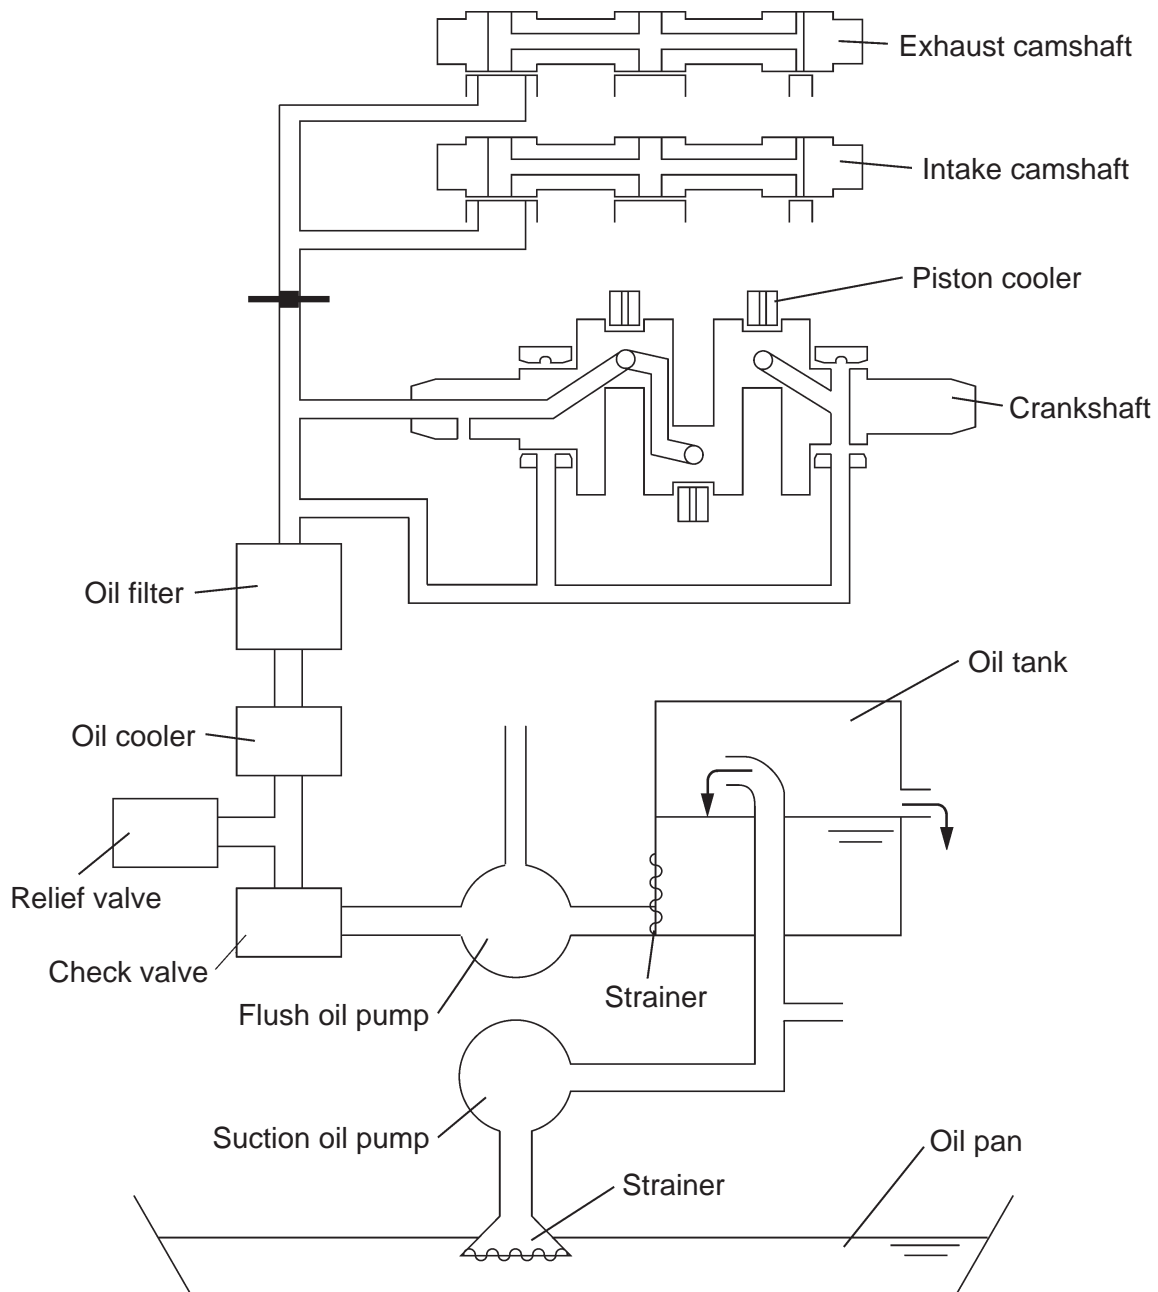




COOLANT FLOW DIAGRAMS

- ① Coolant reservoir tank
- ② Thermostat
- ③ Radiator
- ④ Water pump
- ⑤ Cooling fan
- ⑥ Radiator cap

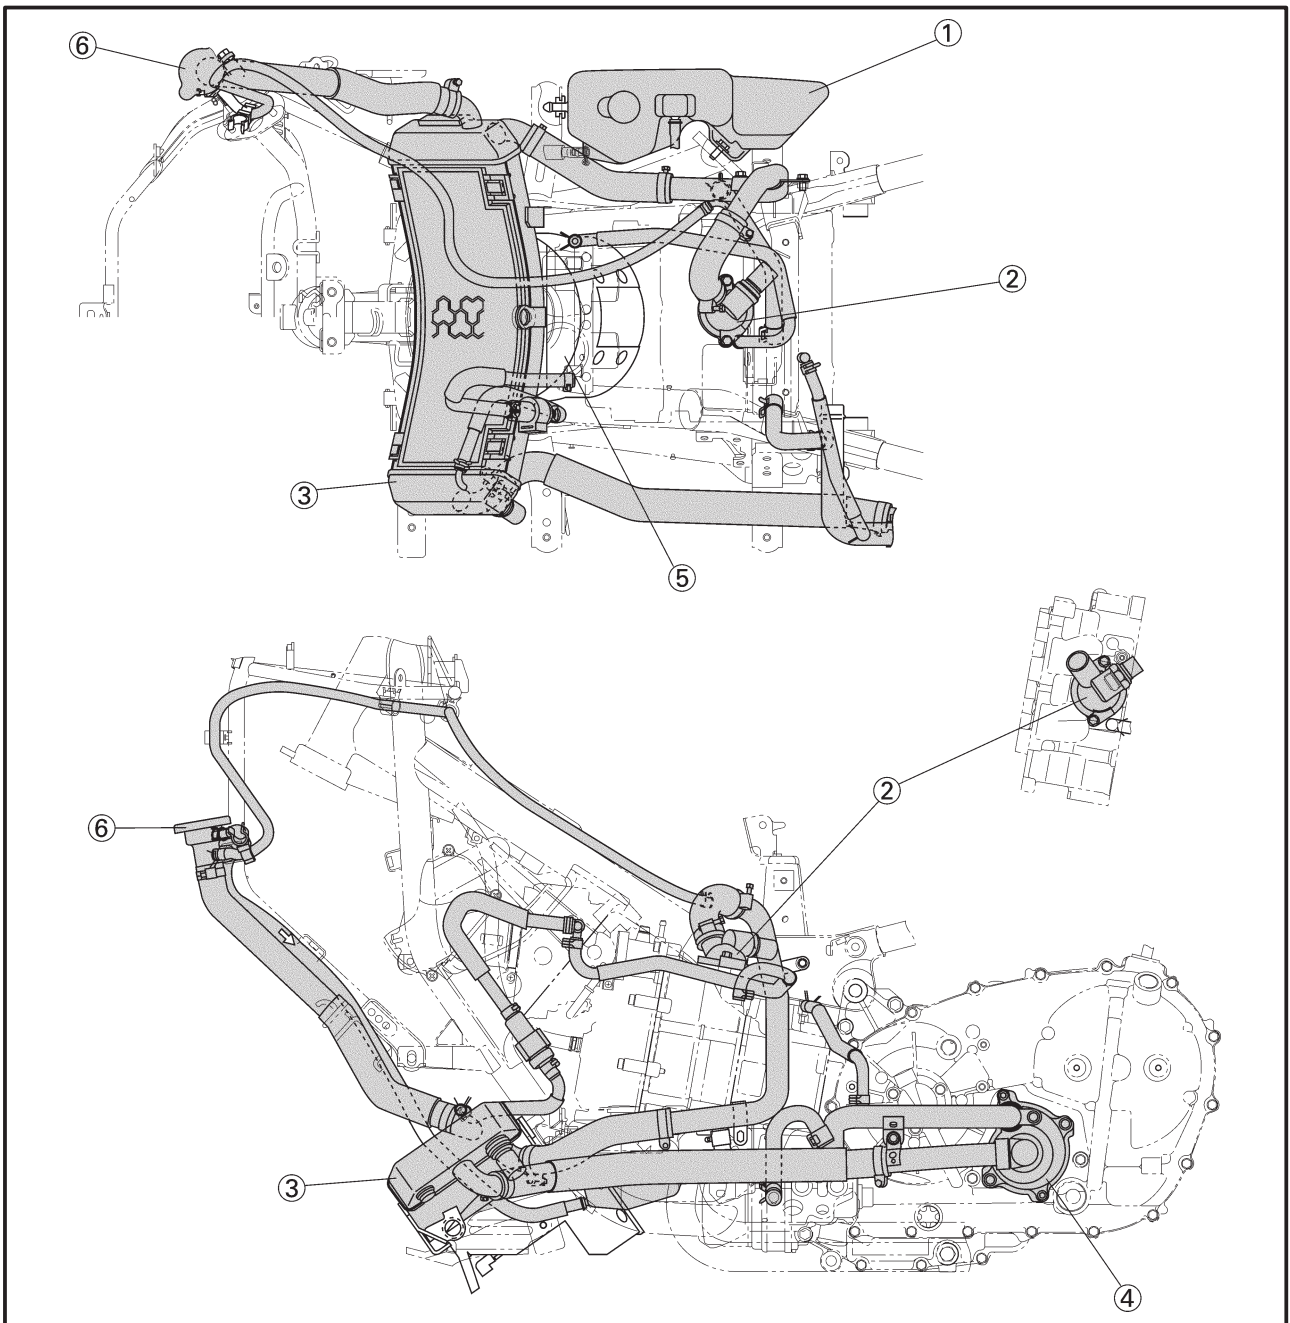


CABLE ROUTING

- ① Headlight lead
- ② Horn (H mark on the back of the horn).
- A Attach the wireharness clamp (protector terminal) to the T stud.
- B Install the wireharness to the top of the steering after each coupler connection.
- C Route the wireharness between brake hose and upper bracket.
- D Route the throttle cables between handle under cover and upper bracket.
- E Install a wireharness guide to hold down the wireharness.
- F Connect the brake light switch from the handlebar switch side wiring.
- G Route the throttle cables through the hole of the handle under cover.
- H Fasten the handlebar switch lead to the handlebar using a plastic clamp. The fastening location is the bend area on the bottom of the handlebar.
- I Connect the headlight sub-harness to the wireharness on top of the stay (left and right) After making the connection, push the coupler between the front cowling and the air filter case.

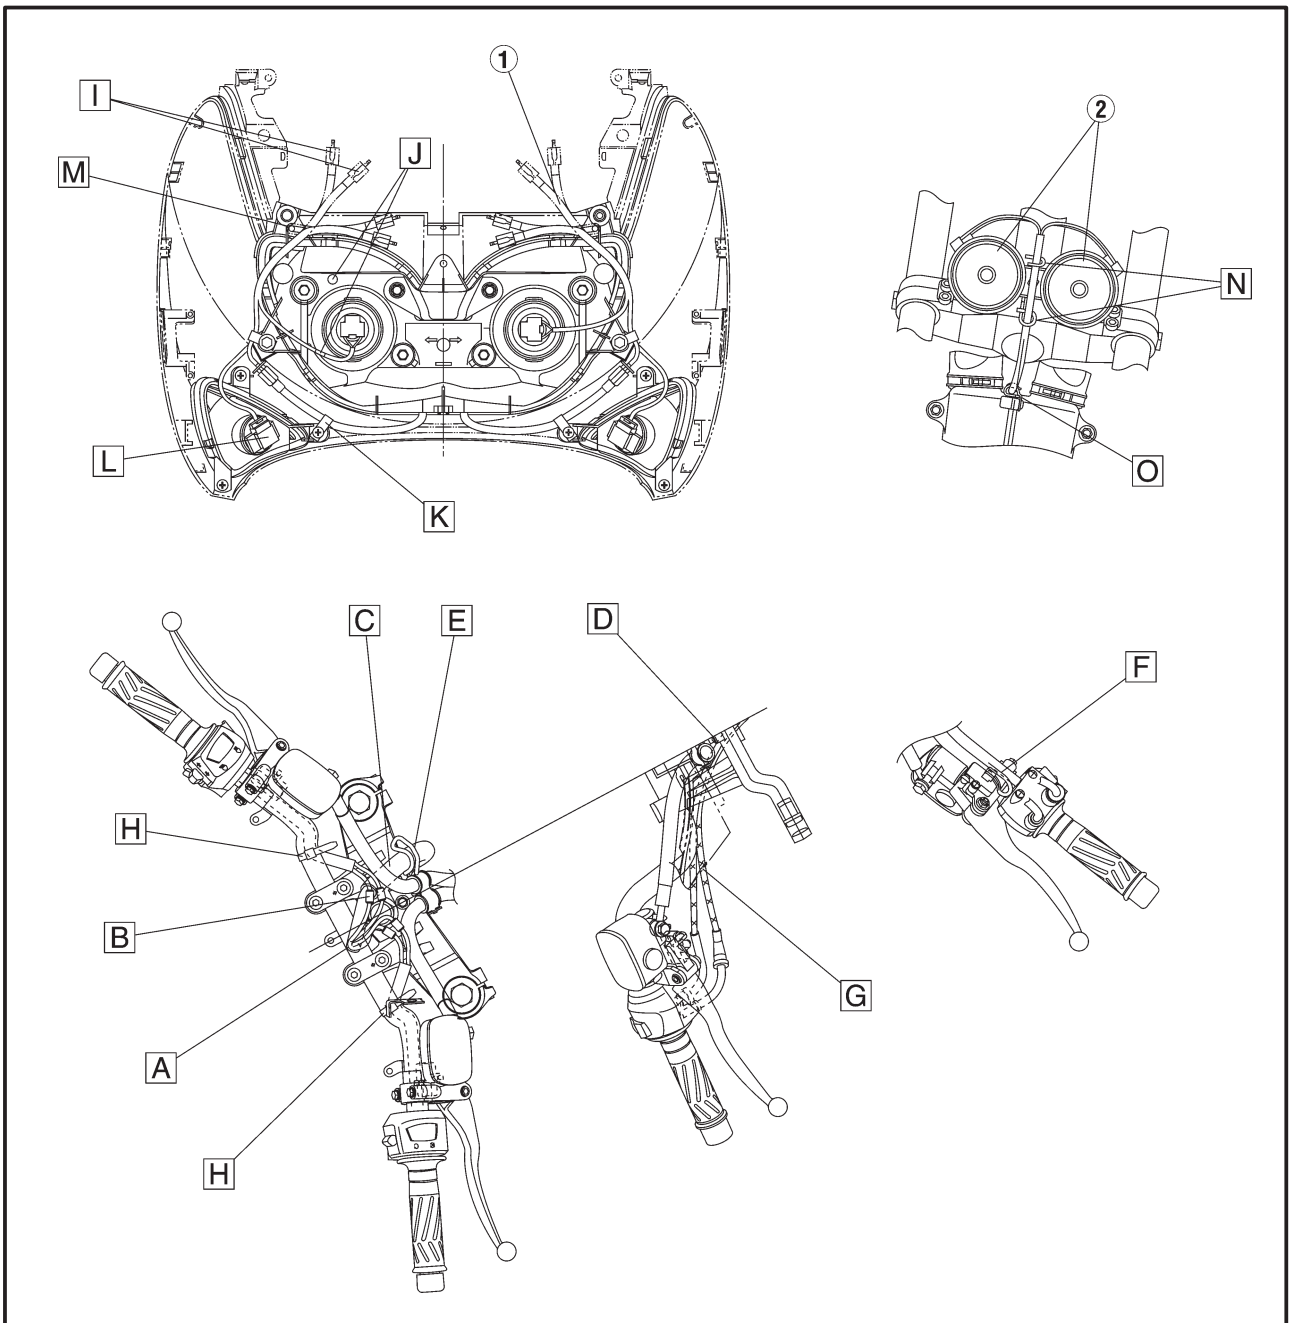



- J** Connect the taped headlight lead coupler to the headlight's white marked side (left side: high beam side).
(For UK, the right side is the high beam side.)
- K** Fasten the headlight sub-harness.
- L** Connect the turn signal light.
- M** Securely fasten the wire strap to the front cowling hook to prevent it from being pulled out by the headlight assembly.
- N** Route the horn lead through the wire guide.
- O** After passing the horn lead through the clamp, crimp the clamp.

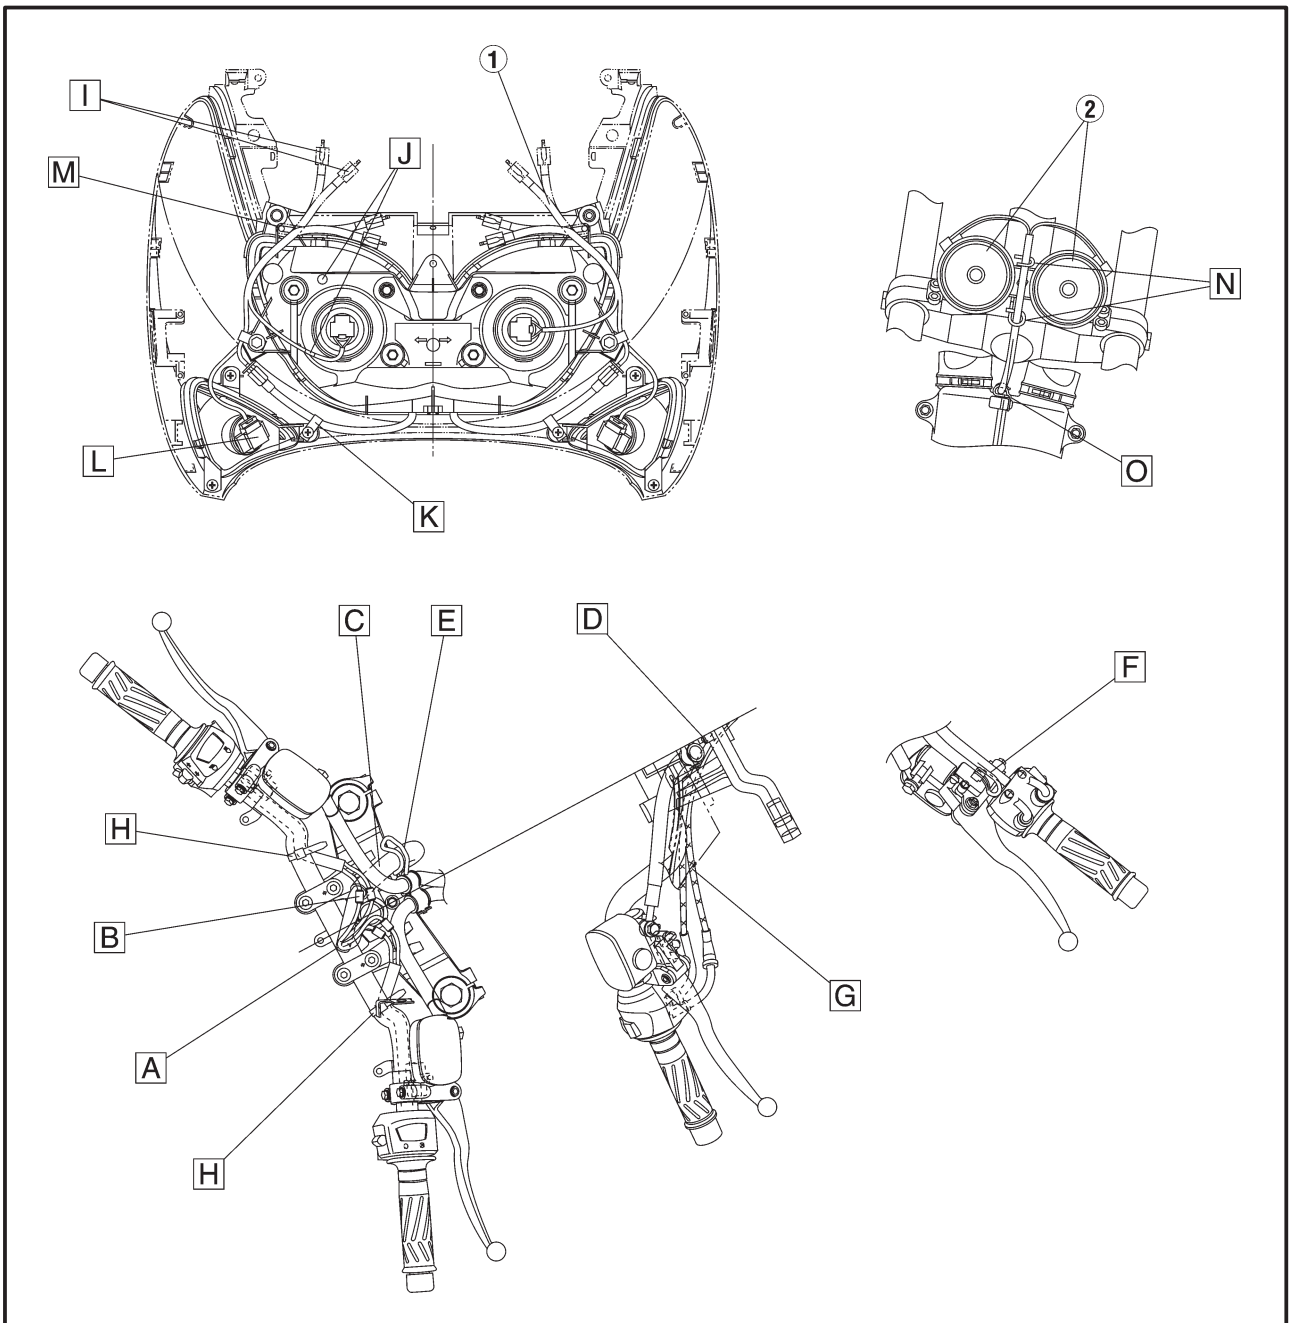


CABLE ROUTING

SPEC



- ① Rectifier/regulator
- ② Starting circuit cut-off relay
- ③ Pump relay
- ④ Flasher relay
- ⑤ Fuel pump
- ⑥ Main switch
- ⑦ Meter assembly
- ⑧ Horn lead
- ⑨ Ignition coil
- ⑩ Battery negative lead
- ⑪ Frame
- ⑫ Seat lock cable
- ⑬ Starter motor lead
- ⑭ Wireharness
- ⑮ Fuel hose
- ⑯ Sub harness
- ⑰ Fan motor lead
- ⑱ V-belt reset coupler

- [A] The wireharness pass-through is change.
- [B] Fasten the starter motor lead, battery negative lead and seat lock cable (right side) to the frame with a plastic clamp.
- [C] Fasten the starter motor lead and battery negative lead to the frame with a clamp.

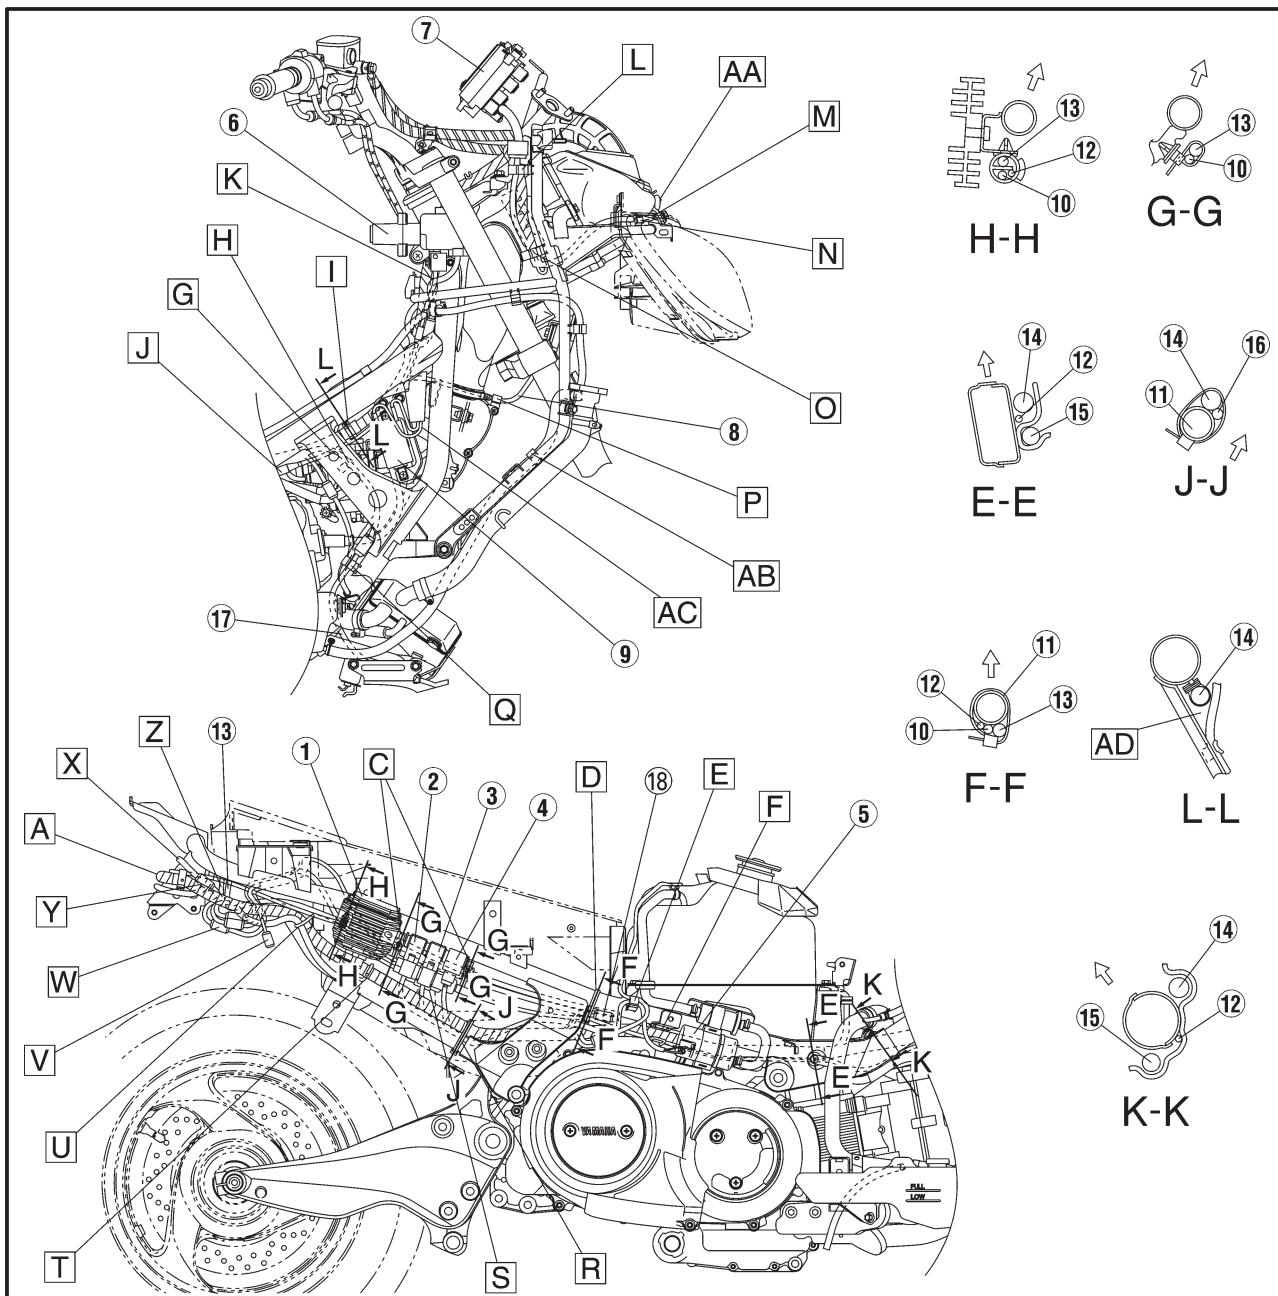


CABLE ROUTING

SPEC



- D** Fasten the starter motor lead, battery negative lead, V-belt reset coupler, and seat lock cable to the frame with a plastic band. Position the band clasp on the bottom of the frame and face the band end to the outside.
- E** Fasten the fuel sender lead and fuel pump lead to the frame with a plastic clamp.
- F** Place the wireharness and seat lock cable in the frame holder.
- G** Through the seat lock cable between wireharness and frame.
- H** Use the clamp on the back of the frame to hold the side stand switch lead and fan motor lead.
- I** Connect the wireharness (wire taped area) to the frame side T stud.
- J** After connecting the main switch lead, push it between the seat lock cable adjustment area and the frame.
- K** Through the main switch lead between frame and seat lock cable.
- L** After connecting the wireharness and meter lead, use a plastic clamp to connect them to stay 1.
- M** Connect to the headlight sub harness (left and right)

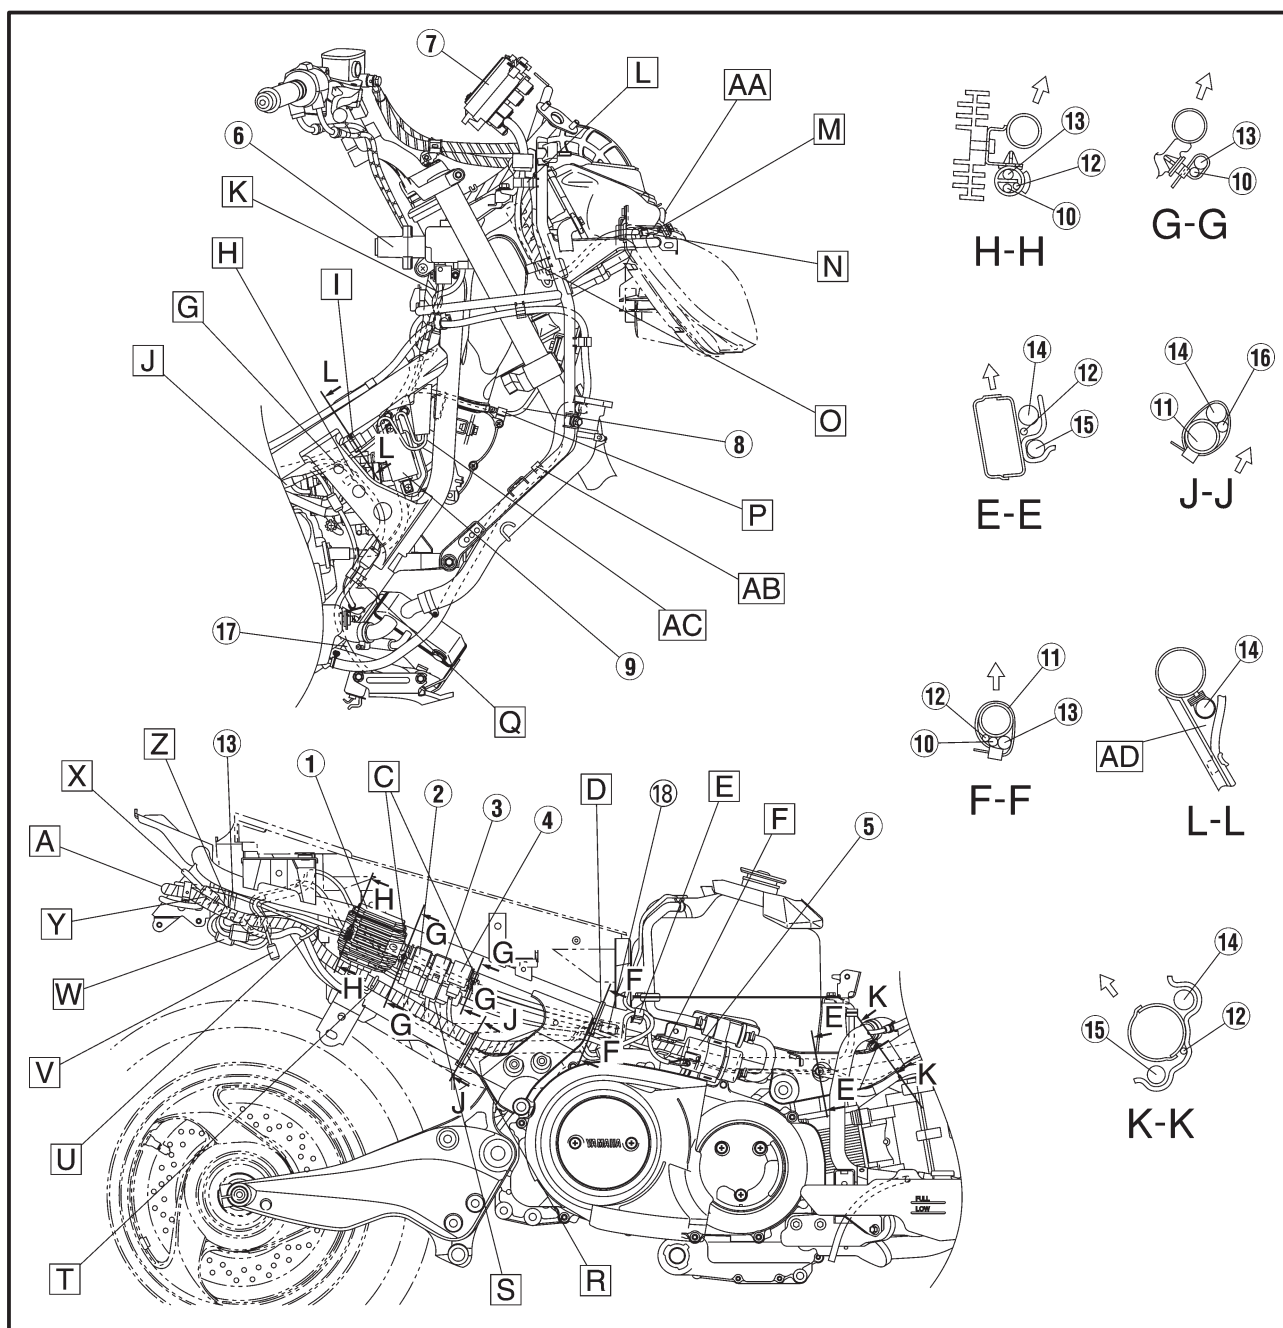


CABLE ROUTING

SPEC




- N** Fasten the headlight sub harness with a plastic clamp.
- O** Fasten the igniter lead to the stay with a plastic clamp.
- P** Fasten the horn lead with a clamp.
- Q** Fasten the fan motor lead, sidestand switch lead, and thermo switch lead to the frame with a plastic clamp.
- R** Use a plastic band to connect the wireharness and relay lead to the frame. Position the band clasp on the bottom of the frame and face the band end to the outside.
- S** Insert the seat lock cable and the cylinder mounting rubber into the frame stay.
- T** Through the wireharness to the frame wireharness holder.
- U** Route the wireharness and regulator lead through the frame wire holder. Place the regulator lead under the wireharness.
- V** The V-belt reset coupler position is change.
- W** After making the connections, push the couplers into the space inside the frame above the mudguard.
- X** To the tail/brake light.
- Y** Insert the tail/brake light cuplers between the wireharness and the seat lock cable (left side).
- Z** To the starter relay.

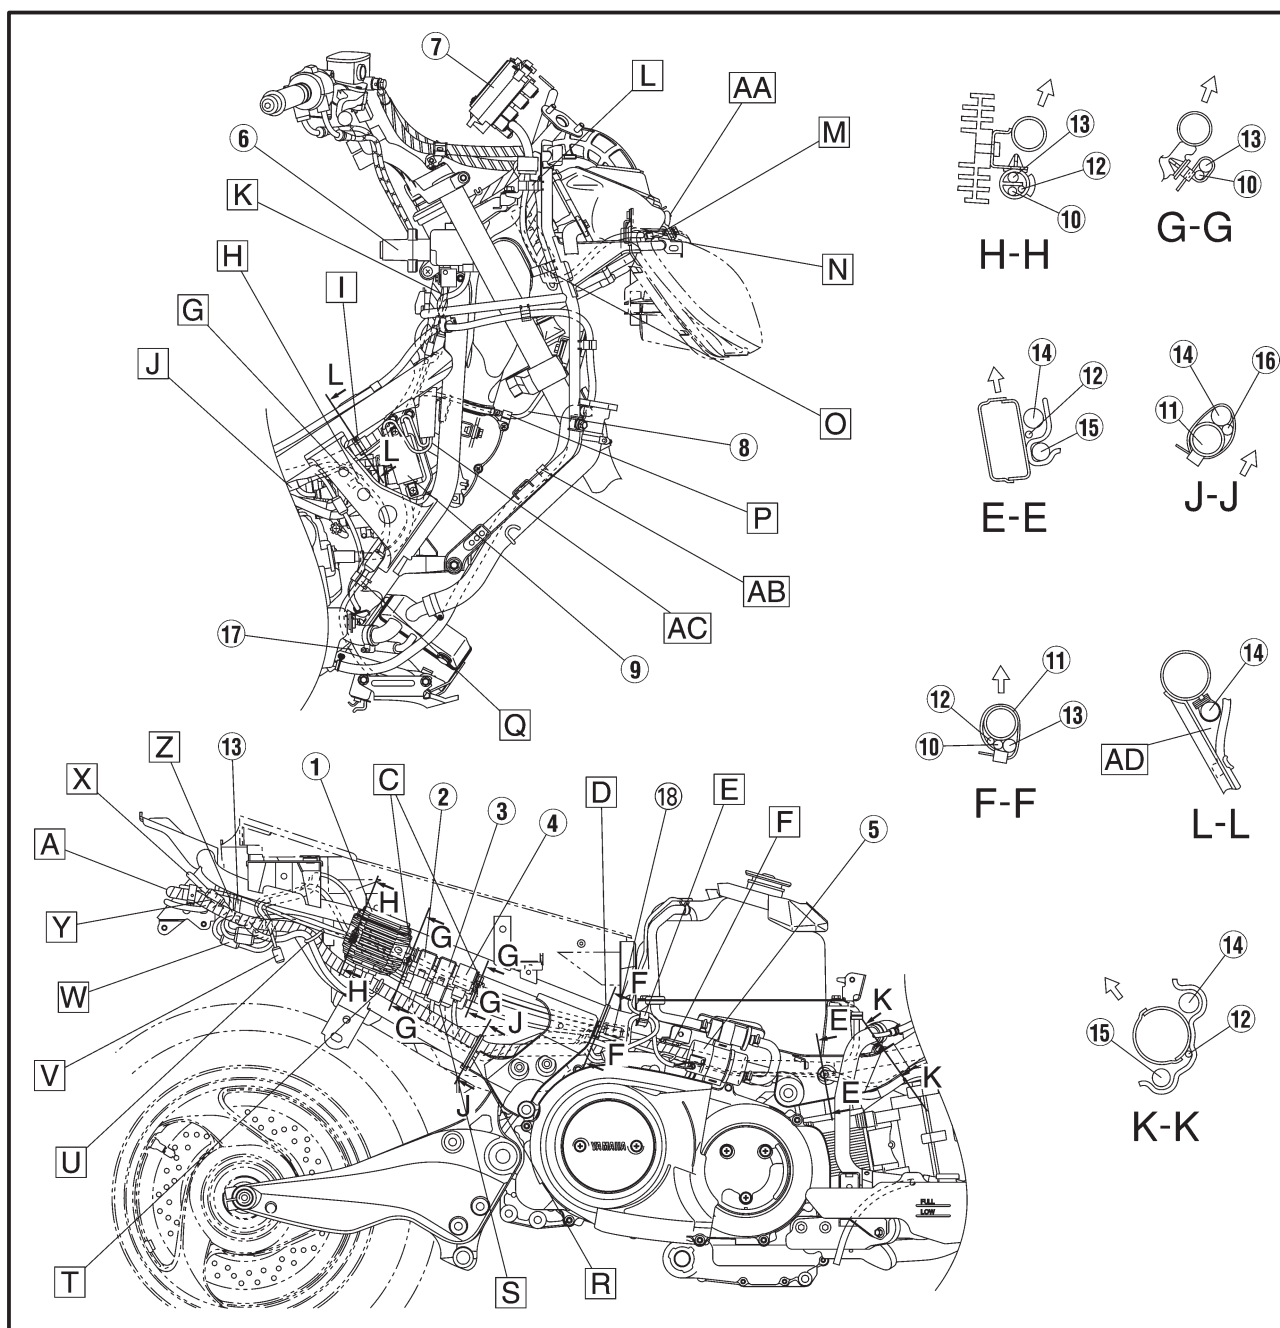



- AA** After connecting the left headlight sub-harness and wireharness (by matching the coupler colors), fold back the lead facing to the right and insert it into the air filter case rib.
- AB** Fasten the coolant reservoir hose to the stay with a plastic clamp.
- AC** Route the ignition coil lead through the inside of the bracket.
- AD** Route the seat lock cable through the frame bracket side.

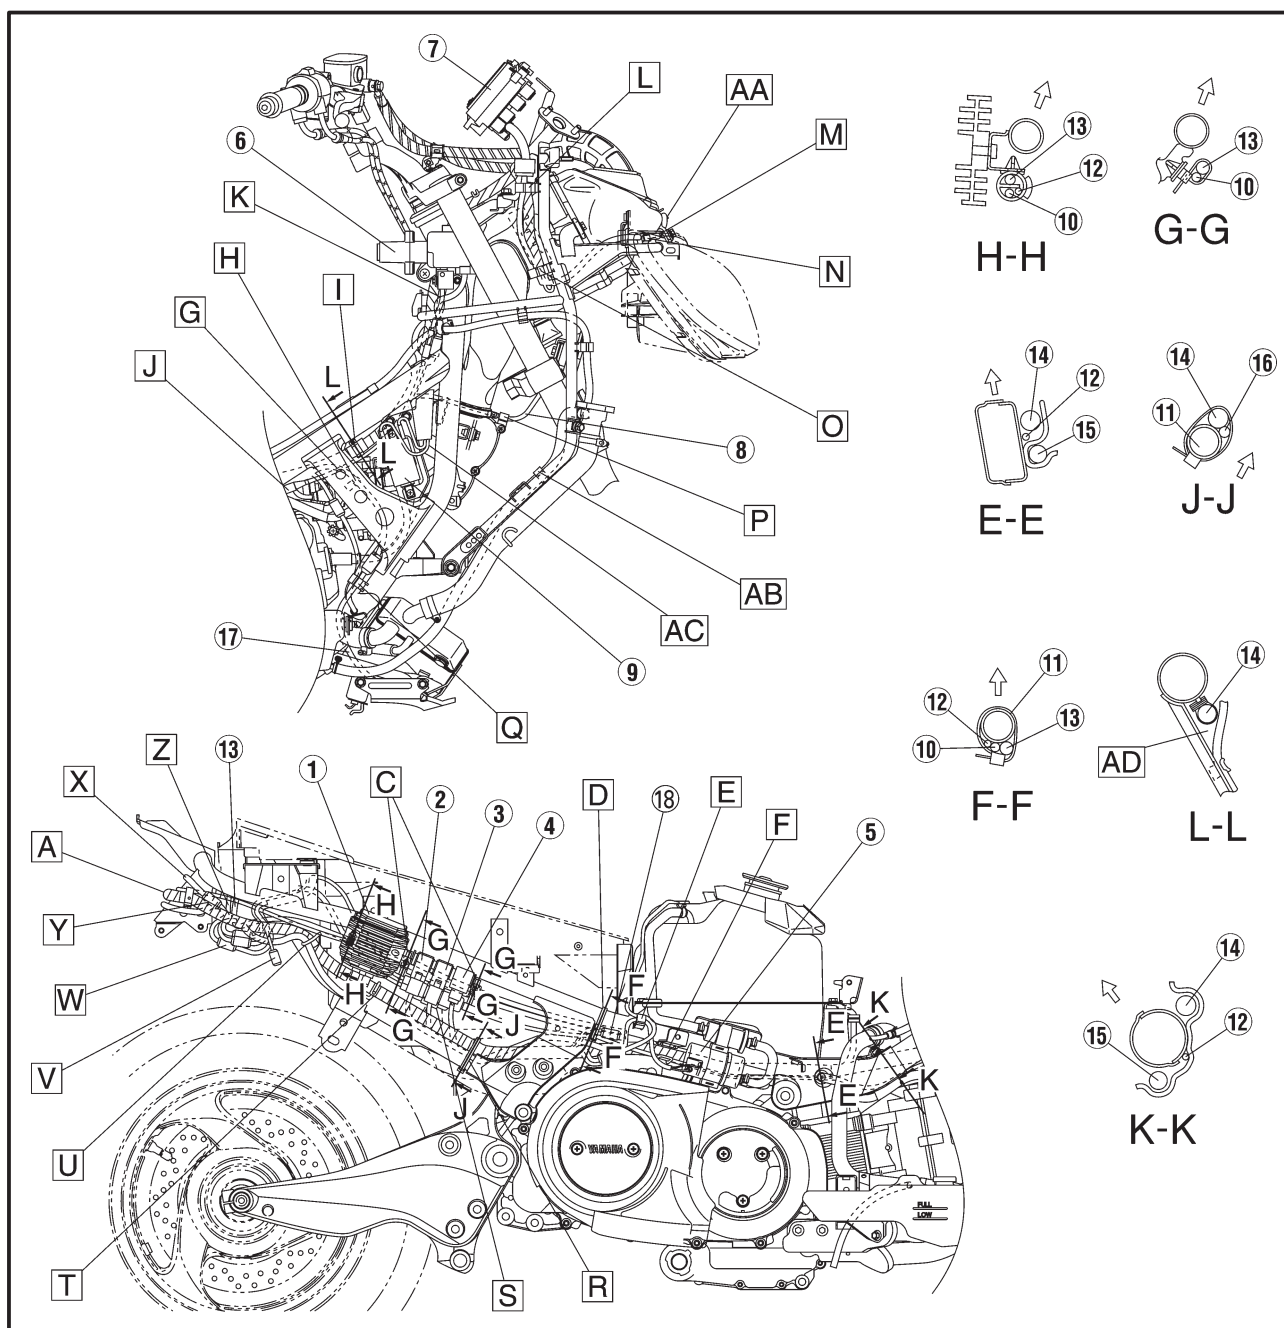


CABLE ROUTING

SPEC



- ① Air vent hose
- ② Vacuum hose
- ③ A.C. magneto lead
- ④ Sidestand switch
- ⑤ Fan motor lead
- ⑥ Thermo switch lead
- ⑦ Stay 1

- A** Route the wireharness through the frame guide. At this time, place the protector (for the handle cover inner side) on the bottom side.
- B** Fasten the rear brake hose and vacuum hose with a plastic clamp. The fastening position is 0 to 5 mm from edge of the frame bracket.
- C** Pass the wireharness by the outside of the rear footrest mounting boss. (When mounting the rear footrest, do not catch or pinch the A.C. magneto lead in the bracket.)

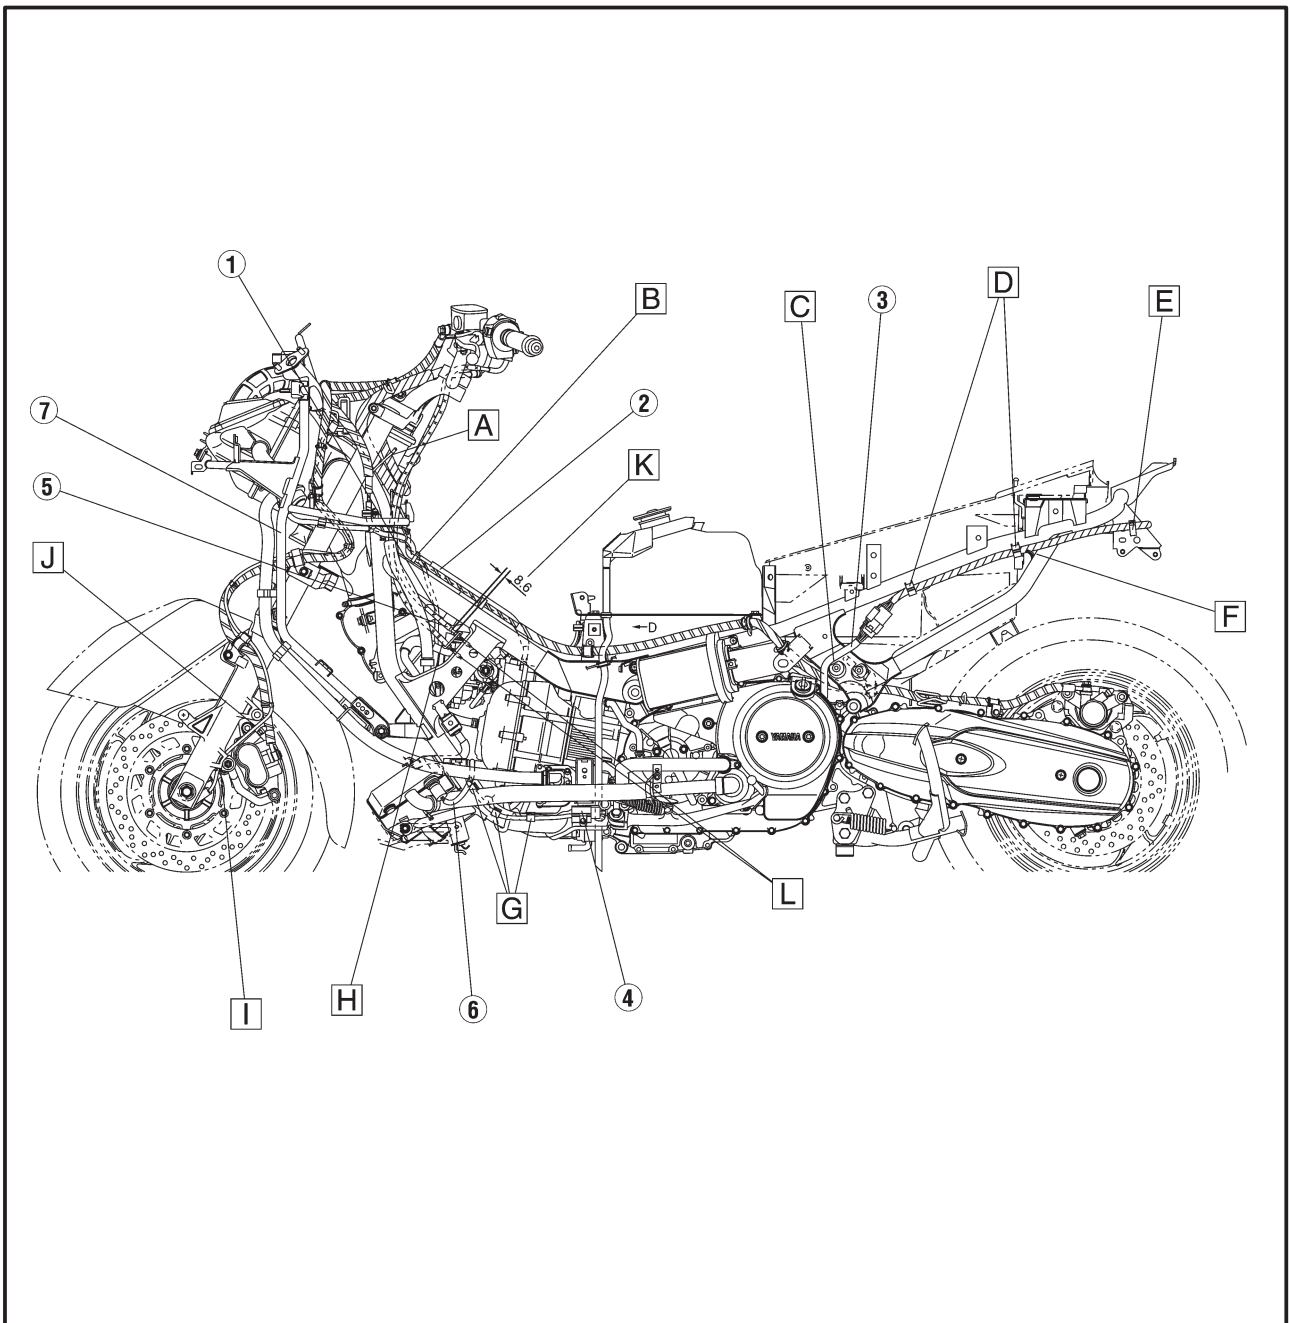


CABLE ROUTING

SPEC



- D** Fasten the wireharness to the frame with a plastic clamp.
- E** Fasten the wireharness to the frame with a plastic clamp.
- F** Pass the box light lead by the front of the frame back stay pipe.
- G** Fasten the sidestand switch lead to the frame with a plastic clamp.
- H** When adjusting the throttle cable, completely tighten the nut on the throttle cable return side.
- I** Through the speed sensor lead to the lead holder.
- J** Through the speed sensor lead between front brake caliper and front brake caliper mounting bolt.
- K** Use this as a reference when adjusting the throttle cable.
- L** After adjusting the throttle cables, make sure the rubber cap is insert connectly.

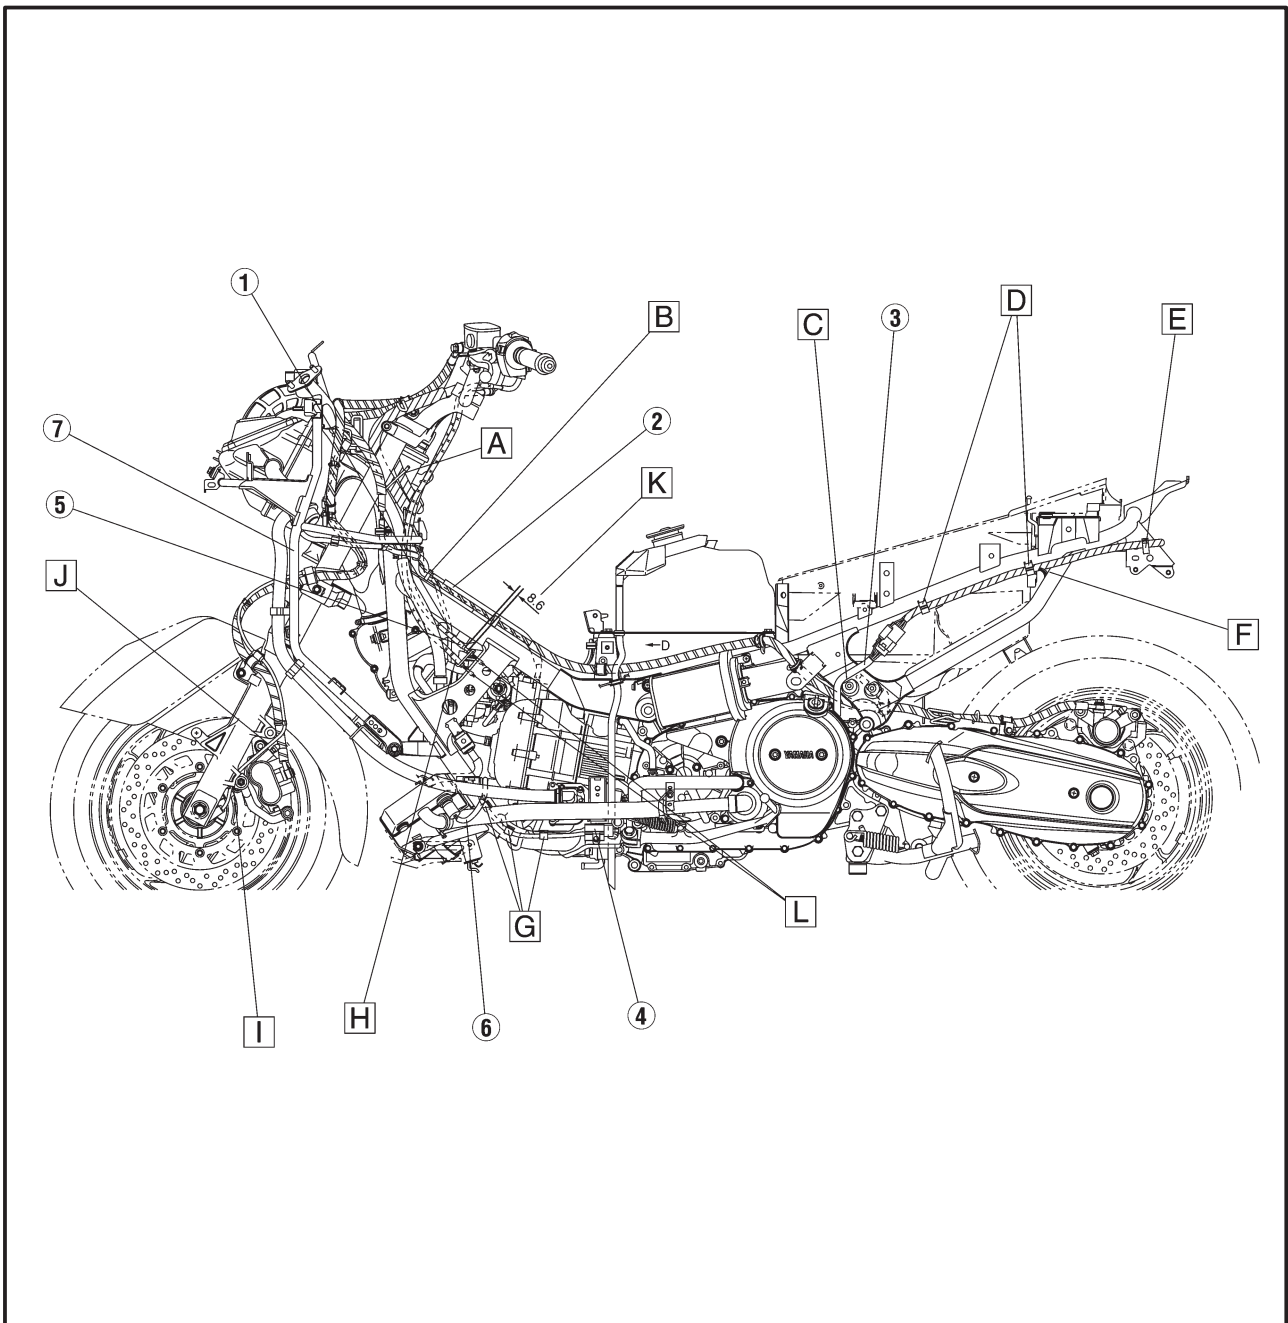


CABLE ROUTING

SPEC



- ① Fuel hose
- ② Battery negative lead
- ③ Seat lock
- ④ Starter motor lead
- ⑤ Fuse box
- ⑥ Battery
- ⑦ Battery positive lead
- ⑧ Fuel sender
- ⑨ Breather hose
- ⑩ Lean angle cut-off switch lead
- ⑪ Wireharness
- ⑫ Seat lock cable

- A Route the wireharness against the stay wire guide.
- B Fasten the wireharness branch wiring to the frame with a plastic clamp.
- C Fasten the wireharness to the frame with a plastic clamp.
- D Connect the black wire on the outside of the seat lock cable to the right seat lock.
- E Install the starter relay to the mad guard.
- F Fasten the wireharness, battery positive lead and seat lock cable to the mad guard with a clamp.
- G Connect the gray wire on the outside of the seat lock cable to the left seat lock.

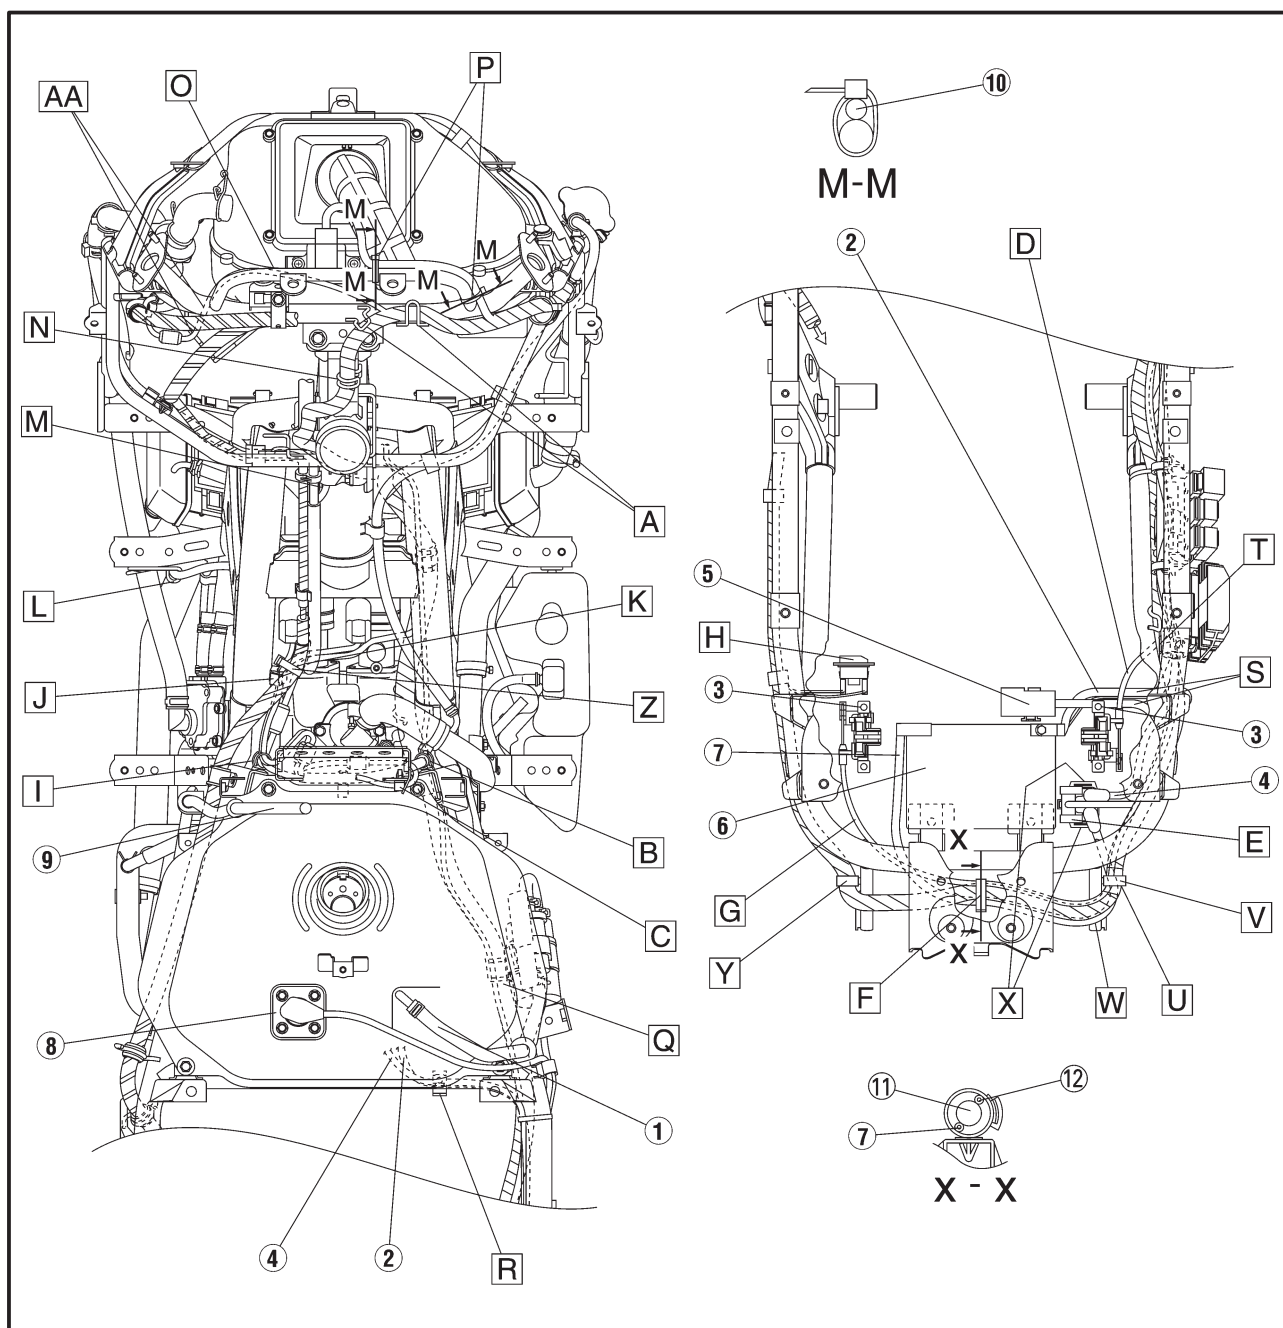


CABLE ROUTING

SPEC




- H** Install the box light to the box 1.
- I** Fasten the auto choke leads (left and right) and throttle position sensor lead to the frame with a clamp.
Leave some slack in the lead wires so that when the vacuum hose is install it does not press against them.
- J** Fasten the auto choke leads (left and right) to the frame with a plastic clamp.
- K** Pass the auto choke lead (right side) and throttle position sensor lead by the front bottom side of the vacuum hose.
- L** Route the thermo switch lead through the guide.
- M** Insert the air vent hose through the hole on the left side of the frame bracket.
- N** Route the wireharness through the guide.
- O** Place the speed sensor lead between the ribs of the air filter case.
- P** Fasten the lean angle cut-off switch lead to the stay (2 locations). Face the end of the band downward.
- Q** Hang the wireharness and seat lock cable on the wire holder on the back of the fuel pump attachment stay.
- R** Fasten the battery negative lead and the starter motor lead to the frame.
- S** Route the battery negative lead and the fuse box lead from the box opening to the bottom of the cross pipe.
- T** Pass the black seat lock cable beneath the battery negative lead and starter motor lead and out to the inside of the frame.

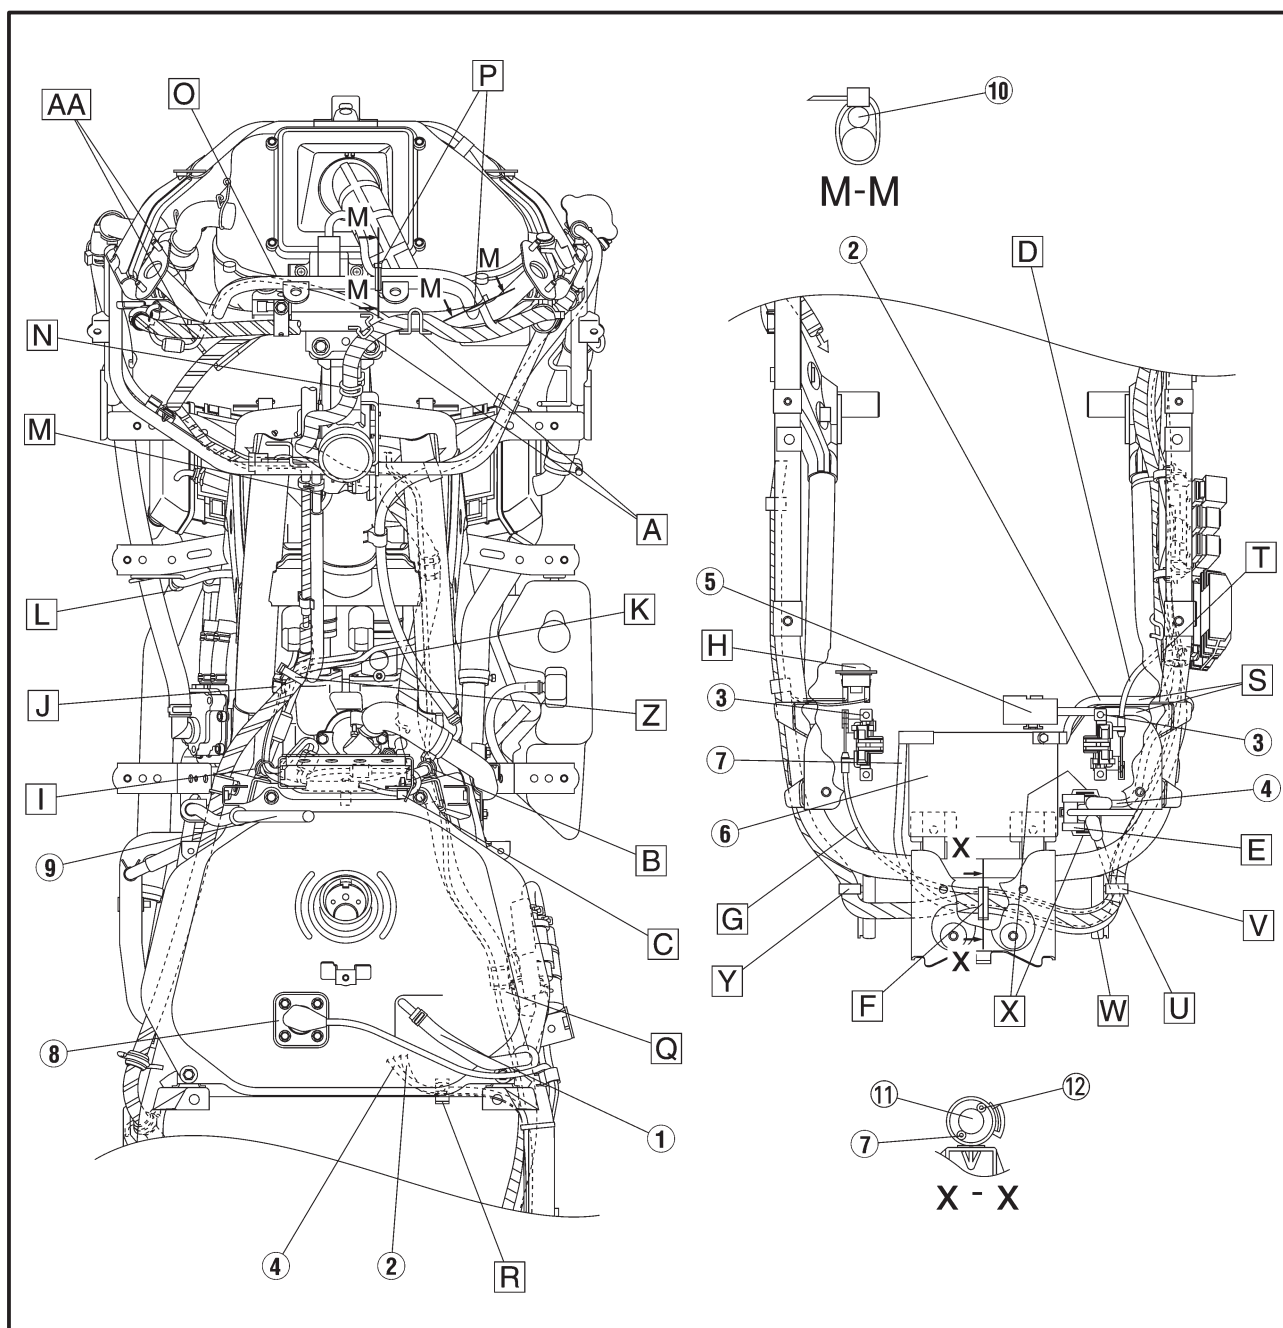



- U** Align the plastic clamp with the white tape on the wireharness and fasten the wireharness to the frame.
- V** Fasten the wireharness to the seat lock cable.
- W** Pass the wireharnesses past the outside of the frame bracket.
- X** Apply silicone when inserting the starter relay.
- Y** Fasten the wireharness to the frame with a plastic clamp.
- Z** Use a plastic band to hold the auto choke leads (left and right), throttle position sensor lead, and rear brake hose in a loose bundle. (The band should be loose enough so that it can be turned.) Pull the band end to the bottom.

- AA** Pass the speed sensor lead under the stay and cross pipe and then over the brake hose guide.

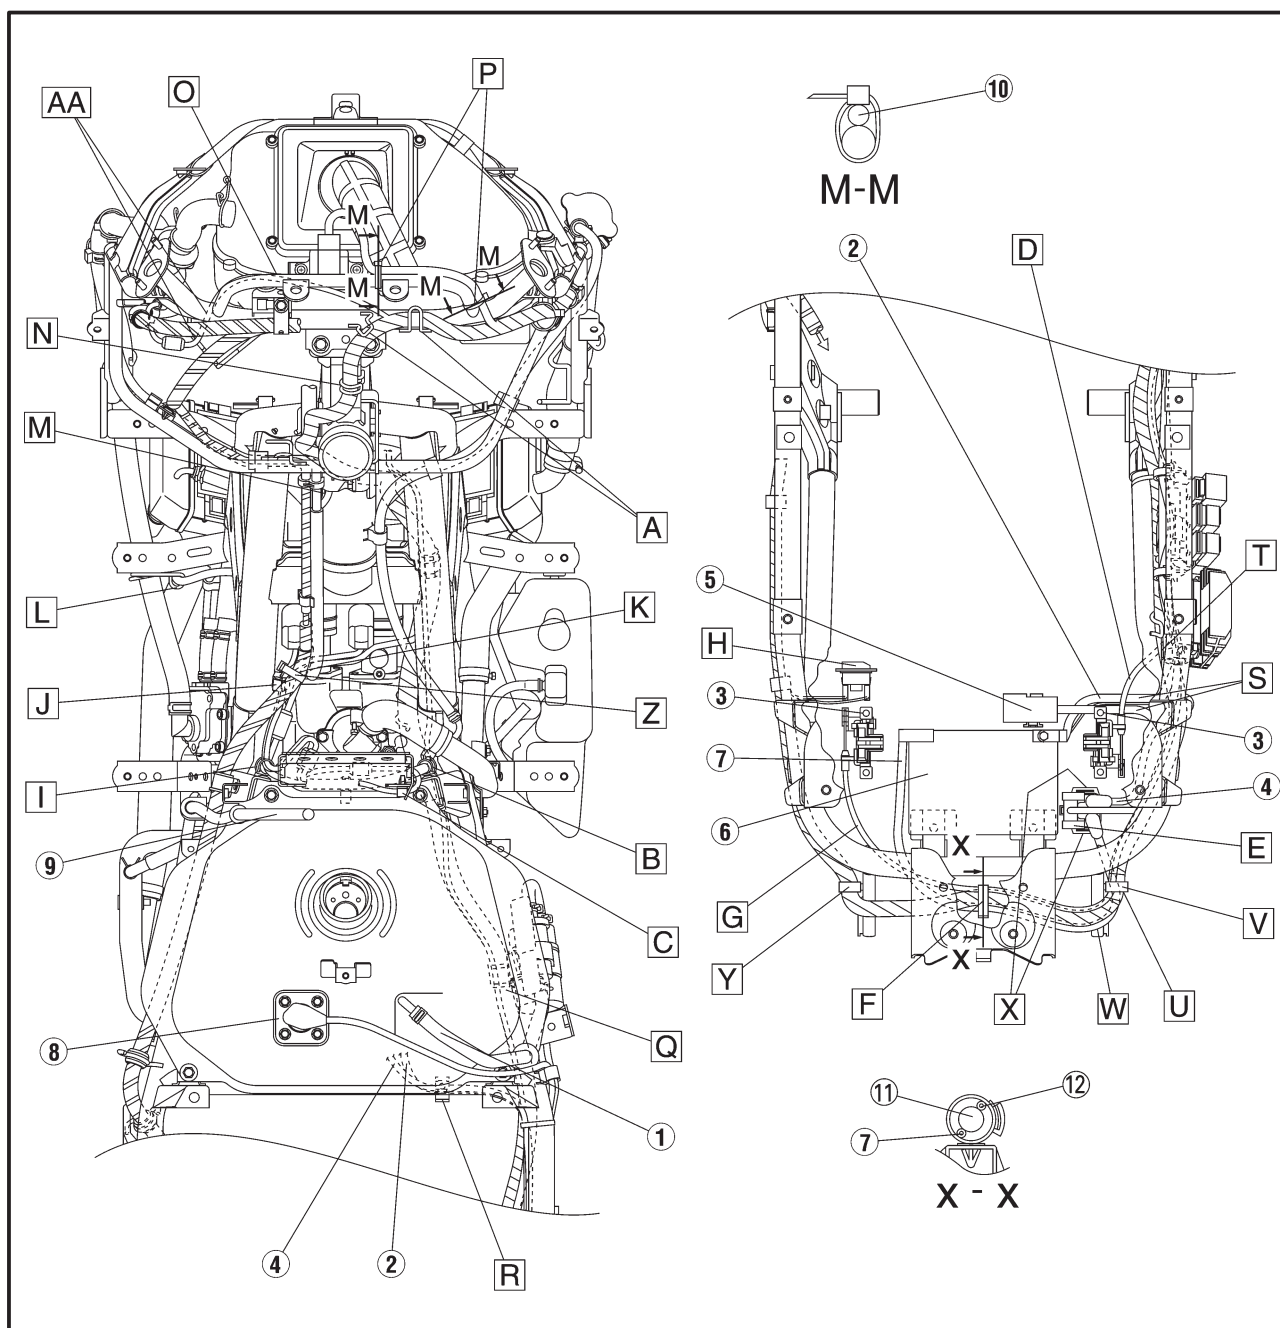


CABLE ROUTING

SPEC




- ① Vacuum hose
- ② Rear brake hose
- ③ Switch assembly lead
- ④ Auto choke lead
- ⑤ Throttle position sensor lead
- ⑥ Fan motor lead
- ⑦ Air vent hose
- ⑧ Drain hoses
- ⑨ Sidestand switch lead
- ⑩ Thermo switch lead
- ⑪ High tension code

- A** Route the throttle cable through the cable holder.
- B** Into the handle cover.
- C** Route the main switch lead through over the seat lock cable.
- D** Fasten the sidestand switch lead and thermo switch lead to the frame with a plastic clamp.
- E** Fasten the carburetor air vent hose to the frame with a plastic clamp.
- F** Fasten the carburetor air vent hose and drain hoses (2 hoses) to the frame.
- G** Drop the carburetor drain hose.

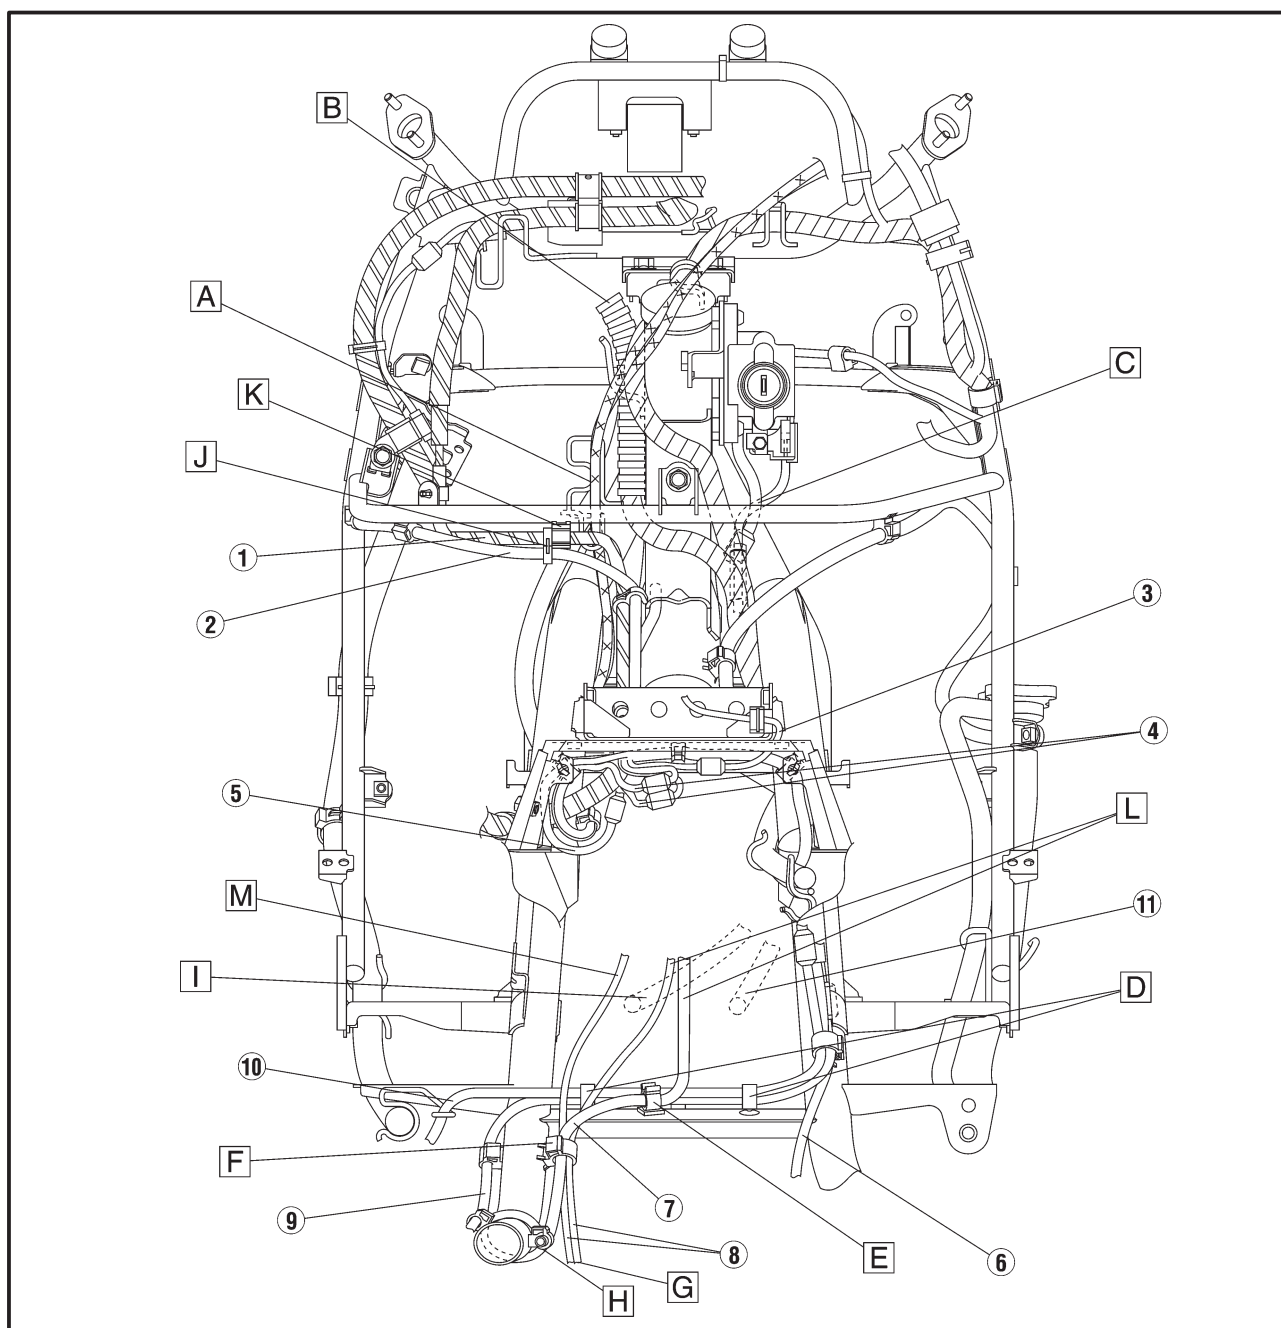



- H** Fasten the rear end of the carburetor air vent hose to the frame with a plastic clamp. (The distance from the end of clamp to the frame must range from 0 to 5 mm.)
- I** Bundle the auto choke leads (left and right) and the throttle position sensor lead with a plastic clamp.
- J** Fasten the rear brake hose and vacuum hose with a plastic clamp.
- K** Fasten the rear brake hose to the stay 1 with a plastic clamp.
- L** Pass the right carburetor drain hose and air vent hose between the right and left high tension cables.
- M** Route the left carburetor drain hose through the outside of the left high tension cable.

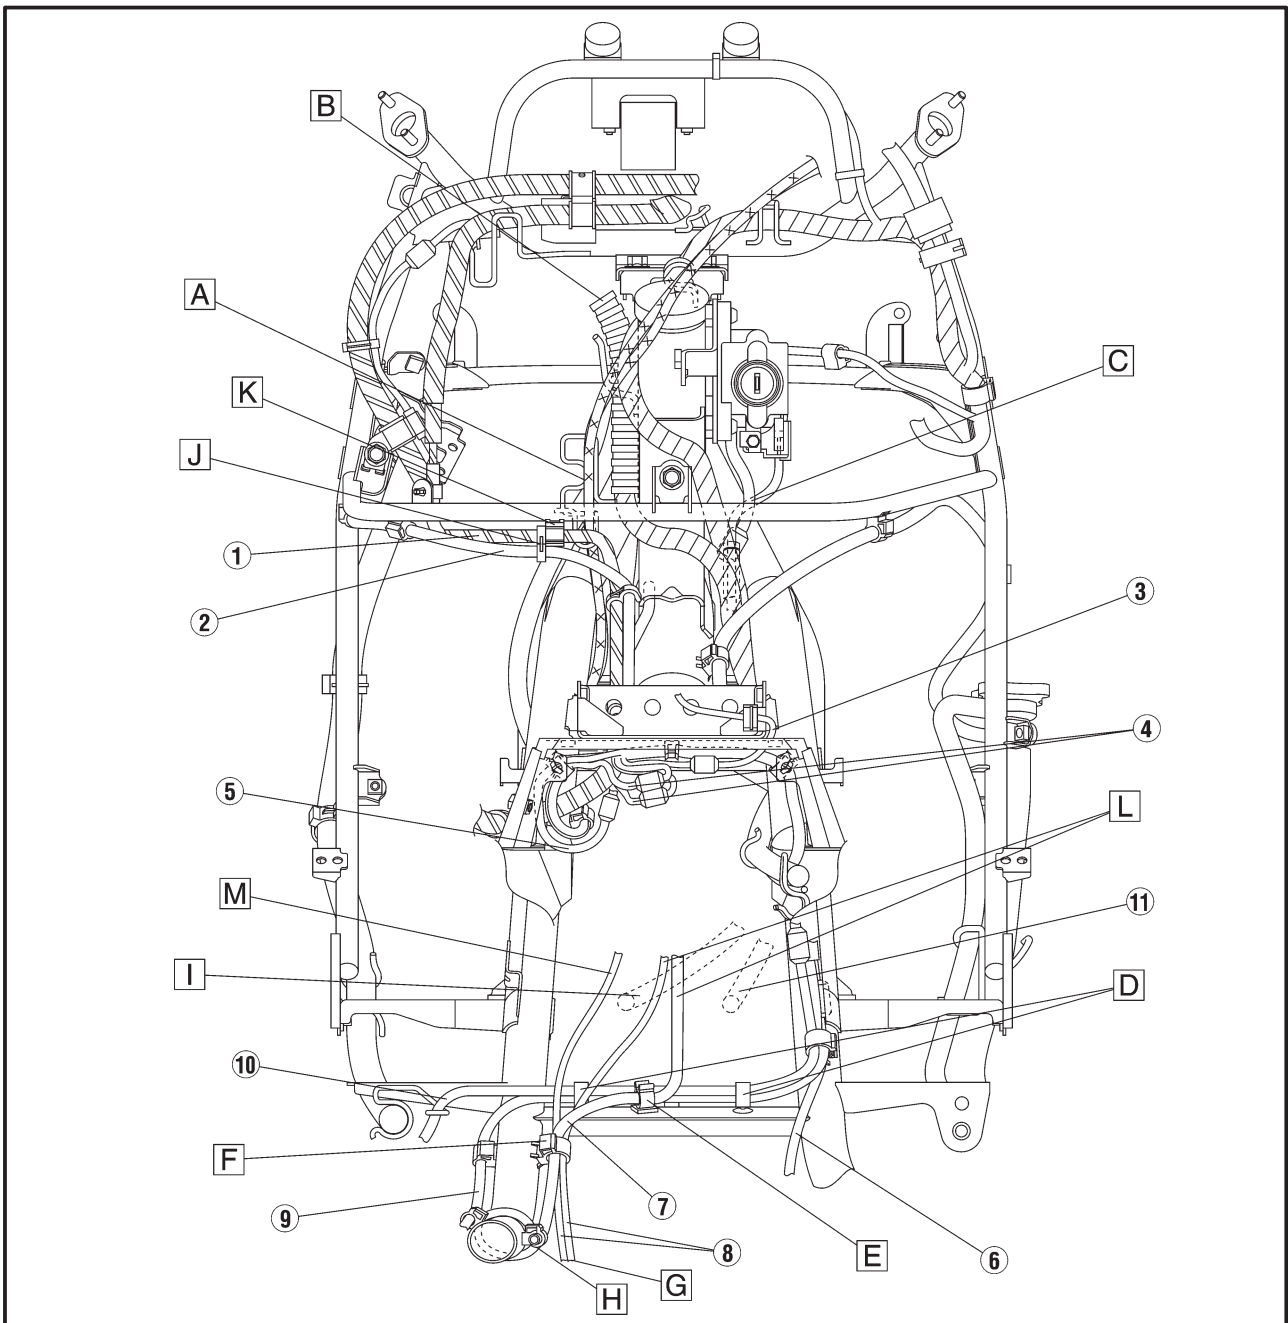



CHK

ADJ

3



CHAPTER 3 PERIODIC CHECKS AND ADJUSTMENTS

INTRODUCTION	3-1
PERIODIC MAINTENANCE AND LUBRICATION INTERVALS	3-1
SEAT	3-3
COVER AND PANEL	3-4
FRONT COWLING	3-4
SIDE COVER MOLES	3-5
REAR COVERS AND TAILLIGHT	3-6
FUEL TANK	3-7
ENGINE	3-8
ADJUSTING THE VALVE CLEARANCE	3-8
SYNCHRONIZING THE CARBURETORS	3-13
ADJUSTING THE ENGINE IDLING SPEED	3-15
ADJUSTING THE THROTTLE CABLE FREE PLAY	3-16
CHECKING THE SPARK PLUGS	3-18
CHECKING THE IGNITION TIMING	3-19
MEASURING THE COMPRESSION PRESSURE	3-20
CHECKING THE ENGINE OIL LEVEL	3-22
CHANGING THE ENGINE OIL	3-23
MEASURING THE ENGINE OIL PRESSURE	3-25
CLEANING THE AIR FILTER ELEMENT	3-27
CLEANING THE V-BELT CASE AIR FILTER ELEMENT	3-28
CHECKING THE CARBURETOR JOINTS AND INTAKE MANIFOLDS	3-28
CHECKING THE FUEL HOSES AND FUEL FILTER	3-29
CHECKING THE CRANKCASE BREATHER HOSE	3-30
CHECKING THE EXHAUST SYSTEM	3-30
CHECKING THE COOLANT LEVEL	3-31
CHECKING THE COOLING SYSTEM	3-32
CHANGING THE COOLANT	3-32
CHASSIS	3-36
CHECKING THE BRAKE FLUID LEVEL	3-36
CHECKING THE BRAKE PADS	3-37
CHECKING THE BRAKE HOSES	3-37
BLEEDING THE HYDRAULIC BRAKE SYSTEM	3-38
CHECKING THE CHAIN DRIVE OIL LEVEL	3-39
CHANGING THE CHAIN DRIVE OIL	3-40
CHECKING AND ADJUSTING THE STEERING HEAD	3-40
CHECKING THE FRONT FORK	3-43
CHECKING THE TIRES	3-45
CHECKING THE WHEELS	3-47
CHECKING AND LUBRICATING THE CABLES	3-48

LUBRICATING THE LEVELS	3-48
LUBRICATING THE CENTERSTAND	3-48
LUBRICATING THE SIDESTAND	3-48
LUBRICATING THE REAR SUSPENSION	3-49

ELECTRICAL SYSTEM	3-50
CHECKING AND CHARGING THE BATTERY	3-50
CHECKING THE FUSES	3-55
REPLACING THE HEADLIGHT BULBS	3-57
ADJUSTING THE HEADLIGHT BEAM	3-58



EAS00036

PERIODIC CHECKS AND ADJUSTMENTS

INTRODUCTION

This chapter includes all information necessary to perform recommended checks and adjustments. If followed, these preventive maintenance procedures will ensure more reliable vehicle operation, a longer service life and reduce the need for costly overhaul work. This information applies to vehicles already in service as well as to new vehicles that are being prepared for sale. All service technicians should be familiar with this entire chapter.

PERIODIC MAINTENANCE AND LUBRICATION INTERVALS

NO.	ITEM	CHECK OR MAINTENANCE JOB	ODOMETER READING (×1,000 km)					ANNUAL CHECK
			1	10	20	30	40	
1	* Fuel line (See page 3-29)	• Check fuel hoses and vacuum hose for cracks or damage.		✓	✓	✓	✓	✓
2	* Fuel filter (See page 3-29)	• Check condition.			✓		✓	
3	* Spark plugs (See page 3-18)	• Check condition. • Clean and regap.		✓		✓		
		• Replace.			✓		✓	
4	* Valves (See page 3-8)	• Check valve clearance. • Adjust.	Every 40,000 km					
5	* Air filter element (See page 3-27)	• Clean.		✓		✓		
		• Replace.			✓		✓	
6	* V-belt case air filter elements (See page 3-28)	• Clean.		✓		✓		
		• Replace.			✓		✓	
7	* Front brake (See page 3-36) (See page 3-37)	• Check operation, fluid level and vehicle for fluid leakage.	✓	✓	✓	✓	✓	✓
		• Replace brake pads.	Whenever worn to the limit					
8	* Rear brake (See page 3-36) (See page 3-37)	• Check operation, fluid level and vehicle for fluid leakage.	✓	✓	✓	✓	✓	✓
		• Replace brake pads.	Whenever worn to the limit					
9	* Brake hose (See page 3-37)	• Check for cracks or damage.		✓	✓	✓	✓	✓
		• Replace.	Every 4 years					
10	* Wheels (See page 3-47)	• Check runout and for damage.		✓	✓	✓	✓	
11	* Tires (See page 3-45)	• Check tread depth and for damage. • Replace if necessary. • Check air pressure. • Correct if necessary.		✓	✓	✓	✓	
12	* Wheel bearings (See page 4-4)	• Check bearing for looseness or damage.		✓	✓	✓	✓	
13	* Steering bearings (See page 3-40)	• Check bearing play and steering for roughness.	✓	✓	✓	✓	✓	
		• Lubricate with lithium-soap-based grease.	Every 20,000 km					
14	* Chassis fasteners (See page 2-21)	• Make sure that all nuts, bolts and screws are properly tightened.		✓	✓	✓	✓	✓
15	* Sidestand/centerstand (See page 3-48)	• Check operation. • Lubricate.		✓	✓	✓	✓	✓
16	* Sidestand switch (See page 8-9)	• Check operation.	✓	✓	✓	✓	✓	✓
17	* Front fork (See page 3-43)	• Check operation and for oil leakage.		✓	✓	✓	✓	
18	* Rear shock absorber assembly (See page 3-49)	• Check operation and shock absorber for oil leakage.		✓	✓	✓	✓	
		• Lubricate the pivoting points with lithium-soap-based grease.			✓		✓	
19	* Carburetors (See page 3-15)	• Adjust engine idling speed and synchronization.	✓	✓	✓	✓	✓	✓

PERIODIC MAINTENANCE AND LUBRICATION INTERVALS

**CHK
ADJ**




NO.	ITEM	CHECK OR MAINTENANCE JOB	ODOMETER READING (×1,000 km)					ANNUAL CHECK
			1	10	20	30	40	
20	Engine oil (See page 3-23)	• Change.	✓	4,000 km after initial 1,000 km				
			When the oil change indicator light comes on (every 5,000 km)					
21	Engine oil filter cartridge (See page 3-23)	• Replace.	✓		✓		✓	
22	* Cooling system (See page 3-32)	• Check coolant level and vehicle for coolant leakage.		✓	✓	✓	✓	✓
		• Change.	Every 3 years					
23	Chain drive oil (See page 3-39) (See page 3-40)	• Check vehicle for oil leakage. • Change.		✓	✓	✓	✓	
24	* V-belt (See page 5-48)	• Replace.	When the V-Belt replacement indication light comes on (every 20,000 km)					
25	* Front and rear brake switches (See page 8-9)	• Check operation.	✓	✓	✓	✓	✓	✓
26	Moving parts and cables (See page 3-48)	• Lubricate.		✓	✓	✓	✓	✓
27	* Lights, signals and switches (See page 3-57) (See page 3-58)	• Check operation. • Adjust headlight beam.	✓	✓	✓	✓	✓	✓

EAU03541

NOTE: _____


- The air filter needs more frequent service if you are riding in unusually wet or dusty areas.
- Hydraulic brake service
 - Regularly check and, if necessary, correct the brake fluid level.
 - Every two years replace the internal components of the brake master cylinder and caliper, and change the brake fluid.
 - Replace the brake hoses every four years and if cracked or damaged.

SEAT
SEAT AND FUEL LID

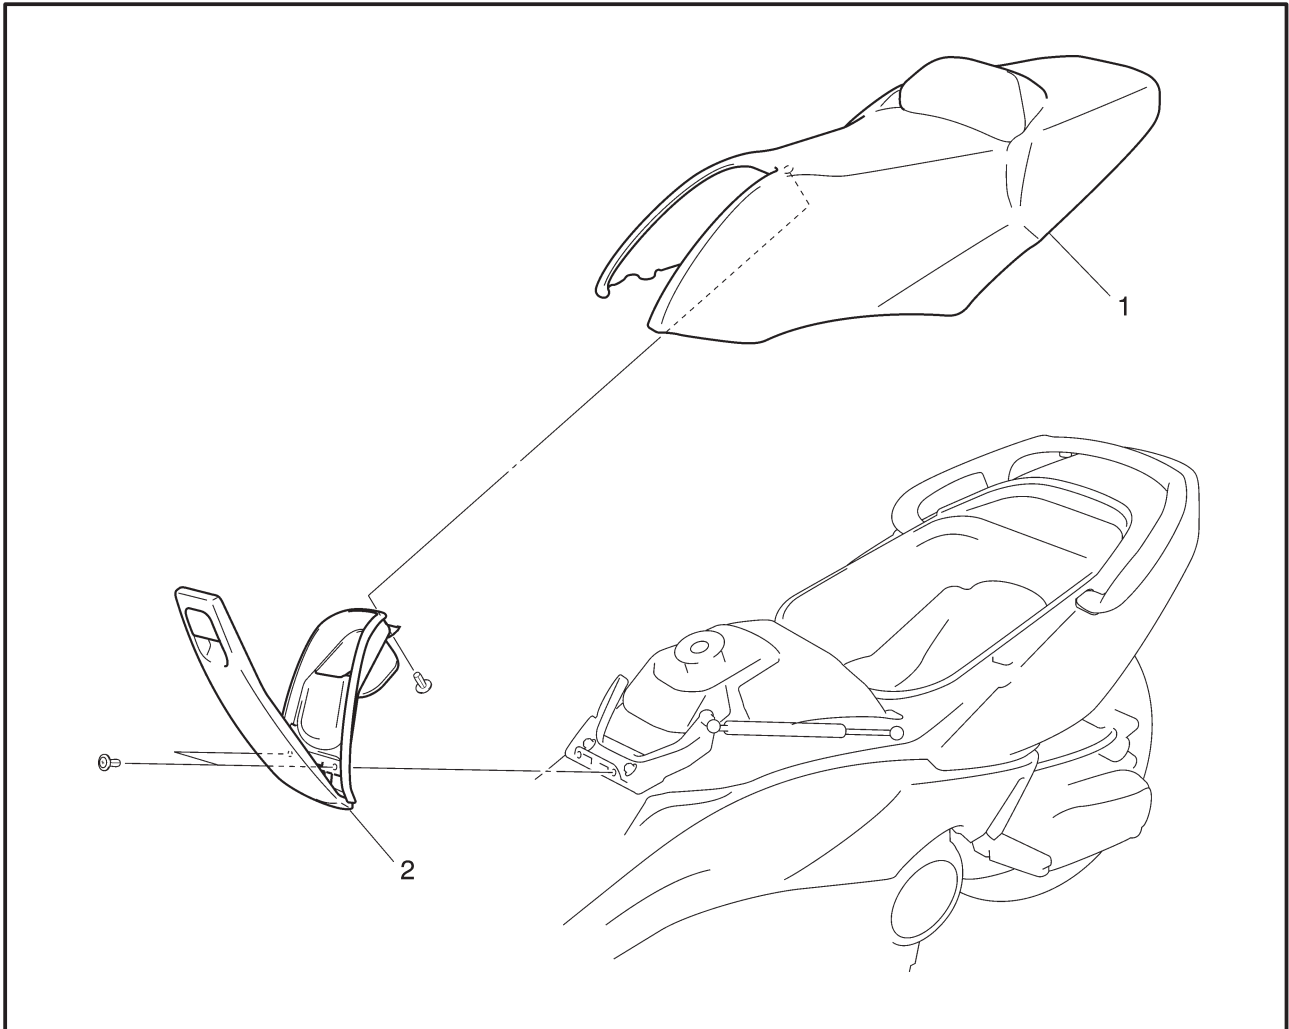


Order	Job/Part	Q'ty	Remarks
	Removing the seat and fuel lid		
1	Seat	1	Removing the parts in the order listed. For installation, reverse the removal procedure.
2	Fuel lid	1	

COVER AND PANEL
FRONT COWLING

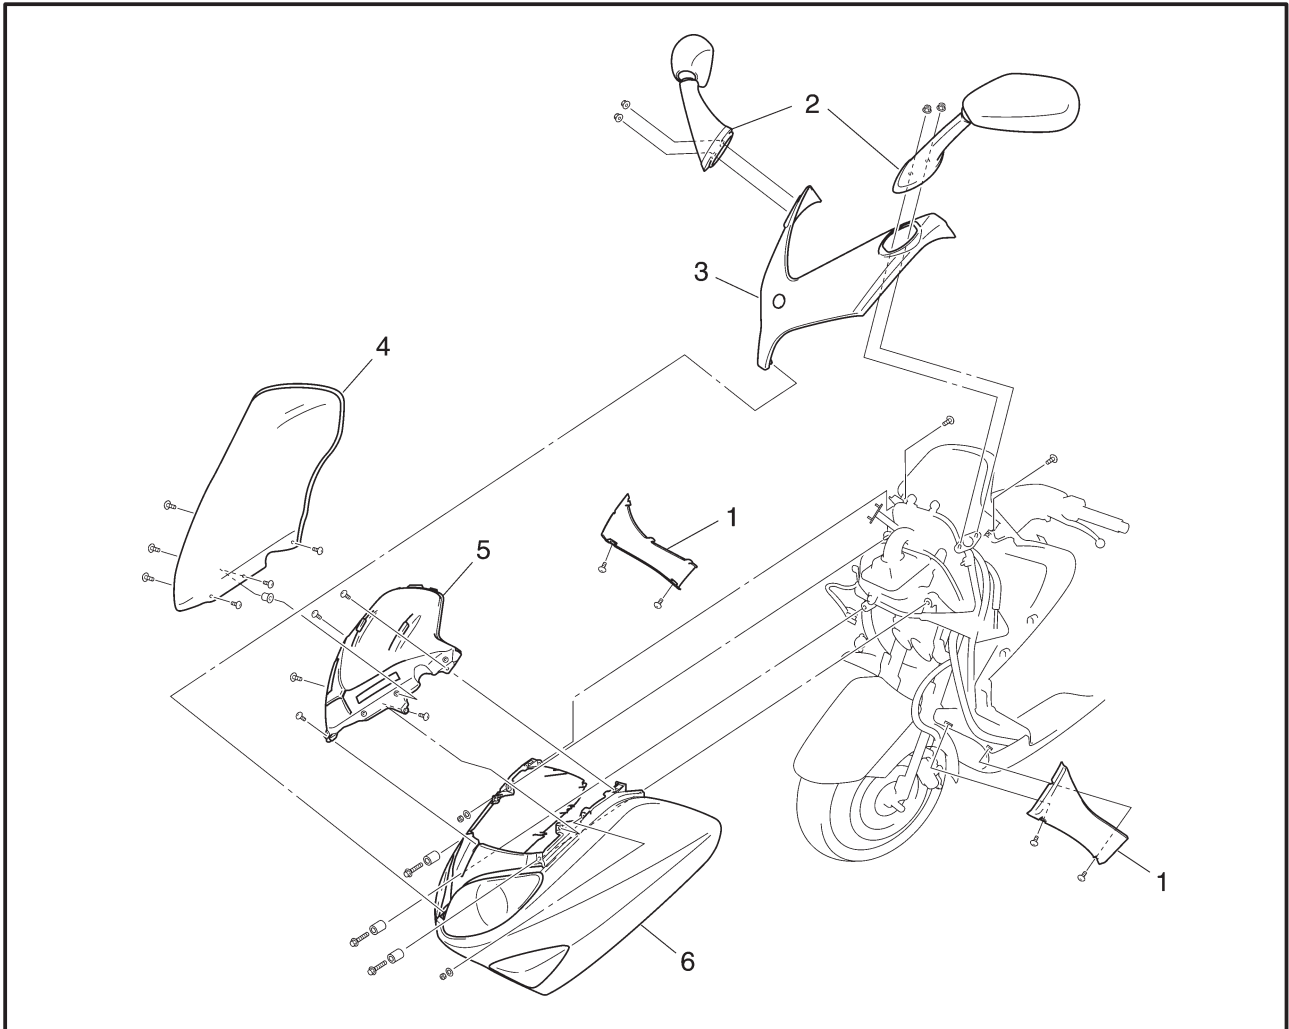


Order	Job/Part	Q'ty	Remarks
	Removing the front cowling		Refer to parts in the order listed.
1	Front side cover mole	2	
2	Rear view mirror	2	
3	Front cowling upper cover	1	
4	Windshield	1	
5	Front cowling inner panel	1	
6	Front cowling	1	
			For installation, reverse the removal procedure.

SIDE COVER MOLES

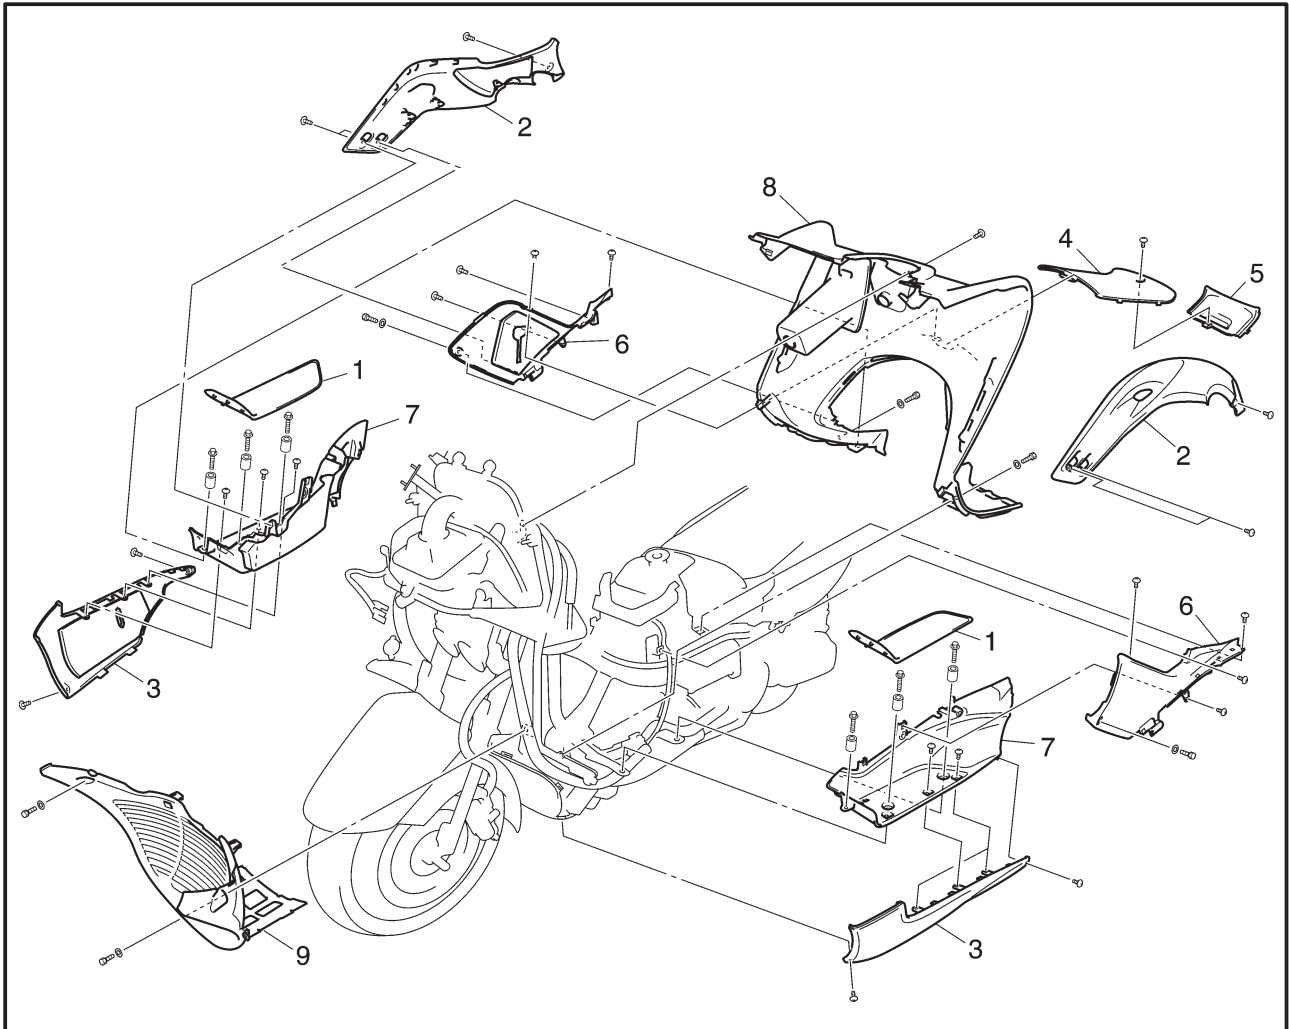


Order	Job/Part	Q'ty	Remarks
	Removing the side cover moles		Removing the parts in the order listed.
1	Mat (left and right)	2	
2	Upper side cover mole (left and right)	2	
3	Lower side cover mole (left and right)	2	
4	Center cover	1	
5	Hinge cover	1	
6	Side cover (left and right)	2	
7	Footrest board (left and right)	2	
8	Legshield	1	
9	Inner fender	1	
			For installation, reverse the removal procedure.

REAR COVERS AND TAILLIGHT

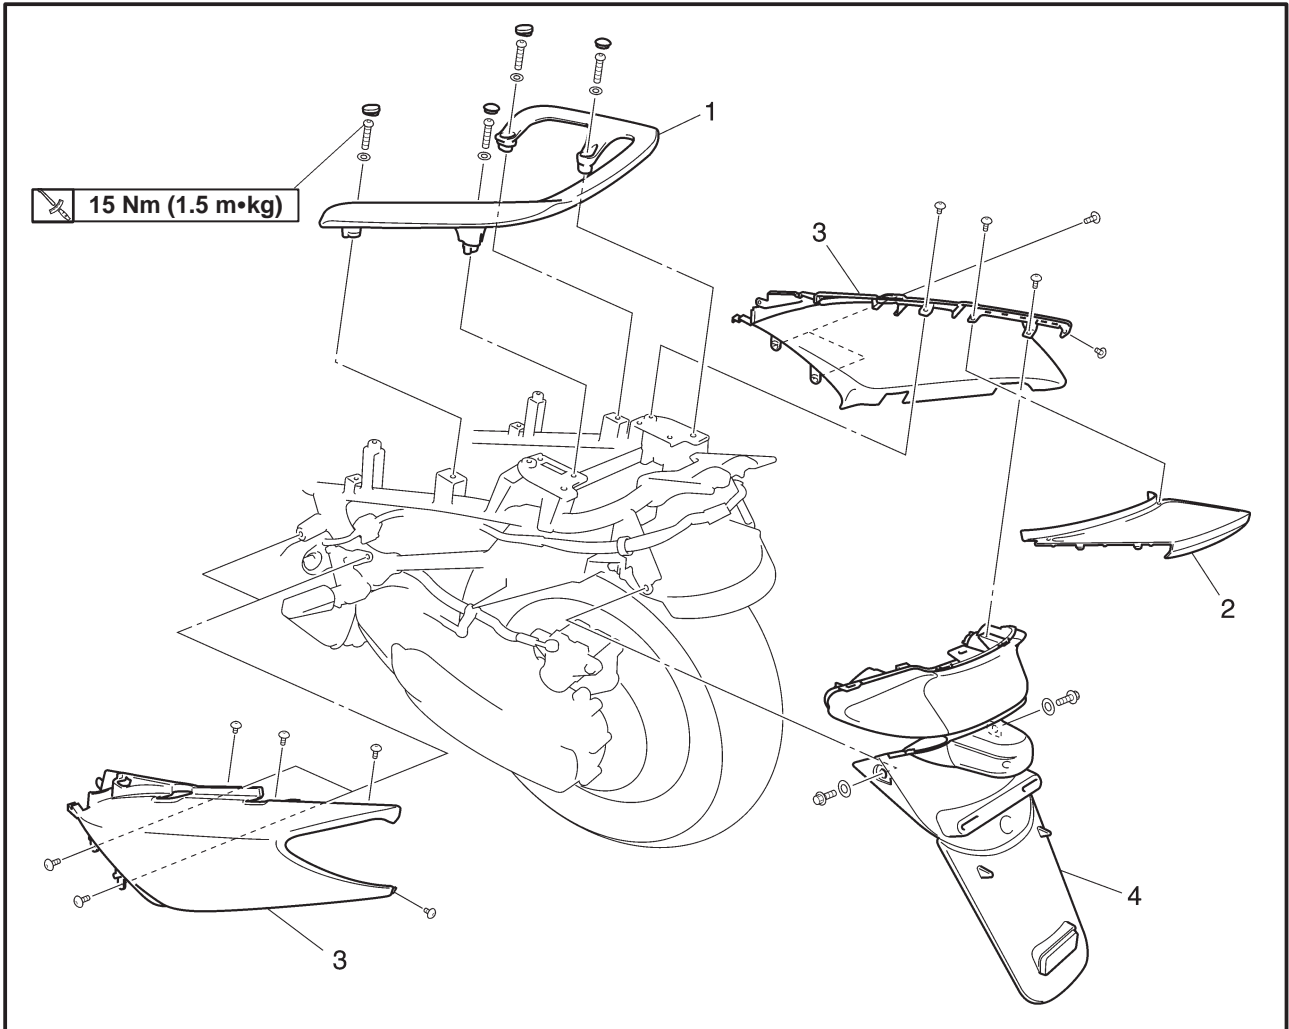

Order	Job/Part	Q'ty	Remarks
	Removing the rear covers and taillight		Removing the parts in the order listed.
1	Grab bar	1	
2	Rear cover	1	
3	Rear side cover (left and right)	2	
4	Taillight assembly	1	
			For installation, reverse the removal procedure.

FUEL TANK

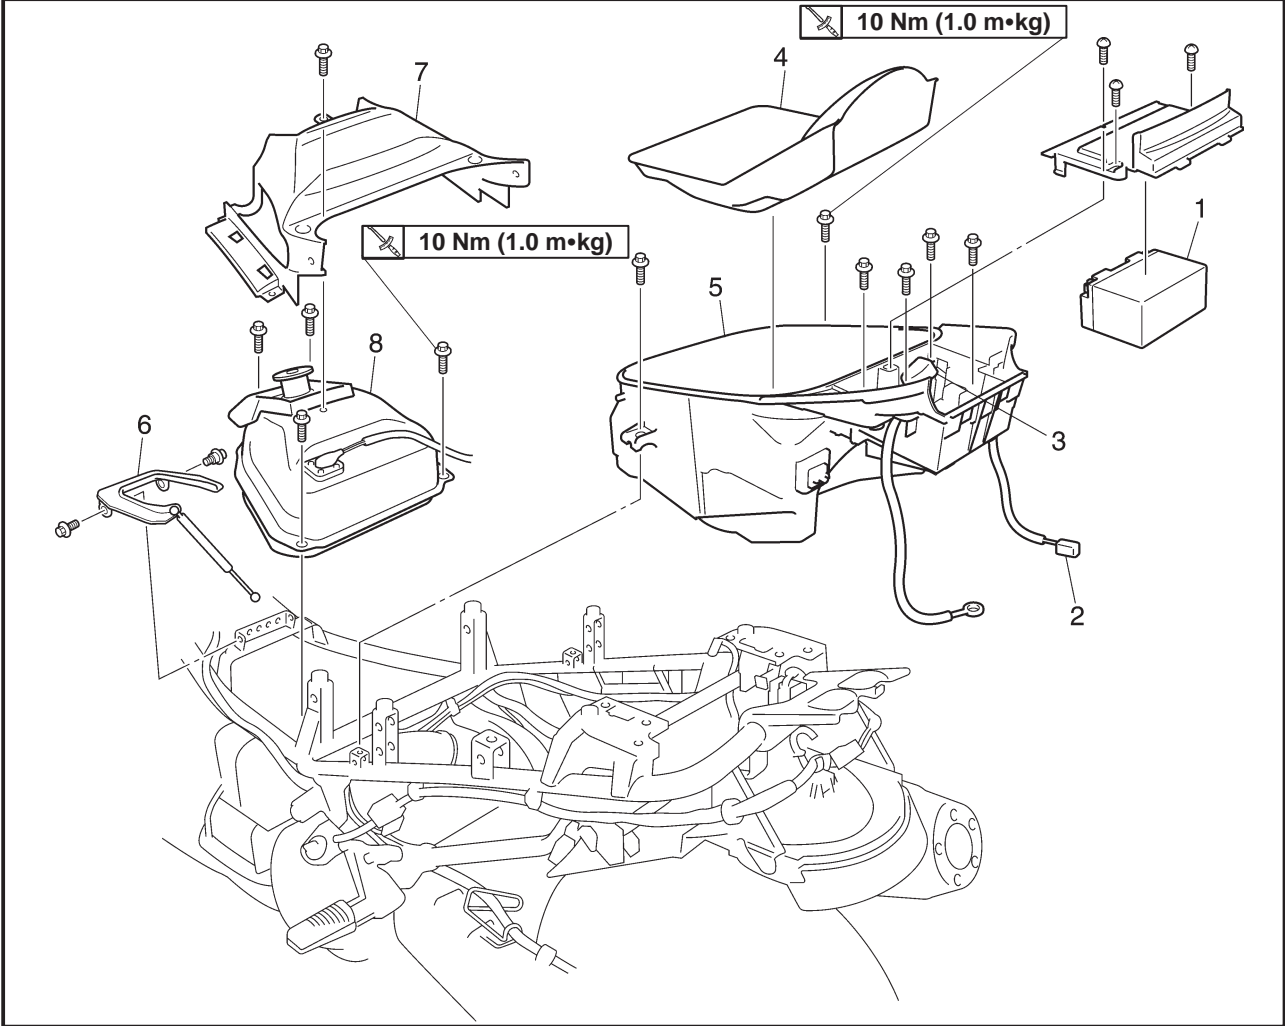

Order	Job/Part	Q'ty	Remarks
	Removing the fuel tank		Remove the parts in the order listed.
1	Battery	1	
2	Fuse box coupler	1	Disconnect.
3	Battery positive lead	1	Disconnect.
4	Luggage box mat	1	
5	Luggage box	1	
6	Hinge and damper	1	
7	Fuel tank cover	1	
8	Fuel tank	1	
			For installation, reverse the removal procedure.

EAS00045

ENGINE

ADJUSTING THE VALVE CLEARANCE

The following procedure applies to all of the valves.

NOTE: _____

- Valve clearance adjustment should be made on a cold engine, at room temperature.
- When the valve clearance is to be measured or adjusted, the piston must be at top dead center (TDC) on the compression stroke.

1. Remove:

- footrest boards
- front cowling
- legshield

Refer to "COVER AND PANEL".

2. Remove:


- radiator

Refer to "RADIATOR" in chapter 6.

3. Remove:


- carburetor
- spark plug
- cylinder head cover ①
- cylinder head cover gasket ②
- intake manifold

Refer to "CARBURETORS" in chapter 7.

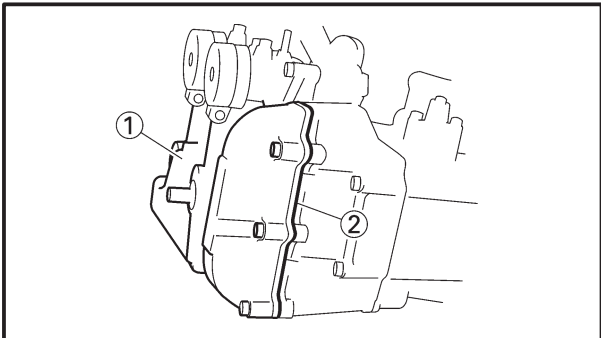

4. Remove:


- timing plug ①

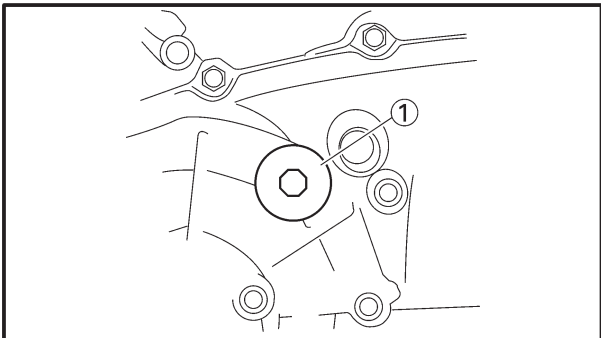

5. Measure:



- valve clearance

Out of specification → Adjust.

	Valve clearance (cold) Intake valve 0.15 ~ 0.20 mm Exhaust valve 0.25 ~ 0.30 mm
---	--

ADJUSTING THE VALVE CLEARANCE

CHK
ADJ

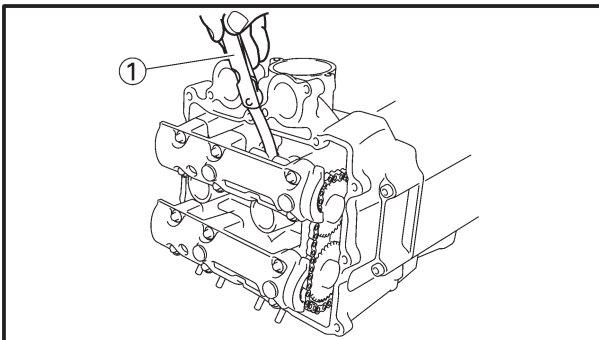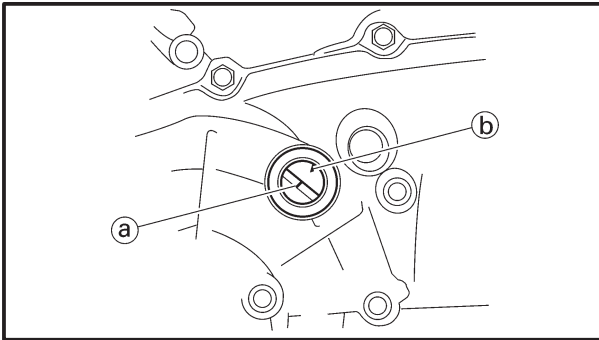

-
- a. Turn the crankshaft counterclockwise.
 - b. When piston #1 is at TDC on the compression stroke, align the TDC mark (a) on the generator rotor with the mark (b) on the generator cover.

NOTE: _____
TDC on the compression stroke can be found when the camshaft lobes are turned away from each other.

-
- c. Measure the valve clearance with a thickness gauge (1).

NOTE: _____
• If the valve clearance is incorrect, record the measured reading.
• Measure the valve clearance in the following sequence.

-
- d. Turn the crankshaft 360° counterclockwise and check the valve clearance of piston #2.


6. Remove:

CAUTION: _____

When removing the camshaft from the cylinder head, first tip up the chassis front side at least 25° from the chassis level position.

-
- intake camshaft
 - exhaust camshaft



NOTE: _____
• Refer to “CAMSHAFTS” in chapter 5.
• When removing the timing chain and camshafts, fasten a wire to the timing chain to retrieve it if it falls into the crankcase.

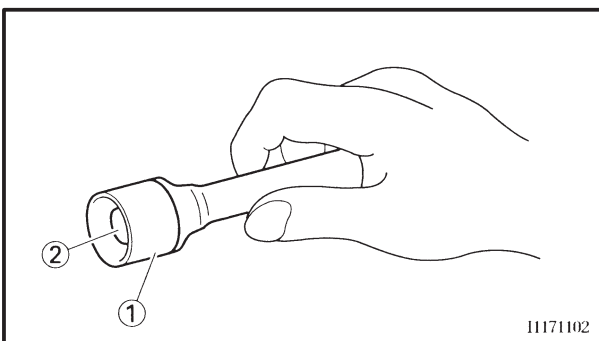

-
- 7. Adjust:
 - valve clearance
 - a. Remove the valve lifter (1) and the valve pad (2).

NOTE: _____
• Cover the timing chain opening with a rag to prevent the valve pad from falling into the crankcase.

ADJUSTING THE VALVE CLEARANCE

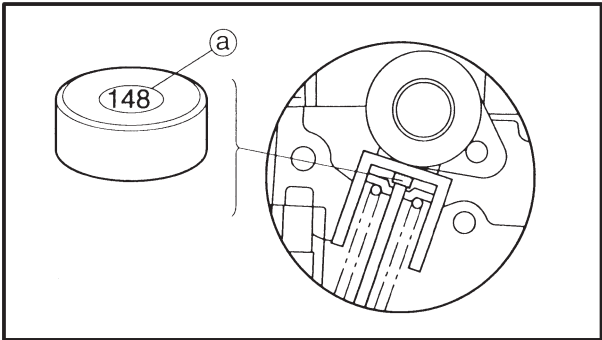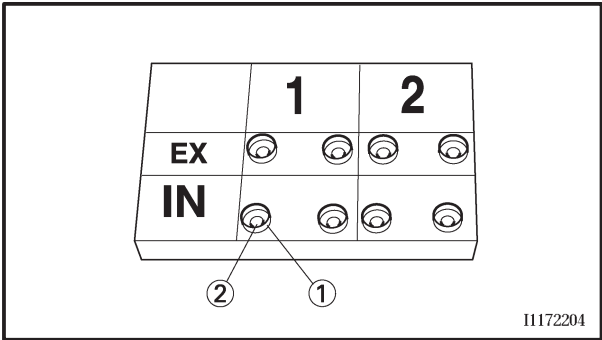

- Make a note of the position of each valve lifter ① and valve pad ② so that they can be installed in the correct place.

- b. Select the proper valve pad from the following table.

Valve pad thickness range		Available valve pads
Nos. 120 ~ 240	1.20 ~ 2.40 mm	25 thicknesses in 0.05 mm increments

NOTE:

- The thickness (a) of each valve pad is marked in hundredths of millimeters on the side that touches the valve lifter.
- Since valve pads of various sizes are originally installed, the valve pad number must be rounded in order to reach the closest equivalent to the original.

- c. Round off the original valve pad number according to the following table.

Last digit	Rounded value
0 or 2	0
5	5
8	10

EXAMPLE:


Original valve pad number = 148 (thickness = 1.48 mm (0.058 in))

Rounded value = 150

- d. Locate the rounded number of the original valve pad and the measured valve clearance in the valve pad selection table. The point where the column and row intersect is the new valve pad number.

NOTE:

The new valve pad number is only an approximation. The valve clearance must be measured again and the above steps should be repeated if the measurement is still incorrect.

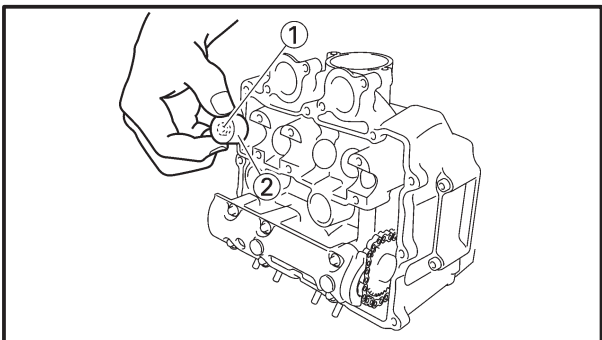

- e. Install the new valve pad ① and the valve lifter ②.



NOTE: _____

- Apply molybdenum disulfide to the valve pad.
- Lubricate the valve lifter with molybdenum disulfide oil.
- The valve lifter must turn smoothly when rotated by hand.
- Install the valve lifter and the valve pad in the correct place.

f. Install the exhaust and intake camshafts, timing chain and camshaft caps.

	Camshaft cap bolt 10 Nm (1.0 m•kg)
---	---

NOTE: _____

- Refer to “CAMSHAFTS” in chapter 5.
- Lubricate the camshaft bearings, camshaft lobes and camshaft journals.
- Align the camshaft marks with the cylinder head.
- Turn the crankshaft counterclockwise several turns to seat the parts.

g. Measure the valve clearance again.
 h. If the valve clearance is still out of specification, repeat all of the valve clearance adjustment steps until the specified clearance is obtained.



ADJUSTING THE VALVE CLEARANCE



VALVE PAD SELECTION TABLE INTAKE

[B] MEASURED VALVE CLEARANCE	[A] ORIGINAL VALVE PAD NUMBER																								
	120	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240
0.00 ~ 0.02				120	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225
0.03 ~ 0.07			120	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230
0.08 ~ 0.10		120	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235
0.11 ~ 0.20	[C] STANDARD CLEARANCE																								
0.21 ~ 0.22	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240	
0.23 ~ 0.27	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240		
0.28 ~ 0.32	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240			
0.33 ~ 0.37	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240				
0.38 ~ 0.42	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240					
0.43 ~ 0.47	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240						
0.48 ~ 0.52	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240							
0.53 ~ 0.57	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240								
0.58 ~ 0.62	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240									
0.63 ~ 0.67	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240										
0.68 ~ 0.72	175	180	185	190	195	200	205	210	215	220	225	230	235	240											
0.73 ~ 0.77	180	185	190	195	200	205	210	215	220	225	230	235	240												
0.78 ~ 0.82	185	190	195	200	205	210	215	220	225	230	235	240													
0.83 ~ 0.87	190	195	200	205	210	215	220	225	230	235	240														
0.88 ~ 0.92	195	200	205	210	215	220	225	230	235	240															
0.93 ~ 0.97	200	205	210	215	220	225	230	235	240																
0.98 ~ 1.02	205	210	215	220	225	230	235	240																	
1.03 ~ 1.07	210	215	220	225	230	235	240																		
1.08 ~ 1.12	215	220	225	230	235	240																			
1.13 ~ 1.17	220	225	230	235	240																				
1.18 ~ 1.22	225	230	235	240																					
1.23 ~ 1.27	230	235	240																						
1.28 ~ 1.32	235	240																							
1.33 ~ 1.37	240																								

Example:
 Valve Clearance (cold)
 0.11 ~ 0.20 mm
 Rounded value 150
 Measured valve clearance is 0.24 mm
 Replace pad 150 with pad 160
 Pad No. 150 = 1.50 mm
 Pad No. 160 = 1.60 mm
 Always install the valve pad with the number facing down.

EXHAUST

[B] MEASURED VALVE CLEARANCE	[A] ORIGINAL VALVE PAD NUMBER																								
	120	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240
0.00 ~ 0.02						120	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215
0.03 ~ 0.07					120	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220
0.08 ~ 0.12				120	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225
0.13 ~ 0.17			120	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230
0.18 ~ 0.20		120	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235
0.21 ~ 0.30	[C] STANDARD CLEARANCE																								
0.31 ~ 0.32	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240	
0.33 ~ 0.37	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240		
0.38 ~ 0.42	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240			
0.43 ~ 0.47	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240				
0.48 ~ 0.52	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240					
0.53 ~ 0.57	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240						
0.58 ~ 0.62	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240							
0.63 ~ 0.67	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240								
0.68 ~ 0.72	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240									
0.73 ~ 0.77	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240										
0.78 ~ 0.82	175	180	185	190	195	200	205	210	215	220	225	230	235	240											
0.83 ~ 0.87	180	185	190	195	200	205	210	215	220	225	230	235	240												
0.88 ~ 0.92	185	190	195	200	205	210	215	220	225	230	235	240													
0.93 ~ 0.97	190	195	200	205	210	215	220	225	230	235	240														
0.98 ~ 1.02	195	200	205	210	215	220	225	230	235	240															
1.03 ~ 1.07	200	205	210	215	220	225	230	235	240																
1.08 ~ 1.12	205	210	215	220	225	230	235	240																	
1.13 ~ 1.17	210	215	220	225	230	235	240																		
1.18 ~ 1.22	215	220	225	230	235	240																			
1.23 ~ 1.27	220	225	230	235	240																				
1.28 ~ 1.32	225	230	235	240																					
1.33 ~ 1.37	230	235	240																						
1.38 ~ 1.42	235	240																							
1.43 ~ 1.47	240																								

Example:
 Valve Clearance (cold)
 0.21 ~ 0.30 mm
 Rounded value 175
 Measured valve clearance is 0.35 mm
 Replace pad 150 with pad 185
 Pad No. 175 = 1.75 mm
 Pad No. 185 = 1.85 mm
 Always install the valve pad with the number facing down.

ADJUSTING THE VALVE CLEARANCE/ SYNCHRONIZING THE CARBURETORS

CHK
ADJ



8. Install:
- all removed parts

NOTE: _____

For installation, reverse the removal procedure.

EAS00051

SYNCHRONIZING THE CARBURETORS

NOTE: _____

Prior to synchronizing the carburetors, the valve clearance and the engine idling speed should be properly adjusted and the ignition timing should be checked.


1. Stand the scooter on a level surface.

NOTE: _____

Place the scooter on a suitable stand.

2. Remove:

- center cover
 - side covers (left and right)
- Refer to "COVER AND PANEL".

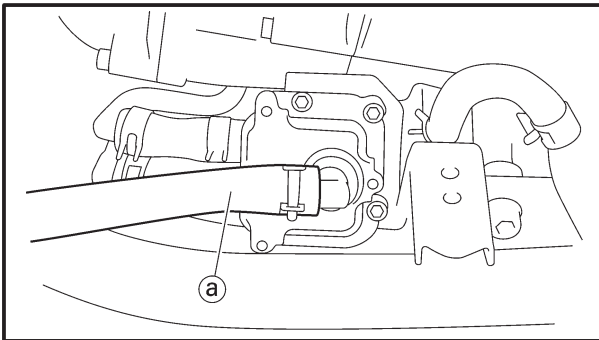


3. Stop air induction system operation and take a measurement.

NOTE: _____

Crimp the hose (a) running from the lead valve to the air cut off valve to prevent the air cut off valve from operating.

Make sure not to damage the hose while crimping it.

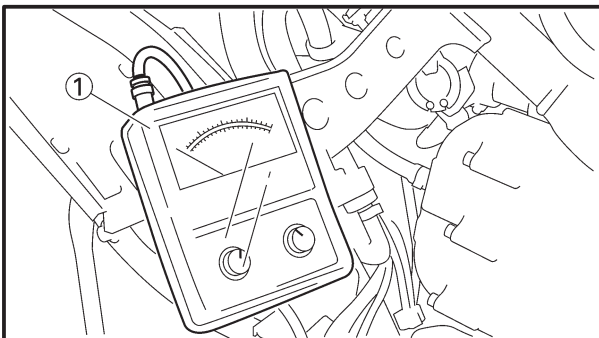


4. Install:

- engine tachometer ①
(onto the spark plug lead of cylinder. #1)
- vacuum gauge ②



Engine tachometer
90890-03113
Vacuum gauge
90890-03094

ADJUSTING THE ENGINE IDLING SPEED/ ADJUSTING THE THROTTLE CABLE FREE PLAY

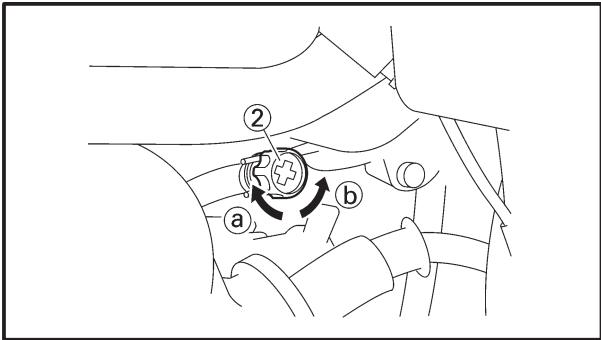

- c. Turn the throttle stop screw (2) in direction (a) or (b) until the specified engine idling speed is obtained.

Direction (a)	Engine idling speed is increased.
Direction (b)	Engine idling speed is decreased.



6. Adjust:
- throttle cable free play
- Refer to "ADJUSTING THE THROTTLE CABLE FREE PLAY".

Throttle cable free play (at the flange of the throttle grip)
3 ~ 5 mm


7. Install:
- side covers (left and right)
 - center cover
- Refer to "COVER AND PANEL".

EAS00055

ADJUSTING THE THROTTLE CABLE FREE PLAY

NOTE: _____

Prior to adjusting the throttle cable free play, the engine idling speed and carburetor synchronization should be adjusted properly.

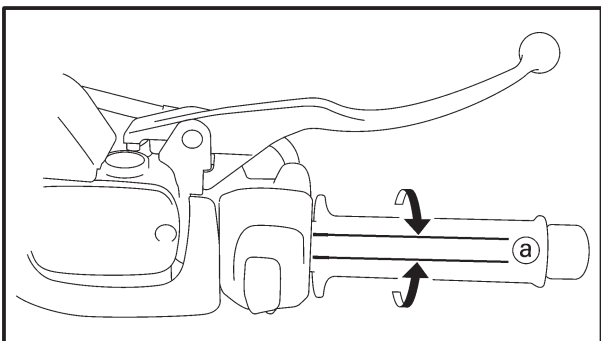

1. Check:
- throttle cable free play (a)
- Out of specification → Adjust.

Throttle cable free play (at the flange of the throttle grip)
3 ~ 5 mm


2. Remove:
- center cover
 - side cover (left)
- Refer to "COVER AND PANEL".

3. Adjust:
- throttle cable free play




NOTE: _____

When the scooter is accelerating, the accelerator cable (1) is pulled.

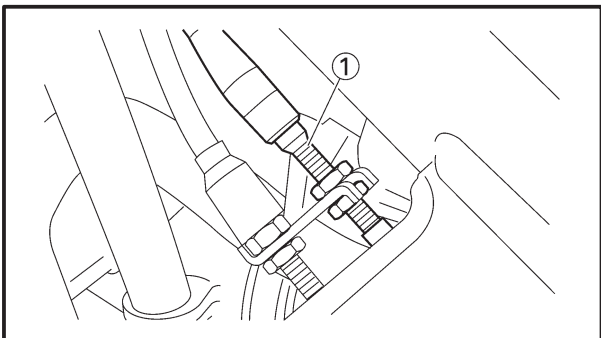

ADJUSTING THE THROTTLE CABLE FREE PLAY

CHK
ADJ

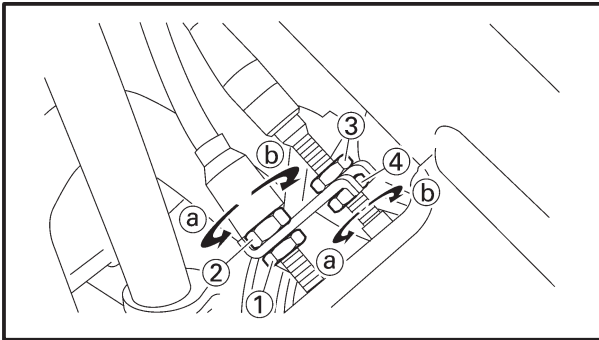

Carburetor side


- a. Loosen the locknut ① on the decelerator cable.
- b. Turn the adjusting nut ② in direction ① or ② to take up any slack on the decelerator cable.
- c. Loosen the locknut ③ on the accelerator cable.
- d. Turn the adjusting nut ④ in direction ① or ② until the specified throttle cable free play is obtained.

Direction ①	Throttle cable free play is increased.
Direction ②	Throttle cable free play is decreased.

- e. Tighten the locknuts.

NOTE:

If the specified throttle cable free play cannot be obtained on the carburetor side of the cable, use the adjusting nut on the handlebar side.

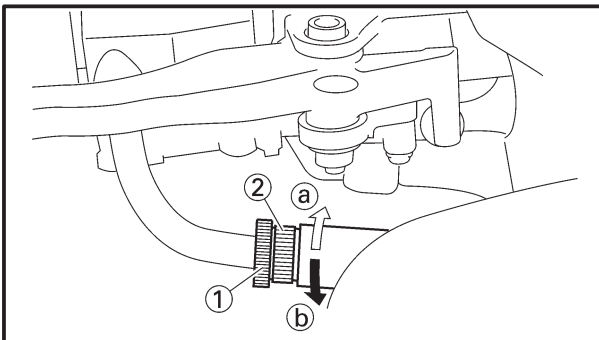

Handlebar side

- a. Loosen the locknut ①.
- b. Turn the adjusting nut ② in direction ① or ② until the specified throttle cable free play is obtained.

Direction ①	Throttle cable free play is increased.
Direction ②	Throttle cable free play is decreased.

- c. Tighten the locknut ①.

⚠ WARNING

After adjusting the throttle cable free play, turn the handlebar to the right and to the left to ensure that this does not cause the engine idling speed to change.

4. Install:

- side cover (left)
- center cover

Refer to "COVER AND PANEL".



CHECKING THE SPARK PLUGS

The following procedure applies to all of the spark plugs.

1. Remove:
 - center cover
 - side cover (left and right)
 Refer to "COVER AND PANEL".
2. Disconnect:
 - spark plug cap
3. Remove:
 - spark plug

CAUTION:

Before removing the spark plugs, blow away any dirt accumulated in the spark plug wells with compressed air to prevent it from falling into the cylinders.

4. Check:
 - spark plug type
 Incorrect → Change.

Spark plug type (manufacturer)
CR7E (NGK)

5. Check:
 - electrode ①
Damage/wear → Replace the spark plug.
 - insulator ②
Abnormal color → Replace the spark plug.
Normal color is a medium-to-light tan color.
6. Clean:
 - spark plug
(with a spark plug cleaner or wire brush)
7. Measure:
 - spark plug gap @
(with a wire gauge)
Out of specification → Regap.




Spark plug gap
0.7 ~ 0.8 mm

8. Install:
 - spark plug



Spark plug
12.5 Nm (1.25 m•kg)

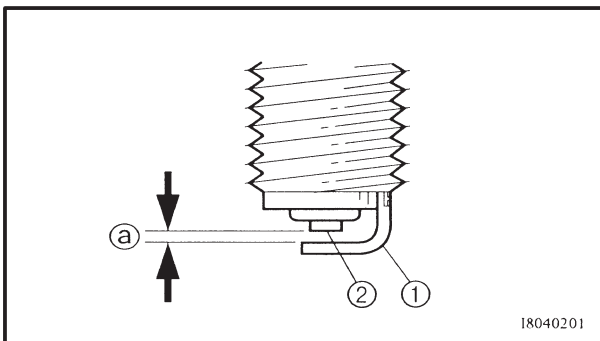

18040201

CHECKING THE SPARK PLUGS/ CHECKING THE IGNITION TIMING

CHK
ADJ



NOTE:

Before installing the spark plug, clean the spark plug and gasket surface.


9. Connect:
 - spark plug cap
10. Install:
 - center cover
 - side cover (left and right)Refer to "COVER AND PANEL".

EAS00062


CHECKING THE IGNITION TIMING

NOTE:

Prior to checking the ignition timing, check the wiring connections of the entire ignition system. Make sure that all connections are tight and free of corrosion.

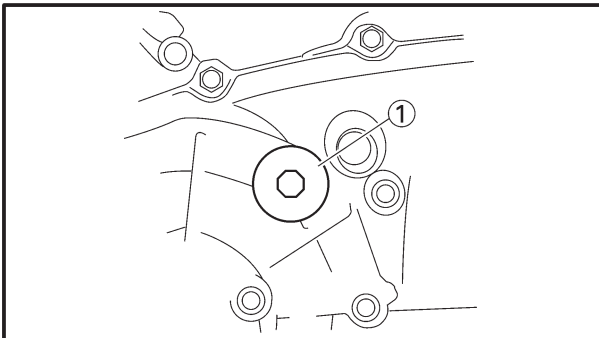

1. Remove:
 - footrest board (left)
 - center cover
 - side cover (left)Refer to "COVER AND PANEL".
2. Remove:
 - timing plug ①

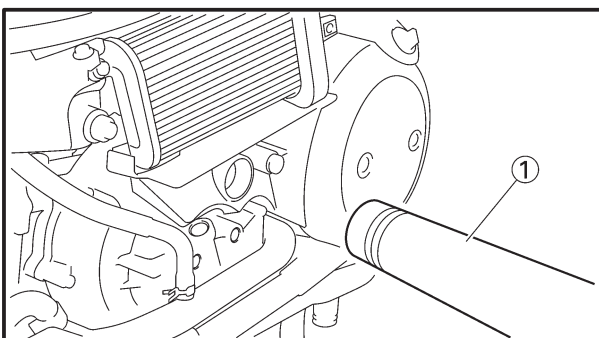

3. Install:
 - timing light ①
 - engine tachometer (onto the spark plug lead of cylinder. #1)



Timing light
90890-03141
Engine tachometer
90890-03113

MEASURING THE COMPRESSION PRESSURE


CHK
ADJ



3. Start the engine, warm it up for several minutes, and then turn it off.
4. Disconnect:
 - spark plug cap
5. Remove:
 - spark plug

CAUTION:

Before removing the spark plugs, use compressed air to blow away any dirt accumulated in the spark plug wells to prevent it from falling into the cylinders.

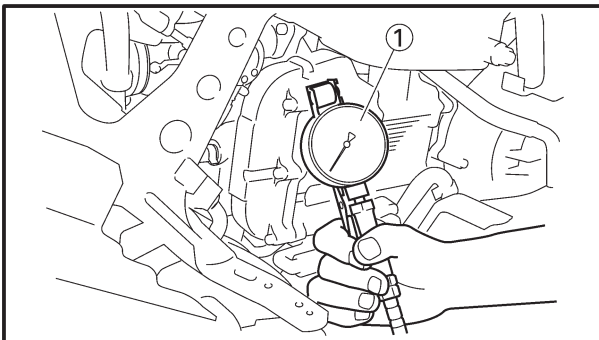

6. Install:
 - compression gauge ①



Compression gauge
90890-03081
Adapter
90890-04082

7. Measure:
 - compression pressure
 Out of specification → Refer to steps (c) and (d).



**Compression pressure at
360 r/min (at sea level)**

Minimum	1,400 kPa (14.0 kg/cm², 14.0 bar)
Standard	1,450 kPa (14.5 kg/cm², 14.5 bar)
Maximum	1,500 kPa (15.0 kg/cm², 15.0 bar)

- a. Set the main switch to "ON".
- b. With the throttle wide open, crank the engine until the reading on the compression gauge stabilizes.

⚠ WARNING

To prevent sparking, ground all spark plug leads before cranking the engine.

NOTE:

The difference in compression pressure between cylinders should not exceed 100 kPa (1 kg/cm², 1 bar).

MEASURING THE COMPRESSION PRESSURE/ CHECKING THE ENGINE OIL LEVEL

CHK
ADJ




- c. If the compression pressure is above the maximum specification, check the cylinder head, valve surfaces, and piston crown for carbon deposits.
 - d. If the compression pressure is below the minimum specification, squirt a few drops of oil into the cylinder and measure again.
- Refer to the following table.

Compression pressure (with oil applied into the cylinder)	
Reading	Diagnosis
Higher than without oil	Piston wear or damage → Repair.
Same as without oil	Piston ring(-s), valve(-s), cylinder head gasket or piston possibly defective → Repair.



8. Install:
 - spark plug
9. Install:
 - legshield

 12.5 Nm (1.25 m•kg)

EB303070

CHECKING THE ENGINE OIL LEVEL


1. Stand the scooter on a level surface.

NOTE: _____

- Place the scooter on a suitable stand.
- Make sure that the motorcycle is upright.

2. Start the engine when the engine is cool, let it idle for two minutes, and then stop it.
3. Wait two minutes until the oil settles, and then check the oil level through the check window located at the bottom-left side of the crankcase.
4. Check:
 - engine oil level

The engine oil level should be between the minimum level mark (a) and maximum level mark (b).
Below the minimum level mark → Add the recommended engine oil to the proper level.

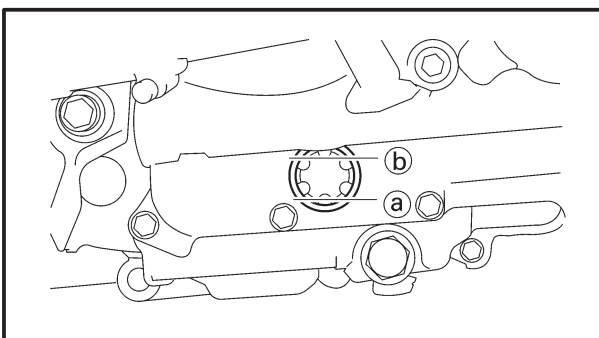

CHANGING THE ENGINE OIL


CHK
ADJ



- c. Tighten the new oil filter cartridge to specification with an oil filter wrench.



Oil filter cartridge
17 Nm (1.7 m•kg)

6. Check:
- engine oil drain bolt washer
Damage → Replace.
7. Install:
- engine oil drain bolt  **43 Nm (4.3 m•kg)**
8. Fill:
- crankcase
(with the specified amount of the recommended engine oil)



Quantity

Total amount
3.6 L

Without oil filter cartridge replacement
2.8 L


With oil filter cartridge replacement
2.9 L

9. Install:
- engine oil filler cap
10. Start the engine, warm it up for several minutes, and then turn it off.
11. Check:
- engine
(for engine oil leaks)
12. Check:
- engine oil level
Refer to “CHECKING THE ENGINE OIL LEVEL”.
13. Reset:
- Oil change indicator light perform the following procedure.

1. Turn the key to “ON”.
2. Hold the reset button pushed for two to five seconds.
3. Release the reset button ① and the oil change indicator light will go off.

NOTE:

If the engine oil is changed before the oil change indicator light comes on (i.e. before the periodic oil change interval has been reached), the indicator light must be reset after the oil change for the next periodic oil change to be indicated at the correct time. To reset the oil change indicator light before the periodic oil change interval has been reached, follow the above procedure, but note that the indicator light will come on for 1.4 seconds after releasing the reset button, otherwise repeat the procedure.

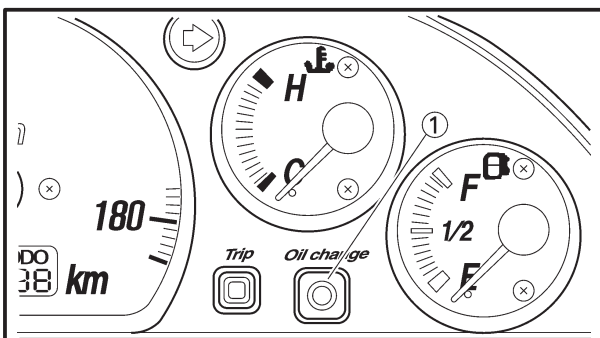




EAS00077

MEASURING THE ENGINE OIL PRESSURE

1. Check:
 - engine oil level
Below the minimum level mark → Add the recommended engine oil to the proper level.
2. Remove:
 - lower side cover mole
Refer to “COVER AND PANEL”.
3. Start the engine, warm it up for several minutes, and then turn it off.

CAUTION:


When the engine is cold, the engine oil will have a higher viscosity, causing the engine oil pressure to increase. Therefore, be sure to measure the engine oil pressure after warming up the engine.

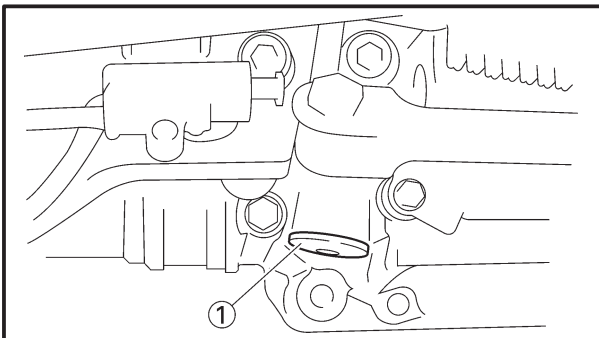

4. Remove:
 - main gallery bolt ①

WARNING

The engine, muffler and engine oil are extremely hot.

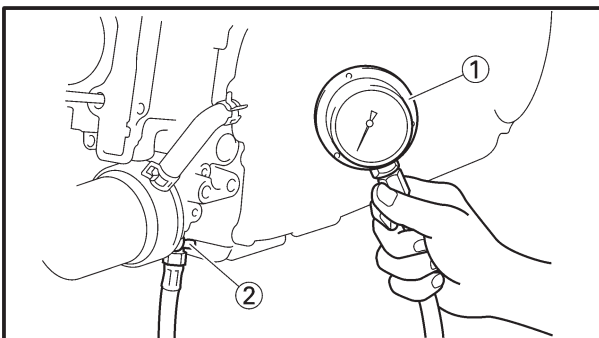

5. Install:
 - oil pressure gauge ①
 - adapter ②



Oil pressure gauge
90890-03153
Adapter
90890-03124

6. Measure:
 - engine oil pressure
(at the following conditions)
Out of specification → Replace.



Engine oil pressure
150 kPa (1.5 kg/cm²)
Engine speed
Approx. 1200 r/min
Engine oil temperature
80°C

MEASURING THE ENGINE OIL PRESSURE


CHK
ADJ



Engine oil pressure	Possible causes
Below specification	Faulty oil pump Clogged oil filter Leaking oil passage Broken or damaged oil seal
Above specification	Leaking oil passage Faulty oil filter Oil viscosity too high


7. Install:

- main gallery bolt ①


 20 Nm (2.0 m•kg)

CLEANING THE AIR FILTER ELEMENT

1. Remove:
 - front cowling upper cover
 - windshield
 - front cowling inner panelRefer to "COVER AND PANEL".

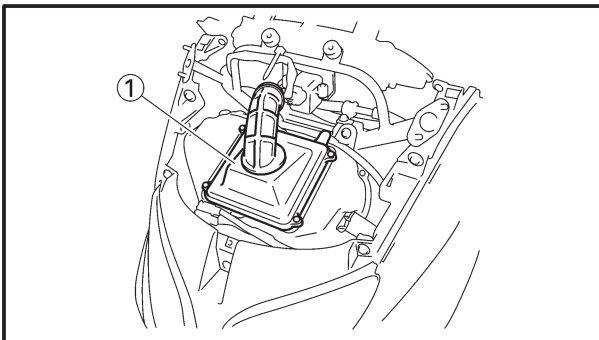

2. Remove:
 - air filter case cover ①
 - air filter element

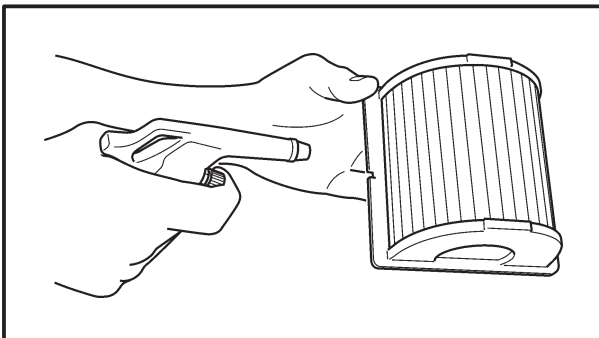

3. Clean:
 - air filter elementApply compressed air to the outer surface of the air filter element.
4. Check:
 - air filter elementDamage → Replace.
5. Install:
 - air filter element
 - air filter case cover

CAUTION:

Never operate the engine without the air filter element installed. Unfiltered air will cause rapid wear of engine parts and may damage the engine. Operating the engine without the air filter element will also affect the carburetor tuning, leading to poor engine performance and possible overheating.

NOTE:


When installing the air filter element into the air filter case cover, be sure their sealing surfaces are aligned to prevent any air leaks.

6. Install:
 - front cowling inner panel
 - windshield
 - front cowling upper cover



CLEANING THE V-BELT CASE AIR FILTER ELEMENT



1. Remove:
 - upper side cover mole (left)
 - footrest board (left)Refer to "COVER AND PANEL".

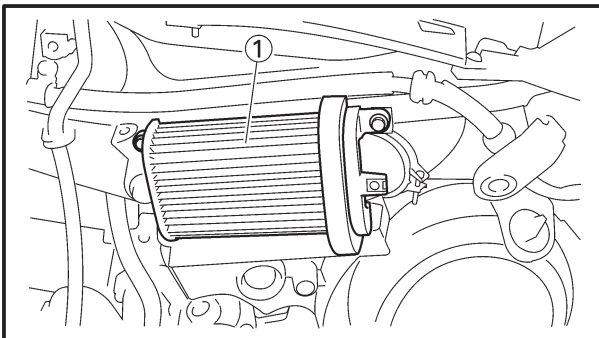

2. Remove:
 - V-velt case air filter element ① and ②
3. Clean:
 - V-velt case air filter elementApply compressed air to the inner surface of V-velt case air filter element.
4. Check:
 - V-velt case air filter elementDamage → Replace.

CAUTION:

Since the V-belt case air filter element is a dry type, do not let grease or water contact it.

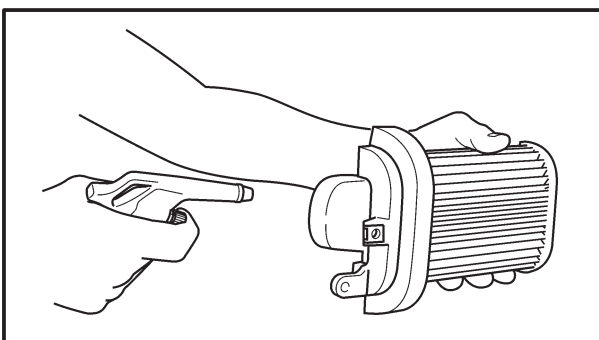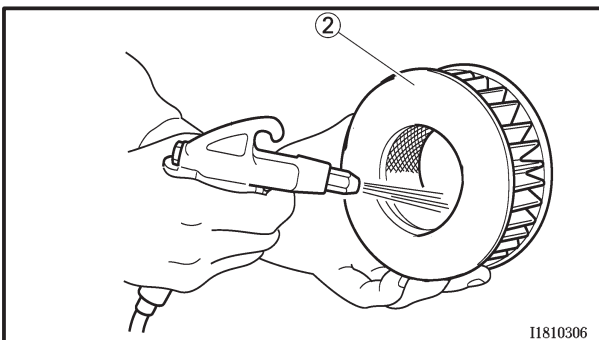

5. Install:
 - footrest board (left)
 - upper side cover mole (left)


CHECKING THE CARBURETOR JOINTS AND INTAKE MANIFOLDS

The following procedure applies to all of the carburetor joints.

1. Remove:
 - legshieldRefer to "COVER AND PANEL".

CHECKING THE CARBURETOR JOINTS AND INTAKE MANIFOLDS/CHECKING THE FUEL HOSES AND FUEL FILTER

CHK
ADJ

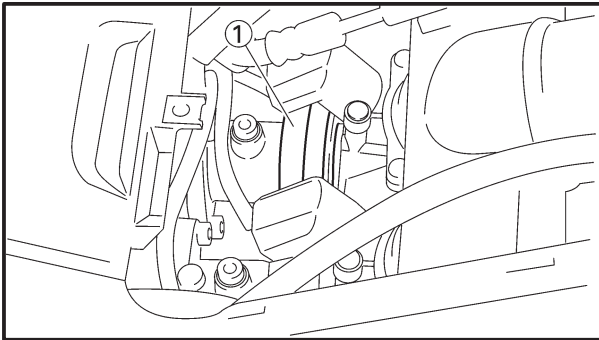


2. Check:
 - carburetor joints ①
Cracks/damage → Replace.
Refer to “CARBURETOR” in chapter 7.
3. Install:
 - legshield

EAS00097

CHECKING THE FUEL HOSES AND FUEL FILTER

The following procedure applies to all of the fuel hoses.

1. Remove:
 - footrest board (right)
 - upper side cover mole (right)
Refer to “COVER AND PANEL”.

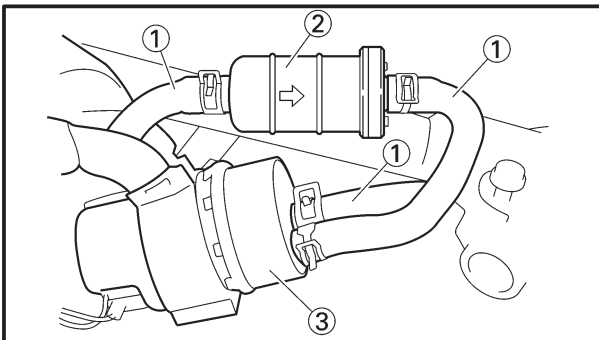

2. Check:
 - fuel hose ①
Cracks/damage → Replace.
 - fuel filter ②
Damage/dirt → Replace.

NOTE:

- Drain and flush the fuel tank if abrasive damage to any components of the fuel line is evident.
- The arrow mark on the fuel filter should face to the side of the fuel pump ③.

3. Install:
 - upper side cover mole (right)
 - footrest board
Refer to “COVER AND PANEL”.


CHECKING THE CRANKCASE BREATHER HOSE/ CHECKING THE EXHAUST SYSTEM

CHK
ADJ



CHECKING THE CRANKCASE BREATHER HOSE

1. Remove:
 - legshield
Refer to "COVER AND PANEL".

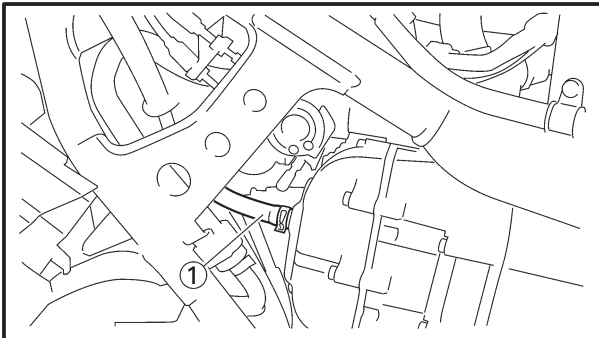

2. Check:
 - crankcase breather hose ①
Cracks/damage → Replace.
Loose connection → Connect properly.

CAUTION:

Make sure that the crankcase breather hose is routed correctly.


3. Install:
 - legshield
Refer to "COVER AND PANEL".

EAS00099

CHECKING THE EXHAUST SYSTEM

The following procedure applies to all of the exhaust pipes and gaskets.

1. Remove:
 - lower side cover mole (right)
Refer to "COVER AND PANEL".
2. Check:
 - exhaust pipe ①
 - muffler ②
Cracks/damage → Replace.
 - gasket ③ **New**
Exhaust gas leaks → Replace.
3. Check:
 - tightening torque

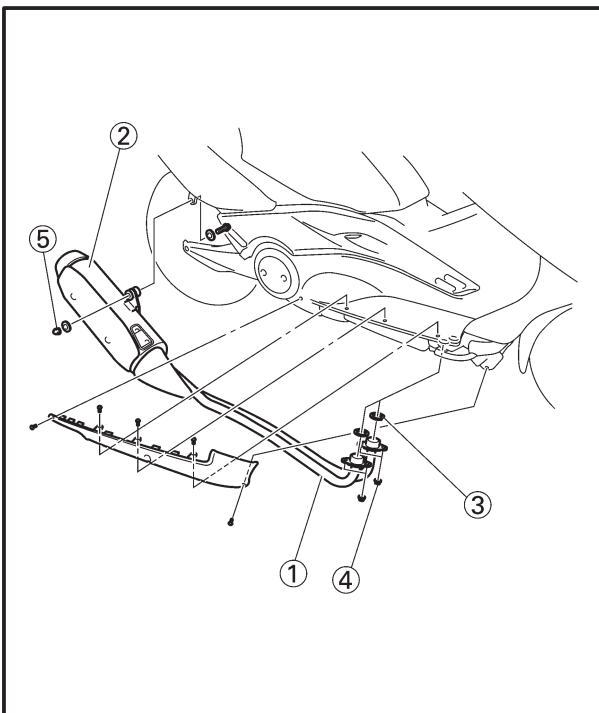

Exhaust pipe nut ④
20 Nm (2.0 m•kg)

Muffler and muffler bracket bolt ⑤
48 Nm (4.8 m•kg)

4. Install:
 - lower side cover mole (right)
Refer to "COVER AND PANEL".




EAS00103

CHECKING THE COOLANT LEVEL

1. Stand the scooter on a level surface.

NOTE: _____

- Place the scooter on a suitable stand.
- Make sure that the scooter is upright.

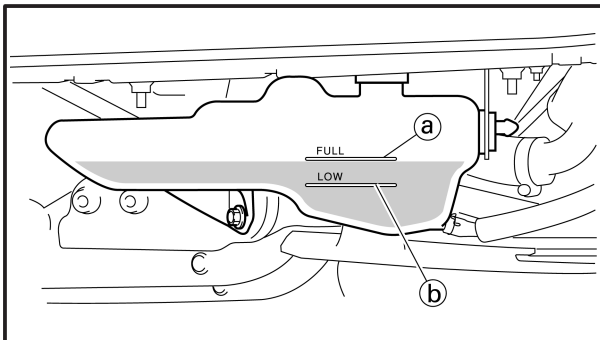

2. Remove:

- lower side cover mole (right)

3. Check:

- coolant level

The coolant level should be between the maximum level mark (a) and minimum level marks (b).

Below the minimum level mark → Add the recommended coolant to the proper level.

CAUTION: _____

- **Adding water instead of coolant lowers the antifreeze content of the coolant. If water is used instead of coolant, check and correct the antifreeze concentration of the coolant.**
- **Use only distilled water. Soft water may be used if distilled water is not available.**

4. Start the engine, warm it up for several minutes, and then turn it off.

5. Check:

- coolant level

NOTE: _____

Before checking the coolant level, wait a few minutes until it settles.

6. Install:

- lower side cover mole (right)




CHECKING THE COOLING SYSTEM

1. Remove:

- footrest board (left and right)
- legshield

Refer to "COVER AND PANEL".

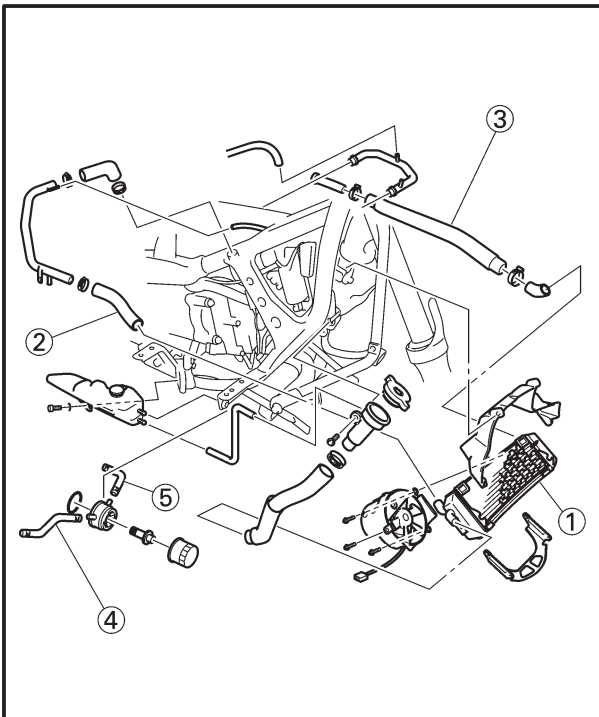

2. Check:

- radiator ①
- radiator inlet hose ②
- radiator outlet hose ③
- oil cooler inlet hose ④
- oil cooler outlet hose ⑤

Cracks/damage → Replace.

Refer to "COOLING SYSTEM" in chapter 6.

3. Install:

- legshield
- footrest board


Refer to "COVER AND PANEL".

CHANGING THE COOLANT

1. Remove:

- lower side cover mole (right)
- front side cover mole (right)

Refer to "COVER AND PANEL".

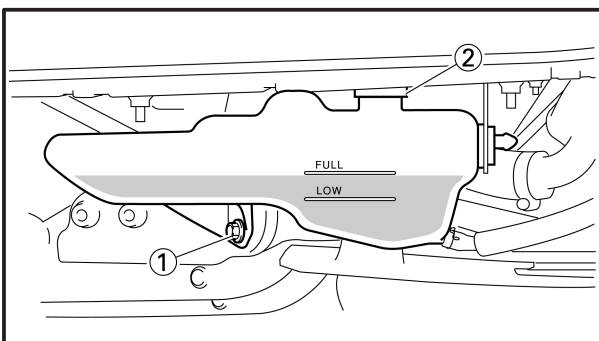

2. Disconnect:

- coolant reservoir bolts ①
- coolant reservoir cap ②

NOTE:


When draining the coolant from the coolant reservoir, be sure to tilt the reservoir so that coolant cannot flow through the coolant reservoir breather hose.

CHANGING THE COOLANT

CHK
ADJ



3. Drain:
 - coolant (from the coolant reservoir)
4. Install:
 - coolant reservoir bolts

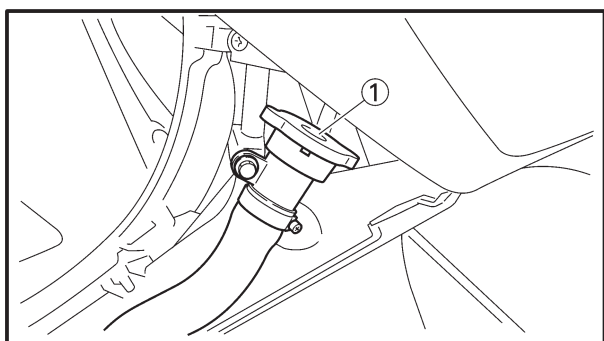


5. Remove:
 - front side cover mole (right)
Refer to "COVER AND PANEL".
 - radiator cap ①


⚠ WARNING

A hot radiator is under pressure. Therefore, do not remove the radiator cap when the engine is hot. Scalding hot fluid and steam may be blown out, which could cause serious injury. When the engine has cooled, open the radiator cap as follows:


Place a thick rag or a towel over the radiator cap and slowly turn the radiator cap counterclockwise toward the detent to allow any residual pressure to escape. When the hissing sound has stopped, press down on the radiator cap, while still pressing down turn it counterclockwise, and then remove it.

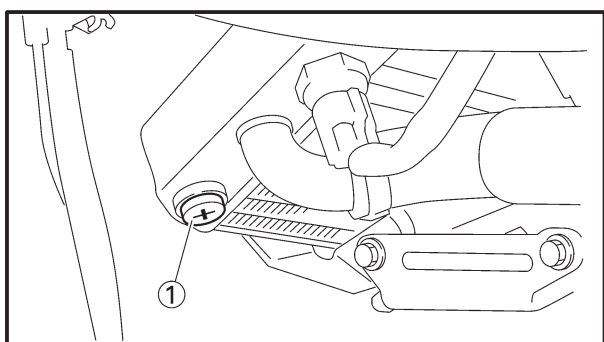

6. Remove:
 - coolant drain bolt ①
(along with the rubber washer)
7. Drain:
 - coolant

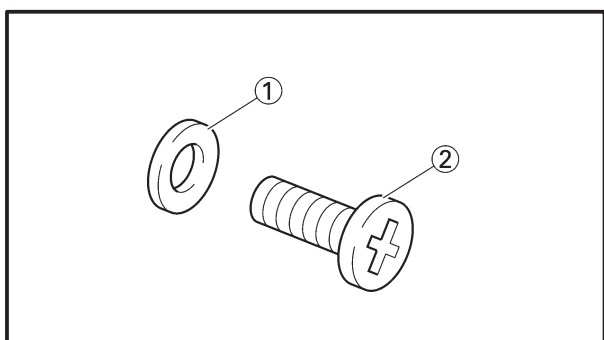


8. Check:
 - rubber washer ①
 - drain bolt ②
9. Install:
 - drain bolt ②

 10 Nm (1.0 m•kg)

CHANGING THE COOLANT

CHK
ADJ

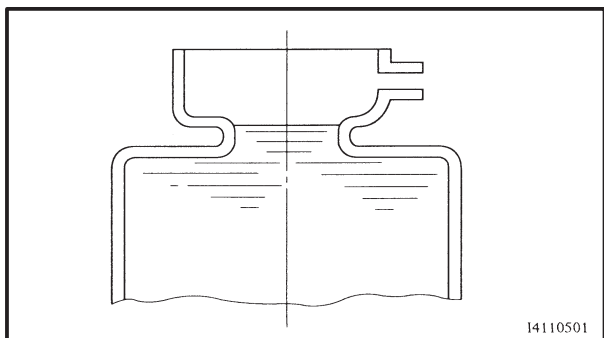

10. Fill:

- cooling system
(with the specified amount of the recommended coolant)

Recommended antifreeze

High-quality ethylene glycol antifreeze containing corrosion inhibitors for aluminum engines

Mix ratio

50% antifreeze/50% water



Quantity

Total amount

1.5 L

Coolant reservoir capacity

0.6 L

Handling notes for coolant

Coolant is potentially harmful and should be handled with special care.

! WARNING

- If coolant splashes in your eyes, thoroughly wash them with water and consult a doctor.
- If coolant splashes on your clothes, quickly wash it away with water and then with soap and water.
- If coolant is swallowed, induce vomiting and get immediate medical attention.

CAUTION:


- Adding water instead of coolant lowers the antifreeze content of the coolant. If water is used instead of coolant, check, and if necessary, correct the antifreeze concentration of the coolant.
- Use only distilled water. Soft water may be used if distilled water is not available.
- If coolant comes into contact with painted surfaces, immediately wash them with water.
- Do not mix different types of antifreeze.

11. Install:

- radiator cap

CHANGING THE COOLANT

CHK
ADJ

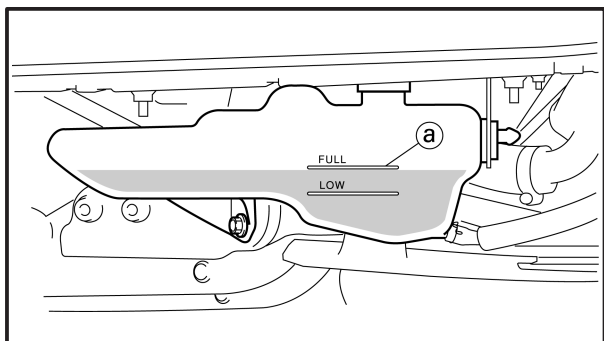

12. Fill:
 - coolant reservoir(with the recommended coolant to the maximum level mark (a))
13. Install:
 - coolant reservoir cap
14. Start the engine, warm it up for several minutes, and then turn it off.
15. Check:
 - coolant levelRefer to “CHECKING THE COOLANT LEVEL”.

NOTE: _____

Before checking the coolant level, wait a few minutes until it settles.

16. Install:
 - lower side cover mole (right)
 - side cover mole (right)

CHASSIS

EAS00116

CHECKING THE BRAKE FLUID LEVEL

1. Stand the scooter on a level surface.



NOTE: _____

- Place the scooter on a suitable stand.
- Make sure that the scooter is upright.

2. Check:

- brake fluid level

Below the minimum level mark (a) → Add the recommended brake fluid to the proper level.

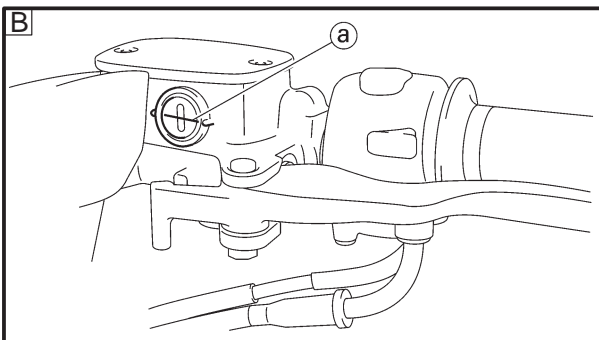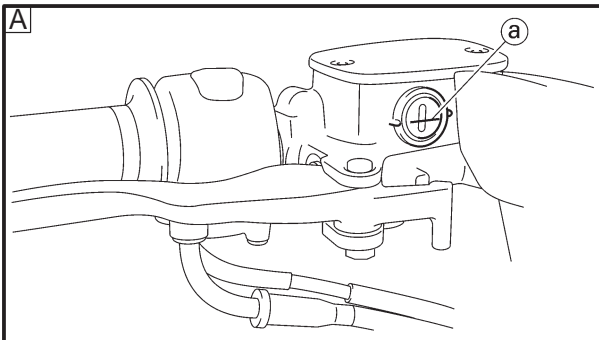

	Recommended brake fluid DOT 4
---	--

- A** Front brake
- B** Rear brake

⚠ WARNING _____

- Use only the designated brake fluid. Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.
- Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.
- When refilling, be careful that water does not enter the reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.

CAUTION: _____



Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.

NOTE: _____

In order to ensure a correct reading of the brake fluid level, make sure that the top of the reservoir is horizontal.

CHECKING THE BRAKE PADS/ CHECKING THE BRAKE HOSES

CHK
ADJ

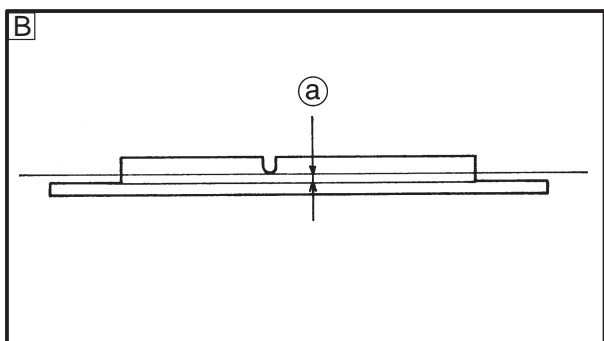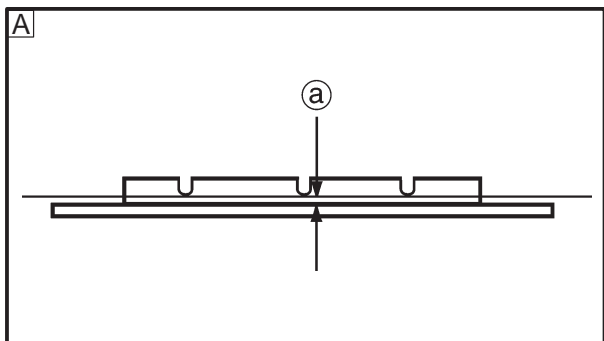

EB304032

CHECKING THE BRAKE PADS

The following procedure applies to all of the brake pads.

- Operate the brake.
- Check:
 - front brake pad
 - rear brake pad



Brake pad wear limit (a)
Wear limit reached → Replace the brake pads as a set.
Refer to “FRONT AND REAR BRAKES” in chapter 4.



Brake pad wear limit
0.8 mm

A Front brake

B Rear brake

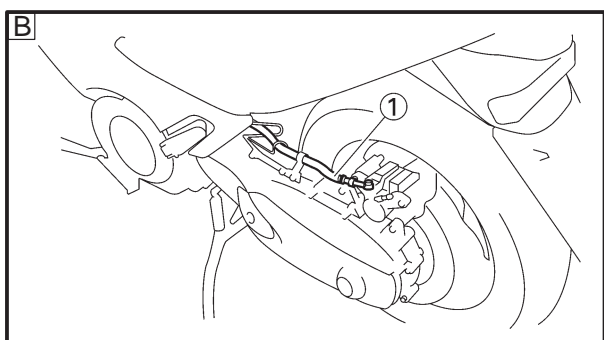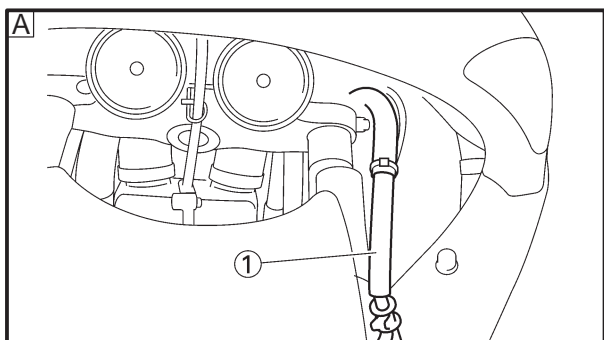

EAS00132

CHECKING THE BRAKE HOSES

The following procedure applies to all of the brake hoses and clamps.

- Check:
 - brake hose ①

A Front
B Rear
Cracks/damage/wear → Replace.
- Check:
 - brake hose clamp

Loose connection → Tighten.
- Hold the scooter upright and apply the brake.
- Check:
 - brake hose

Activate the brake several times.
Brake fluid leakage → Replace the damaged hose.
Refer to “FRONT AND REAR BRAKES” in chapter 4.

BLEEDING THE HYDRAULIC BRAKE SYSTEM/ CHECKING THE CHAIN DRIVE OIL LEVEL

CHK
ADJ



Bleed screw
6 Nm (0.6 m•kg)

- k. Fill the reservoir to the proper level.
Refer to “CHECKING THE BRAKE FLUID LEVEL”.

⚠ WARNING



After bleeding the hydraulic brake system, check the brake operation .

CHECKING THE CHAIN DRIVE OIL LEVEL

1. Stand the scooter on a level surface.

NOTE:

- Place the scooter on a suitable stand.
- Make sure that the scooter up right.

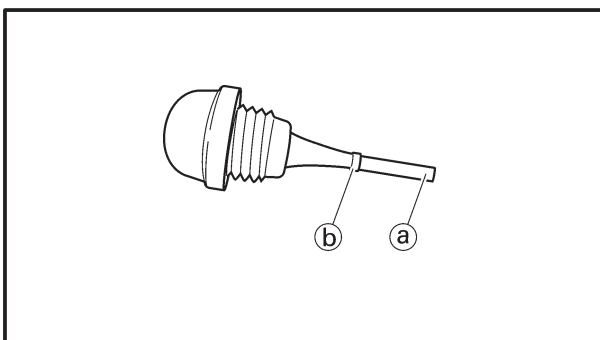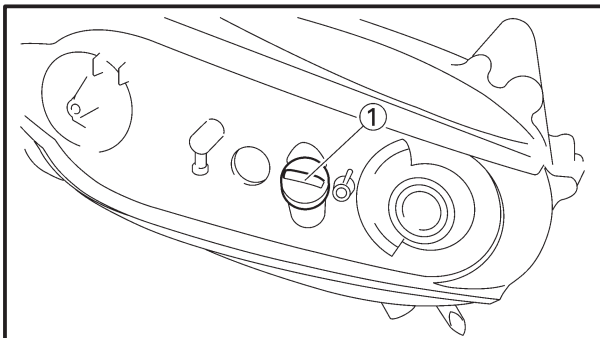

2. Remove:
- chain drive oil filler cap ①

3. Check:
- chain drive oil level
- The chain drive oil level should be between the minimum level mark (a) and maximum level mark (b).
Below the minimum level mark → Add the recommended transfer oil to the proper level.




Recommended chain drive oil
SAE 80 hypoid gear oil graded
“GL-4”, “GL-5” or “GL-6”
or
multi-purpose SAE 80W90
hypoid gear oil

4. Install:
- chain drive oil filler cap

CHANGING THE CHAIN DRIVE OIL/ CHECKING AND ADJUSTING THE STEERING HEAD

CHK
ADJ

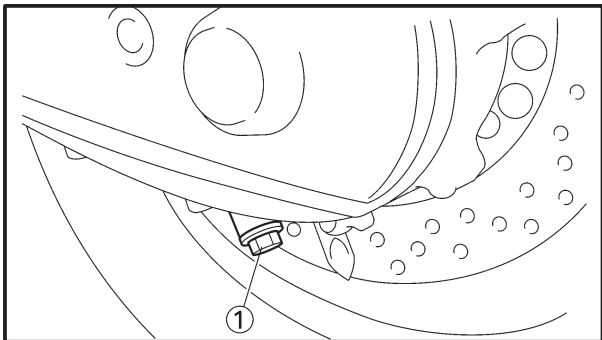


CHANGING THE CHAIN DRIVE OIL

1. Place a container under the chain drive.
2. Remove:
 - chain drive oil drain bolt ①
 - chain drive oil filler cap
 Completely drain the chain drive of its oil.

3. Check:
 - drain bolt gasket
 Damage → Replace.

4. Install:
 - chain drive oil drain bolt

 **20 Nm (2.0 m•kg)**

5. Fill:
 - chain drive oil
 (with the specified amount of the recommended chain drive oil)



Quantity
0.7 L

6. Check:
 - chain drive oil level
 Refer to “CHECKING THE CHAIN DRIVE OIL LEVEL”.

EAS00146

CHECKING AND ADJUSTING THE STEERING HEAD

1. Stand the scooter on a level surface.

⚠ WARNING

Securely support the scooter so that there is no danger of it falling over.

NOTE:

Place the scooter on a suitable stand so that the front wheel is elevated.

- c. Loosen the lower ring nut ④ completely, then tighten it to specification.

⚠ WARNING

Do not overtighten the lower ring nut.



**Lower ring nut (final tightening torque)
19 Nm (1.9 m•kg)**



- d. Check the steering head for looseness or binding by turning the front fork all the way in both directions. If any binding is felt, remove the lower bracket and inspect the upper and lower bearings.

Refer to “STEERING HEAD AND HANDLEBAR” in chapter 7.

- e. Install the rubber washer ③.
f. Install the upper ring nut ②.
g. Finger tighten the upper ring nut ②, then align the slots of both ring nuts. If necessary, hold the lower ring nut and tighten the upper ring nut until their slots are aligned.
h. Install the lock washer ①.

NOTE:

Make sure that the lock washer tabs (a) sit correctly in the ring nut slots (b).

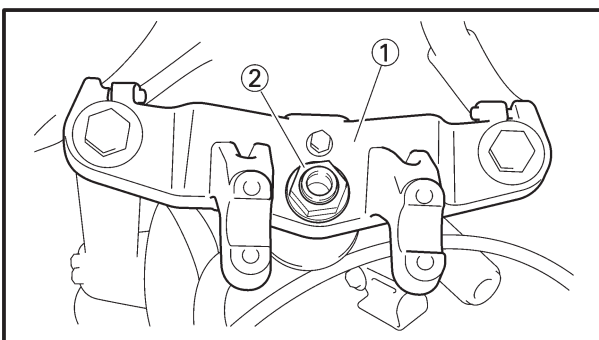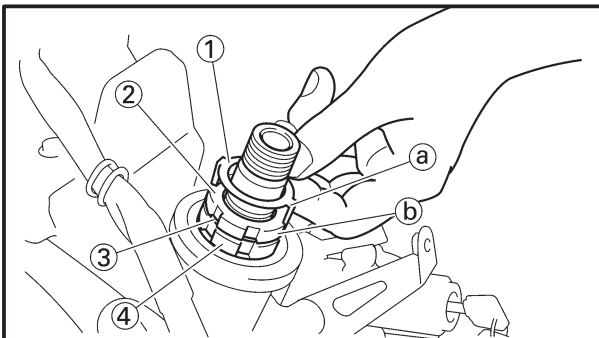

7. Install:
- upper bracket ①
 - steering stem nut ②

8. Tighten:
- upper bracket pinch bolt



30 Nm (3.0 m•kg)

- steering stem nut

110 Nm (11.0 m•kg)

CHECKING AND ADJUSTING THE STEERING HEAD/ CHECKING THE FRONT FORK

CHK
ADJ

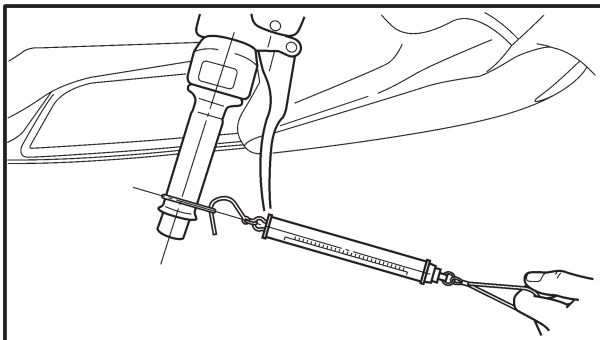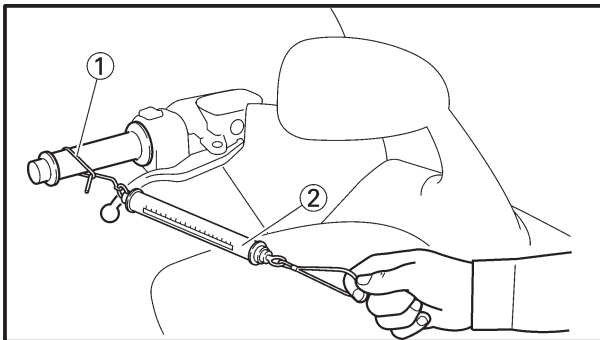

9. Measure:
- steering head tension
(with the motorcycle still on the stand)



NOTE: _____

Make sure that all of the cables and wires are properly routed.

- Point the front wheel straight ahead.
- Install a plastic locking tie ① loosely around the end of the handlebar as shown.
- Hook a spring gauge ② onto the plastic locking tie.
- Hold the spring gauge at a 45° angle from the handlebar, pull the spring gauge, and record the measurement when the handlebar starts to turn.



Steering head tension
200 ~ 500 g

- Repeat the above procedure on the opposite handlebar.
- If the steering head tension is out of specification (both handlebars should be within specification), remove the upper bracket and loosen or tighten the upper ring nut.
- Reinstall the upper bracket and measure the steering head tension again as described above.
- Repeat the above procedure until the steering head tension is within specification.
- Grasp the bottom of the front fork legs and gently rock the front fork.
Looseness or binding → Adjust the steering head.



EAS00149

CHECKING THE FRONT FORK

- Stand the scooter on a level surface.




WARNING _____

Securely support the scooter so that there is no danger of it falling over.

CHECKING THE FRONT FORK


CHK
ADJ

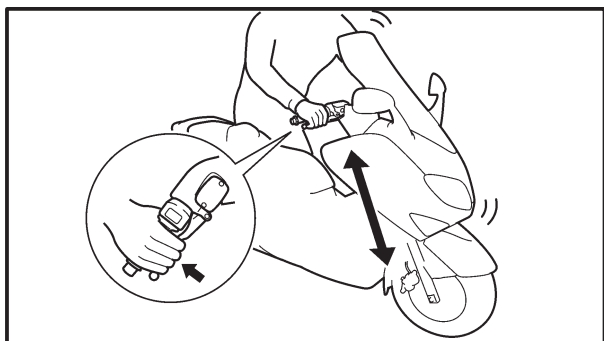

2. Check:
 - inner tube
Damage/scratches → Replace.
 - oil seal
Oil leakage → Replace.
3. Hold the motorcycle upright and apply the front brake.
4. Check:
 - operation
Push down hard on the handlebar several times and check if the front fork rebounds smoothly.
Unsmooth operation → Repair.
Refer to “FRONT FORK” in chapter 4.

CHECKING THE TIRES

CHK
ADJ

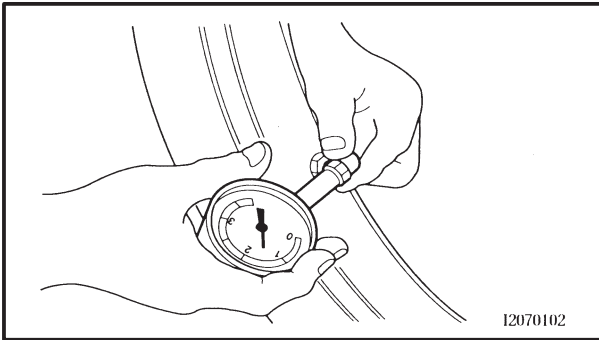

EB304170

CHECKING THE TIRES

The following procedure applies to both of the tires.

1. Measure:

- tire pressure
- Out of specification → Regulate.

⚠ WARNING

- The tire pressure should only be checked and regulated when the tire temperature equals the ambient air temperature.
- The tire pressure and the suspension must be adjusted according to the total weight (including cargo, rider, passenger and accessories) and the anticipated riding speed.
- Operation of an overloaded scooter could cause tire damage, an accident or an injury. **NEVER OVERLOAD THE SCOOTER.**

Basic weight (with oil and a full fuel tank)	217 kg	
Maximum load*	372 kg	
Cold tire pressure	Front	Rear
Up to 90 kg load*	200 kPa (2.0 kgf/cm ² , 2.0 bar)	225 kPa (2.25 kgf/cm ² , 2.25 bar)
90 kg ~ maximum load*	225 kPa (2.25 kgf/cm ² , 2.25 bar)	250 kPa (2.5 kgf/cm ² , 2.5 bar)
High-speed riding	225 kPa (2.25 kgf/cm ² , 2.25 bar)	250 kPa (2.5 kgf/cm ² , 2.5 bar)



* total of cargo, rider, passenger and accessories

⚠ WARNING

It is dangerous to ride with a worn-out tire. When the tire tread reaches the wear limit, replace the tire immediately.

CHECKING THE TIRES

CHK
ADJ

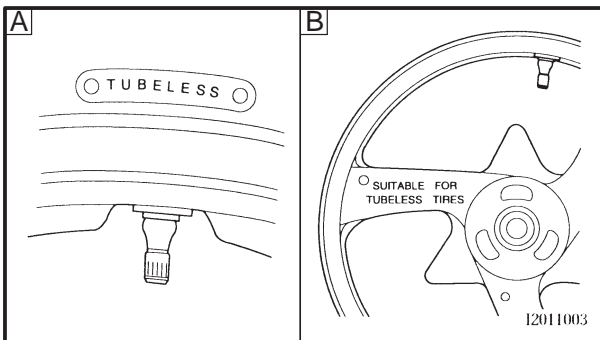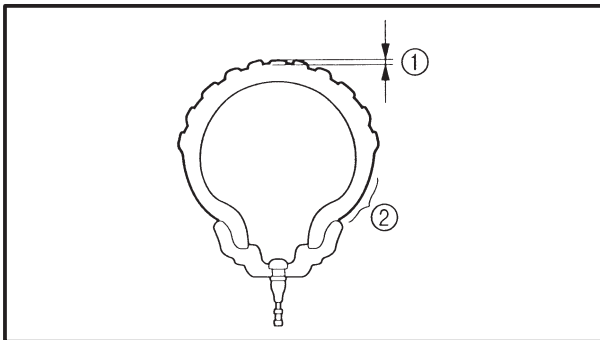

2. Check:

- tire surfaces
Damage/wear → Replace the tire.



**Minimum tire tread depth
1.6 mm**

- ① Tire tread depth
- ② Side wall

⚠ WARNING

- Do not use a tubeless tire on a wheel designed only for tube tires to avoid tire failure and personal injury from sudden deflation.
- When using a tube tire, be sure to install the correct tube.
- Always replace a new tube tire and a new tube as a set.
- To avoid pinching the tube, make sure that the wheel rim band and tube are centered in the wheel groove.
- Patching a punctured tube is not recommended. If it is absolutely necessary to do so, use great care and replace the tube as soon as possible with a good quality replacement.

A Tire B Wheel

Tube wheel	Tube tire only
Tubeless wheel	Tube or tubeless tire

- After extensive tests, the tires listed below have been approved by Yamaha Motor Co., Ltd. for this model. The front and rear tires should always be by the same manufacturer and of the same design. No guarantee concerning handling characteristics can be given if a tire combination other than one approved by Yamaha is used on this scooter.

Front tire


Manufacturer	Size	Model
BRIDGESTONE	120/70-14 M/C 55S	HOOP BO3
DUNLOP	120/70-14 M/C 55S	D305FA

Rear tire

Manufacturer	Size	Model
BRIDGESTONE	150/70-14 M/C 66S	HOOP BO2
DUNLOP	150/70-14 M/C 66S	D305

⚠ WARNING

After mounting a new tire, ride conservatively for a while to become accustomed to the “feel” of the new tire and to allow the tire to seat itself properly in the rim. Failure to do so could lead to an accident with possible injury to the rider or damage to the motorcycle.

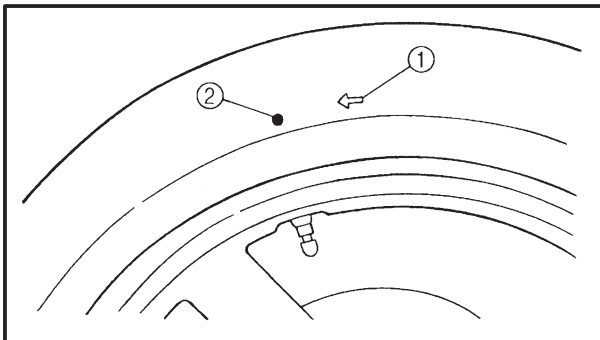

NOTE:

For tires with a direction of rotation mark ①:

- Install the tire with the mark pointing in the direction of wheel rotation.
- Align the mark ② with the valve installation point.

EB304180

CHECKING THE WHEELS

The following procedure applies to both of the wheels.

1. Check:
 - wheel
Damage/out-of-round → Replace.

⚠ WARNING

Never attempt to make any repairs to the wheel.

NOTE:

After a tire or wheel has been changed or replaced, always balance the wheel.



EAS00170

CHECKING AND LUBRICATING THE CABLES

The following procedure applies to all of the cable sheaths and cables.

WARNING

Damaged cable sheaths may cause the cable to corrode and interfere with its movement. Replace damaged cable sheaths and cables as soon as possible.

1. Check:
 - cable sheath
Damage → Replace.
2. Check:
 - cable operation
Unsmooth operation → Lubricate.



Recommended lubricant
Engine oil or a suitable cable lubricant

NOTE:

Hold the cable end upright and pour a few drops of lubricant into the cable sheath or use a suitable lubing device.

EB304210

LUBRICATING THE LEVERS

Lubricate the pivoting point and metal-to-metal moving parts of the levers.



Recommended lubricant
Lithium soap base grease

EAS00173

LUBRICATING THE CENTERSTAND

Lubricate the pivoting point and metal-to-metal moving parts of the centerstand.



Recommended lubricant
Engine oil

EB304220

LUBRICATING THE SIDESTAND

Lubricate the pivoting point and metal-to-metal moving parts of sidestand



Recommended lubricant
Lithium soap base grease

LUBRICATING THE REAR SUSPENSION




EAS00174

LUBRICATING THE REAR SUSPENSION

Lubricate the pivoting point and metal-to-metal moving parts of the rear suspension.



Recommended lubricant
Molybdenum disulfide grease

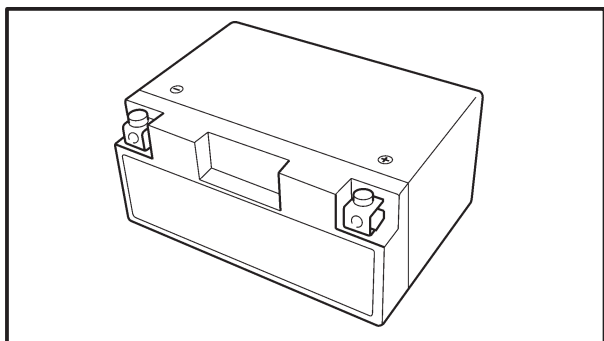

EB305020

ELECTRICAL SYSTEM CHECKING AND CHARGING THE BATTERY

⚠ WARNING

Batteries generate explosive hydrogen gas and contain electrolyte which is made of poisonous and highly caustic sulfuric acid. Therefore, always follow these preventive measures:

- Wear protective eye gear when handling or working near batteries.
- Charge batteries in a well-ventilated area.
- Keep batteries away from fire, sparks or open flames (e.g., welding equipment, lighted cigarettes).
- DO NOT SMOKE when charging or handling batteries.
- KEEP BATTERIES AND ELECTROLYTE OUT OF REACH OF CHILDREN.
- Avoid bodily contact with electrolyte as it can cause severe burns or permanent eye injury.

FIRST AID IN CASE OF BODILY CONTACT: EXTERNAL

- Skin – Wash with water
- Eyes – Flush with water for 15 minutes and get immediate medical attention.

INTERNAL



- Drink large quantities of water or milk followed with milk of magnesia, beaten egg or vegetable oil. Get immediate medical attention.

CAUTION:

- This is a sealed battery. Never remove the sealing caps because the balance between cells will not be maintained and battery performance will deteriorate.
- Charging time, charging amperage and charging voltage for an MF battery are different from those of conventional batteries. The MF battery should be charged as explained in the charging method illustrations. If the battery is overcharged, the electrolyte level will drop considerably. Therefore, take special care when charging the battery.

CHECKING AND CHARGING THE BATTERY

CHK
ADJ

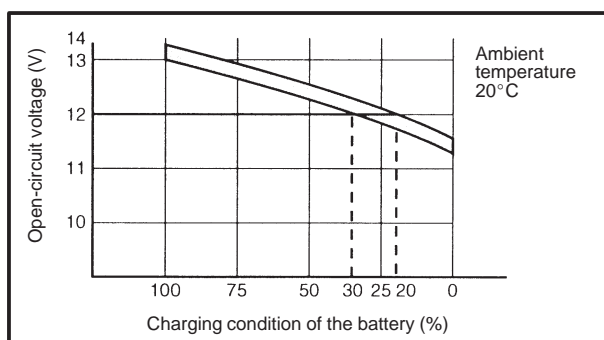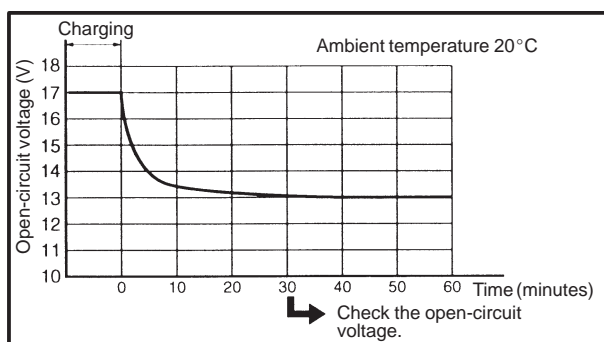

5. Charge:

- battery
(refer to the appropriate charging method illustration)

⚠ WARNING

Do not quick charge a battery.



CAUTION:

- Never remove the MF battery sealing caps.
- Do not use a high-rate battery charger since it forces a high-amperage current into the battery quickly and can cause battery overheating and battery plate damage.
- If it is impossible to regulate the charging current on the battery charger, be careful not to overcharge the battery.
- When charging a battery, be sure to remove it from the motorcycle. (If charging has to be done with the battery mounted on the motorcycle, disconnect the negative lead from the battery terminal.)
- To reduce the chance of sparks, do not plug in the battery charger until the battery charger leads are connected to the battery.
- Before removing the battery charger lead clips from the battery terminals, be sure to turn off the battery charger.
- Make sure that the battery charger lead clips are in full contact with the battery terminal and that they are not shorted. A corroded battery charger lead clip may generate heat in the contact area and a weak clip spring may cause sparks.
- If the battery becomes hot to the touch at any time during the charging process, disconnect the battery charger and let the battery cool before reconnecting it. Hot batteries can explode!
- As shown in the following illustration, the open-circuit voltage of an MF battery stabilizes about 30 minutes after charging has been completed. Therefore, wait 30 minutes after charging is completed before measuring the open-circuit voltage.

CHECKING AND CHARGING THE BATTERY



Charging method using a variable-voltage charger

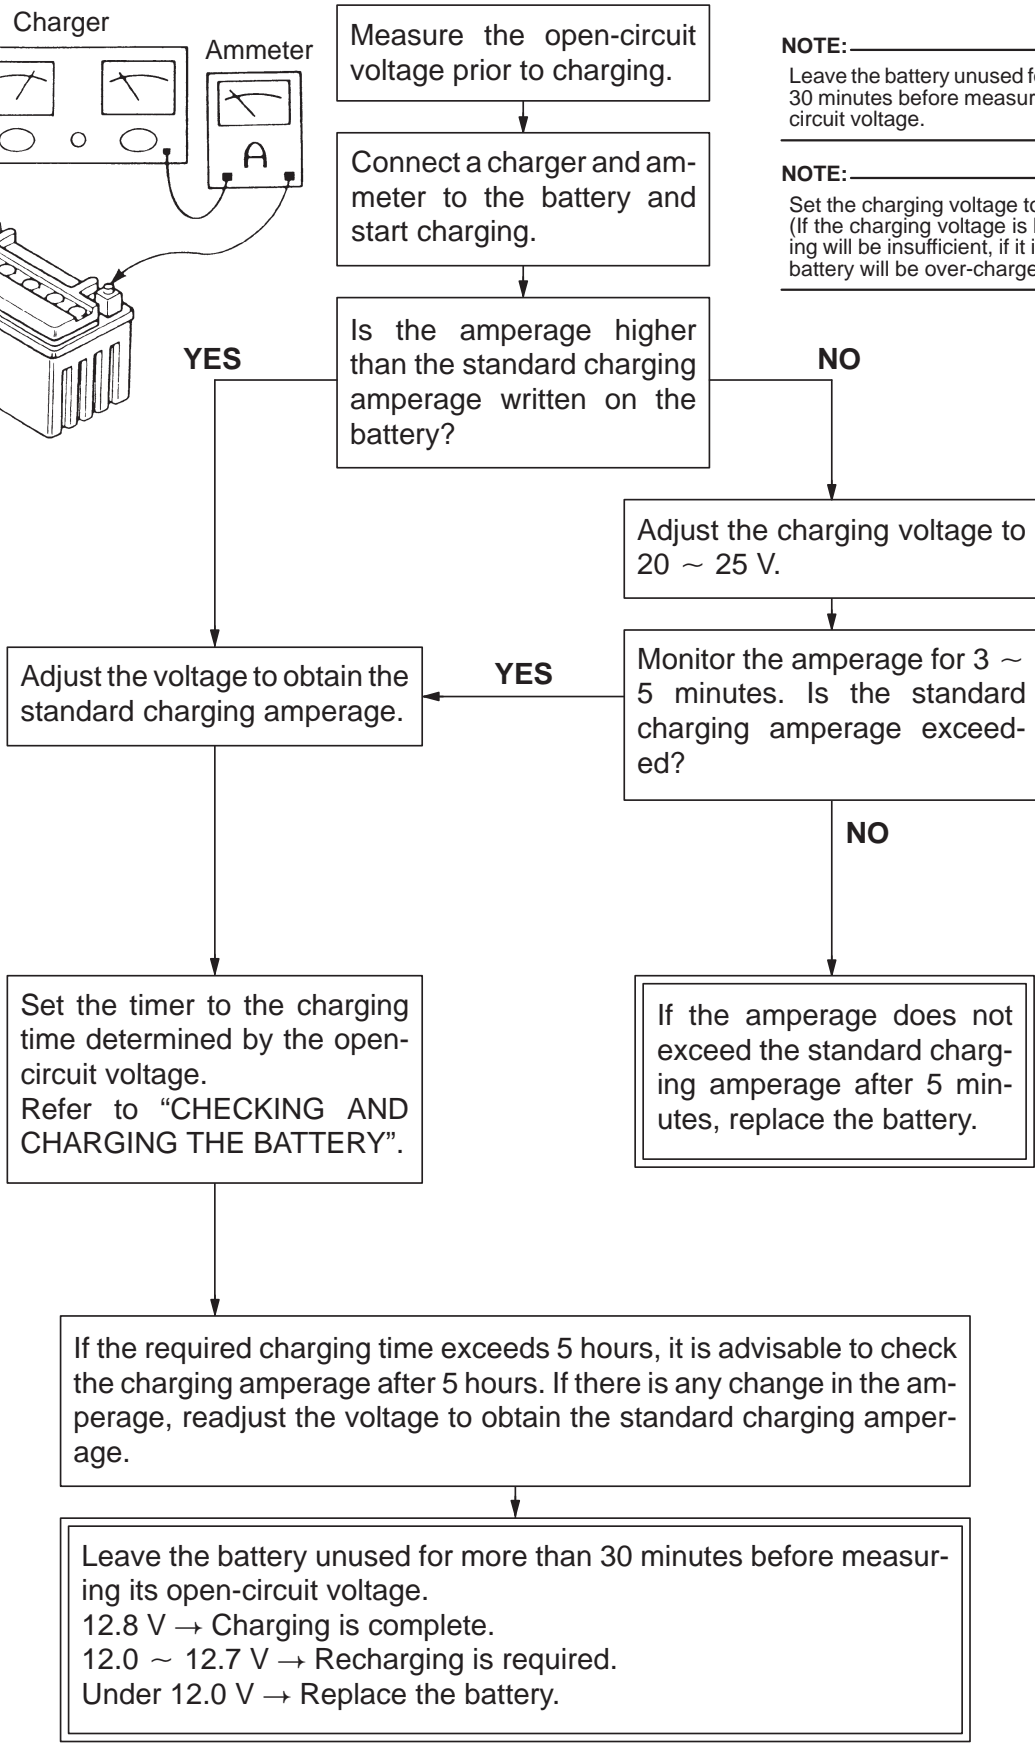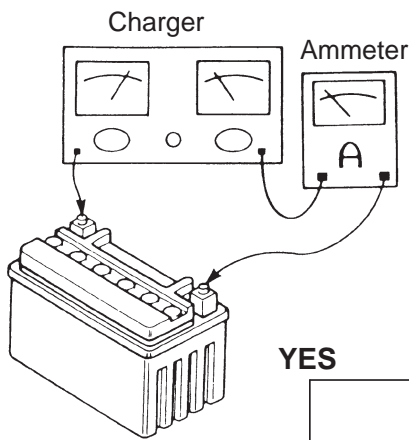


NOTE: Leave the battery unused for more than 30 minutes before measuring its open-circuit voltage.

NOTE: Set the charging voltage to 16 ~ 17 V. (If the charging voltage is lower charging will be insufficient, if it is higher, the battery will be over-charged.)

CHECKING AND CHARGING THE BATTERY





Charging method using a constant-voltage charger

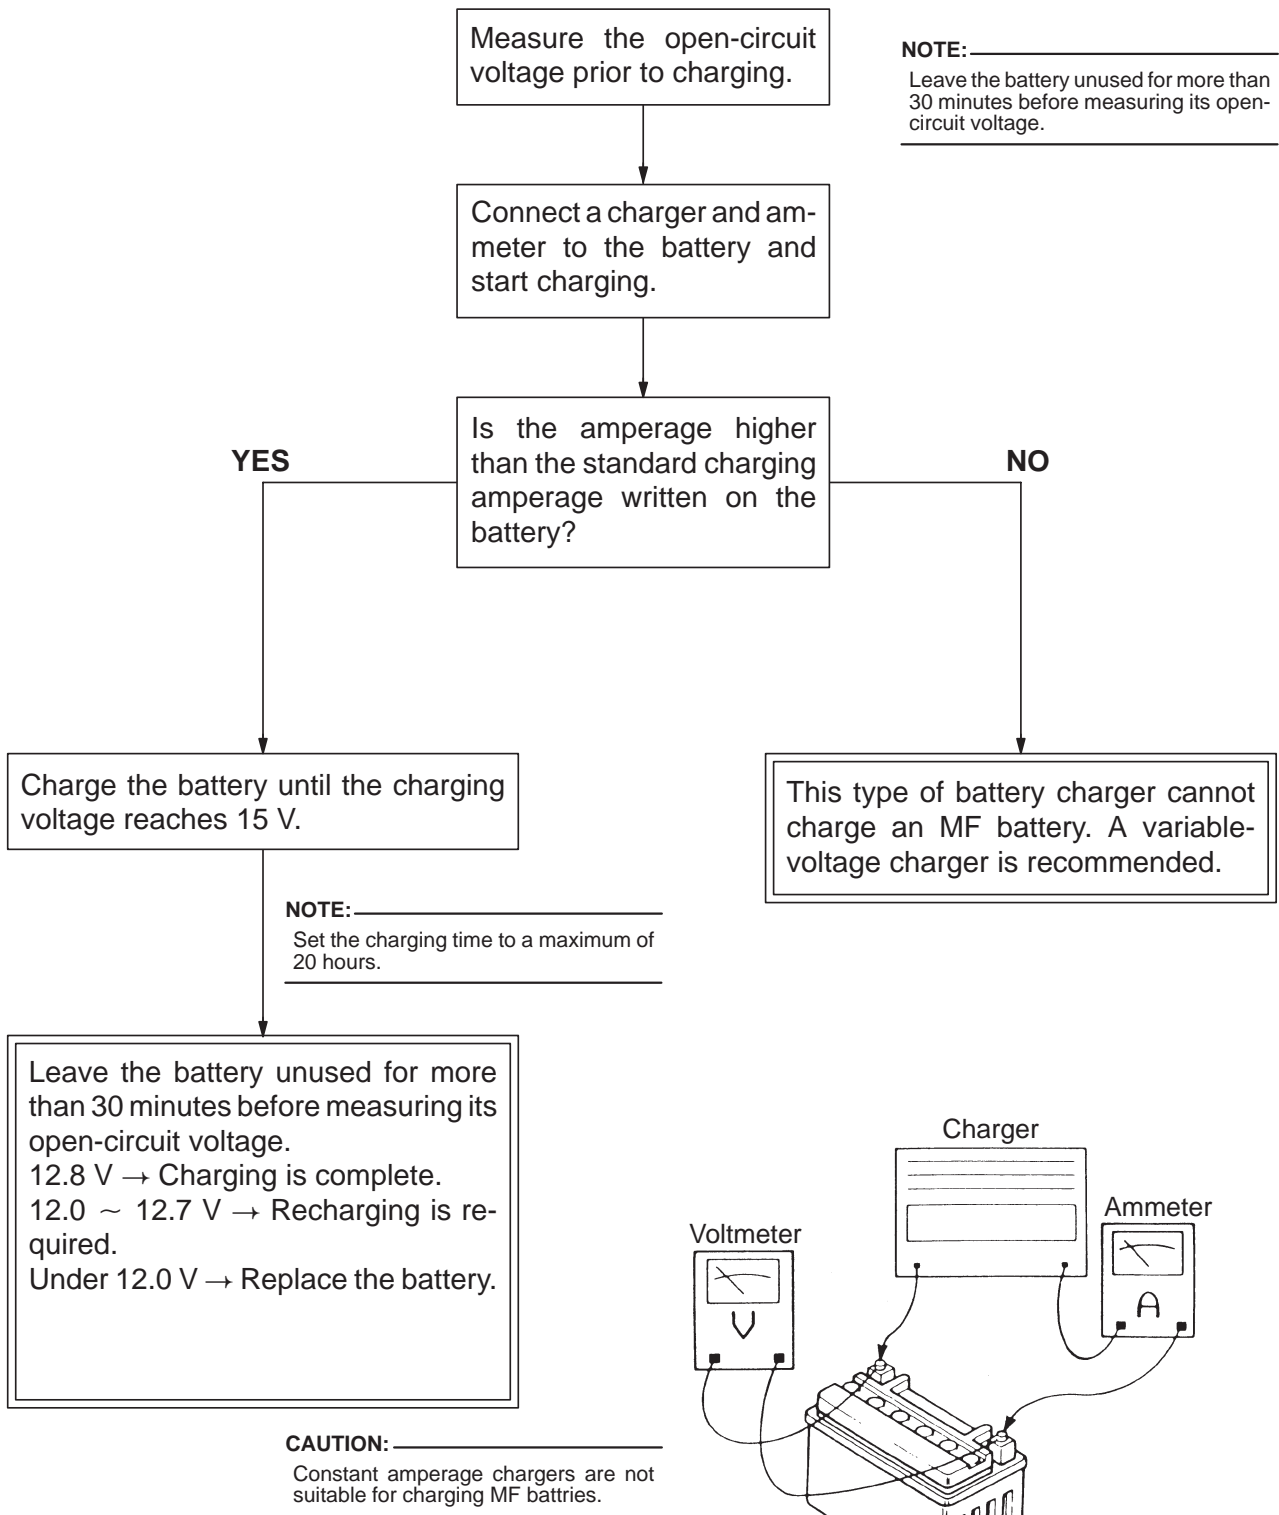

REPLACING THE HEADLIGHT BULBS

CHK
ADJ

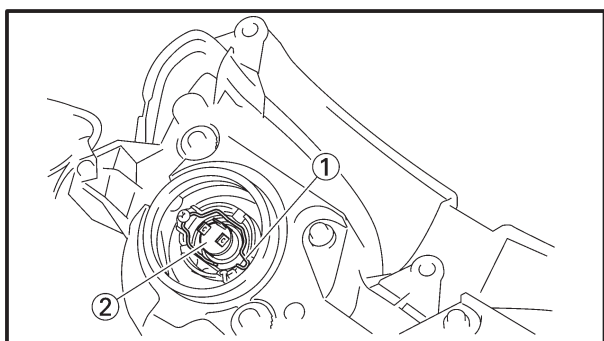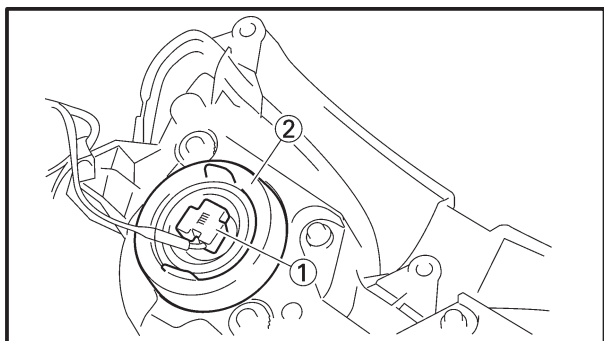

EB305051

REPLACING THE HEADLIGHT BULBS

The following procedure applies to both of the headlight bulbs.

1. Disconnect:
 - headlight coupler ①
 - headlight bulb holder cover ②

2. Detach:
 - headlight bulb holder ①
3. Remove:
 - headlight bulb ②

⚠ WARNING


Since the headlight bulb gets extremely hot, keep flammable products and your hands away from the bulb until it has cooled down.

4. Install:
 - headlight bulb **New**
Secure the new headlight bulb with the headlight bulb holder.

CAUTION:

Avoid touching the glass part of the headlight bulb to keep it free from oil, otherwise the transparency of the glass, the life of the bulb and the luminous flux will be adversely affected. If the headlight bulb gets soiled, thoroughly clean it with a cloth moistened with alcohol or lacquer thinner.

5. Attach:
 - headlight bulb holder
6. Install:
 - headlight bulb holder cover
7. Connect:
 - headlight coupler

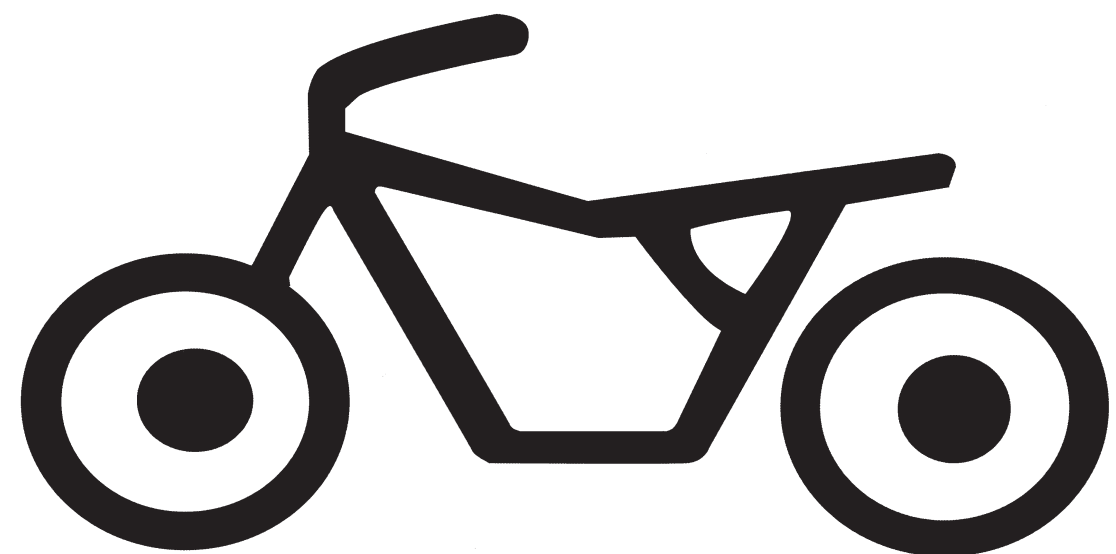

CHAS

4



CHAPTER 4 CHASSIS


FRONT WHEEL AND BRAKE DISC	4-1
REMOVING THE FRONT WHEEL	4-3
DISASSEMBLING THE FRONT WHEEL	4-3
CHECKING THE FRONT WHEEL	4-4
CHECKING THE BRAKE DISC	4-5
ASSEMBLING THE FRONT WHEEL	4-7
INSTALLING THE FRONT WHEEL	4-7
ADJUSTING THE FRONT WHEEL STATIC BALANCE	4-9
REAR WHEEL AND BRAKE DISC	4-11
REAR WHEEL	4-11
CHECKING THE REAR WHEEL	4-13
CHECKING THE REAR WHEEL DRIVE HUB	4-13
ADJUSTING THE REAR WHEEL STATIC BALANCE	4-13
FRONT AND REAR BRAKES	4-14
FRONT BRAKE PADS	4-14
REAR BRAKE PADS	4-15
REPLACING THE FRONT BRAKE PADS	4-16
REPLACING THE REAR BRAKE PADS	4-18
FRONT BRAKE MASTER CYLINDER	4-21
REAR BRAKE MASTER CYLINDER	4-23
DISASSEMBLING THE FRONT BRAKE MASTER CYLINDER	4-25
DISASSEMBLING THE REAR BRAKE MASTER CYLINDER	4-25
CHECKING THE FRONT AND REAR BRAKE MASTER CYLINDERS	4-26
ASSEMBLING AND INSTALLING THE FRONT BRAKE MASTER CYLINDER	4-27
ASSEMBLING AND INSTALLING THE REAR BRAKE MASTER CYLINDER	4-30
FRONT BRAKE CALIPER	4-33
REAR BRAKE CALIPER	4-35
DISASSEMBLING THE FRONT BRAKE CALIPER	4-37
DISASSEMBLING THE REAR BRAKE CALIPER	4-37
CHECKING THE FRONT AND REAR BRAKE CALIPER	4-38
ASSEMBLING AND INSTALLING THE FRONT BRAKE CALIPER	4-40
ASSEMBLING AND INSTALLING THE REAR BRAKE CALIPER	4-42
FRONT FORK	4-45
REMOVING THE FRONT FORK LEGS	4-49
DISASSEMBLING THE FRONT FORK LEGS	4-50
CHECKING THE FRONT FORK LEGS	4-51
ASSEMBLING THE FRONT FORK LEGS	4-52
INSTALLING THE FRONT FORK LEGS	4-55




HANDLEBAR	4-56
REMOVING THE HANDLEBAR	4-58
CHECKING THE HANDLEBAR	4-58
INSTALLING THE HANDLEBAR	4-59
STEERING HEAD	4-62
LOWER BRACKET	4-62
REMOVING THE LOWER BRACKET	4-64
CHECKING THE STEERING HEAD	4-64
INSTALLING THE STEERING HEAD	4-65
REAR SHOCK ABSORBER	4-67
HANDLING THE REAR SHOCK ABSORBER AND GAS CYLINDER	4-68
DISPOSING OF A REAR SHOCK ABSORBER AND GAS CYLINDER	4-68
REMOVING THE REAR SHOCK ABSORBER	4-69
CHECKING THE REAR SHOCK ABSORBER ASSEMBLY AND GAS CYLINDER	4-69
INSTALLING THE REAR SHOCK ABSORBER	4-70

CHASSIS


FRONT WHEEL AND BRAKE DISC

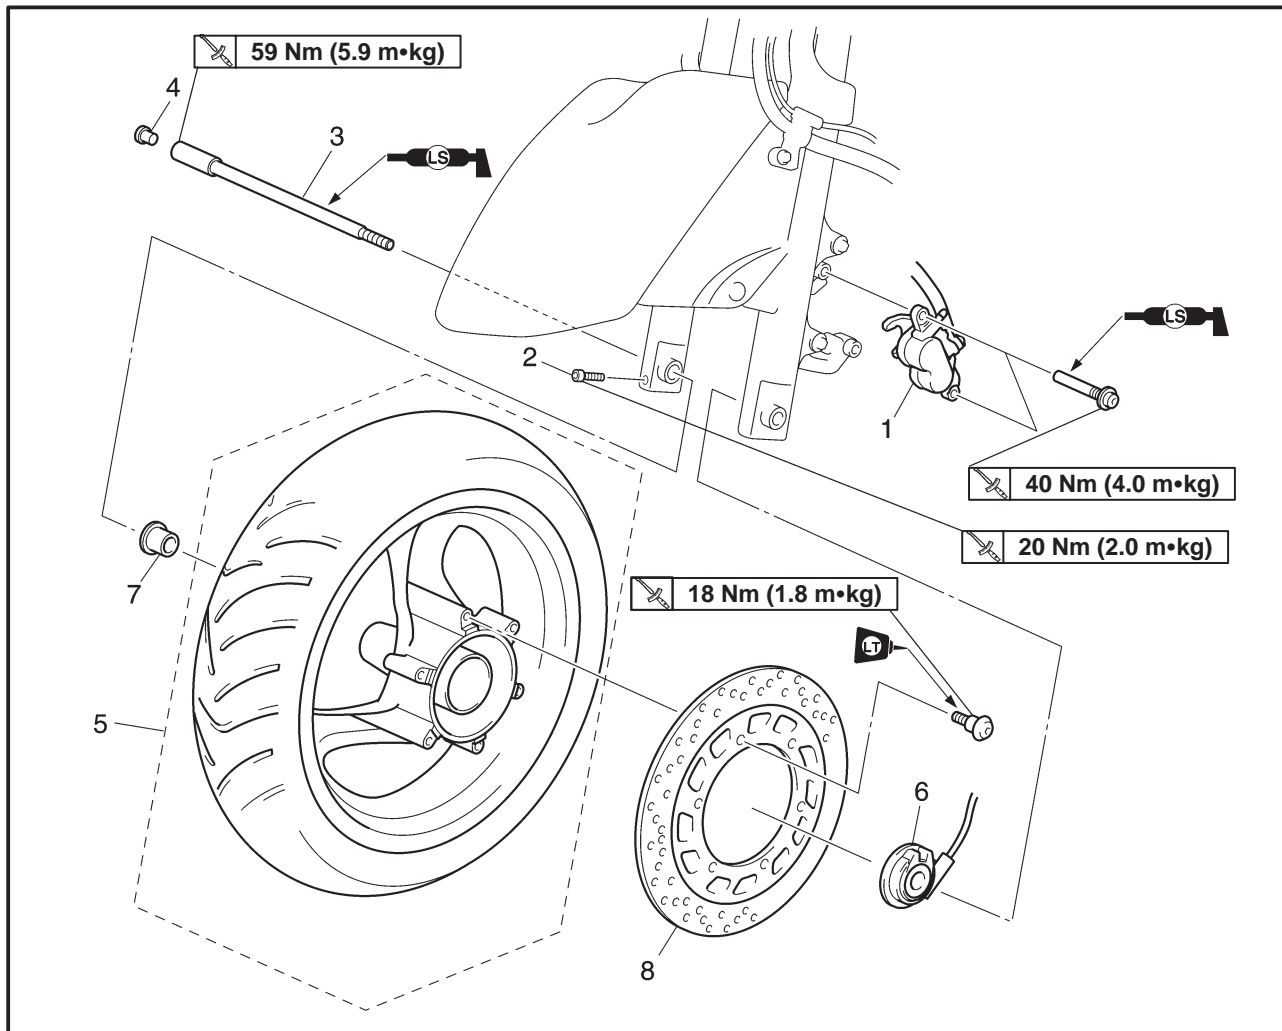

Order	Job/Part	Q'ty	Remarks
	Removing the front wheel and brake disc		Remove the parts in the order listed. NOTE: _____ Place the scooter on a suitable stand so that the front wheel is elevated. _____
1	Front brake caliper	1	
2	Front wheel axle pinch bolt	1	
3	Front wheel axle	1	
4	Cap	1	
5	Front wheel assembly	1	
6	Speed sensor	1	
7	Collar	1	
8	Brake disc	1	
			For installation, reverse the removal procedure.

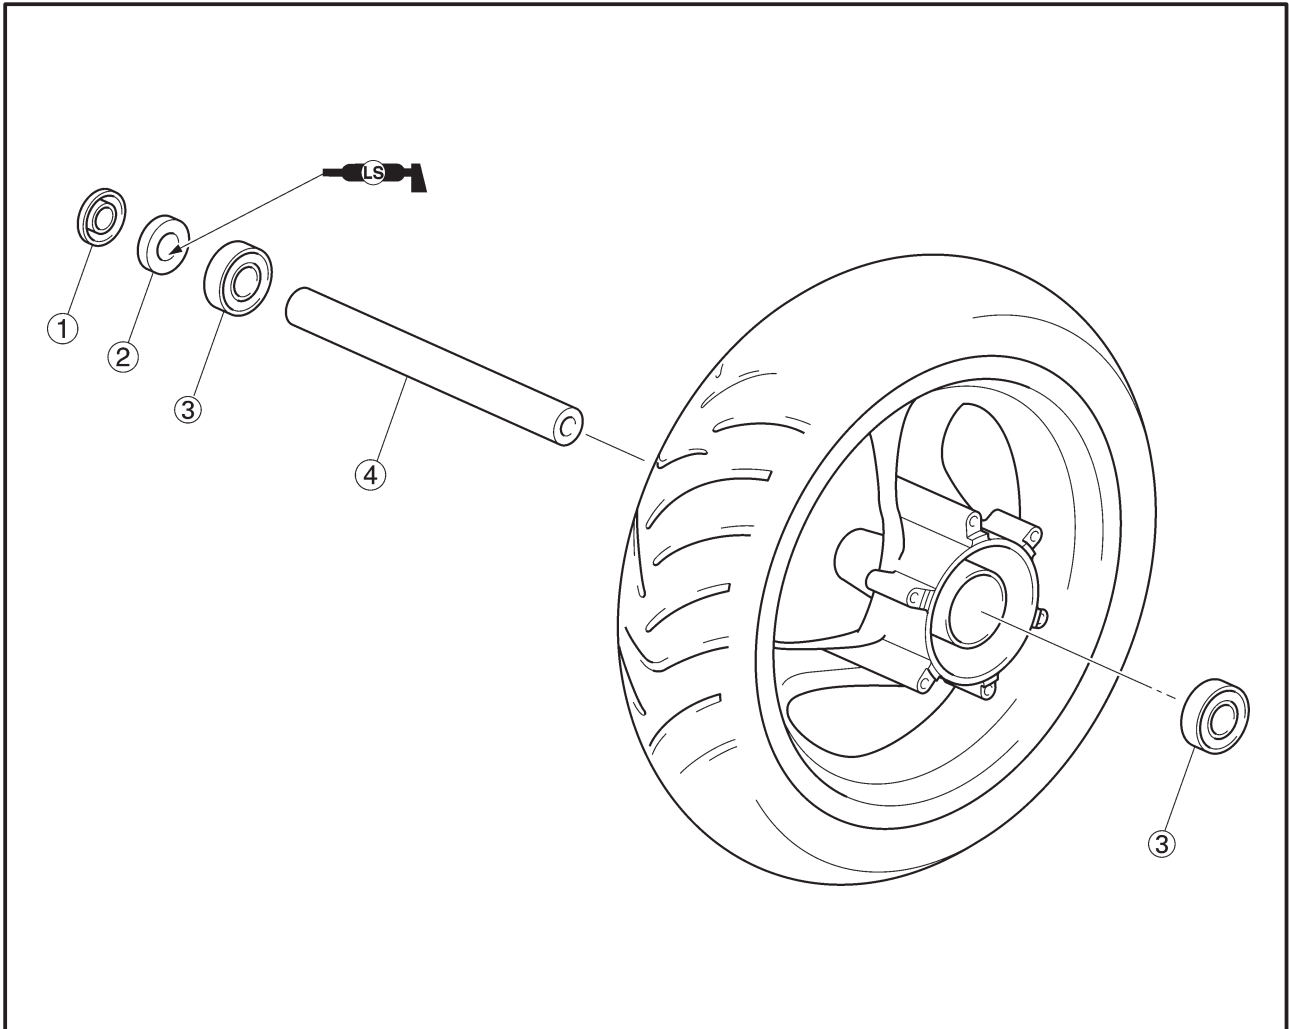

Order	Job/Part	Q'ty	Remarks
	Disassembling the front wheel		Disassemble the parts in the order listed.
①	Dust seal	1	
②	Oil seal	1	
③	Bearing	2	
④	Collar	1	
			For assembly, reverse the disassembly procedure.

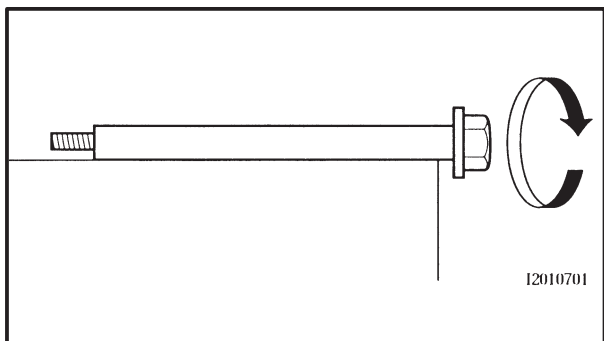

EAS00525


CHECKING THE FRONT WHEEL

1. Check:
 - wheel axle
 - Roll the wheel axle on a flat surface.
 - Bends → Replace.

⚠ WARNING

Do not attempt to straighten a bent wheel axle.


2. Check:
 - tire
 - front wheel
 - Damage/wear → Replace.
 - Refer to “CHECKING THE TIRES” and “CHECKING THE WHEELS” in chapter 3.

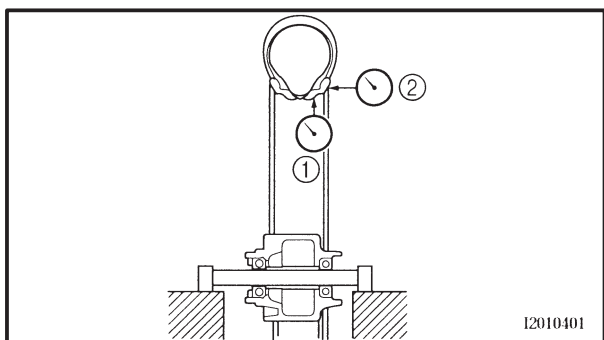


3. Measure:
 - front wheel radial runout ①
 - front wheel lateral runout ②
 - Over the specified limits → Replace.



**Front wheel radial runout limit
1 mm
Front wheel lateral runout limit
0.5 mm**

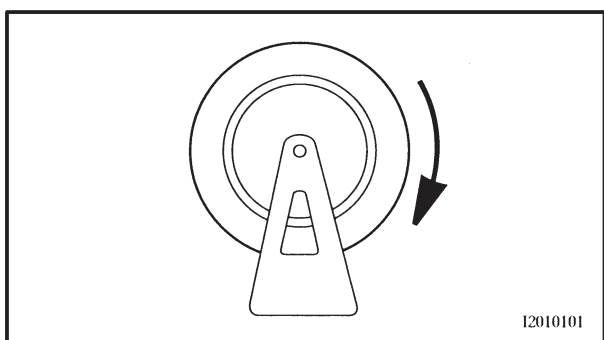

4. Check:
 - wheel bearings
 - Front wheel turns roughly or is loose → Replace the wheel bearings.
 - oil seals
 - Damage/wear → Replace.

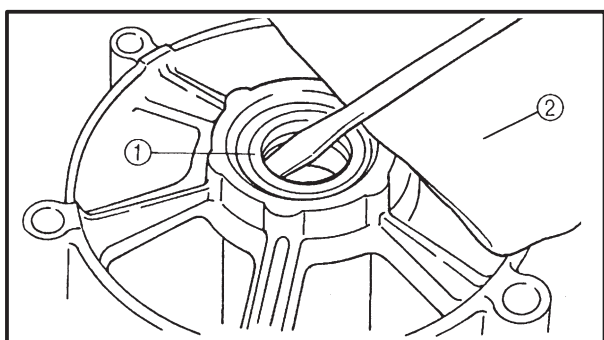


5. Replace:
 - wheel bearings **New**
 - oil seals **New**

- a. Clean the outside of the front wheel hub.
- b. Remove the oil seals ① with a flat-head screwdriver.

NOTE:

To prevent damaging the wheel, place a rag ② between the screwdriver and the wheel surface.


FRONT WHEEL AND BRAKE DISC

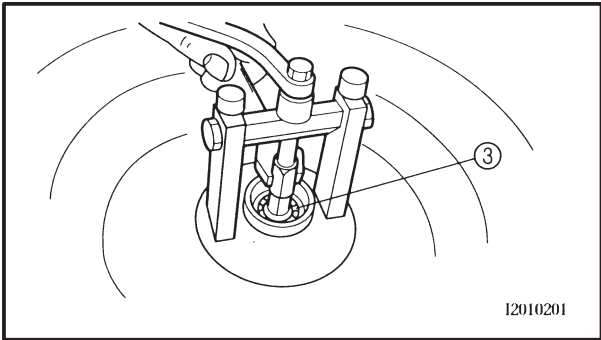

- c. Remove the wheel bearings (3) with a general bearing puller.
- d. Install the new wheel bearings and oil seals in the reverse order of disassembly.

CAUTION: _____

Do not contact the wheel bearing center race (4) or balls (5). Contact should be made only with the outer race (6).

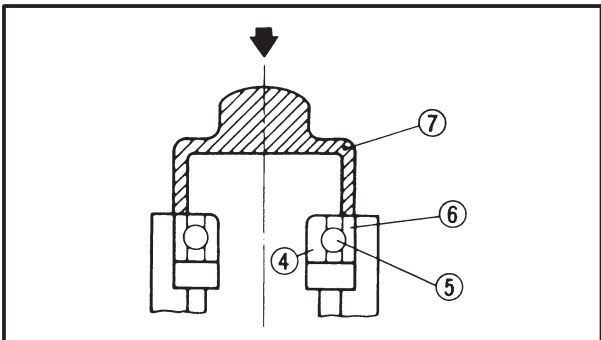

NOTE: _____

Use a socket (7) that matches the diameter of the wheel bearing outer race and oil seal.




EAS00528

CHECKING THE BRAKE DISC

The following procedure applies to all of the brake discs.

1. Check:
 - brake disc
Damage/galling → Replace.
2. Measure:
 - brake disc deflection
Out of specification → Correct the brake disc deflection or replace the brake disc.

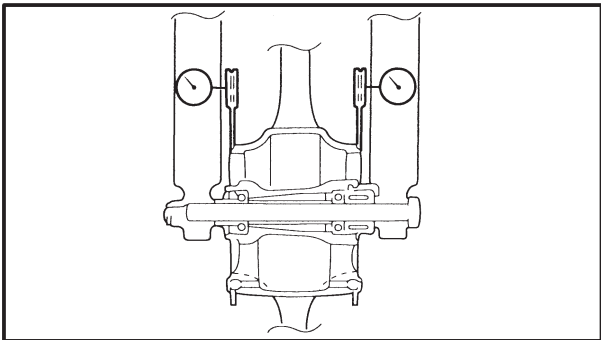

	Max. brake disc deflection
	Front: 0.15 mm
	Rear: 0.15 mm




- a. Place the scooter on a suitable stand so that the front wheel is elevated.
- b. Before measuring the front brake disc deflection, turn the handlebar to the left or right to ensure that the front wheel is stationary.
- c. Remove the brake caliper.
- d. Hold the dial gauge at a right angle against the brake disc surface.
- e. Measure the deflection 2 ~ 3 mm below the edge of the brake disc.



FRONT WHEEL AND BRAKE DISC

CHAS

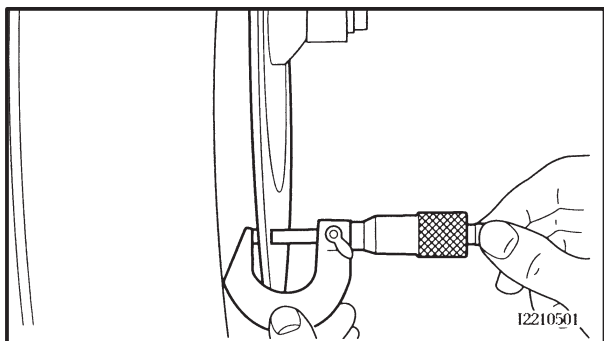

3. Measure:

- brake disc thickness (a)

Measure the brake disc thickness at a few different locations.


Out of specification → Replace.



Min. brake disc thickness

Front: 4.5 mm

Rear: 3.5 mm

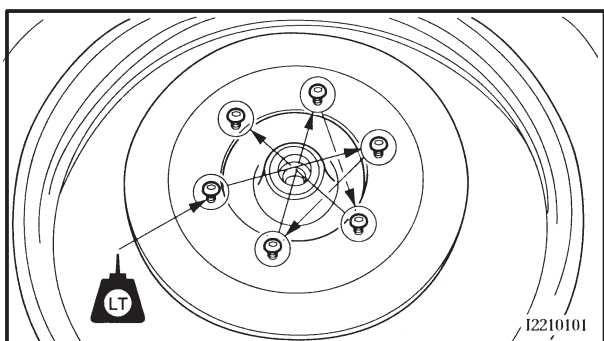

4. Adjust:

- brake disc deflection



- Remove the brake disc.
- Rotate the brake disc by one bolt hole.
- Install the brake disc.

NOTE:

Tighten the brake disc bolts in stages and in a crisscross pattern.



Brake disc bolt

18 Nm (1.8 m•kg)

LOCTITE®

- Measure the brake disc deflection.
- If out of specification, repeat the adjustment steps until the brake disc deflection is within specification.
- If the brake disc deflection cannot be brought within specification, replace the brake disc.



FRONT WHEEL AND BRAKE DISC

CHAS



3. Install:

- brake disc

18 Nm (1.8 m•kg)

NOTE:


- Apply LOCTITE® 648 to the threads of the brake disc bolts.
- Tighten the brake disc bolts in stages and in a crisscross pattern.

4. Install:

- front wheel
- front wheel axle
- wheel axle pinch bolt

NOTE:

Make sure that the slot in the speedometer gear unit fits over the stopper on the outer tube.

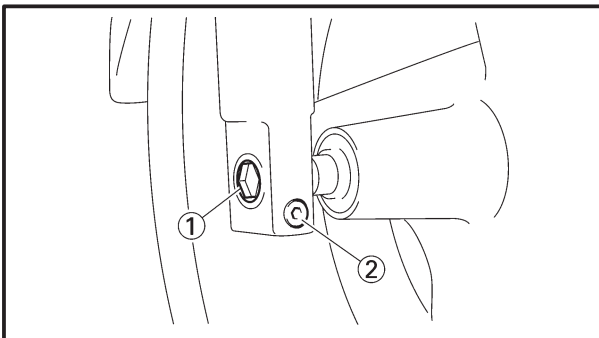

5. Tighten:


- front wheel axle ①
- wheel axle pinch bolt ②

59 Nm (5.9 m•kg)

20 Nm (2.0 m•kg)

CAUTION:

Before tightening the wheel axle pinch bolt, push down hand on the handlebar several times and check if the front fork rebounds smoothly.

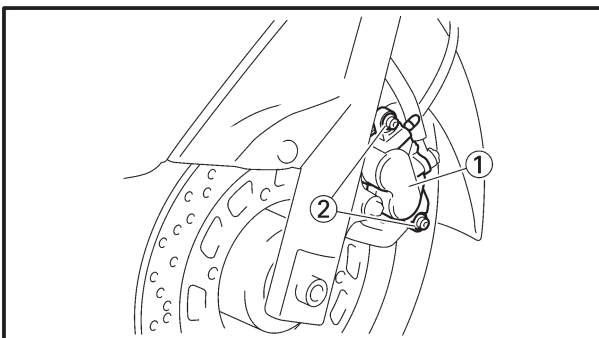

6. Install:

- front brake caliper ①

⚠ WARNING

Make sure that the brake cable is routed properly.

7. Tighten:

- front brake caliper bolt ②





40 Nm (4.0 m•kg)

EAS00548

ADJUSTING THE FRONT WHEEL STATIC BALANCE

NOTE: _____

- After replacing the tire, wheel or both, the front wheel static balance should be adjusted.
- Adjust the front wheel static balance with the brake disc installed.

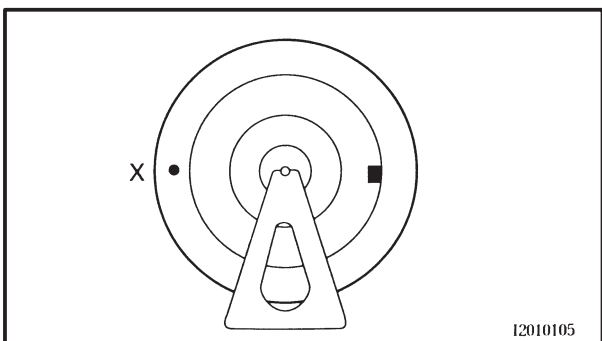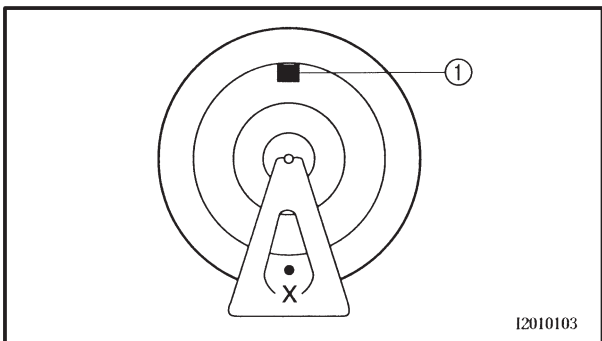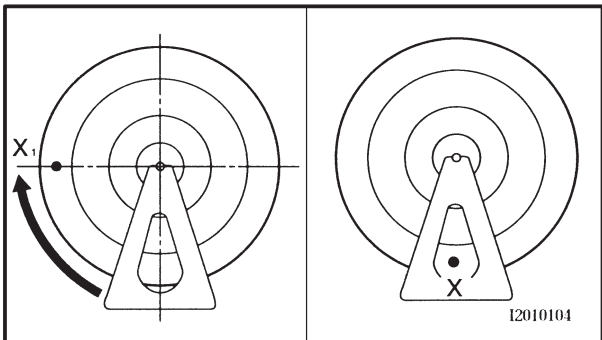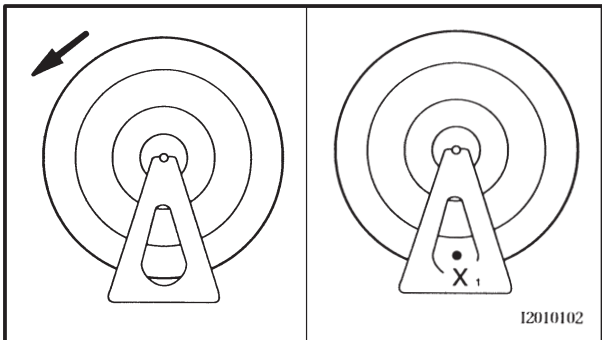

1. Remove:
 - balancing weight(-s)
2. Find:
 - front wheel's heavy spot



- a. Place the front wheel on a suitable balancing stand.
- b. Spin the front wheel.
- c. When the front wheel stops, put an "X₁" mark at the bottom of the wheel.
- d. Turn the front wheel 90° so that the "X₁" mark is positioned as shown.
- e. Release the front wheel.
- f. When the front wheel stops, put an "X₂" mark at the bottom of the wheel.
- g. Repeat steps (a) through (d) several times until all the marks come to rest at the same spot.
- h. The spot where all the marks come to rest is the front wheel's heavy spot "X".



3. Adjust:
 - front wheel static balance



- a. Install a balancing weight ① onto the rim exactly opposite the heavy spot "X".


NOTE: _____

Start with the lightest weight.


- b. Turn the front wheel 90° so that the heavy spot is positioned as shown.
- c. If the heavy spot does not stay in that position, install a heavier weight.
- d. Repeat steps (b) and (c) until the front wheel is balanced.



REAR WHEEL AND BRAKE DISC
REAR WHEEL

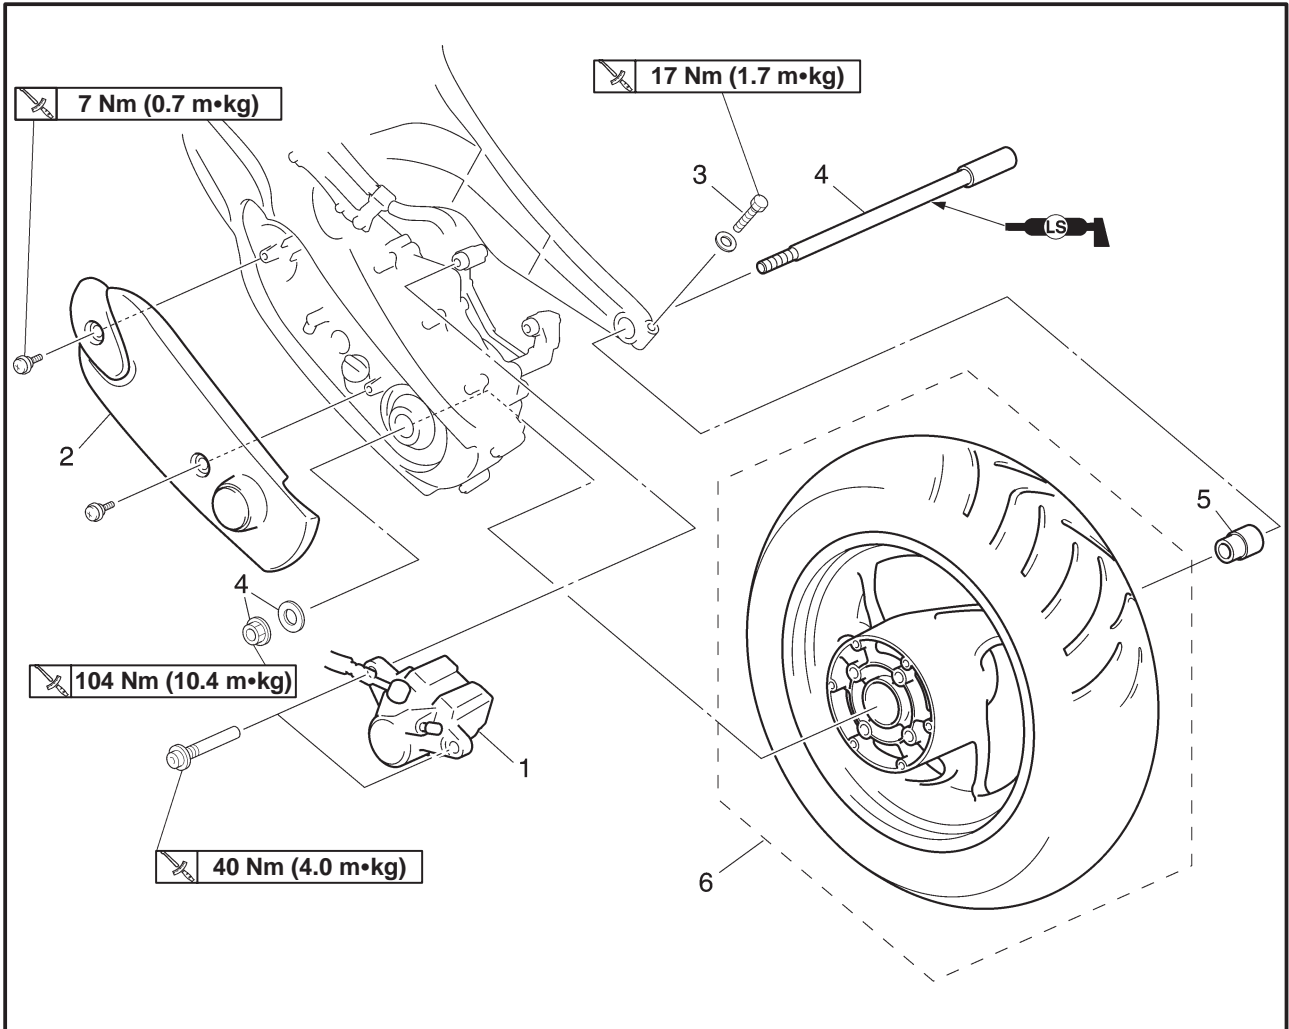

Order	Job/Part	Q'ty	Remarks
	Removing the rear wheel		Remove the parts in the order listed. NOTE: _____ Place the scooter on a suitable stand so that the rear wheel is elevated.
1	Rear brake caliper	1	Loosen.
2	Chain drive case cover	1	
3	Swingarm pinch bolt	1	
4	Rear wheel axle/nut/washer	1/1/1	
5	Collar	1	
6	Rear wheel	1	
			For installation, reverse the removal procedure.

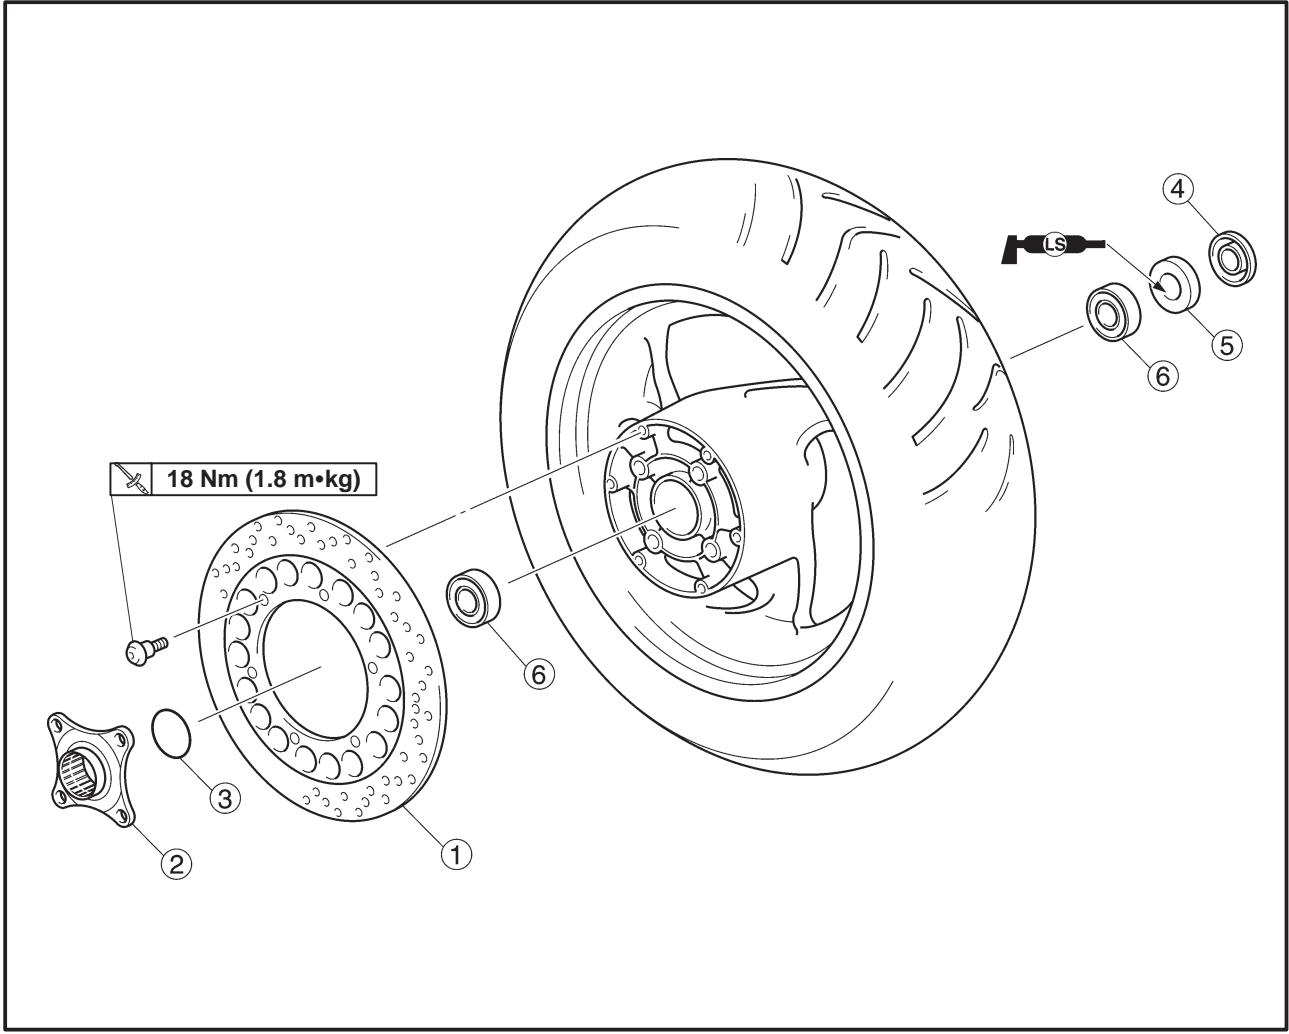


Order	Job/Part	Q'ty	Remarks
	Disassembling the rear wheel		Disassemble the parts in the order listed.
①	Brake disc	1	
②	Rear wheel drive hub	1	
③	O-ring	1	
④	Dust seal	1	
⑤	Oil seal	1	
⑥	Bearing	2	
			For assembly, reverse the disassembly procedure.

EAS00565

CHECKING THE REAR WHEEL

1. Check:
 - wheel axle
 - rear wheel
 - wheel bearings
 - oil sealsRefer to “FRONT WHEEL”.
2. Check:
 - tire
 - rear wheelDamage/wear → Replace.
Refer to “CHECKING THE TIRES” and “CHECKING THE WHEELS” in chapter 3.
3. Measure:
 - rear wheel radial runout
 - rear wheel lateral runoutRefer to “FRONT WHEEL”.

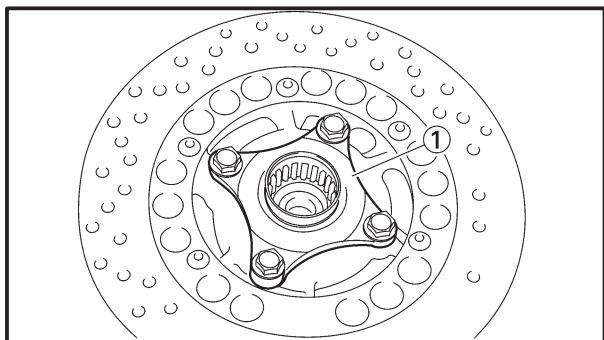

EAS00567

CHECKING THE REAR WHEEL DRIVE HUB

1. Check:
 - rear wheel drive hub ①Cracks/damage → Replace.

EAS00575


ADJUSTING THE REAR WHEEL STATIC BALANCE

NOTE: _____

- After replacing the tire, wheel or both, the rear wheel static balance should be adjusted.
- Adjust the rear wheel static balance with the brake disc and rear wheel drive hub installed.


1. Adjust:
 - rear wheel static balanceRefer to “FRONT WHEEL”.

FRONT AND REAR BRAKES
FRONT BRAKE PADS

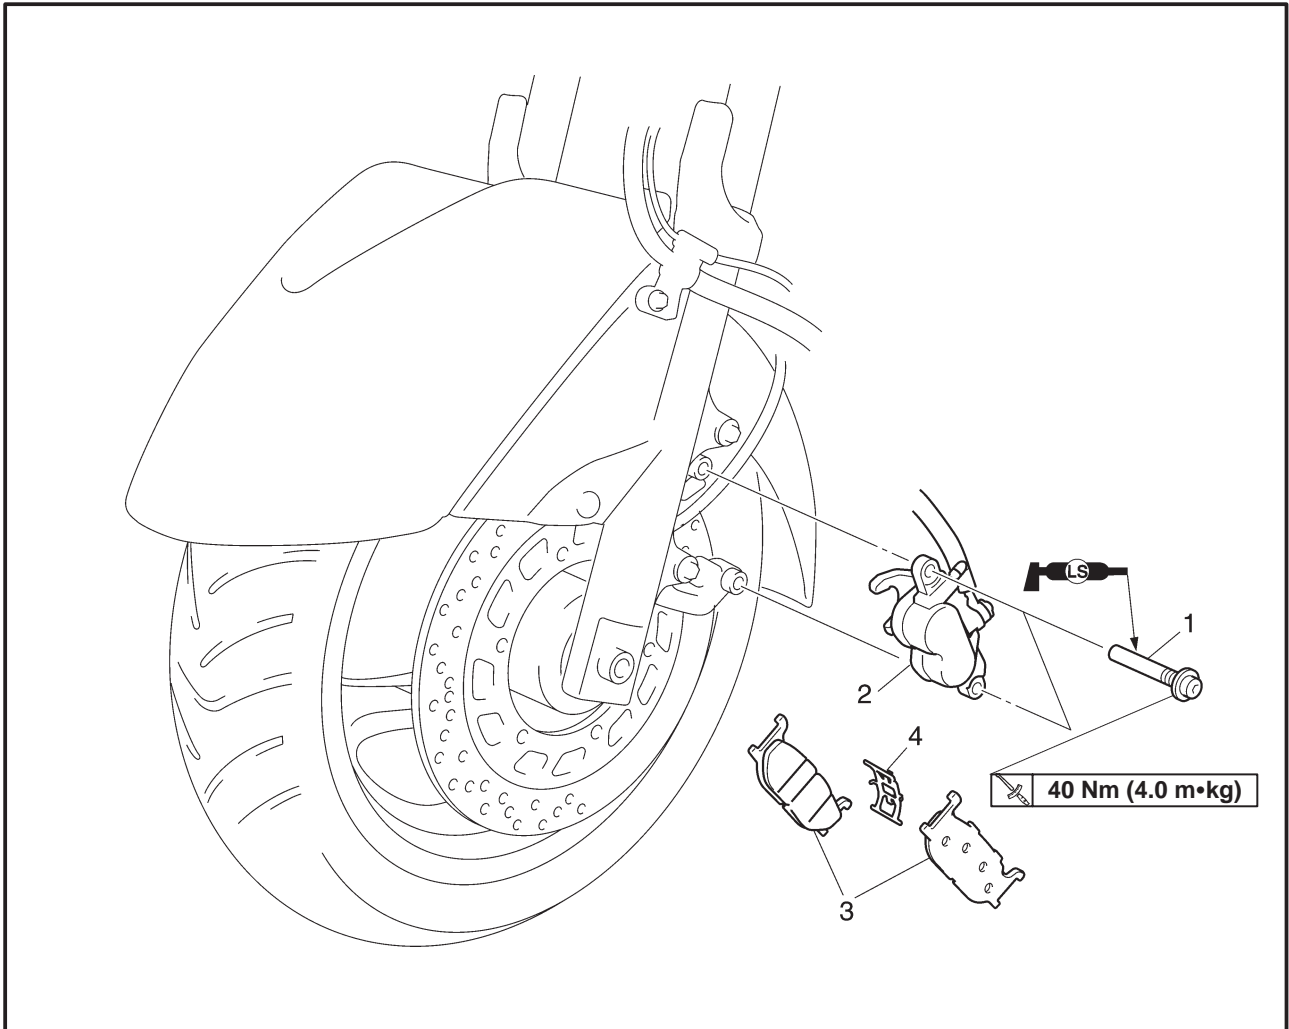

Order	Job/Part	Q'ty	Remarks
	Removing the front brake pads		
1	Front brake caliper bolt	2	Remove the parts in the order listed.
2	Brake caliper	1	
3	Brake pad	2	
4	Brake pad spring	1	
			For installation, reverse the removal procedure.

REAR BRAKE PADS

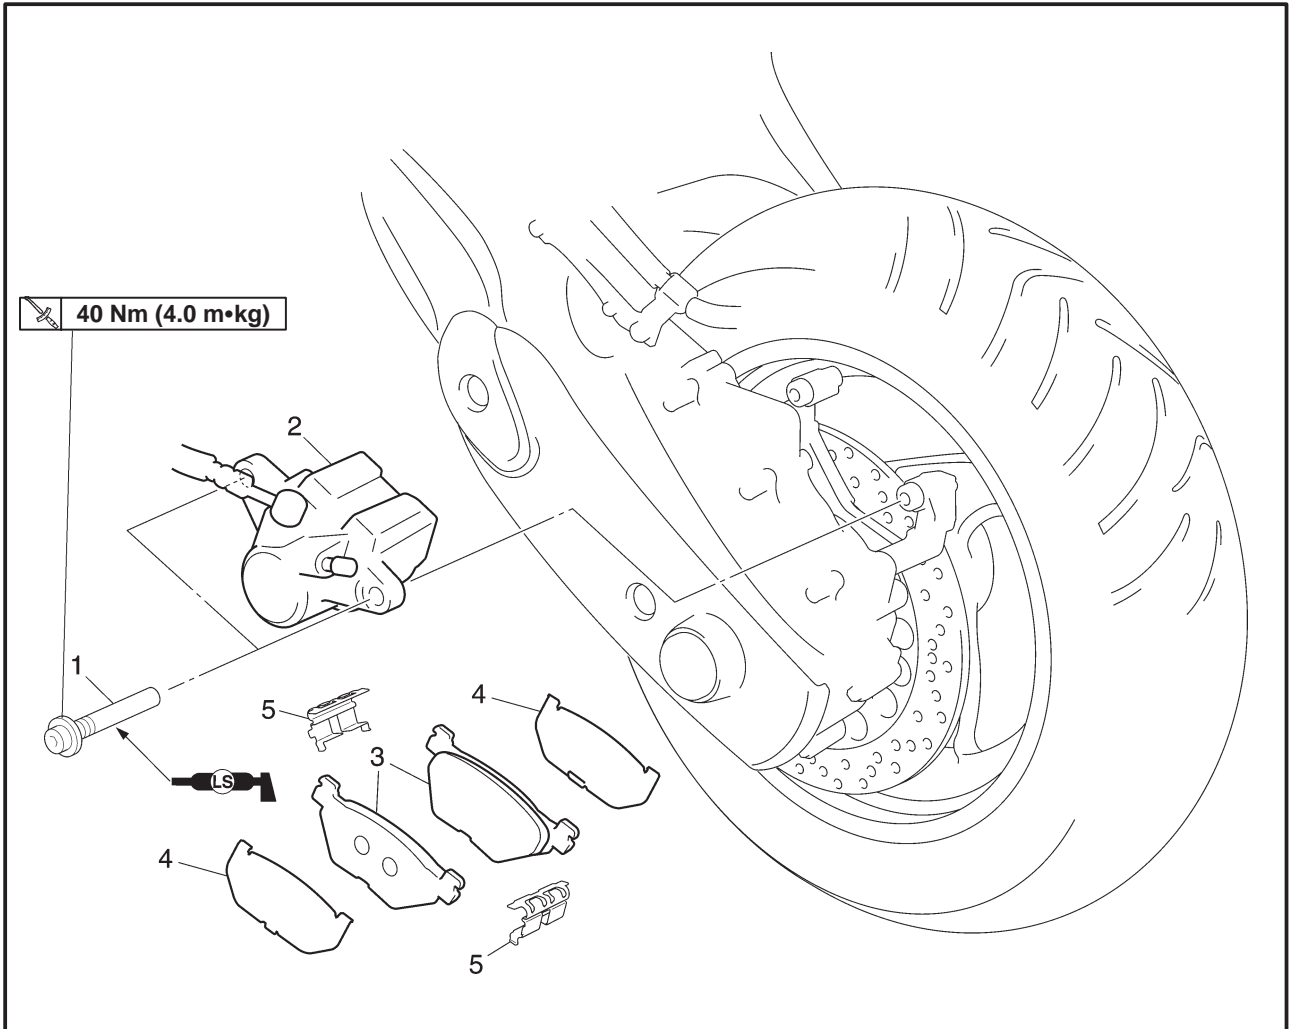

Order	Job/Part	Q'ty	Remarks
	Removing the rear brake pads		
1	Rear brake caliper bolt	2	Remove the parts in the order listed. For installation, reverse the removal procedure.
2	Brake caliper	1	
3	Brake pad	2	
4	Brake pad shim	2	
5	Brake pad spring	2	



EAS00579

CAUTION:



Disc brake components rarely require disassembly.

Therefore, always follow these preventive measures:

- Never disassemble brake components unless absolutely necessary.
- If any connection on the hydraulic brake system is disconnected, the entire brake system must be disassembled, drained, cleaned, properly filled, and bled after reassembly.
- Never use solvents on internal brake components.
- Use only clean or new brake fluid for cleaning brake components.
- Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilled fluid immediately.
- Avoid brake fluid coming into contact with the eyes as it can cause serious injury.

First aid for brake fluid entering the eyes:

- Flush with water for 15 minutes and get immediate medical attention.

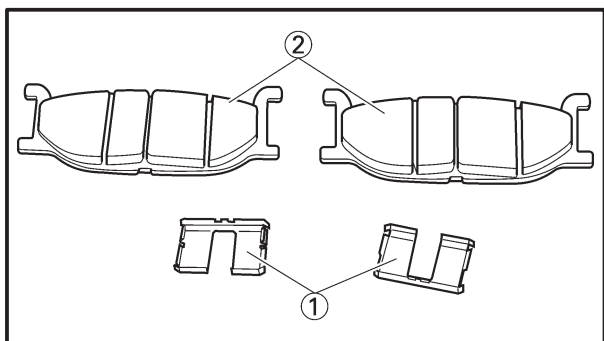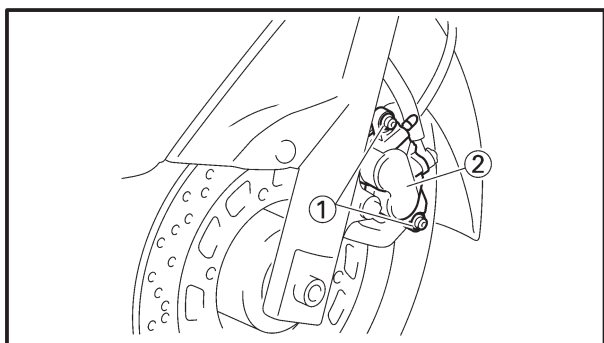


EAS00581

REPLACING THE FRONT BRAKE PADS**NOTE:**

When replacing the brake pads, it is not necessary to disconnect the brake hose or disassemble the brake caliper.

1. Remove:
 - front brake caliper bolt (1)
 - brake caliper (2)
2. Remove:
 - brake pad spring (1)
 - brake pads (2)

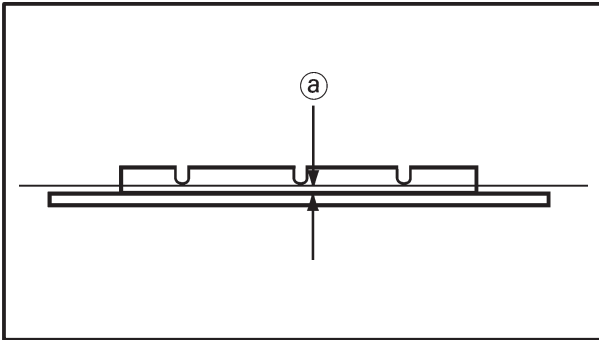


3. Measure:

- brake pad thickness (a)

Out of specification → Replace the brake pads as a set.



Minimum brake pad thickness
0.8 mm

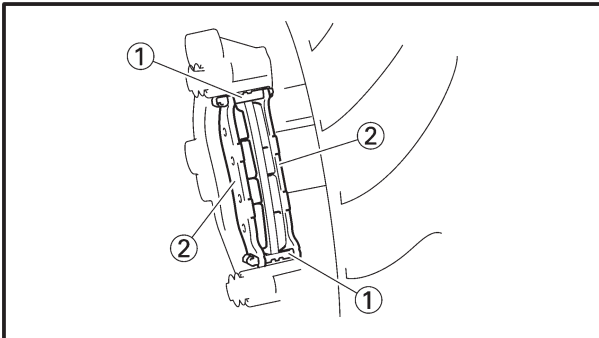


4. Install:

- brake pad spring (1)
- brake pads (2)

NOTE:

Always install new brake pads and a new brake pad shim as a set.

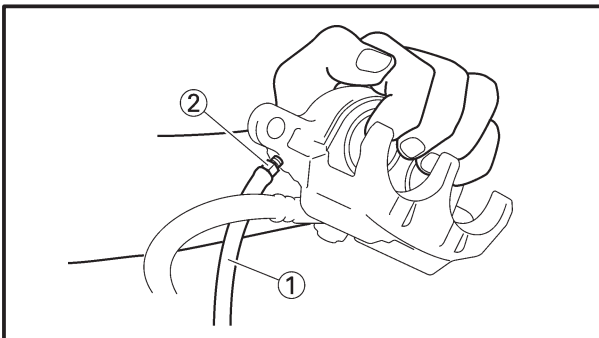

a. Connect a clear plastic hose (1) tightly to the bleed screw (2). Put the other end of the hose into an open container.


b. Loosen the bleed screw and push the brake caliper pistons into the brake caliper with your finger.

c. Tighten the bleed screw.



Bleed screw
6 Nm (0.6 m•kg)

d. Install new brake pads and brake pad spring.




5. Lubricate:

- brake caliper bolts




Recommended lubricant
Lithium soap base grease

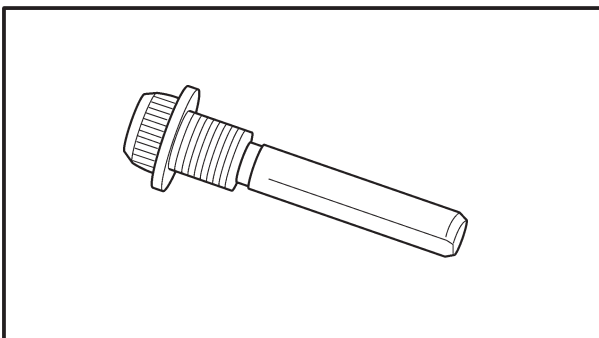

CAUTION:


• Do not allow grease to contact the brake pads.


• Remove any excess grease.

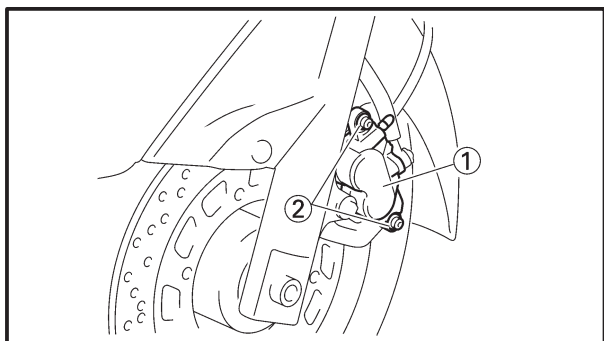

6. Install:

- brake caliper ①
- brake caliper bolts ②

 **40 Nm (4.0 m•kg)**

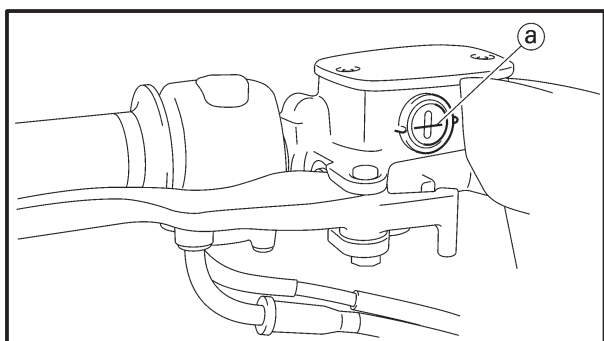

7. Check:

- brake fluid level
Below the minimum level mark (a) → Add the recommended brake fluid to the proper level. Refer to “CHECKING THE BRAKE FLUID LEVEL” in chapter 3.

8. Check:


- brake lever operation
Soft or spongy feeling → Bleed the brake system. Refer to “BLEEDING THE HYDRAULIC BRAKE SYSTEM” in chapter 3.

EAS00583

REPLACING THE REAR BRAKE PADS


NOTE:

When replacing the brake pads, it is not necessary to disconnect the brake hose or disassemble the brake caliper.

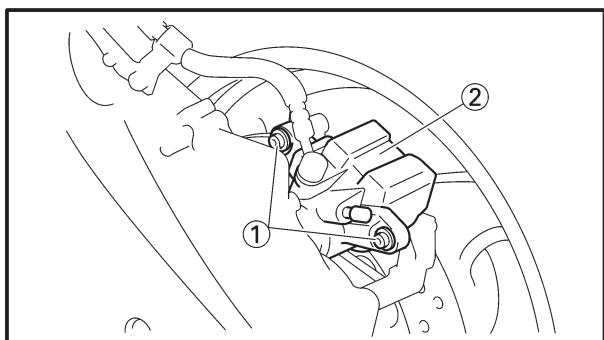

1. Remove:

- brake caliper bolt ①
- brake caliper ②

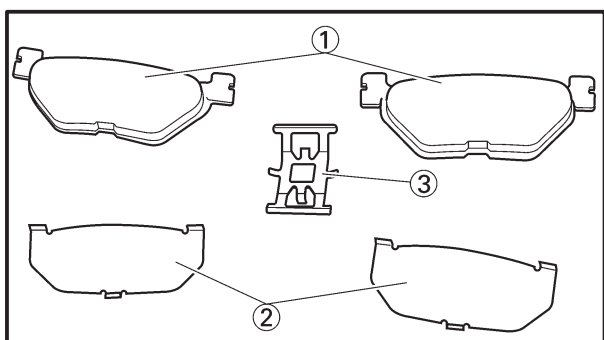


2. Remove:


- brake pads ①
- brake pad shim ②
- brake pad spring ③

FRONT AND REAR BRAKES



6. Install:
- brake caliper
 - brake caliper bolt


 **40 Nm (4.0 m•kg)**

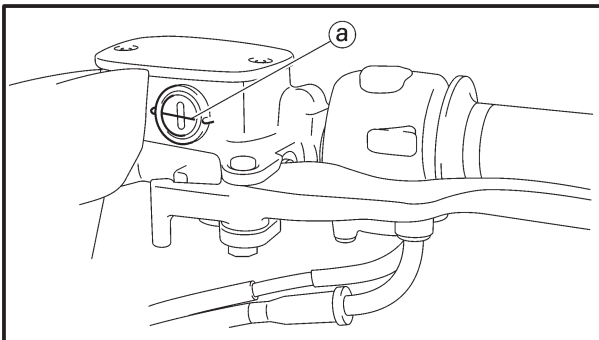


7. Check:
- brake fluid level
Below the minimum level mark (a) → Add the recommended brake fluid to the proper level. Refer to “CHECKING THE BRAKE FLUID LEVEL” in chapter 3.

8. Check:
- brake pedal operation
Soft or spongy feeling → Bleed the brake system. Refer to “BLEEDING THE HYDRAULIC BRAKE SYSTEM” in chapter 3.

FRONT BRAKE MASTER CYLINDER

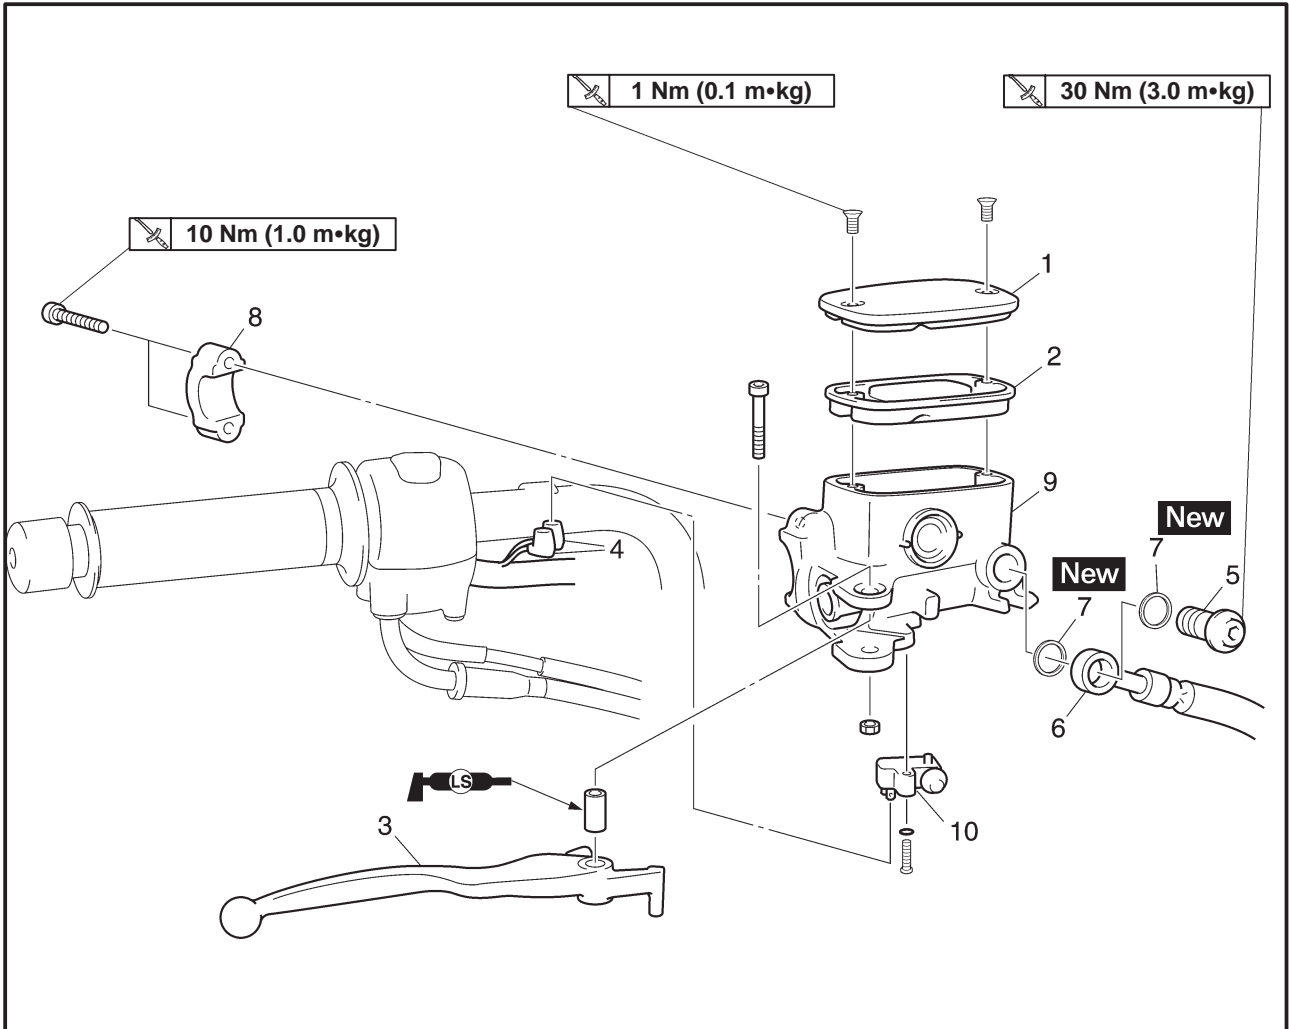


Order	Job/Part	Q'ty	Remarks
	Removing the front brake master cylinder		Remove the parts in the order listed.
	Brake fluid		Drain.
1	Brake master cylinder reservoir cap	1	
2	Brake master cylinder reservoir diaphragm	1	
3	Brake lever	1	
4	Front brake light switch connector	2	Disconnect.
5	Union bolt	1	
6	Brake hose	1	
7	Copper washer	2	
8	Brake master cylinder holder	1	
9	Brake master cylinder	1	
10	Front brake light switch	1	
			For installation, reverse the removal procedure.

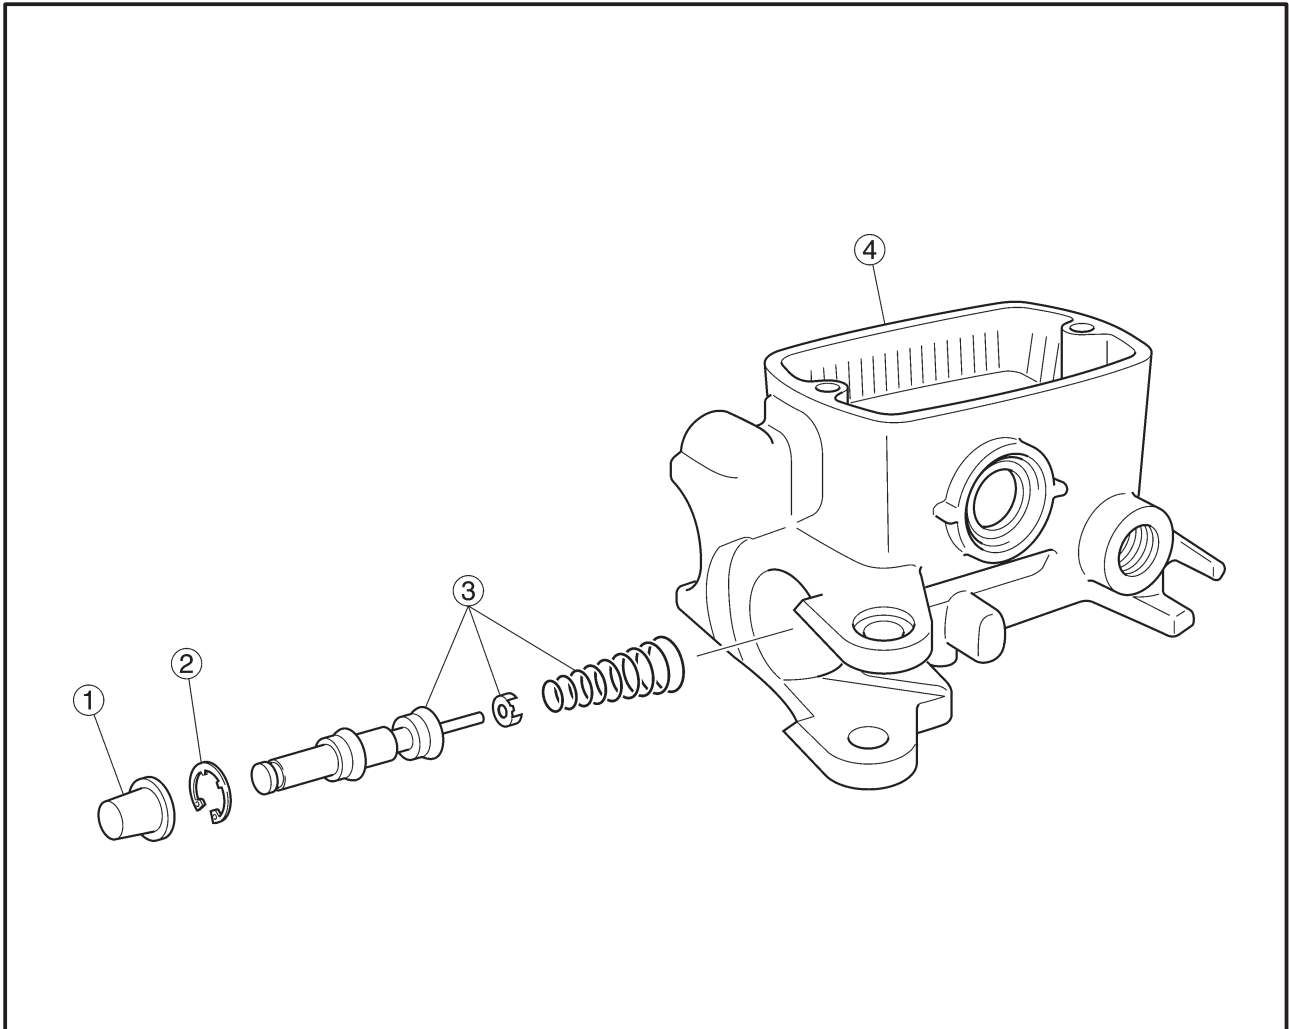


Order	Job/Part	Q'ty	Remarks
	Disassembling the front brake master cylinder		Remove the parts in the order listed.
①	Dust boot	1	
②	Circlip	1	
③	Brake master cylinder kit	1	
④	Brake master cylinder body	1	
			For assembly, reverse the disassembly procedure.

REAR BRAKE MASTER CYLINDER

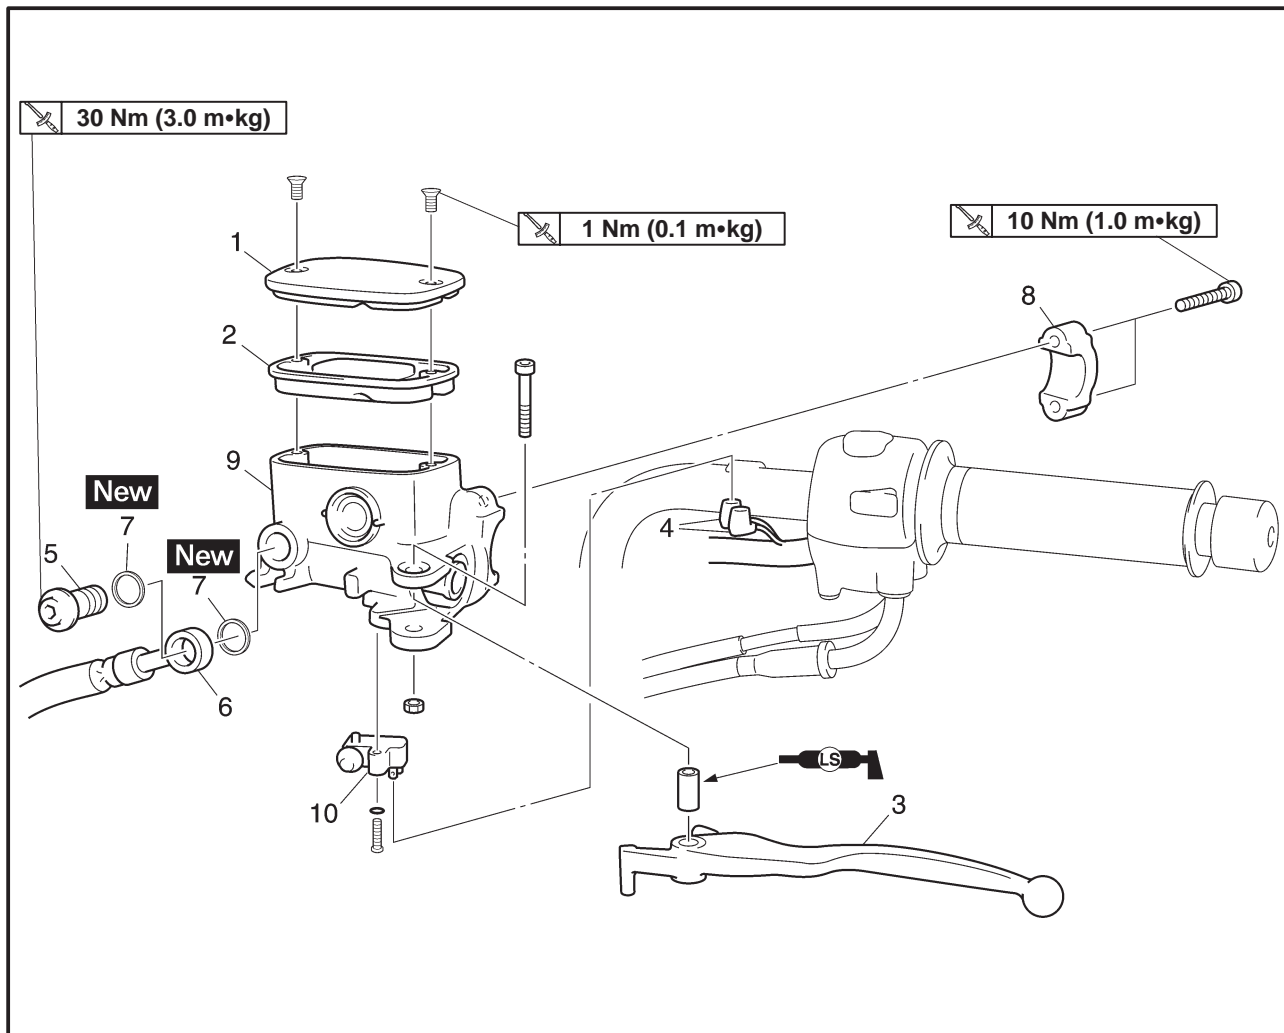

Order	Job/Part	Q'ty	Remarks
	Removing the rear brake master cylinder		Remove the parts in the order listed.
	Brake fluid		Drain.
1	Brake master cylinder reservoir cap	1	
2	Brake master cylinder reservoir diaphragm	1	
3	Brake lever	1	
4	Rear brake light switch connector	2	Disconnect.
5	Union bolt	1	
6	Brake hose	1	
7	Copper washer	2	
8	Brake master cylinder holder	1	
9	Brake master cylinder	1	
10	Rear brake light switch	1	
			For installation, reverse the removal procedure.

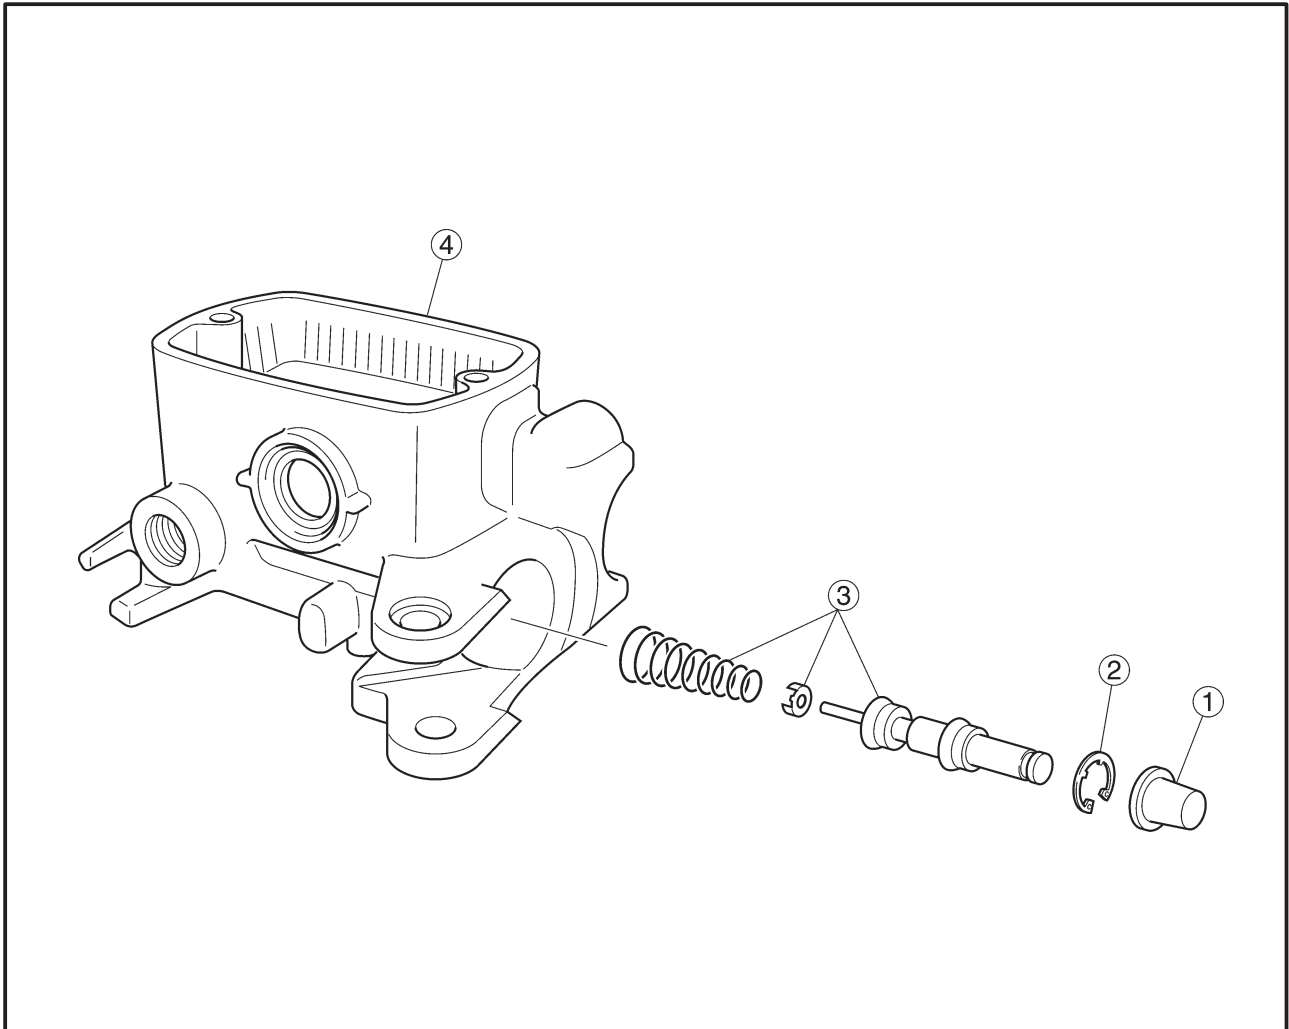

Order	Job/Part	Q'ty	Remarks
	Disassembling the rear brake master cylinder		Remove the parts in the order listed.
①	Dust boot	1	
②	Circlip	1	
③	Brake master cylinder kit	1	
④	Brake master cylinder body	1	
			For assembly, reverse the disassembly procedure.




EAS00588

DISASSEMBLING THE FRONT BRAKE MASTER CYLINDER

NOTE: _____

Before disassembling the front brake master cylinder, drain the brake fluid from the entire brake system.

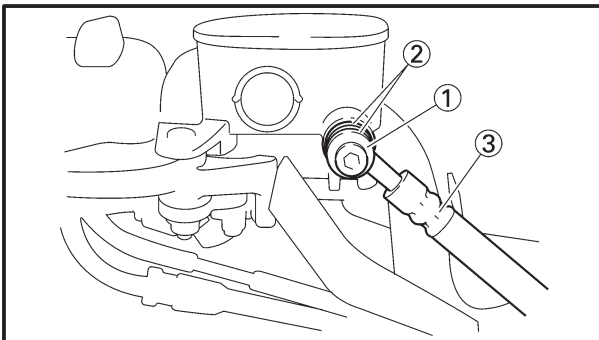

1. Disconnect:
 - front brake light switch connector (from the brake light switch)
2. Remove:
 - union bolt ①
 - copper washers ②
 - brake hoses ③

NOTE: _____


To collect any remaining brake fluid, place a container under the master cylinder and the end of the brake hose.

EAS00589

DISASSEMBLING THE REAR BRAKE MASTER CYLINDER

NOTE: _____





Before disassembling the rear brake master cylinder, drain the brake fluid from the entire brake system.

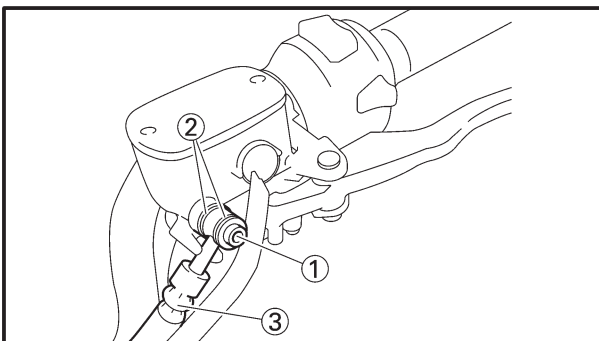

1. Disconnect:
 - rear brake light switch connector (from the brake light switch)
2. Remove:
 - union bolt ①
 - copper washers ②
 - brake hose ③

NOTE: _____

To collect any remaining brake fluid, place a container under the master cylinder and the end of the brake hose.

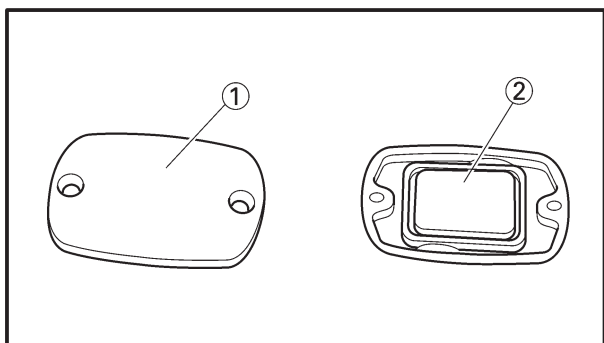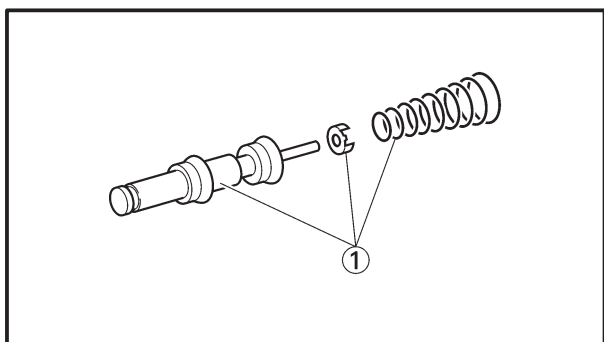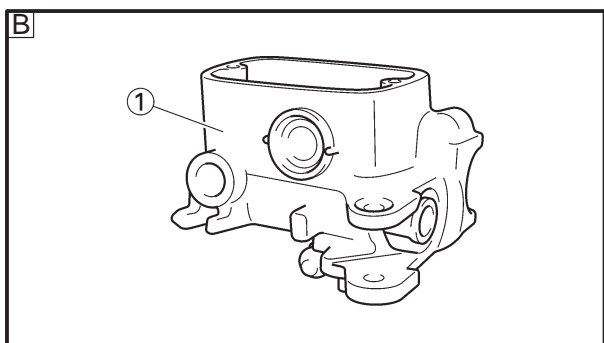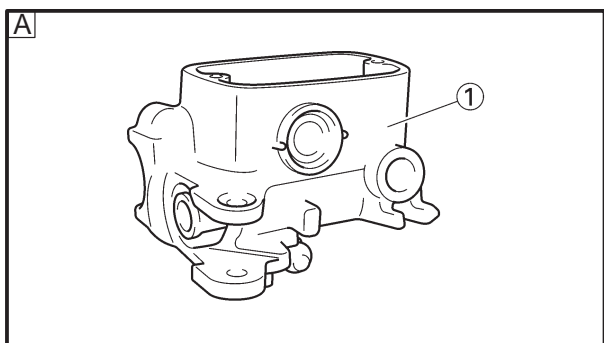

EAS00592

CHECKING THE FRONT AND REAR BRAKE MASTER CYLINDERS

The following procedure applies to the both of the brake master cylinders.


1. Check:
 - brake master cylinder ①
Damage/scratches/wear → Replace.
 - brake fluid delivery passages (brake master cylinder body)
Obstruction → Blow out with compressed air.

- A** Front
- B** Rear

2. Check:
 - brake master cylinder kit ①
Damage/scratches/wear → Replace.

3. Check:
 - front brake master cylinder reservoir cap ①
Cracks/damage → Replace.
 - front brake master cylinder reservoir diaphragm ②
Damage/wear → Replace.

4. Check:
 - rear brake master cylinder reservoir cap ①
Cracks/damage → Replace.
 - rear brake master cylinder reservoir diaphragm ②
Damage/wear → Replace.

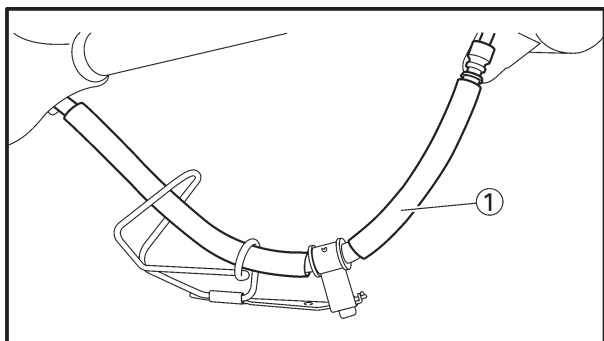

5. Check:
- brake hoses ①
- Cracks/damage/wear → Replace.

EAS00596


ASSEMBLING AND INSTALLING THE FRONT BRAKE MASTER CYLINDER

⚠ WARNING


- Before installation, all internal brake components should be cleaned and lubricated with clean or new brake fluid.
- Never use solvents on internal brake components.



Recommended brake fluid
DOT 4

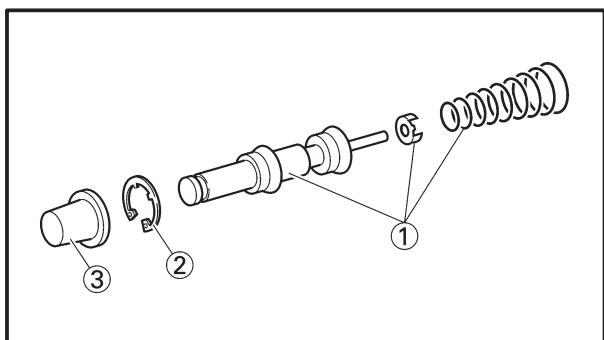


1. Install:
- brake master cylinder kit ①
 - circlip ② **New**
 - dust boot ③

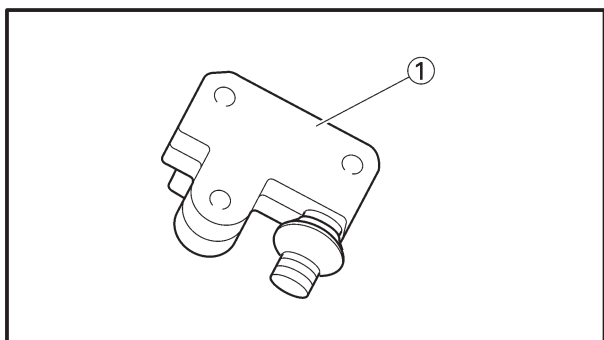

2. Install:
- front brake light switch ①

3. Install:
- brake lever

FRONT AND REAR BRAKES

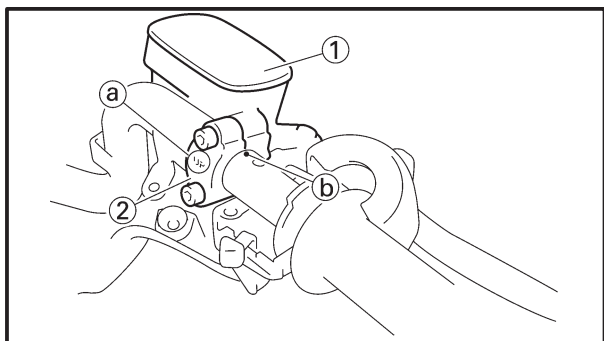


4. Install:

- brake master cylinder ①
- brake master cylinder holder ②
- holder bolts

10 Nm (1.0 m•kg)

NOTE: _____

- Install the brake master cylinder holder with the “UP” mark facing up ①.
- Align the end of the brake master cylinder holder with the punch mark ② in the handlebar.
- First, tighten the upper bolt, then the lower bolt.

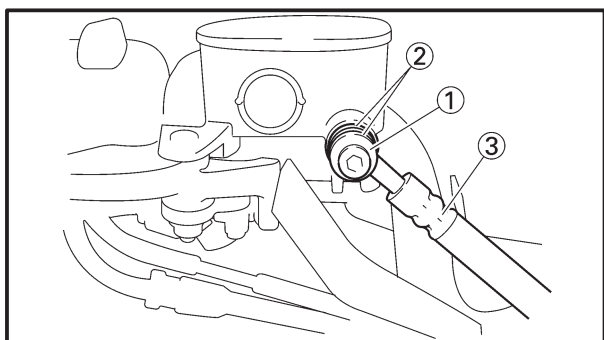

5. Install:

- copper washers ② **New**
- brake hose ③
- union bolt ①


30 Nm (3.0 m•kg)

⚠ WARNING _____

Proper brake hose routing is essential to insure safe scooter operation. Refer to “CABLE ROUTING”.

NOTE: _____

- While holding the brake hose, tighten the union bolt as shown.
- Turn the handlebar to the left and to the right to make sure that the brake hose does not touch other parts (e.g., wire harness, cables, leads). Correct if necessary.

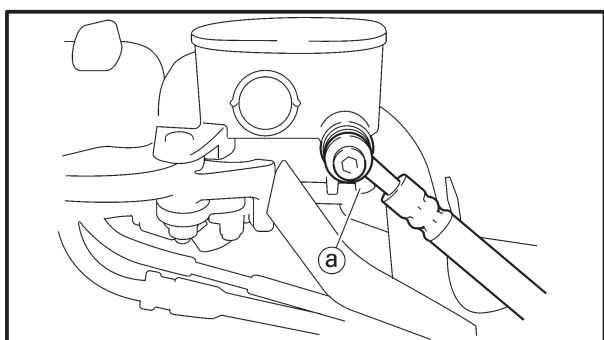

CAUTION: _____

When installing the brake hose onto the brake master cylinder, make sure the brake pipe touches the projection ① on the brake master cylinder.



6. Connect:
 - front brake light switch connector
7. Fill:
 - brake master cylinder reservoir
(with the specified amount of the recommended brake fluid)




**Recommended brake fluid
DOT 4**

⚠ WARNING

- Use only the designated brake fluid. Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.
- Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.
- When refilling, be careful that water does not enter the reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.

CAUTION:

Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.

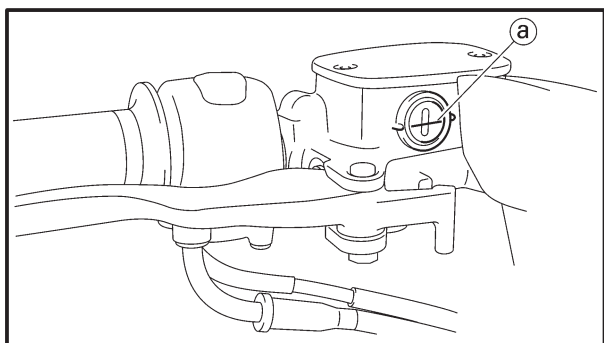

8. Bleed:
 - brake system
Refer to “BLEEDING THE HYDRAULIC BRAKE SYSTEM” in chapter 3.
9. Check:
 - brake fluid level
Below the minimum level mark (a) → Add the recommended brake fluid to the proper level. Refer to “CHECKING THE BRAKE FLUID LEVEL” in chapter 3.
10. Check:
 - brake lever operation
Soft or spongy feeling → Bleed the brake system.
Refer to “BLEEDING THE HYDRAULIC BRAKE SYSTEM” in chapter 3.

EAS00600


ASSEMBLING AND INSTALLING THE REAR BRAKE MASTER CYLINDER

⚠ WARNING


- Before installation, all internal brake components should be cleaned and lubricated with clean or new brake fluid.
- Never use solvents on internal brake components.



**Recommended brake fluid
DOT 4**

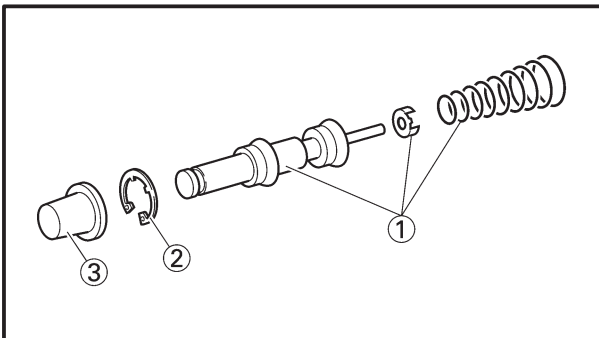


1. Install:
- brake master cylinder kit ①
 - circlip ② **New**
 - dust boot ③

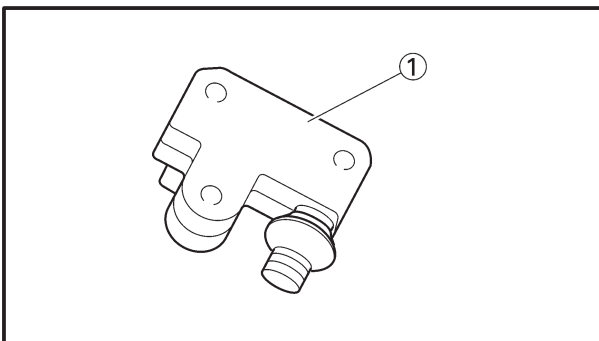


2. Install:
- rear brake light switch ①

3. Install:
- brake lever

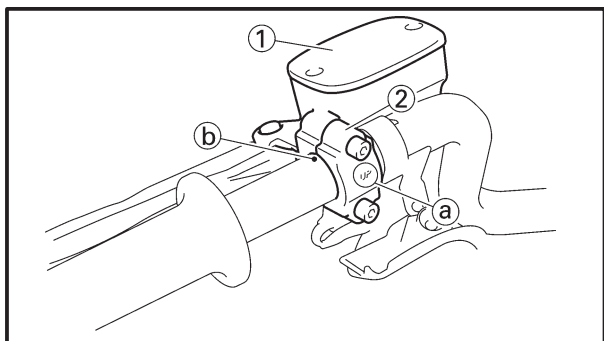


4. Install:
- brake master cylinder ①
 - brake master cylinder holder ②
 - holder bolts


 **10 Nm (1.0 m•kg)**

NOTE: _____

- Install the brake master cylinder holder with the “UP” mark facing up ①.
- Align the end of the brake master cylinder holder with the punch mark ② on the handlebar.
- First, tighten the upper bolt, then the lower bolt.

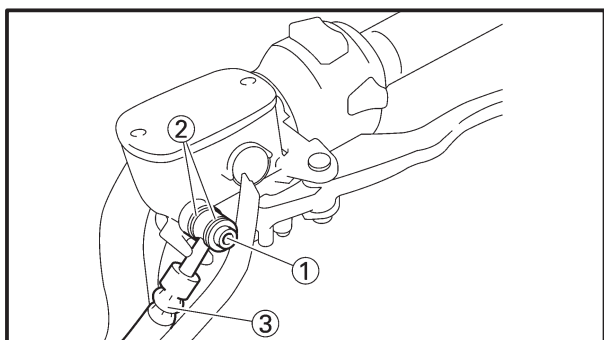

5. Install:
- copper washer ② **New**
 - brake hose ③
 - union bolt ①


 **30 Nm (3.0 m•kg)**

⚠ WARNING _____

Proper brake hose routing is essential to insure safe scooter operation. Refer to “CABLE ROUTING”.

NOTE: _____

- While holding the brake hose, tighten the union bolt as shown.
- Turn the handlebar to the left and to the right to make sure that the brake hose does not touch other parts (e.g., wire harness, cables, leads). Correct if necessary.

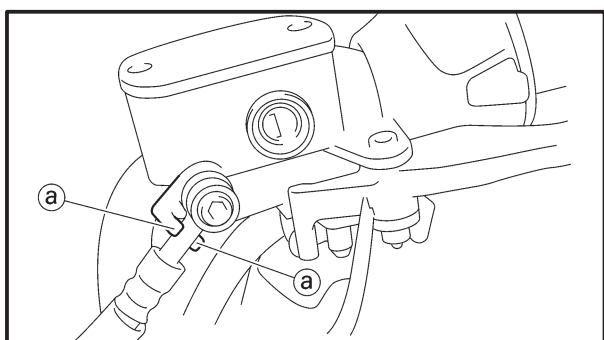

CAUTION: _____

When installing the brake hose onto the brake master cylinder, make sure the brake pipe touches the projection ① on the brake master cylinder.



6. Connect:
 - rear brake light switch connector
7. Fill:
 - brake master cylinder reservoir
(with the specified amount of the recommended brake fluid)



**Recommended brake fluid
DOT 4**

⚠ WARNING


- Use only the designated brake fluid. Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.
- Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.
- When refilling, be careful that water does not enter the reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.

CAUTION:


Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.

8. Bleed:
 - brake system
Refer to “BLEEDING THE HYDRAULIC BRAKE SYSTEM” in chapter 3.
9. Check:
 - brake fluid level
Below the minimum level mark (a) → Add the recommended brake fluid to the proper level. Refer to “CHECKING THE BRAKE FLUID LEVEL” in chapter 3.
10. Check:
 - brake lever operation
Soft or spongy feeling → Bleed the brake system.
Refer to “BLEEDING THE HYDRAULIC BRAKE SYSTEM” in chapter 3.

FRONT BRAKE CALIPER

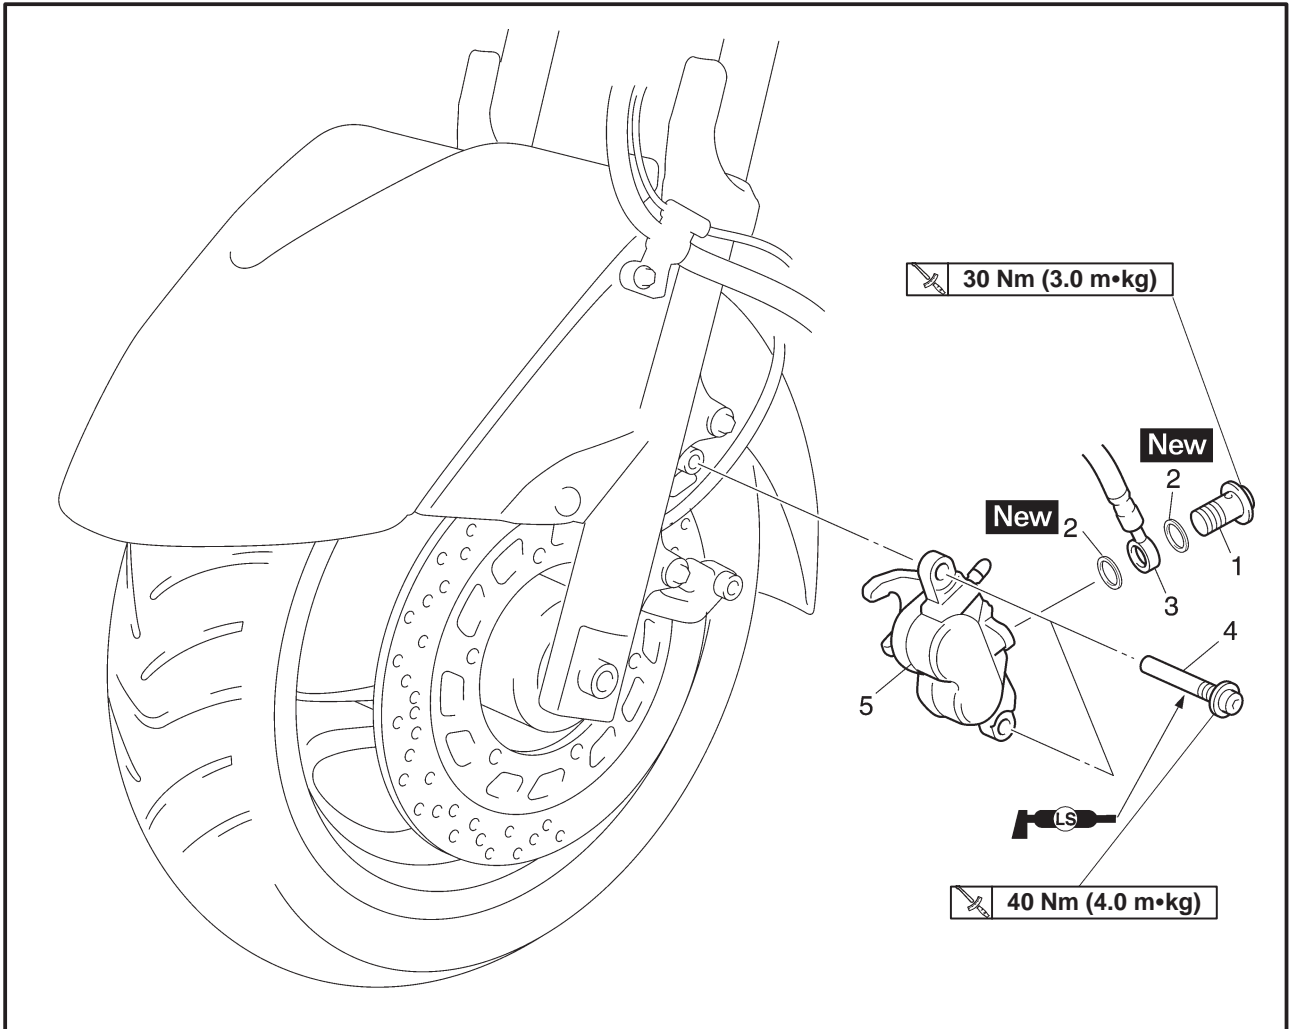


Order	Job/Part	Q'ty	Remarks
	Removing the front brake caliper		
	Brake fluid		Remove the parts in the order listed.
	Drain.		
1	Union bolt	1	
2	Copper washer	2	
3	Brake hose	1	
4	Brake caliper bolt	2	
5	Brake caliper	1	
			For installation, reverse the removal procedure.

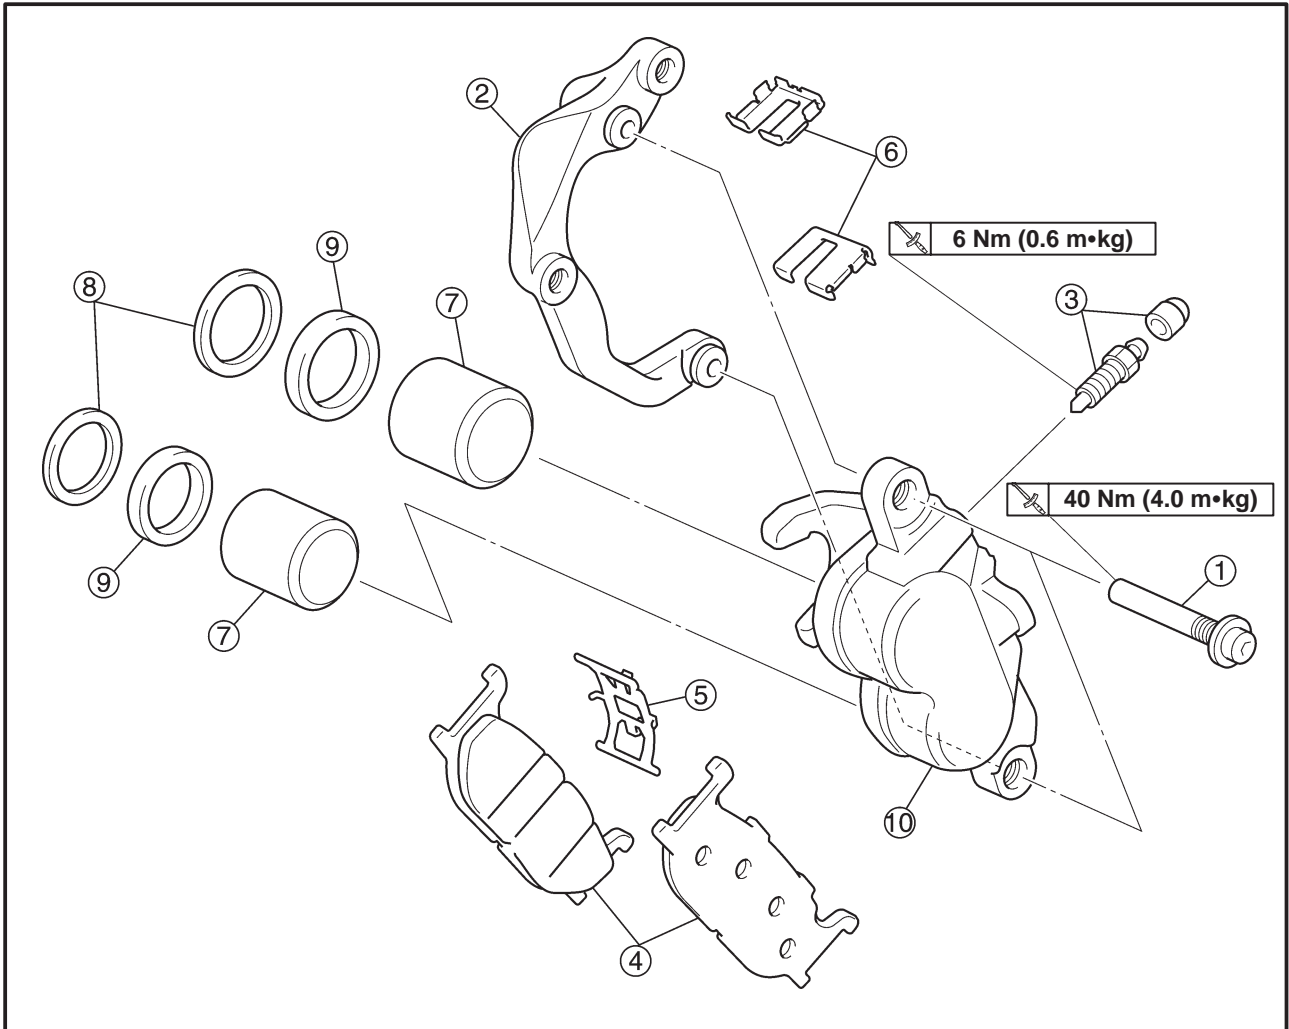


Order	Job/Part	Q'ty	Remarks
	Disassembling the front brake caliper		Disassemble the parts in the order listed.
①	Brake caliper bolt	2	
②	Brake caliper bracket	1	
③	Bleed screw	1	
④	Brake pad	2	
⑤	Brake pad spring	1	
⑥	Brake pad crip	2	
⑦	Brake caliper piston	2	
⑧	Dust seal	2	
⑨	Piston seal	2	
⑩	Brake caliper body	1	
			For assembly, reverse the disassembly procedure.





REAR BRAKE CALIPER

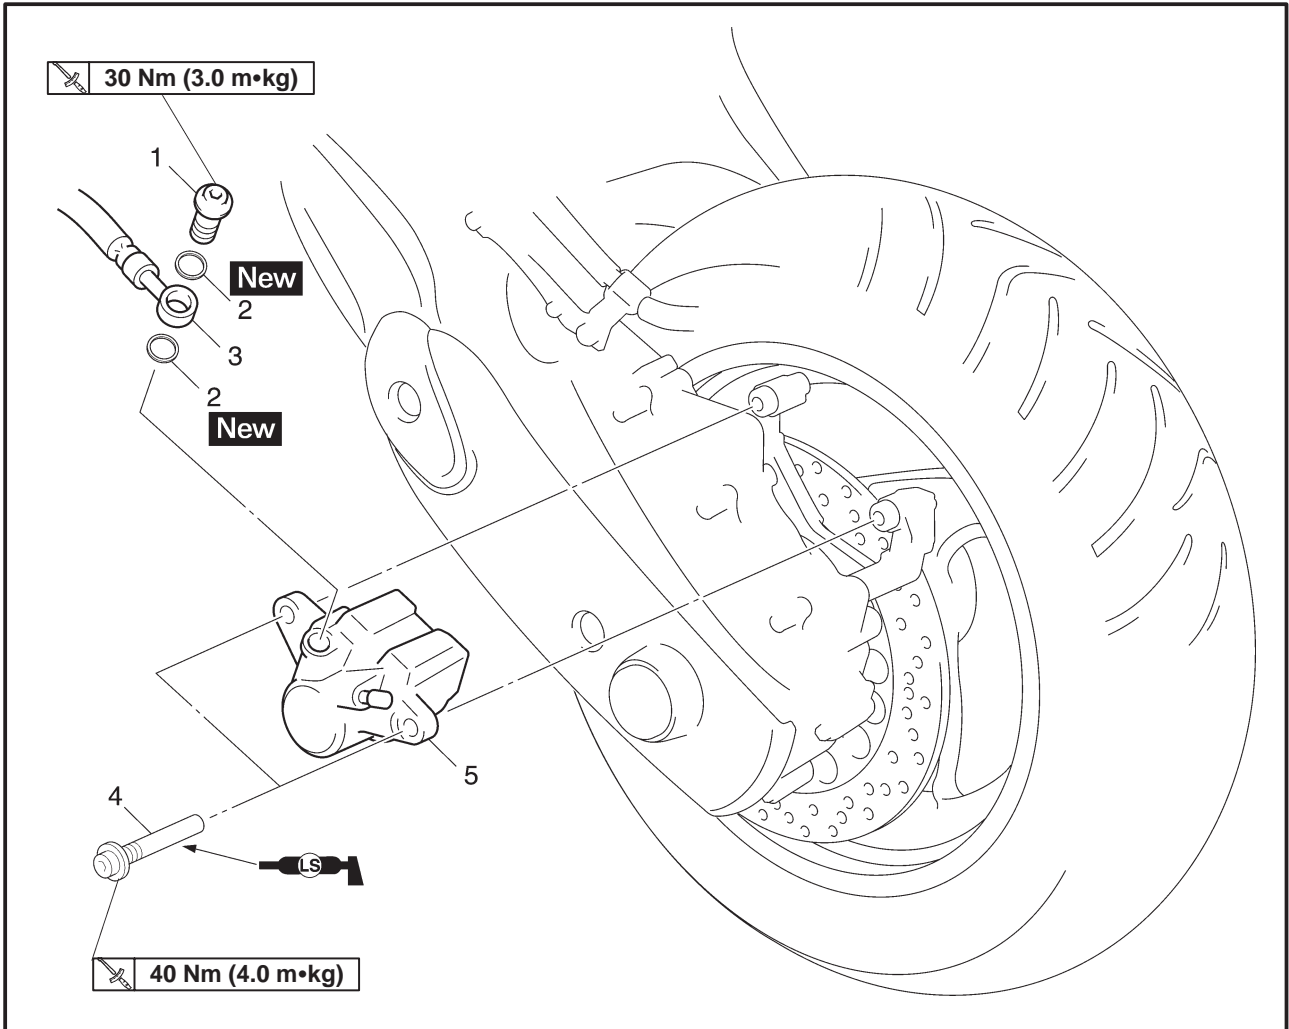

Order	Job/Part	Q'ty	Remarks
	Removing the rear brake caliper		Remove the parts in the order listed. Drain.
1	Brake fluid		
1	Union bolt	1	
2	Copper washer	2	
3	Brake hose	1	
4	Brake caliper bolt	2	
5	Brake caliper	1	
			For installation, reverse the removal procedure.

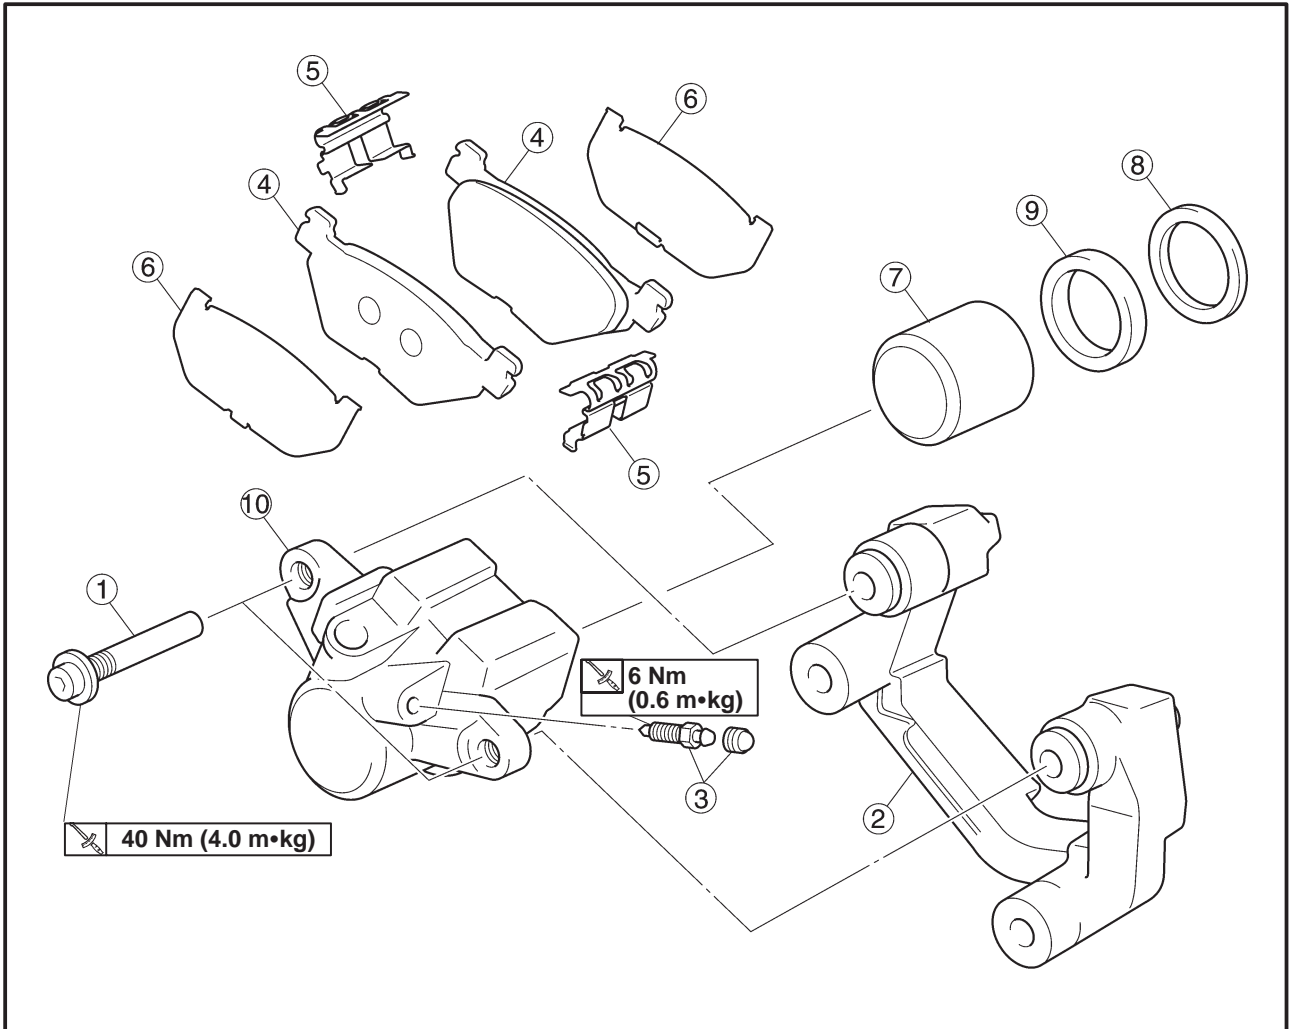

Order	Job/Part	Q'ty	Remarks
	Disassembling the rear brake caliper		Disassemble the parts in the order listed.
①	Brake caliper bolt	2	
②	Brake caliper bracket	1	
③	Bleed screw	1	
④	Brake pad	2	
⑤	Brake pad spring	2	
⑥	Brake pad shim	2	
⑦	Brake caliper piston	1	
⑧	Dust seal	1	
⑨	Piston seal	1	
⑩	Brake caliper body	1	
			For assembly, reverse the disassembly procedure.

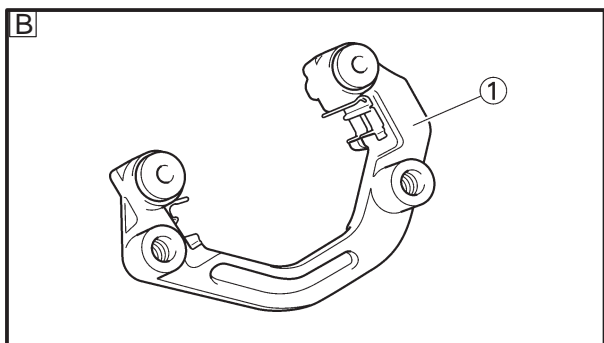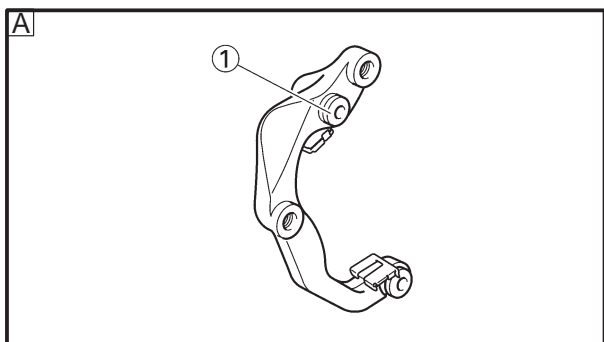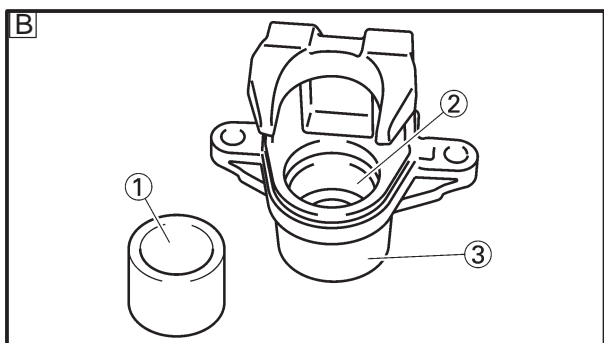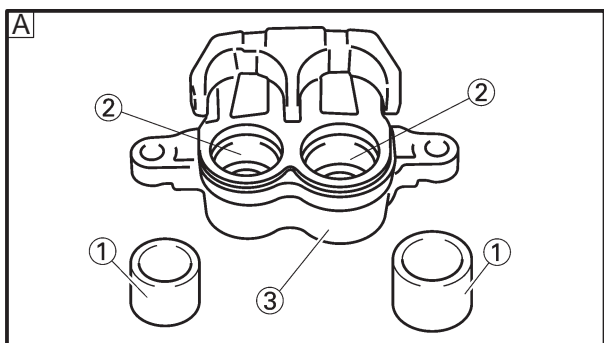

1. Check:
 - brake caliper pistons ①
Rust/scratches/wear → Replace the brake caliper.
 - brake caliper cylinders ②
Scratches/wear → Replace the brake caliper.
 - brake caliper body ③
Cracks/damage → Replace the brake caliper.
 - brake fluid delivery passages (brake caliper body)
Obstruction → Blow out with compressed air.

⚠ WARNING

Whenever a brake caliper is disassembled, replace the piston seals.

A Front

B Rear

2. Check:

- brake caliper bracket ①
Cracks/damage → Replace.

A Front

B Rear

EAS00635


ASSEMBLING AND INSTALLING THE FRONT BRAKE CALIPER

⚠ WARNING

- Before installation, all internal brake components should be cleaned and lubricated with clean or new brake fluid.
- Never use solvents on internal brake components as they will cause the piston seals to swell and distort.
- Whenever a brake caliper is disassembled, replace the brake caliper piston seals.




**Recommended brake fluid
DOT 4**

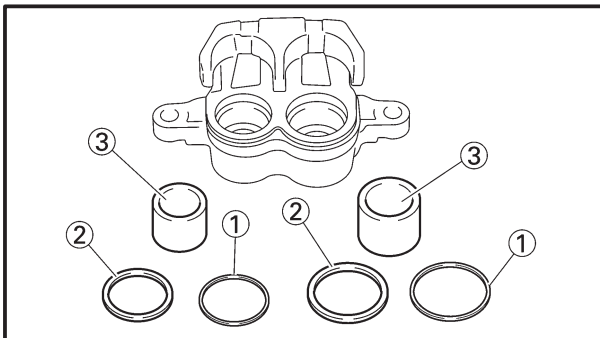

1. Install:

- bleed screw
- piston seals ① **New**
- dust seals ② **New**
- caliper pistons ③

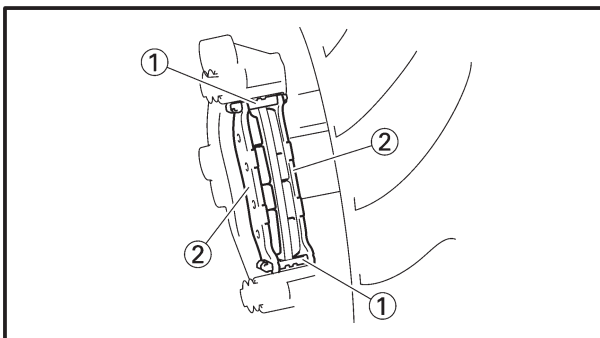

2. Install:


- brake pad spring ①
- brake pads ②

NOTE:

Install the brake pad with the attached brake pad spring.

3. Install:
- brake caliper
 - brake caliper bolt

40 Nm (4.0 m•kg)

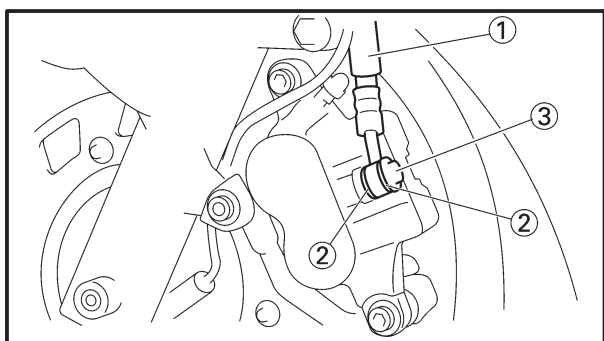

4. Install:
- brake hose ①
 - copper washers ② **New**
 - union bolt ③


30 Nm (3.0 m•kg)

⚠ WARNING

Proper brake hose routing is essential to insure safe scooter operation. Refer to “CABLE ROUTING”.

CAUTION:

When installing the brake hose onto the brake caliper ①, make sure that the brake pipe ① touches the projection ② on the brake caliper.

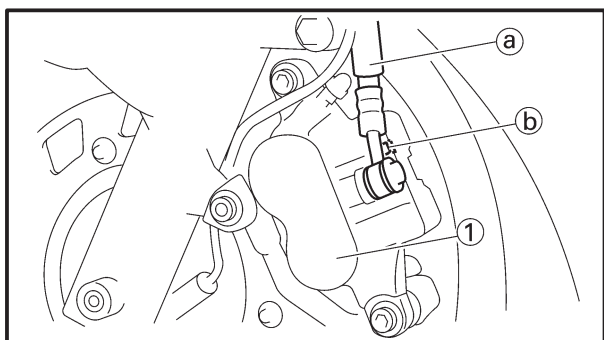

5. Fill:
- brake master cylinder reservoir (with the specified amount of the recommended brake fluid)

Recommended brake fluid


DOT 4

⚠ WARNING

- Use only the designated brake fluid. Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.
- Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.
- When refilling, be careful that water does not enter the reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.

CAUTION:

Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.

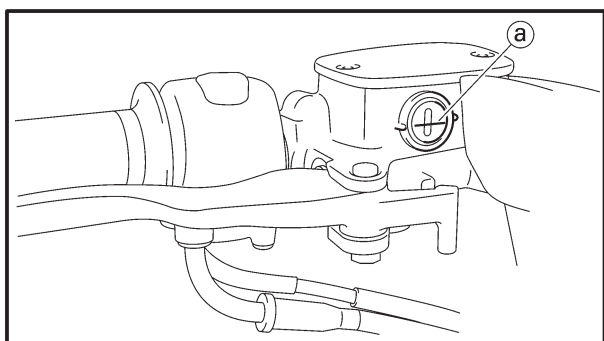

6. Bleed:
 - brake system
 - Refer to “BLEEDING THE HYDRAULIC BRAKE SYSTEM” in chapter 3.
7. Check:
 - brake fluid level
 - Below the minimum level mark (a) → Add the recommended brake fluid to the proper level. Refer to “CHECKING THE BRAKE FLUID LEVEL” in chapter 3.
8. Check:
 - brake lever operation
 - Soft or spongy feeling → Bleed the brake system. Refer to “BLEEDING THE HYDRAULIC BRAKE SYSTEM” in chapter 3.


EAS00643

ASSEMBLING AND INSTALLING THE REAR BRAKE CALIPER


⚠ WARNING

- Before installation, all internal brake components should be cleaned and lubricated with clean or new brake fluid.
- Never use solvents on internal brake components as they will cause the piston seals to swell and distort.
- Whenever a brake caliper is disassembled, replace the brake caliper piston seals.

	Recommended brake fluid DOT 4
---	--

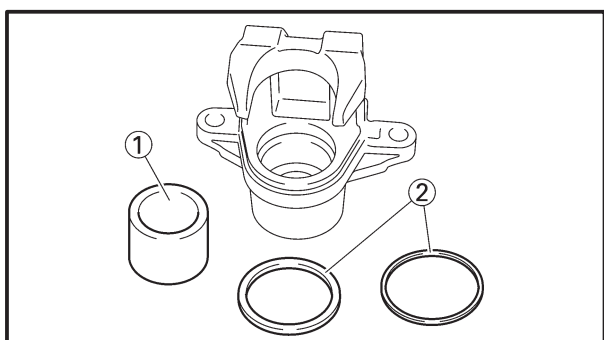


1. Install:
 - bleed screw
 - piston seals ① **New**
 - dust seals ② **New**
 - caliper piston

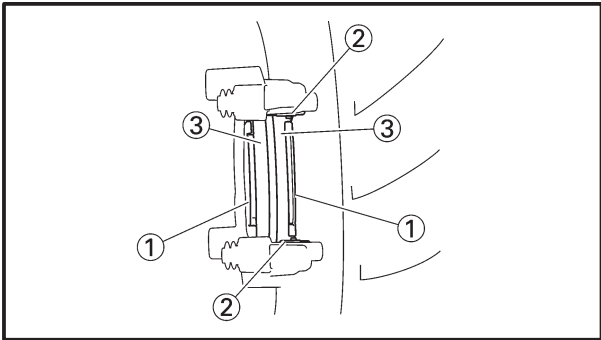


2. Install:
- brake pad shim ①
 - brake pad spring ②
 - brake pad ③


NOTE: _____
 Install the brake pad with the attached brake pad shim.

3. Install:
- brake caliper
 - brake caliper bolt

 **40 Nm (4.0 m•kg)**

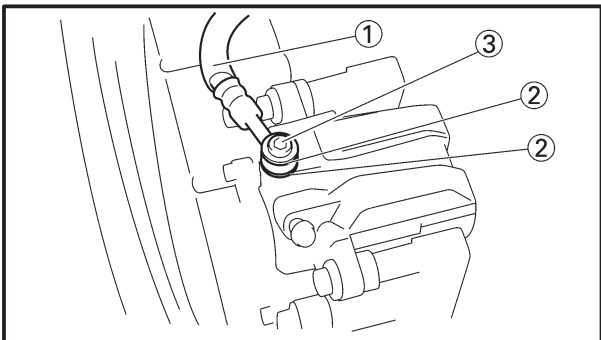


4. Install:
- brake hose ①
 - copper washers ② **New**
 - union bolt ③

 **30 Nm (3.0 m•kg)**

⚠ WARNING _____

Proper brake hose routing is essential to insure safe scooter operation. Refer to "CABLE ROUTING".

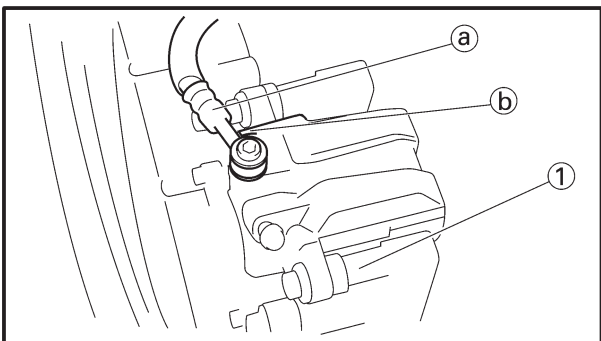

CAUTION: _____

When installing the brake hose onto the brake caliper ①, make sure that the brake pipe ① touches the projection ② on the brake caliper.



5. Fill:

- brake fluid reservoir
(with the specified amount of the recommended brake fluid)




Recommended brake fluid
DOT 4

⚠ WARNING

- Use only the designated brake fluid. Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.
- Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.
- When refilling, be careful that water does not enter the reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.

CAUTION:

Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.

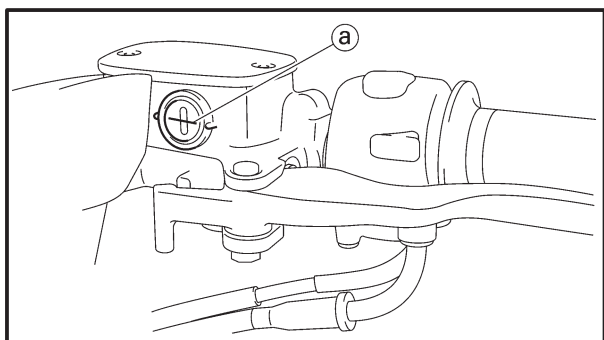

6. Bleed:

- brake system
Refer to “BLEEDING THE HYDRAULIC BRAKE SYSTEM” in chapter 3.


7. Check:

- brake fluid level
Below the minimum level mark (a) → Add the recommended brake fluid to the proper level. Refer to “CHECKING THE BRAKE FLUID LEVEL” in chapter 3.


8. Check:

- brake pedal operation
Soft or spongy feeling → Bleed the brake system.
Refer to “BLEEDING THE HYDRAULIC BRAKE SYSTEM” in chapter 3.


FRONT FORK

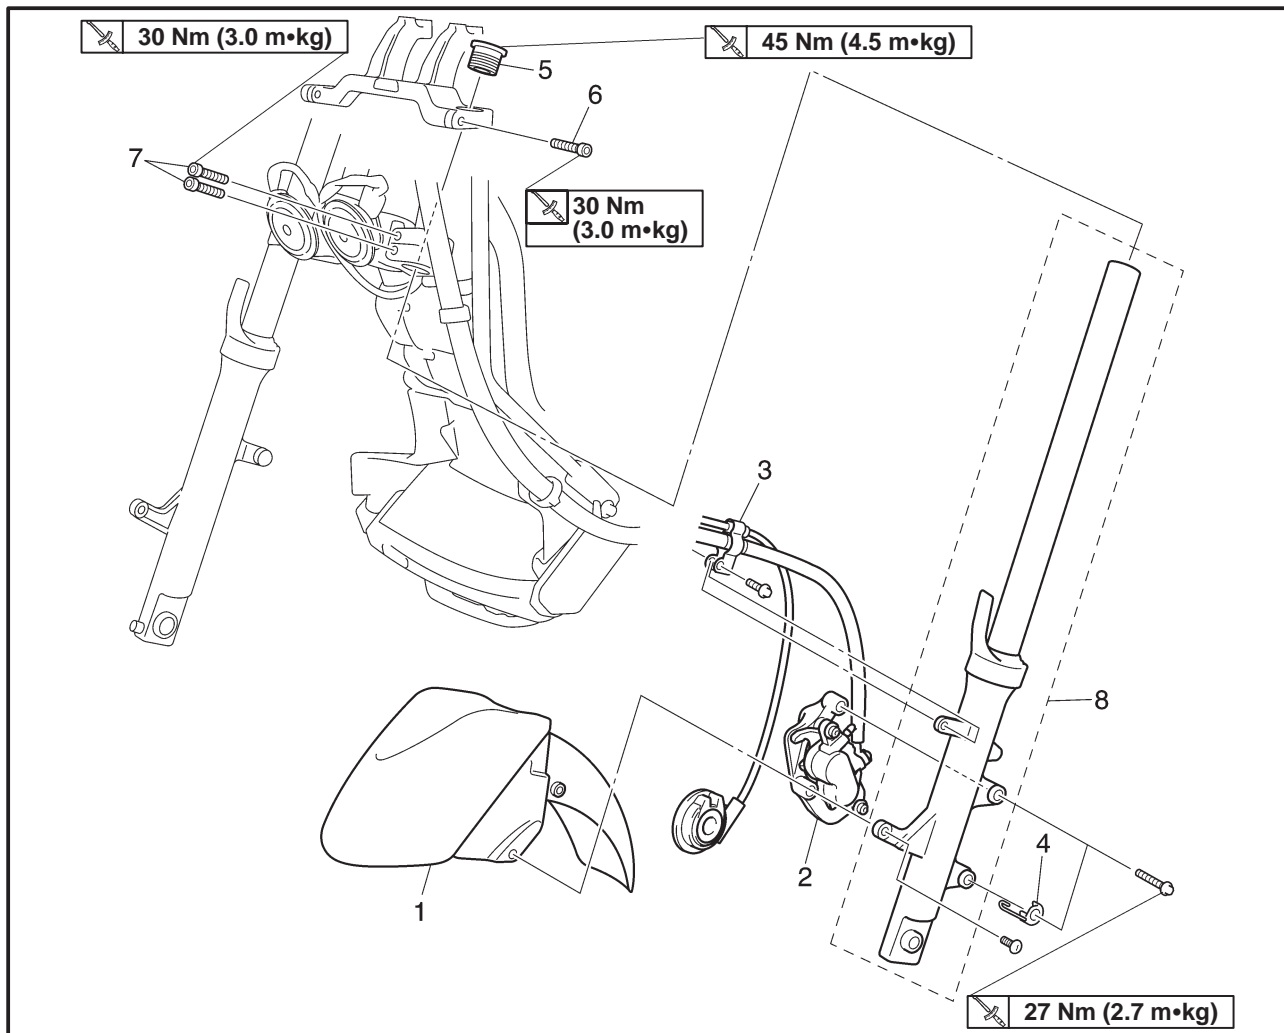


Order	Job/Part	Q'ty	Remarks
	Removing the front fork		Remove the parts in the order listed. The following procedure applies to both of the front fork legs.
	Front cowling		Refer to "COVER AND PANEL" in chapter 3.
	Handle cover (upper)		Refer to "HANDLEBAR".
	Handle cover (under)		
	Meter		
	Leg shield		
	Front wheel		Refer to "FRONT WHEEL AND BRAKE DISC".
1	Front fender	1	
2	Front brake caliper	1	

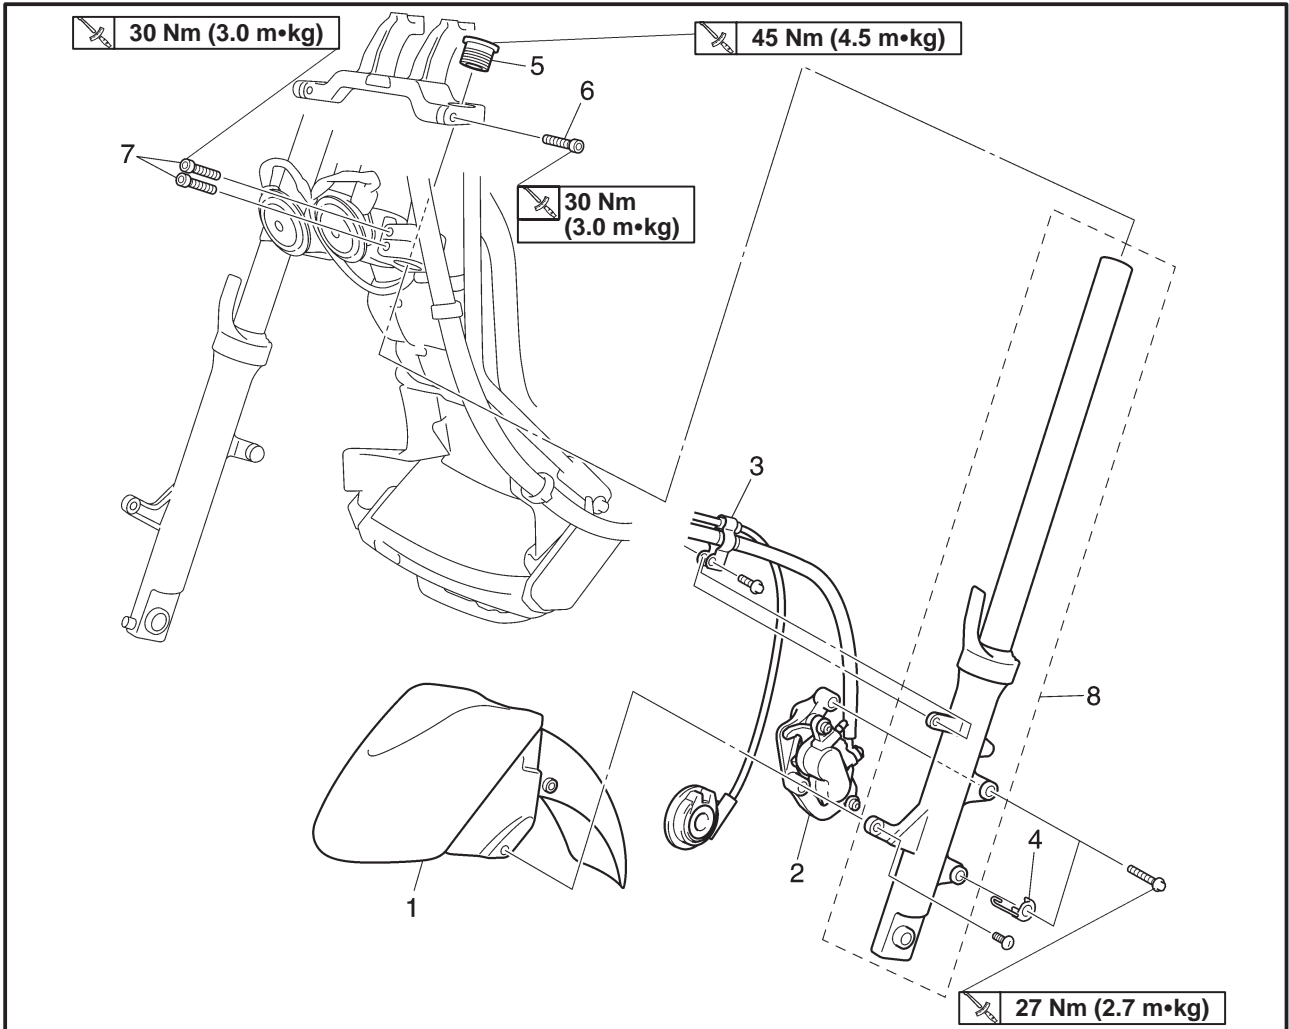

Order	Job/Part	Q'ty	Remarks
3	Brake hose holder	1	
4	Speed sensor holder	1	
5	Cap bolt	1	Loosen.
6	Upper bracket pinch bolt	2	Loosen.
7	Lower bracket pinch bolt	2	Loosen.
8	Front fork leg	1	
			For installation, reverse the removal procedure.

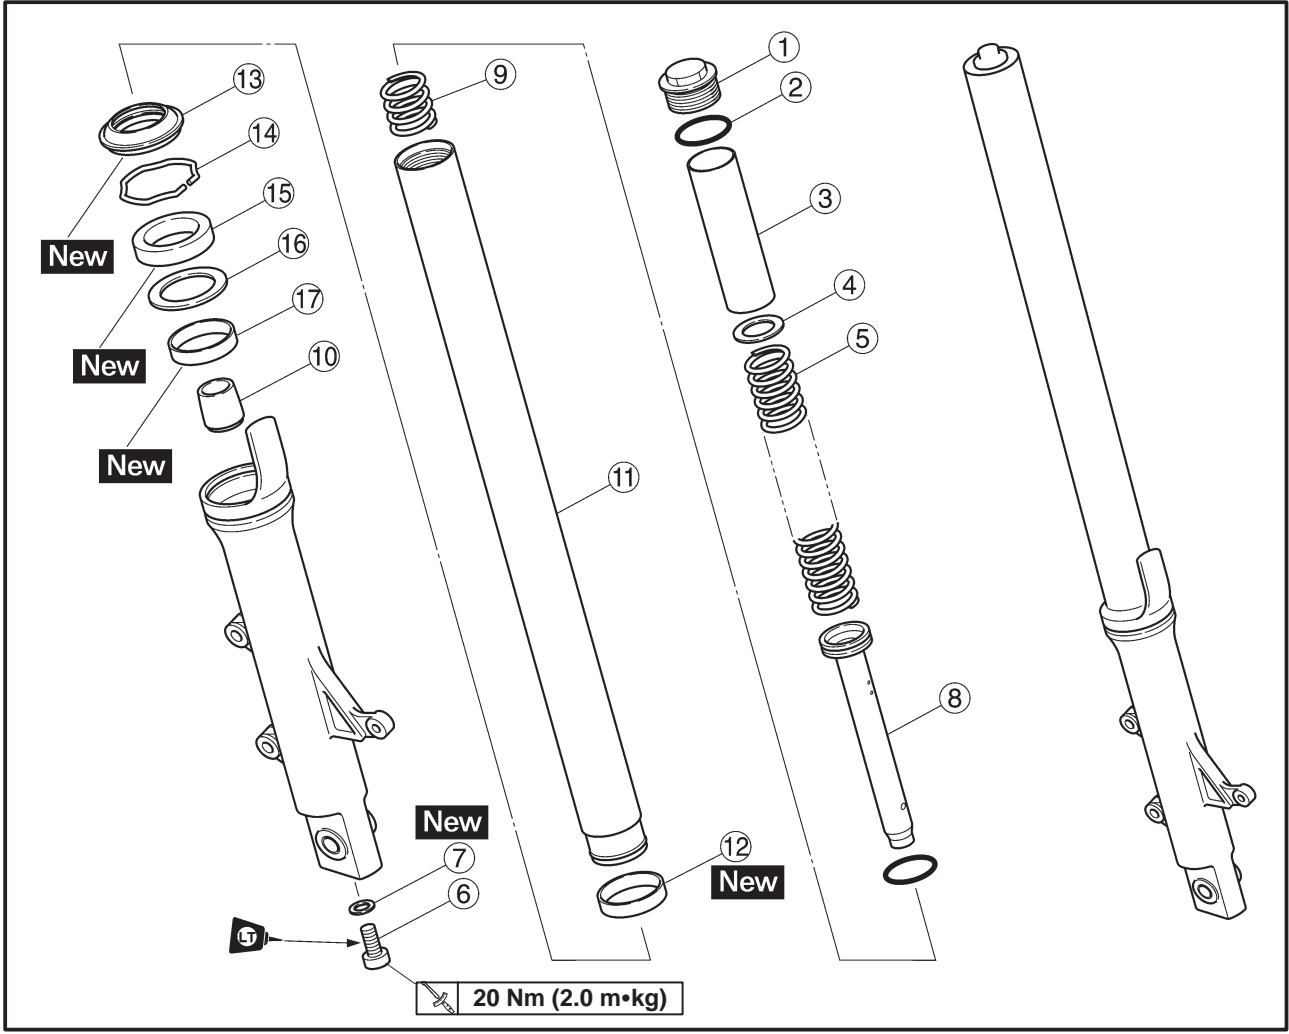

Order	Job/Part	Q'ty	Remarks
	Disassembling the front fork leg		Disassemble the parts in the order listed. The following procedure applies to both of the front fork legs.
①	Cap bolt	1	
②	O-ring	1	
③	Spacer	1	
④	Fork spring seat	1	
⑤	Fork spring	1	
⑥	Damper rod assembly bolt	1	
⑦	Copper washer	1	
⑧	Damper rod assembly	1	
⑨	Rebound spring	1	
⑩	Oil flow stopper	1	
⑪	Inner tube	1	

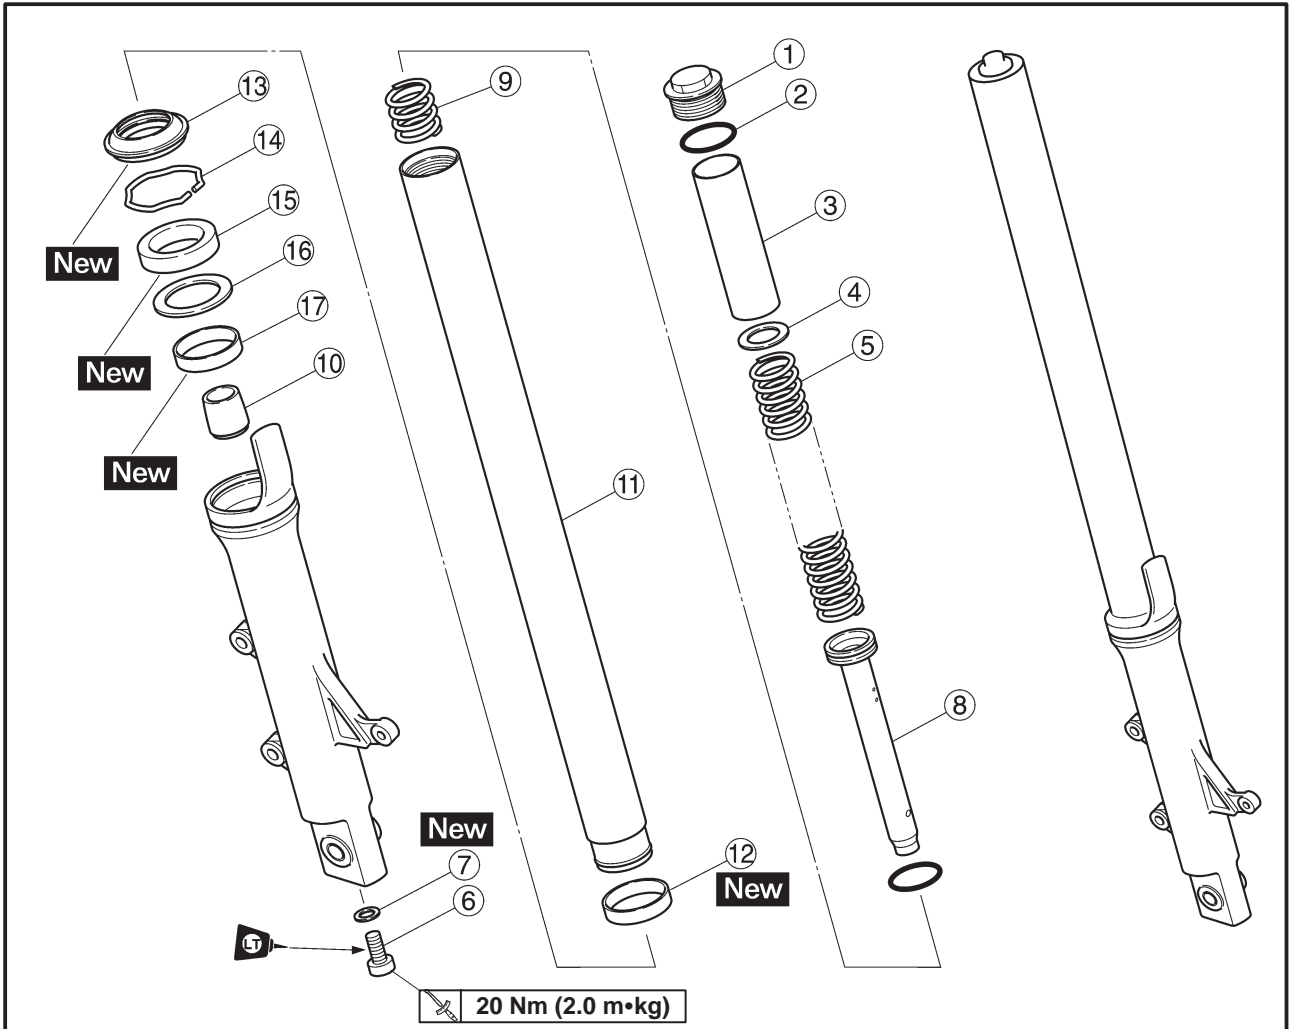

Order	Job/Part	Q'ty	Remarks
⑫	Inner tube bushing	1	For assembly, reverse the disassembly procedure.
⑬	Dust seal	1	
⑭	Oil seal clip	1	
⑮	Oil seal	1	
⑯	Washer	1	
⑰	Outer tube bushing	1	



EAS00651

REMOVING THE FRONT FORK LEGS

The following procedure applies to both of the front fork legs.

1. Stand the scooter on a level surface.

⚠ WARNING

Securely support the scooter so that there is no danger of it falling over.

NOTE:

Place the scooter on a suitable stand so that the front wheel is elevated.

2. Remove:



- front cowling
- handle cover
- meter
- legshield
- front wheel
- front fender

3. Loosen:

- cap bolt ①

4. Loosen:

- upper bracket pinch bolts ②

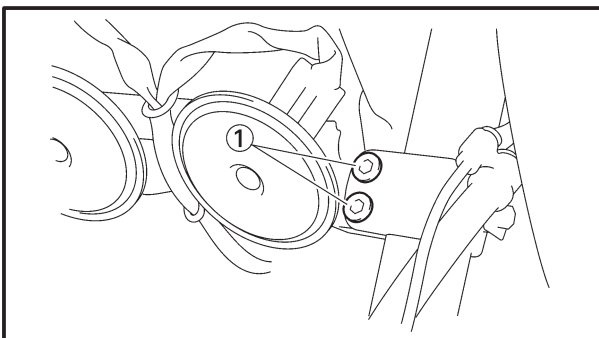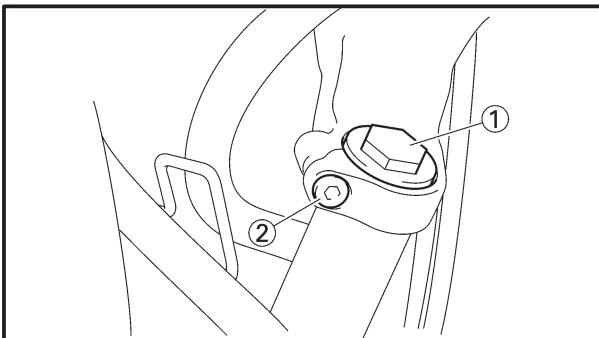

5. Loosen:


- lower bracket pinch bolts. ①

⚠ WARNING

Before loosening the upper and lower bracket pinch bolts, support the front fork leg.

6. Remove:

- front fork leg

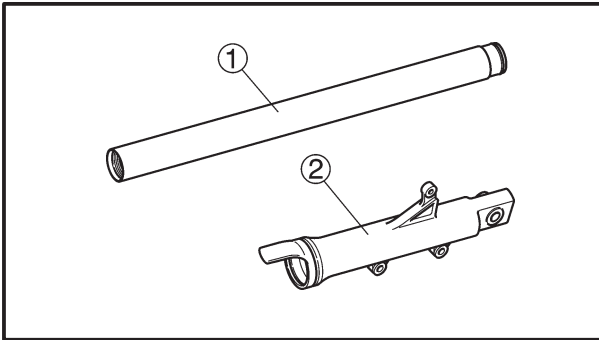

EAS00656

CHECKING THE FRONT FORK LEGS


The following procedure applies to both of the front fork legs.

1. Check:

- inner tube ①
 - outer tube ②
- Bends/damage/scratches → Replace.

⚠ WARNING

Do not attempt to straighten a bent inner tube as this may dangerously weaken it.

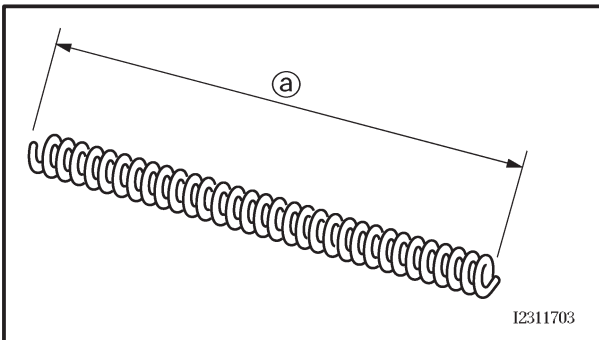


2. Measure:

- spring free length ①
- Over the specified limit → Replace.




**Spring free length limit
420 mm**

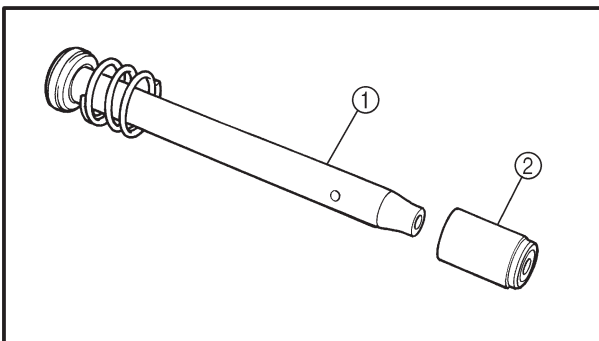

3. Check:

- damper rod ①
- Damage/wear → Replace.
Obstruction → Blow out all of the oil passages with compressed air.
- oil flow stopper ②
- Damage → Replace.

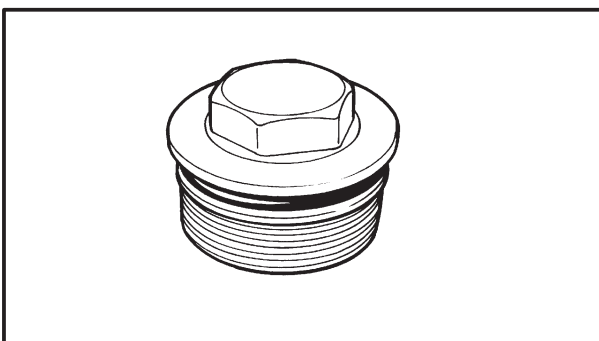

4. Check:

- cap bolt O-ring
- Damage/wear → Replace.



EAS00659

ASSEMBLING THE FRONT FORK LEGS


The following procedure applies to both of the front fork legs.

⚠ WARNING

- Make sure that the oil levels in both front fork legs are equal.
- Uneven oil levels can result in poor handling and a loss of stability.

NOTE:


- When assembling the front fork leg, be sure to replace the following parts:
 - inner tube bushing
 - outer tube bushing
 - oil seal
 - dust seal
- Before assembling the front fork leg, make sure that all of the components are clean.

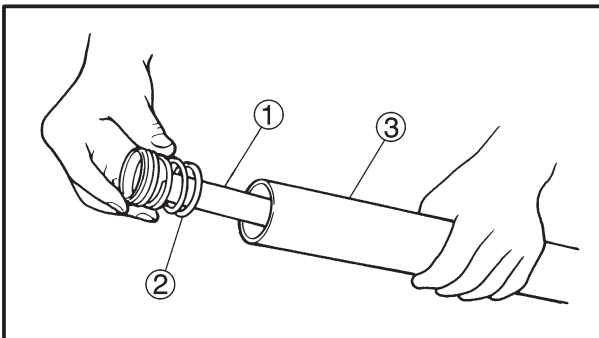

1. Install:
 - damper rod ①
 - rebound spring ②

CAUTION:

Allow the damper rod to slide slowly down the inner tube ③ until it protrudes from the bottom of the inner tube. Be careful not to damage the inner tube.

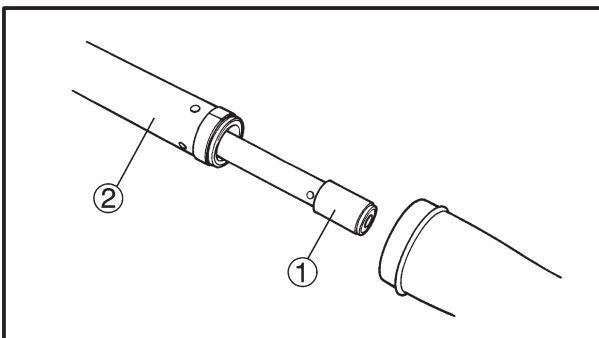

2. Install:
 - oil flow stopper ①
3. Lubricate:
 - inner tube's outer surface ②




Recommended lubricant
Fork oil 5 W or equivalent

4. Install:
 - outer tube (onto the inner tube)
 - copper washer **New**
 - damper rod bolt

FRONT FORK

CHAS

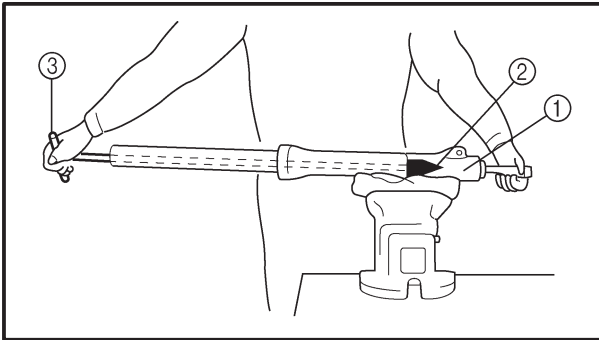

5. Tighten:

- damper rod bolt ①

20 Nm (2.0 m•kg)

NOTE:

- Apply the locking agent (LOCTITE® 204) to the threads of the damper rod bolt.
- While holding the damper rod with the damper rod holder ② and T-handle ③, tighten the damper rod bolt.




Damper rod holder

90890-01294

T-handle

90890-01326

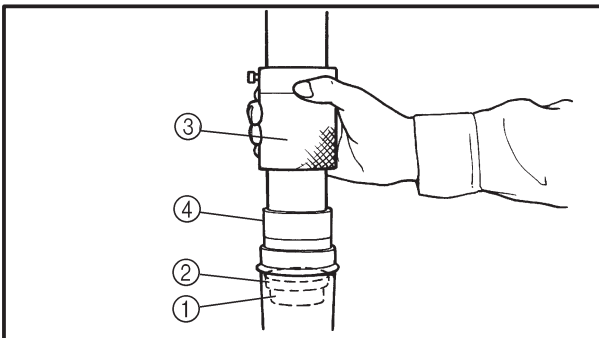

6. Install:

- outer tube bushing ① **New**
- washer ②
(with the fork seal driver weight ③ and adapter ④)




Fork seal driver weight

90890-01367

Adapter

90890-01372

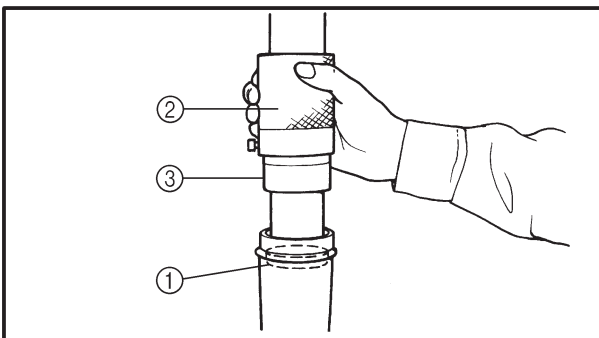


7. Install:

- Oil seal ① **New**
(with the fork seal driver weight ② and adapter ③)

CAUTION:

Make sure that the numbered side of the oil seal faces up.

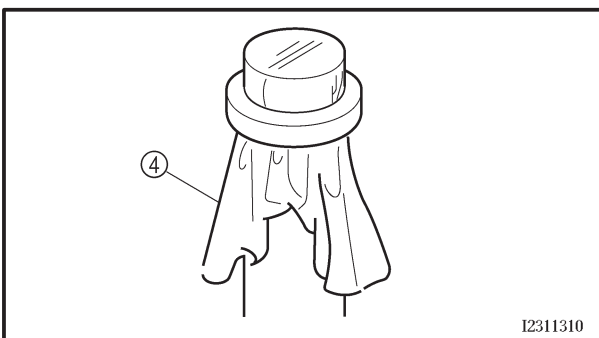


NOTE:

- Before installing the oil seal, apply lithium soap base grease onto its lips.
- Apply fork oil onto the outer surface of the inner tube.
- Before installing the oil seal, cover the top of the front fork leg with a plastic bag ④ to protect the oil seal during installation.

I2311310

FRONT FORK


CHAS

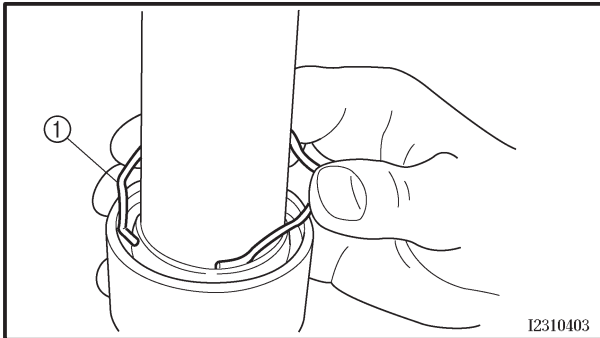

8. Install:
- oil seal clip ①

NOTE: _____

Adjust the oil seal clip so that it fits into the outer ① tube's groove.

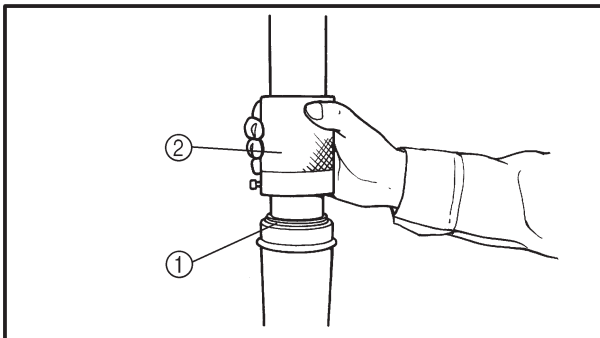


9. Install:
- dust seal ① **New**
(with the fork seal driver weight)



Fork seal driver weight ②
90890-01367

10. Fill:
- front fork leg
(with the specified amount of the recommended fork oil)

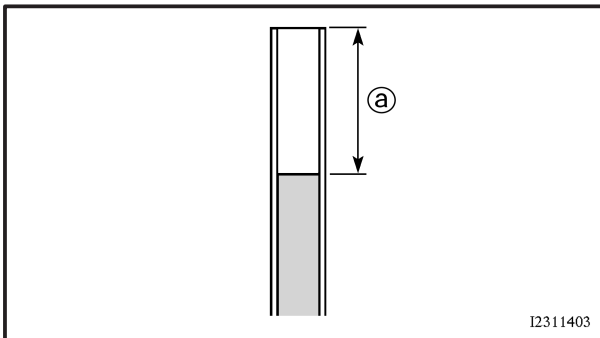

Quantity (each front fork leg)
402 cm³

Front fork leg oil level ①
(from the top of the inner tube,
with the inner tube fully com-
pressed and without the fork
spring)

135 mm

Recommended oil

Yamaha fork shock oil 5 WT
or equivalent

NOTE: _____

- While filling the front fork leg, keep it upright.
 - After filling, slowly pump the front fork leg up and down to distribute the fork oil.
- _____

11. Install:
- fork spring
 - spacer
 - fork spring seat
 - O-ring **New**

NOTE: _____

- Install the spring with the smaller pitch facing down.
 - Before installing the cap bolt, lubricate its O-ring with grease.
 - Temporarily tighten the cap bolt.
- _____

EAS00663



INSTALLING THE FRONT FORK LEGS

The following procedure applies to both of the front fork legs.




1. Install:
- front fork leg

NOTE:

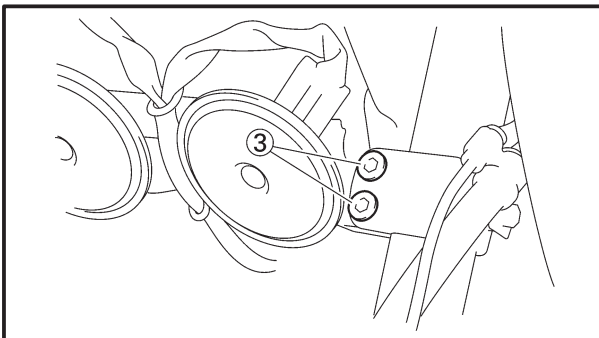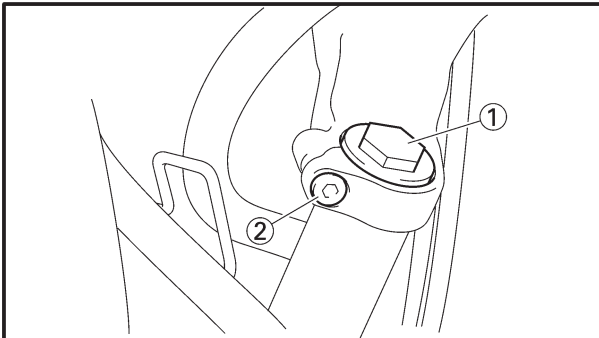Pull up the inner tube until it stops.



2. Tighten:


- cap bolt ①  **45 Nm (4.5 m•kg)**
- lower bracket pinch bolt ③  **30 Nm (3.0 m•kg)**
- upper bracket pinch bolt ②  **30 Nm (3.0 m•kg)**

3. Install:


- front fender
- legshield
- meter
- handle cover
- front cowling
- front wheel

Refer to "FRONT WHEEL AND BRAKE DISC".

HANDLEBAR

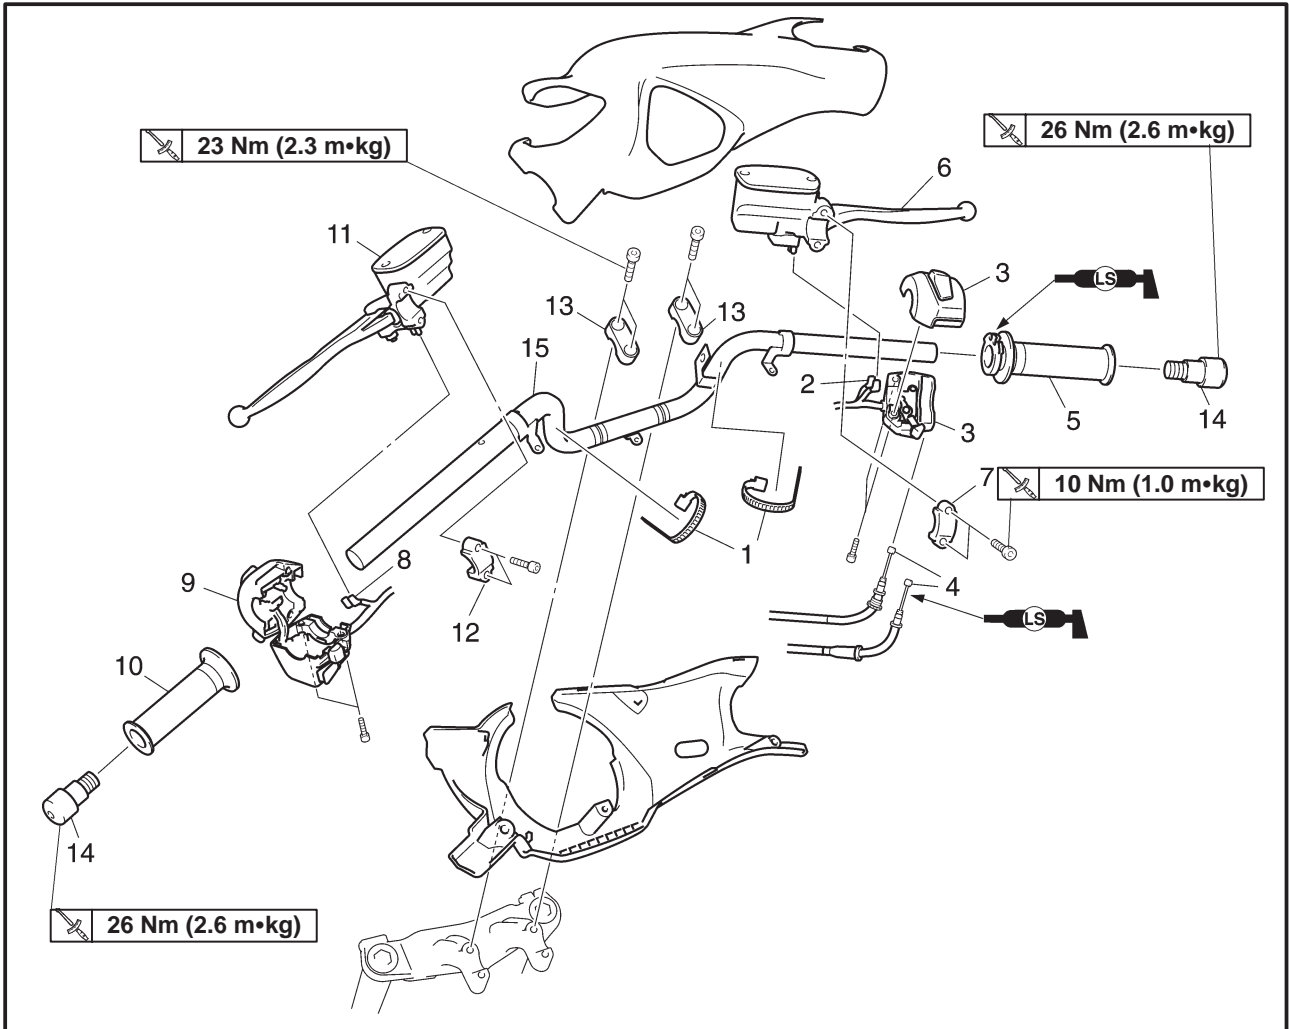

Order	Job/Part	Q'ty	Remarks
	Removing the handlebar		Remove the parts in the order listed.
	Handle cover (upper)		
	Handle cover (lower)		
1	Band	2	
2	Front brake light switch connector	1	Disconnect.
3	Right handlebar switch	1	
4	Throttle cable	2	Disconnect.
5	Throttle grip	1	
6	Front brake master cylinder	1	
7	Front brake master cylinder holder	1	
8	Rear brake light switch connector	1	
9	Left handlebar switch	1	
10	Left handlebar grip	1	
11	Rear brake master cylinder	1	
12	Rear brake master cylinder holder	1	

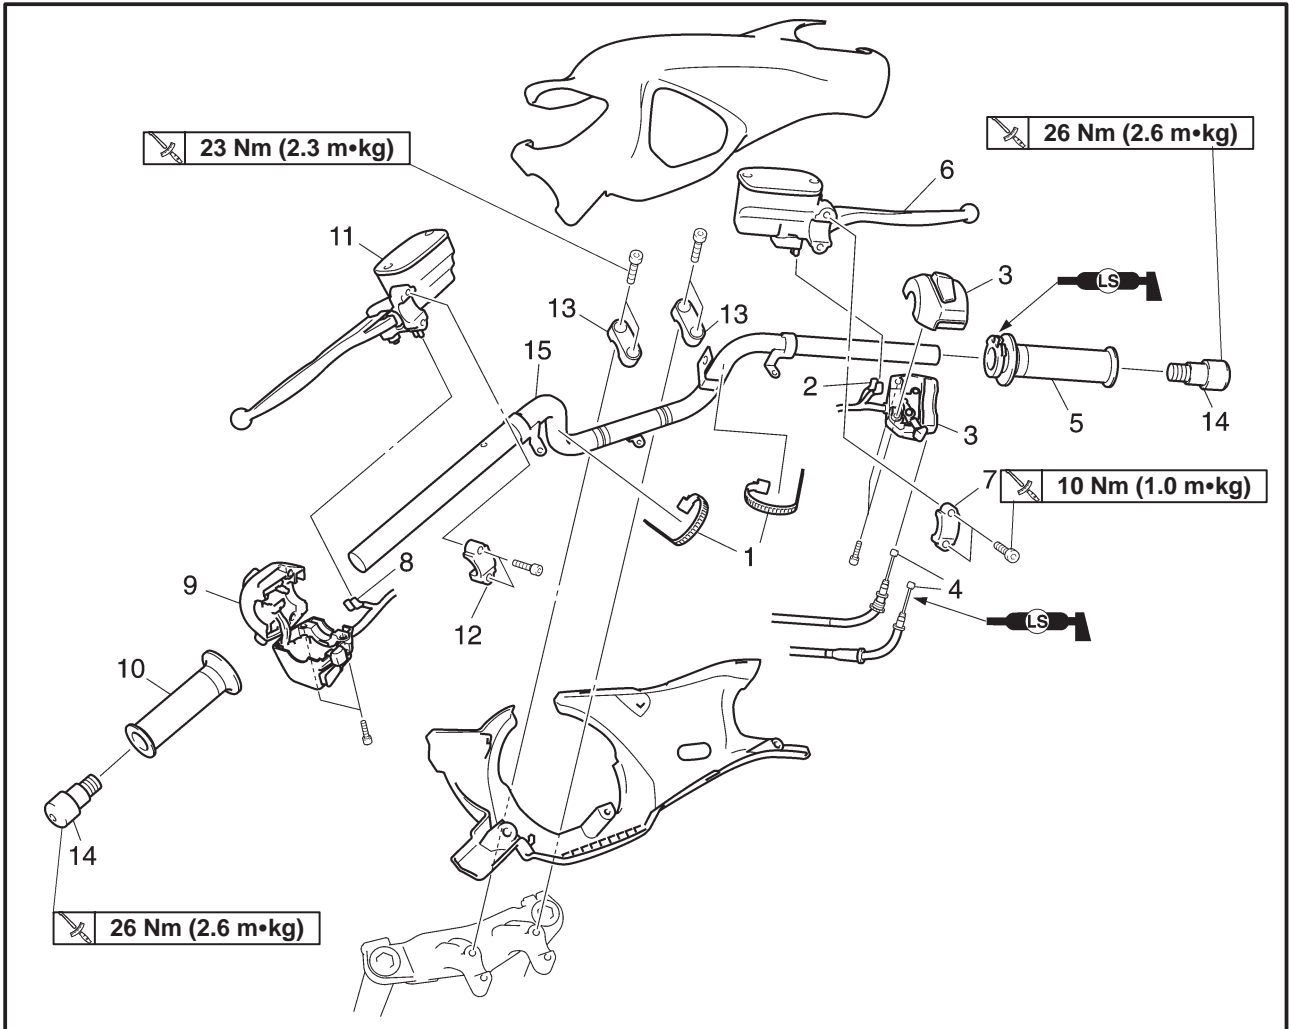

Order	Job/Part	Q'ty	Remarks
13	Handlebar upper holder	2	For installation, reverse the removal procedure.
14	Grip end	2	
15	Handlebar	1	




EAS00666

REMOVING THE HANDLEBAR

1. Stand the scooter on a level surface.


⚠ WARNING

Securely support the scooter so that there is no danger of it falling over.

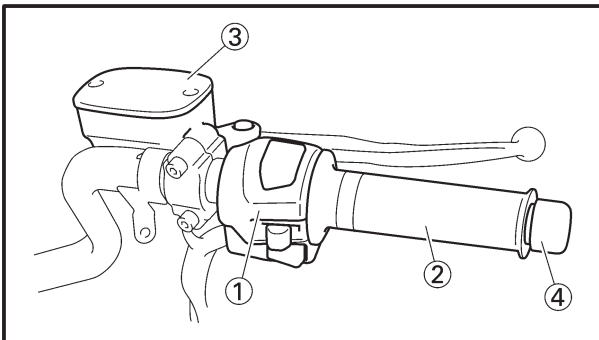

2. Remove:

- right handlebar switch ①
- throttle cable
- throttle grip ②
- front brake master cylinder ③
- grip end ④

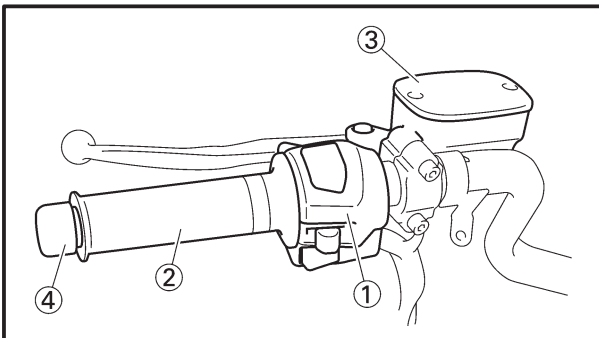


3. Remove:

- left handlebar switch ①
- left handlebar grip ②
- rear brake master cylinder ③
- grip end ④

NOTE:

Blow compressed air between the handlebar and the handlebar grip, and gradually push the grip off the handlebar.

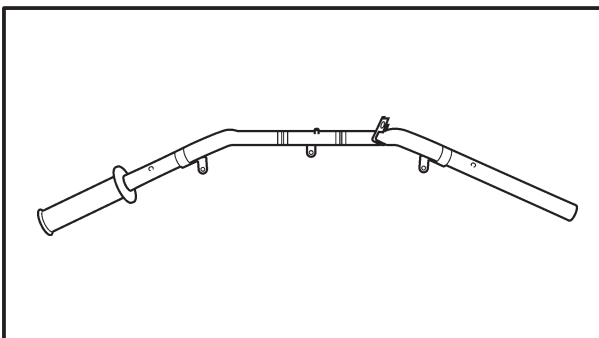**CHECKING THE HANDLEBAR**

1. Check:

- handlebar
- Bends/cracks/damage → Replace.

⚠ WARNING

Do not attempt to straighten a bent handlebar as this may dangerously weaken it.



EAS00671

INSTALLING THE HANDLEBAR

1. Stand the scooter on a level surface.

⚠ WARNING

Securely support the scooter so that there is no danger of it falling over.

2. Install:

- handlebar ①
- handlebar upper holders ②



23 Nm (2.3 m•kg)

⚠ WARNING

- First, tighten the bolts on the front side of the handlebar holder, then on the rear side.
- Turn the handlebar all the way to the left and right. If there is any contact with the fuel tank, adjust the handlebar position.

NOTE:

- The upper handlebar holders should be installed with the arrows ① facing forward **A**.
- Align the match marks ② on the handlebar with the upper surface of the lower handlebar holders.

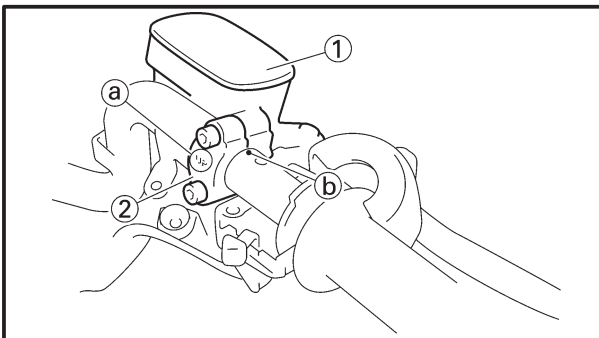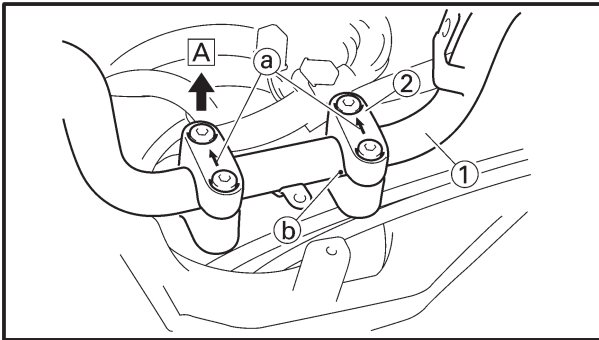

3. Install:

- front brake master cylinder ①
- front brake master cylinder holder ②

10 Nm (1.0 m•kg)

- holder bolt

NOTE:


- Install the front brake master cylinder holder with the "UP" ① mark facing up.

- First, tighten the upper bolt, then the lower bolt.


4. Install:
 - throttle cable
 - throttle grip
 - grip end
5. Install:
 - right handlebar switch ①

NOTE: _____


Align the projection (a) on the right handlebar switch with the hole (b) in the handlebar.

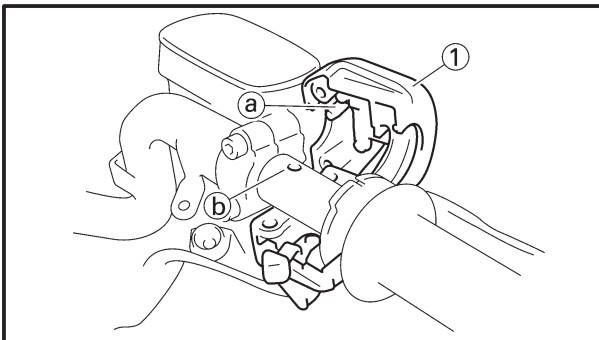

6. Connect:
 - front brake light switch

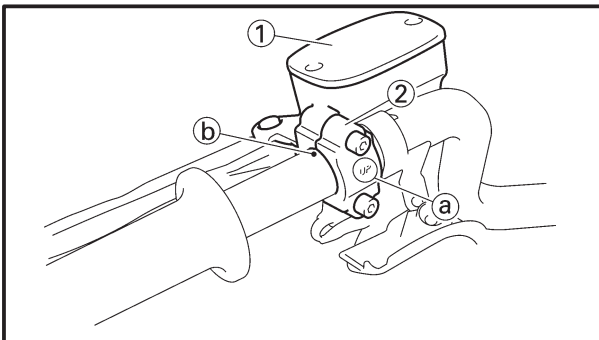


7. Install:
 - rear brake master cylinder ①
 - rear brake master cylinder holder ②

 **10 Nm (1.0 m•kg)**

NOTE: _____

- Install the rear brake master cylinder holder with the "UP" mark facing up (a).
- Align the end of the rear brake master cylinder holder with the punch mark (b) in the handlebar.
- First, tighten the upper bolt, then the lower bolt.

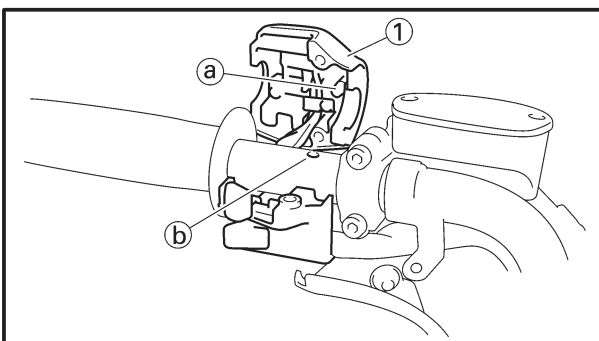


8. Install:
 - left handlebar switch ①


NOTE: _____

Align the projection (a) on the right handlebar switch with the hole (b) in the handlebar.

**STEERING HEAD
LOWER BRACKET**

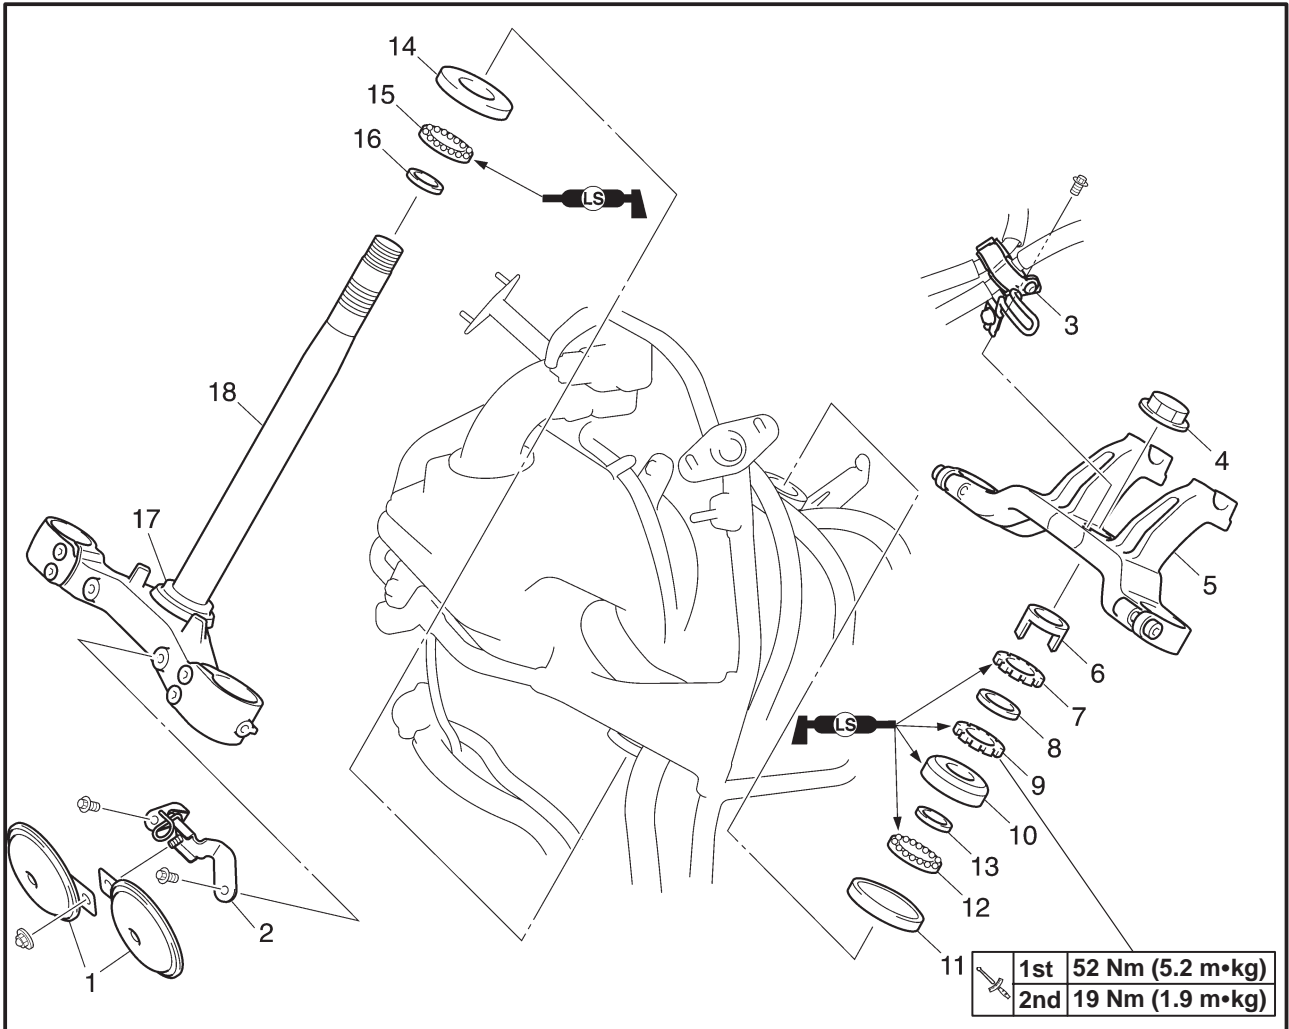

Order	Job/Part	Q'ty	Remarks
	Removing the lower bracket		
	Front cowling		Remove the parts in the order listed. Refer to "COVER AND PANEL" in chapter 3.
	Front wheel		Refer to "FRONT WHEEL AND BRAKE DISC".
	Front fork legs		Refer to "FRONT FORK".
	HANDLEBAR		Refer to "HANDLEBAR".
1	Horn	2	
2	Horn bracket	1	
3	Brake hose holder	1	
4	Steering stem nut	1	
5	Upper bracket	1	
6	Lock washer	1	
7	Upper ring nut	1	
8	Rubber washer	1	

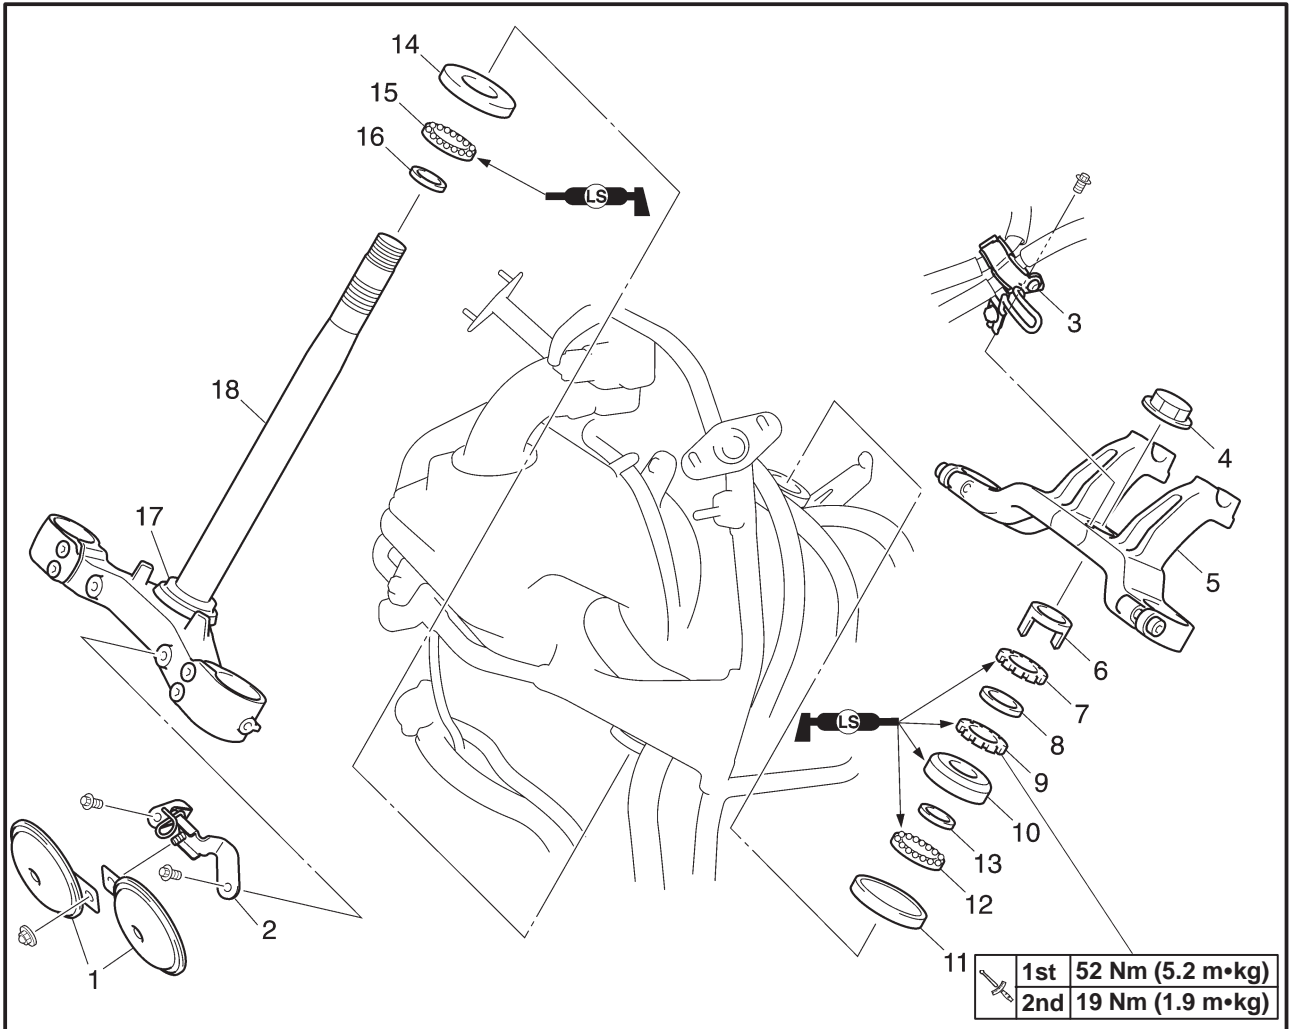

Order	Job/Part	Q'ty	Remarks
9	Lower ring nut	1	For installation, reverse the removal procedure.
10	Bearing cover	1	
11	Bearing inner race	1	
12	Upper bearing	1	
13	Bearing outer race	1	
14	Bearing inner race	2	
15	Lower bearing	1	
16	Bearing outer race	1	
17	Oil seal	1	
18	Lower bracket	1	


EAS00678

REMOVING THE LOWER BRACKET

1. Stand the scooter on a level surface.

⚠ WARNING

Securely support the scooter so that there is no danger of it falling over.

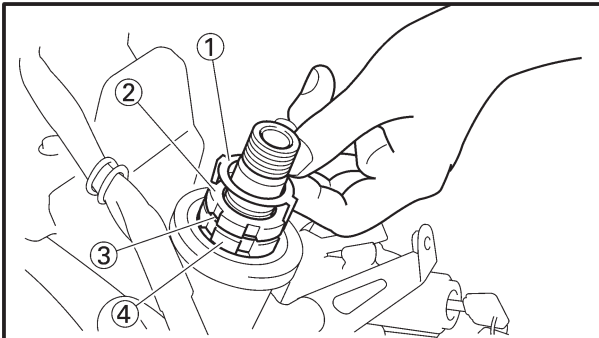

2. Remove:
• upper bracket

3. Remove:
• lock washer ①
• upper ring nut ②
• rubber washer ③
• lower ring nut ④
(with the special tool)



Ring nut wrench
90890-01403

⚠ WARNING

Securely support the lower bracket so that there is no danger of it falling.


EAS00681

CHECKING THE STEERING HEAD

1. Wash:
• bearings
• bearing races




Recommended cleaning solvent
Kerosine

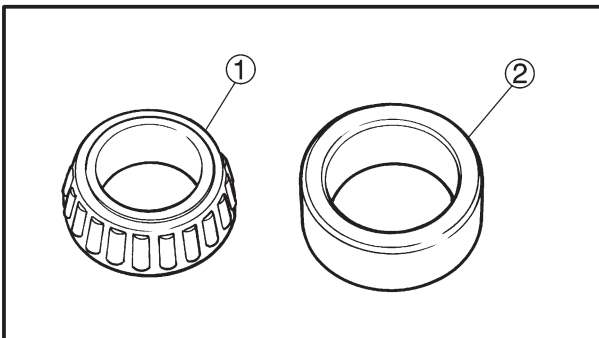


2. Check:
• bearings ①
• bearing races ②
Damage/pitting → Replace.


4. Install:
- upper bearing
 - bearing cover

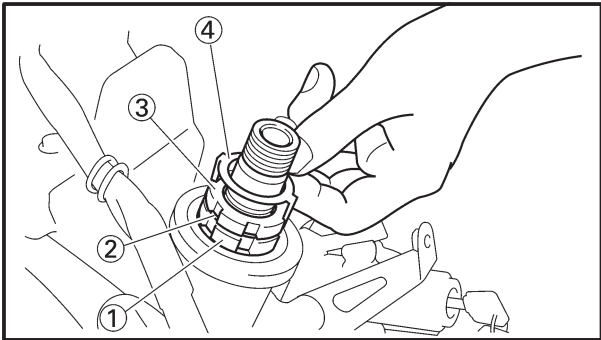


5. Install:
- lower ring nut ①
 - rubber washer ②
 - upper ring nut ③
 - lock washer ④
- Refer to “CHECKING AND ADJUSTING THE STEERING HEAD” in chapter 3.

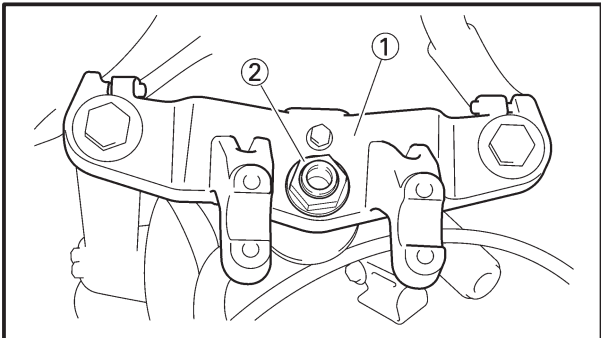

6. Install:
- upper bracket ①
 - steering stem nut ②
7. Tighten:
- steering stem nut ②

 **110 Nm (11.0 m•kg)**

REAR SHOCK ABSORBER

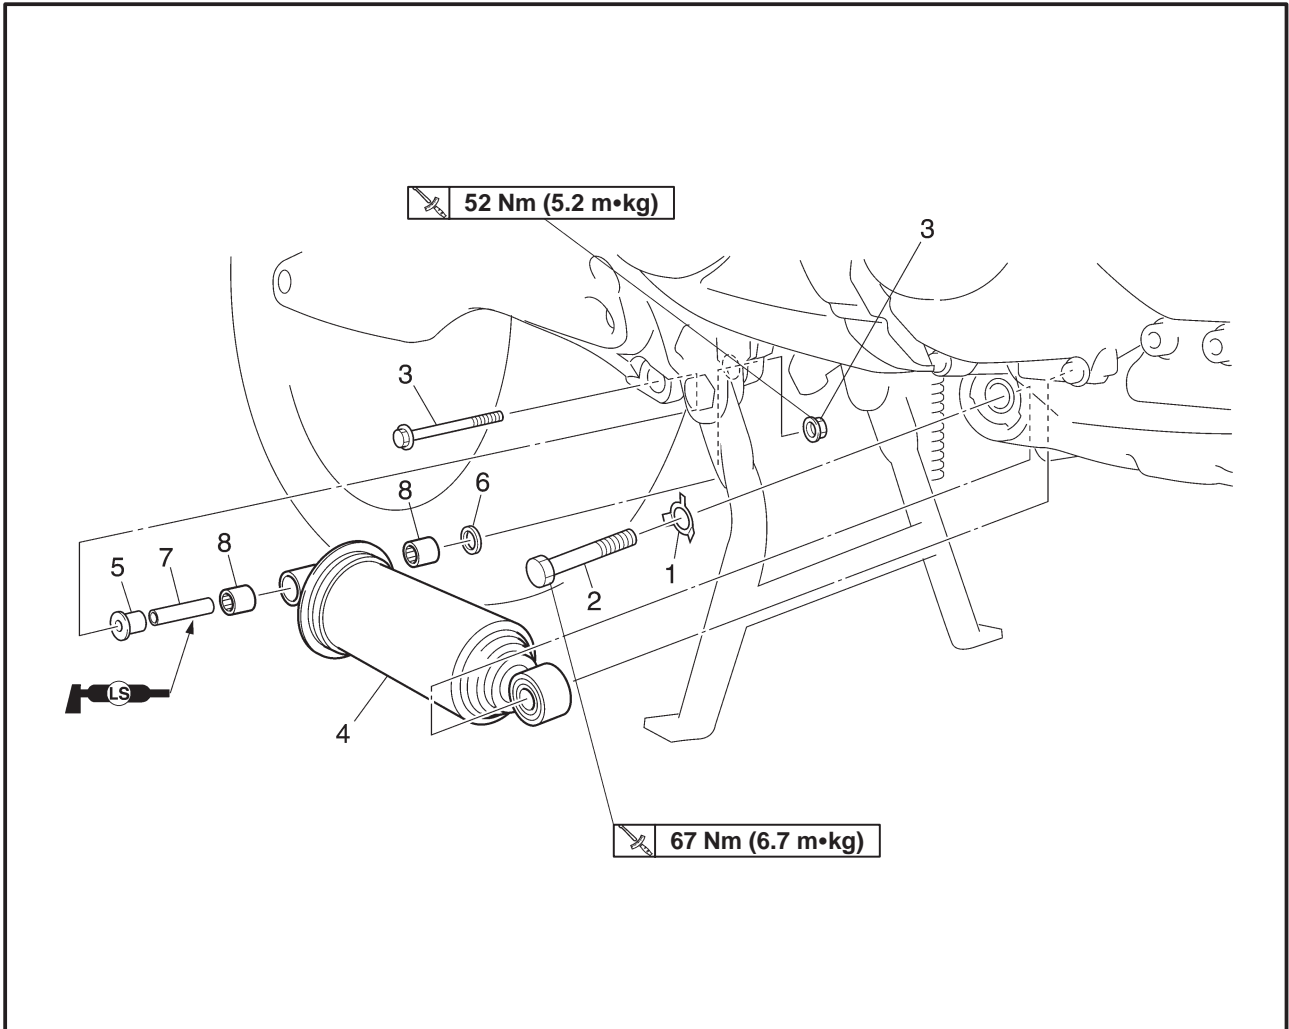

Order	Job/Part	Q'ty	Remarks
	Removing the rear shock absorber assembly		Remove the parts in the order listed.
	Muffler		Refer to "MUFFLER ASSEMBLY" in chapter 5.
1	Lock washer	1	
2	Bolt	1	
3	Bolt/nut	1/1	
4	Rear shock absorber	1	
5	Bush	1	
6	Washer	1	
7	Spacer	1	
8	Bearing	2	
			For installation, reverse the removal procedure.

EAS00693

REMOVING THE REAR SHOCK ABSORBER


1. Stand the scooter on a level surface.

⚠ WARNING

Securely support the scooter so that there is no danger of it falling over.

NOTE:

Place the scooter on a suitable stand so that the rear wheel is elevated.

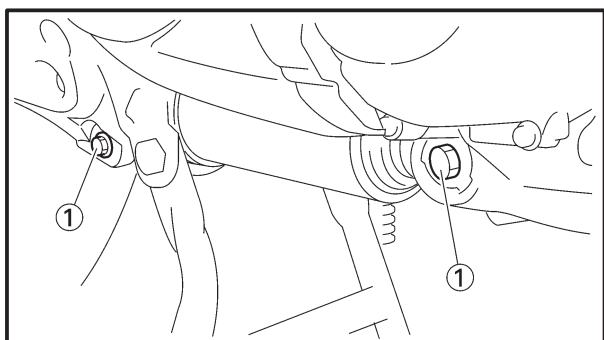

2. Remove:
 - bolts ①

NOTE:

- When removing the bolts ①, hold the swingarm so that it does not drop down.

3. Remove:
 - rear shock absorber.


EAS00696


CHECKING THE REAR SHOCK ABSORBER ASSEMBLY AND GAS CYLINDER

1. Check:
 - rear shock absorber rod
Bends/damage → Replace the rear shock absorber assembly.
 - rear shock absorber
Gas leaks/oil leaks → Replace the rear shock absorber assembly.
 - spring
Damage/wear → Replace the rear shock absorber assembly.
 - gas cylinder
Damage/gas leaks → Replace.
 - bushings
Damage/wear → Replace.
 - dust seals
Damage/wear → Replace.
 - bolts
Bends/damage/wear → Replace.


INSTALLING THE REAR SHOCK ABSORBER

1. Lubricate:
 - spacer
 - bearings


	Recommended lubricant Molybdenum disulfide grease
---	--

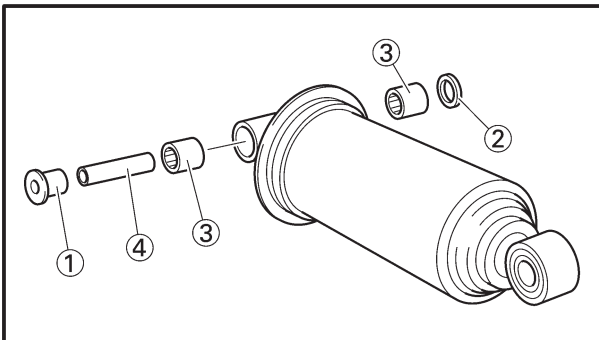


2. Install:
 - bush ①
 - washer ②
 - bearings ③
 - spacer ④

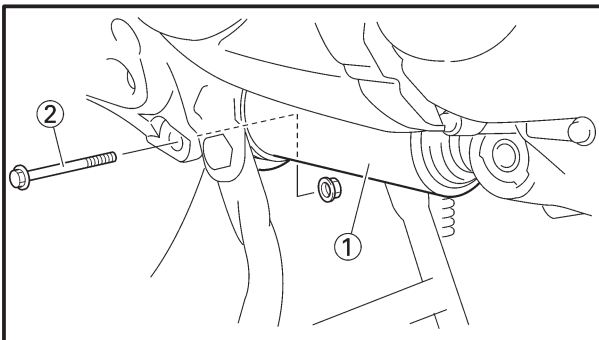


3. Install:
 - rear shock absorber ①
 - bolt (rear side) ②

 **52 Nm (5.2 m•kg)**

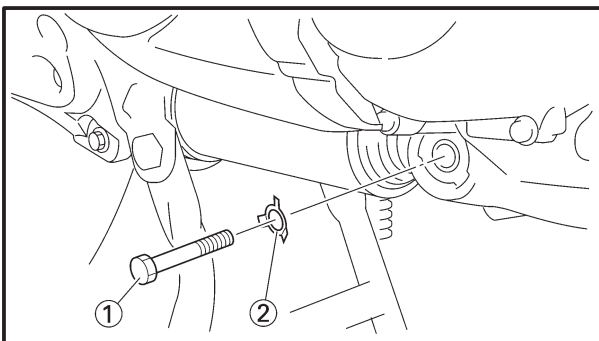


4. Install:
 - bolt (front side) ①
 - lock washer ②

 **67 Nm (6.7 m•kg)**

NOTE:

- When installing the bolt ①, hold the swingarm so that it does not drop down.
- Bend the lock washer ② tab along a flat side of the bolt ①.

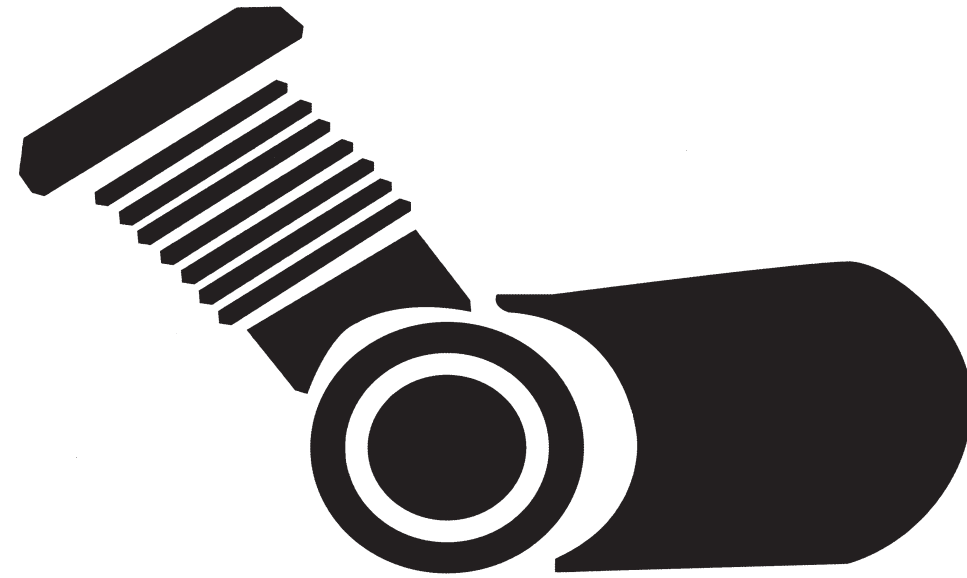

ENG

5



CHAPTER 5 OVERHAULING THE ENGINE


ENGINE	5-1
MUFFLER ASSEMBLY	5-1
LEAD AND HOSES	5-2
ENGINE	5-4
INSTALLING THE ENGINE	5-5
CAMSHAFTS	5-6
CYLINDER HEAD COVER	5-6
CAMSHAFTS	5-7
REMOVING THE CAMSHAFTS	5-8
CHECKING THE CAMSHAFTS	5-9
CHECKING THE CAMSHAFT SPROCKETS, AND TIMING CHAIN GUIDES	5-11
CHECKING THE TIMING CHAIN TENSIONER	5-11
INSTALLING THE CAMSHAFTS	5-12
CYLINDER HEAD	5-15
REMOVING THE CYLINDER HEAD	5-16
CHECKING THE CYLINDER HEAD	5-16
INSTALLING THE CYLINDER HEAD	5-17
VALVES AND VALVE SPRINGS	5-18
REMOVING THE VALVES	5-19
CHECKING THE VALVES AND VALVE GUIDES	5-20
CHECKING THE VALVE SEATS	5-22
CHECKING THE VALVE SPRINGS	5-24
CHECKING THE VALVE LIFTERS	5-25
INSTALLING THE VALVES	5-25
STARTER CLUTCH AND GENERATOR	5-28
REMOVING THE GENERATOR	5-30
CHECKING THE STARTER CLUTCH	5-31
INSTALLING THE GENERATOR	5-31
OIL PUMP	5-33
CHECKING THE OIL PUMP	5-36
CHECKING THE RELIEF VALVE	5-36
CHECKING THE OIL DELIVERY PIPES	5-37
CHECKING THE OIL STRAINER	5-37
ASSEMBLING THE OIL PUMP	5-37
CLUTCH	5-38
REMOVING THE CLUTCH	5-41
CHECKING THE FRICTION PLATES	5-42
CHECKING THE CLUTCH PLATES	5-42
CHECKING THE SPRINGS AND CLUTCH SPRINGS	5-42
CHECKING THE CLUTCH HOUSING	5-43



CHECKING THE CLUTCH BOSS	5-43
CHECKING THE PRESSURE PLATE	5-43
CHECKING THE WEIGHT	5-43
BELT DRIVE	5-44
BELT DRIVE COVER	5-44
BELT DRIVE	5-45
REMOVING THE PRIMARY SHEAVE ASSEMBLY, SECONDARY SHEAVE ASSEMBLY AND V-BELT	5-48
DISASSEMBLY THE PRIMARY SHEAVE	5-49
DISASSEMBLY THE SECONDARY SHEAVE	5-49
CHECKING THE V-BELT	5-49
CHECKING THE PRIMARY SHEAVE	5-50
CHECKING THE WEIGHT	5-50
CHECKING THE SLIDER	5-50
CHECKING THE SECONDARY SHEAVE	5-50
ASSEMBLING THE PRIMARY SHEAVE	5-51
ASSEMBLING THE SECONDARY SHEAVE	5-52
INSTALLING THE BELT DRIVE	5-53
CYLINDER AND PISTON	5-55
REMOVING THE CYLINDER AND PISTON	5-56
CHECKING THE CYLINDER AND PISTON	5-57
CHECKING THE PISTON RINGS	5-58
CHECKING THE PISTON PINS	5-59
INSTALLING THE PISTONS AND CYLINDERS	5-60
CRANKCASE AND CRANKSHAFT	5-62
CRANKSHAFT ASSEMBLY	5-62
CONNECTING ROD	5-64
DISASSEMBLING THE CRANKCASE	5-65
CHECKING THE CRANKCASE	5-65
REMOVING THE CRANKSHAFT JOURNAL BEARING	5-66
REMOVING THE CONNECTING RODS	5-66
CHECKING THE CRANKSHAFT AND CONNECTING RODS	5-66
INSTALLING THE CRANKSHAFT JOURNAL BEARING	5-71
INSTALLING THE CONNECTING RODS	5-71
INSTALLING THE CRANKSHAFT	5-73
ASSEMBLING THE CRANKCASE	5-73
TRANSMISSION	5-74
REMOVING THE TRANSMISSION	5-75
CHECKING THE TRANSMISSION	5-75
ASSEMBLING THE CRANKCASE	5-76
CHAIN DRIVE	5-77
CHECKING THE SWINGARM	5-80
CHECKING THE CHAIN DRIVE ASSEMBLY	5-80
INSTALLING THE CHAIN DRIVE	5-81

OVERHAULING THE ENGINE


ENGINE MUFFLER ASSEMBLY

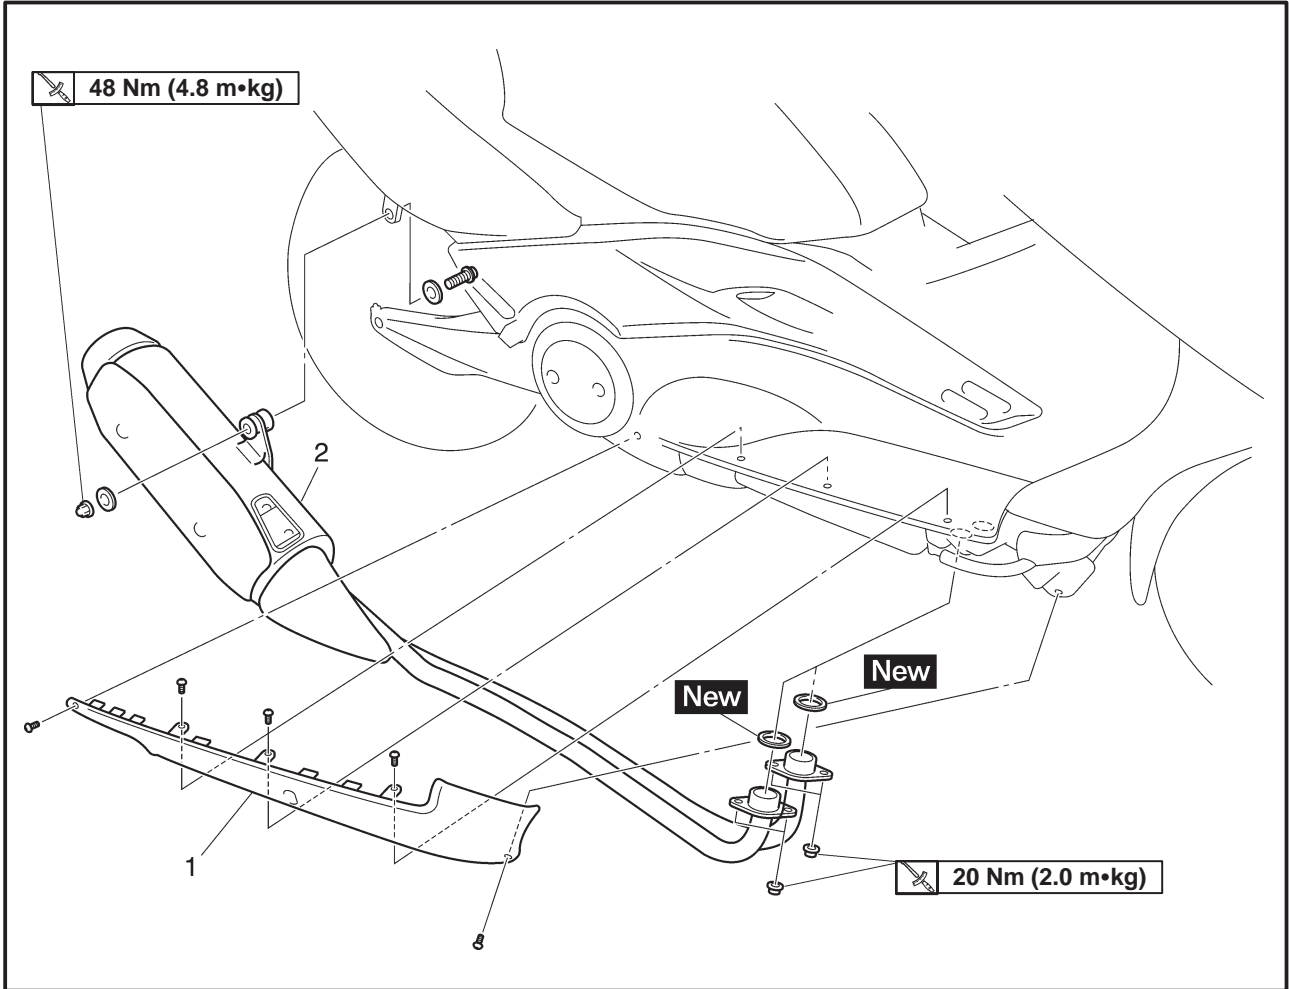


Order	Job/Part	Q'ty	Remarks
	Removing the muffler assembly		
1	Lower side cover mole (right)	1	Remove the parts in the order listed.
2	Muffler assembly	1	
			For installation, reverse the removal procedure.



LEADS AND HOSES

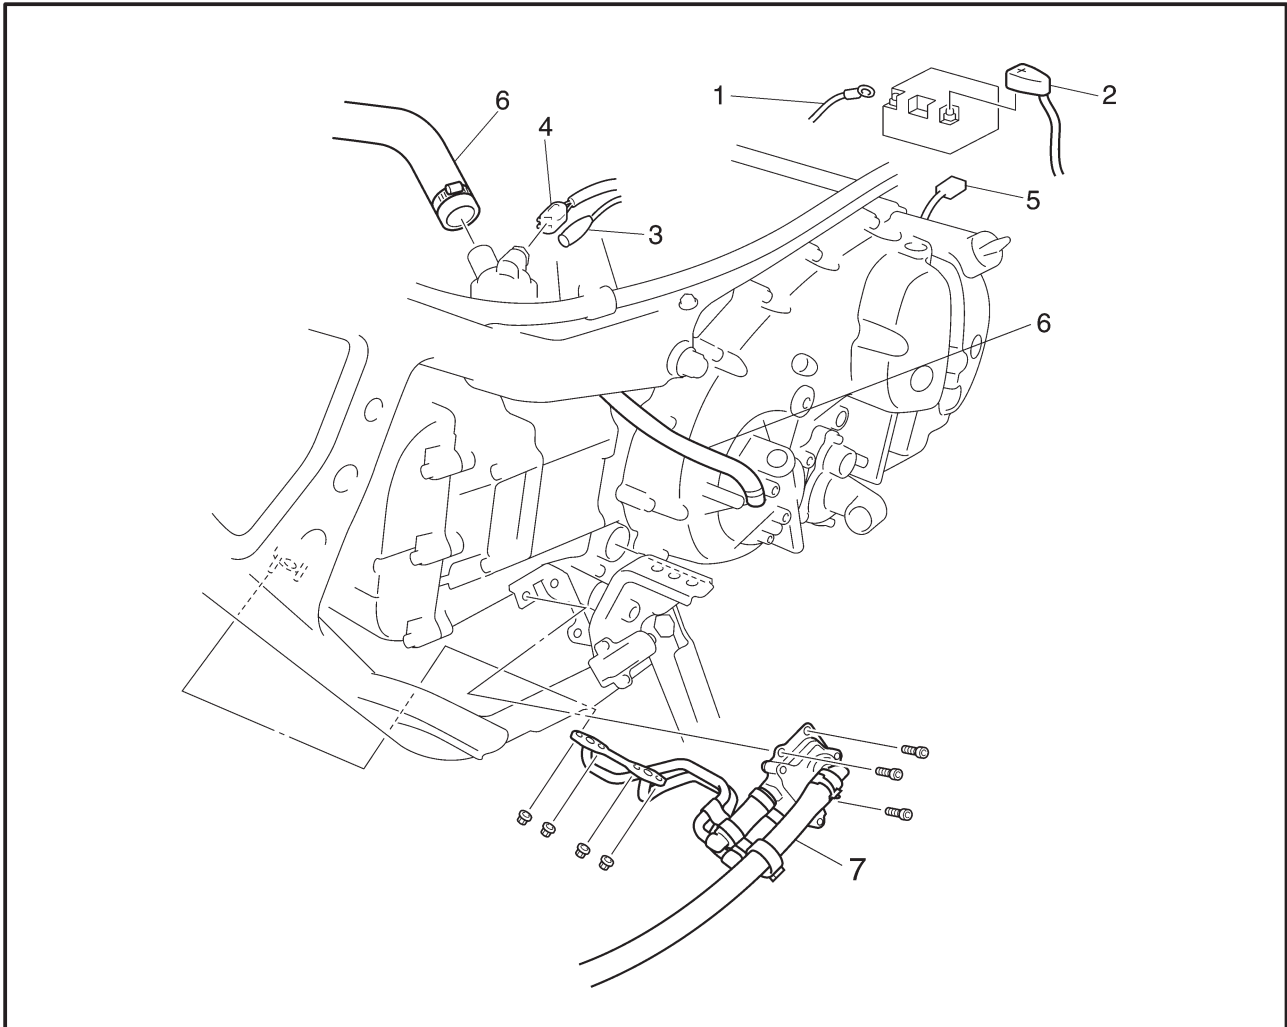


Order	Job/Part	Q'ty	Remarks
	Disconnecting the leads and hoses		Disconnect the parts in the order listed.
	Legshield		Refer to "COVER AND PANEL" in chapter 3.
	Footrest board		Refer to "MUFFLER ASSEMBLY".
	Muffler assembly		Refer to "REAR SHOCK ABSORBER" in chapter 4.
	Rear shock absorber		Drain.
	Chain drive oil		Refer to "CHAIN DRIVE".
	Chain drive assembly		Drain.
	Coolant		Refer to "RADIATOR" in chapter 5.
	Cooling system		Refer to "CARBURETOR" in chapter 7.
	Carburetor		Drain.
	Engine oil		
1	Battery negative lead	1	
2	Battery positive lead	1	
3	Thermo unit coupler	1	
4	Thermo switch coupler	1	

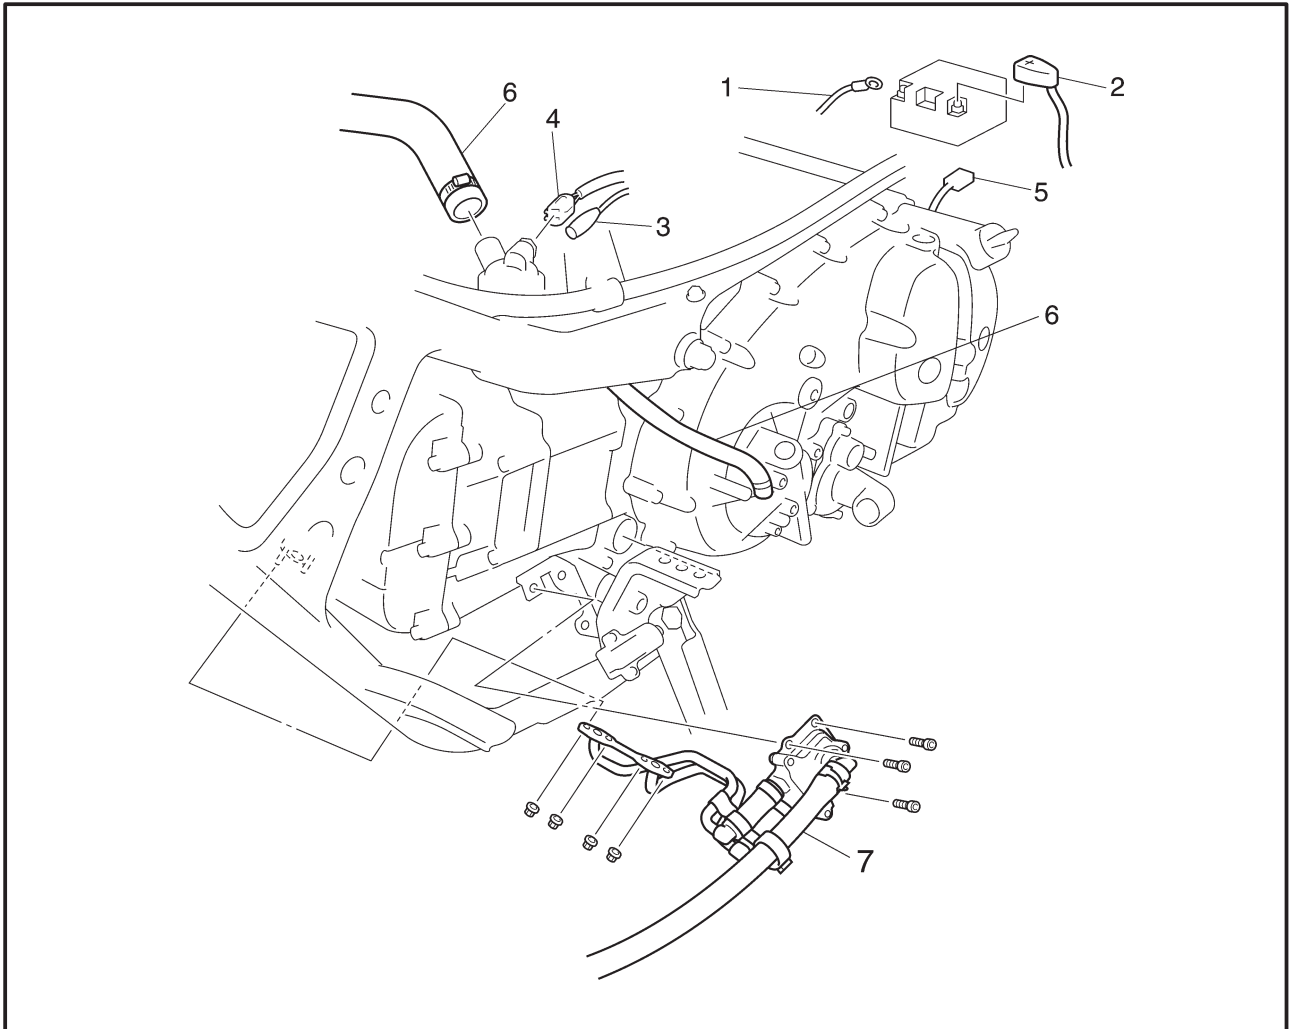


Order	Job/Part	Q'ty	Remarks
5	A.C. magneto lead	1	Refer to "AIR INDUCTION SYSTEM" in chapter 7. For installation, reverse the removal procedure.
6	Hose	1	
7	Air induction system	1	



ENGINE

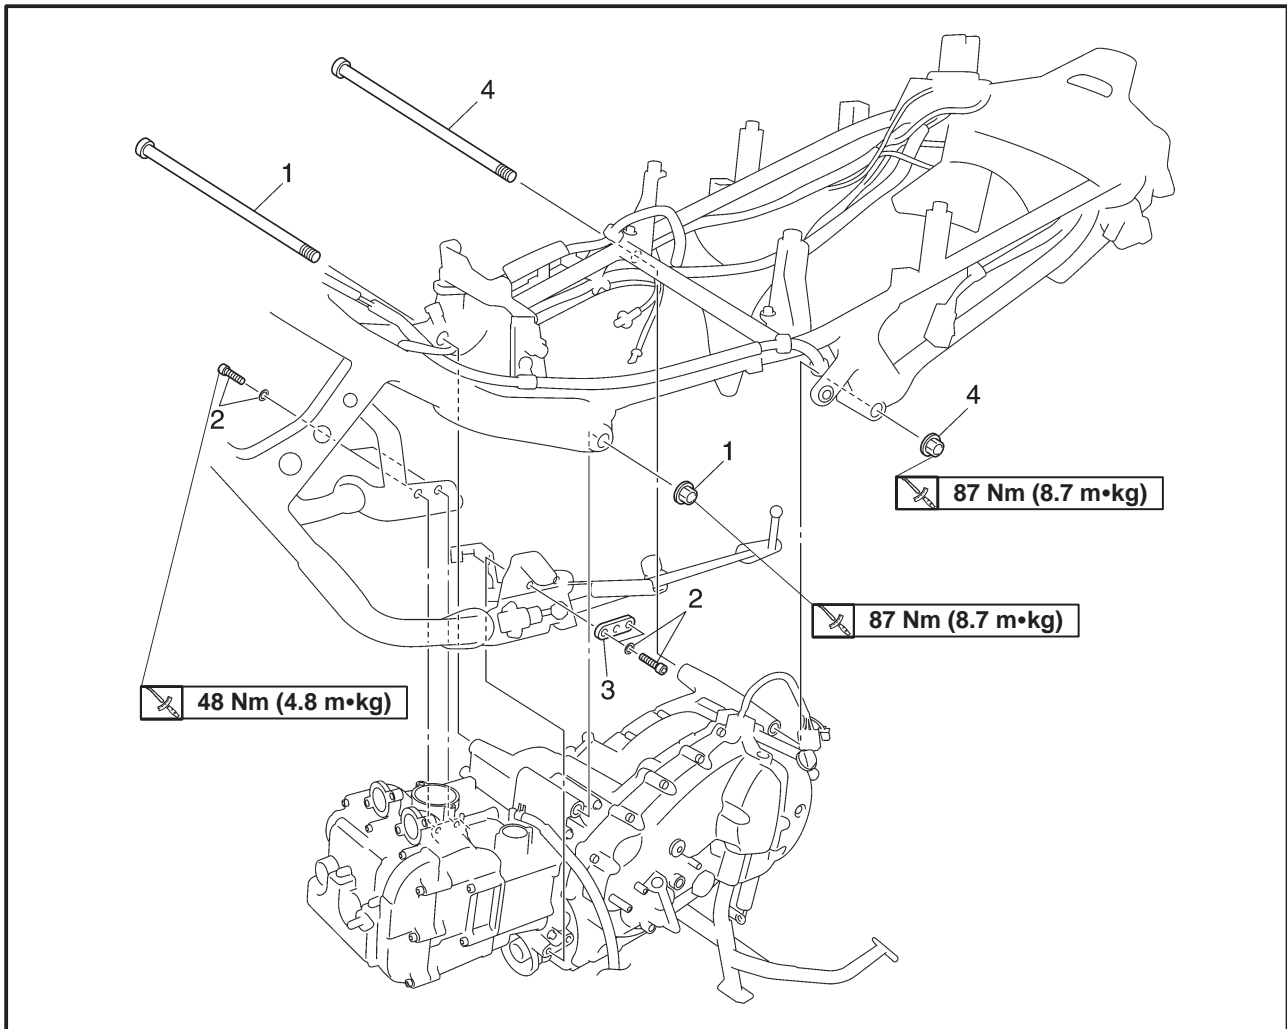

Order	Job/Part	Q'ty	Remarks
	Removing the engine		Remove the parts in the order listed.
1	Upper mounting bolt/nut	1/1	
2	Lower mounting bolts/washers	4/4	
3	Collar	1	
4	Rear mounting bolt/nut	1/1	
			For installation, reverse the removal procedure.

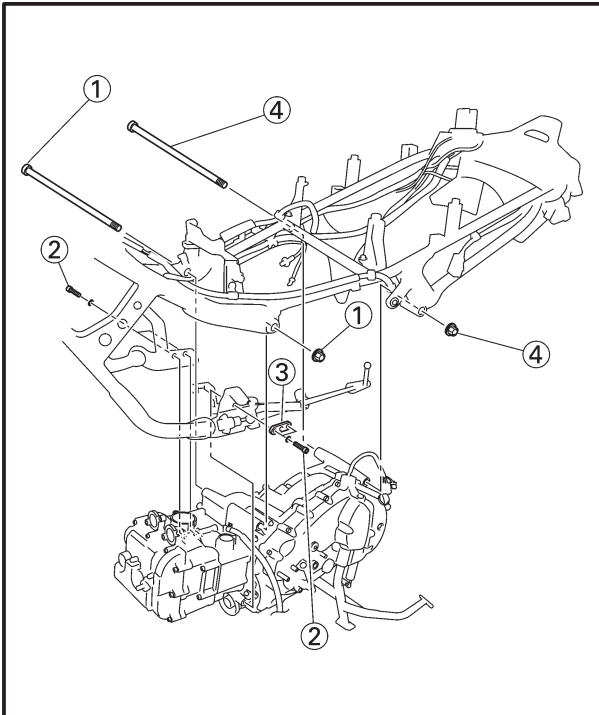

INSTALLING THE ENGINE

1. Install:


- front mounting bolt/nut ①
- front mounting bolts (lower) ②
- collar ③
- rear mounting bolt/nut ④

NOTE:


Do not fully tighten the bolts.

2. Tighten:


- front mounting nut (upper) ①


	87 Nm (8.7 m•kg)
---	-------------------------

- front mounting bolts (lower) ②

	48 Nm (4.8 m•kg)
---	-------------------------

- rear mounting nut ④


	87 Nm (8.7 m•kg)
---	-------------------------

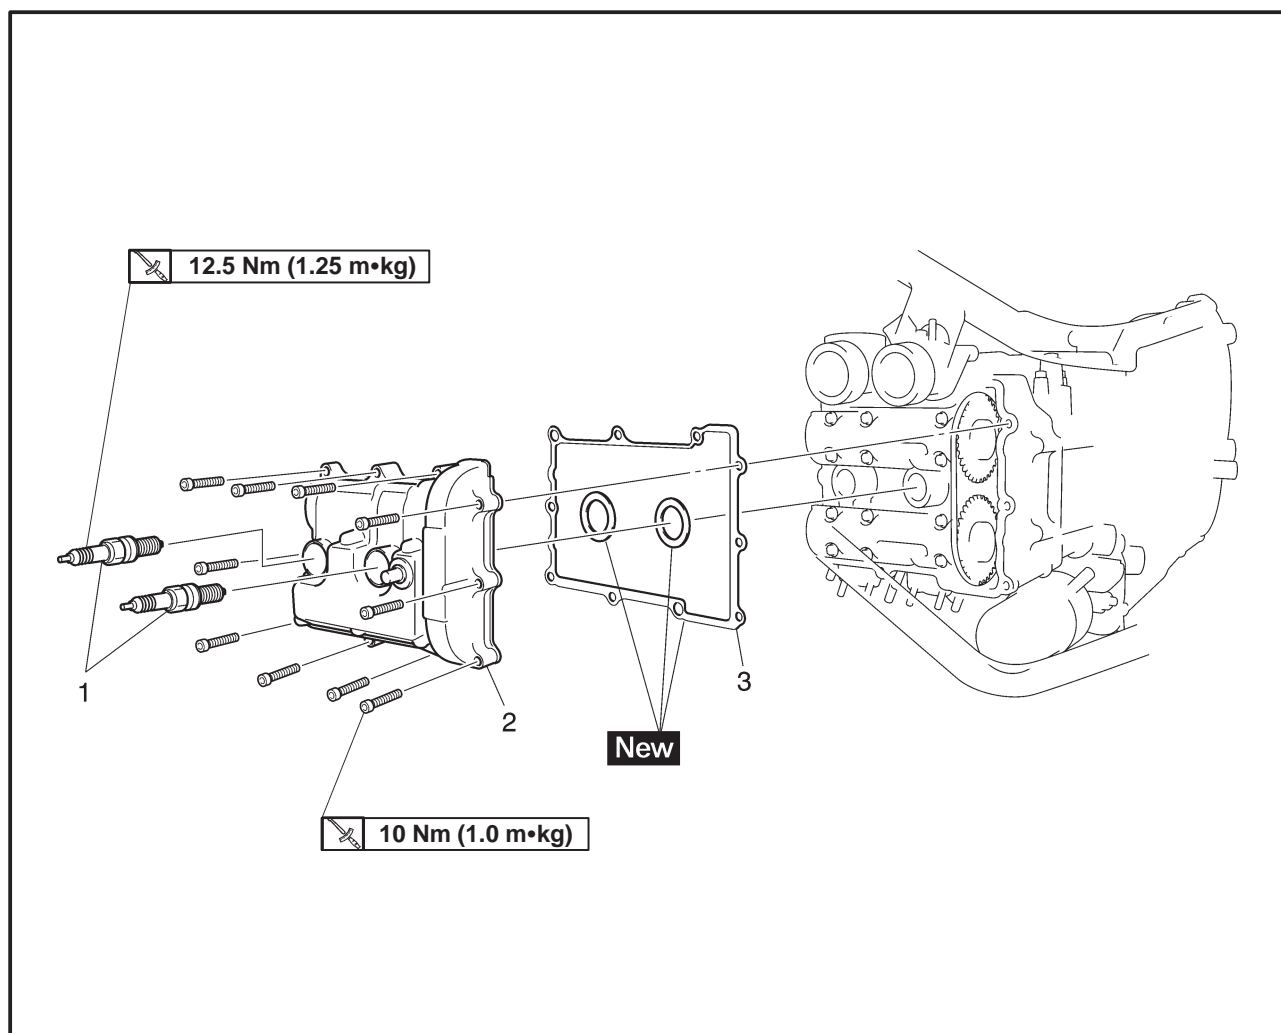
CAMSHAFTS
CYLINDER HEAD COVER


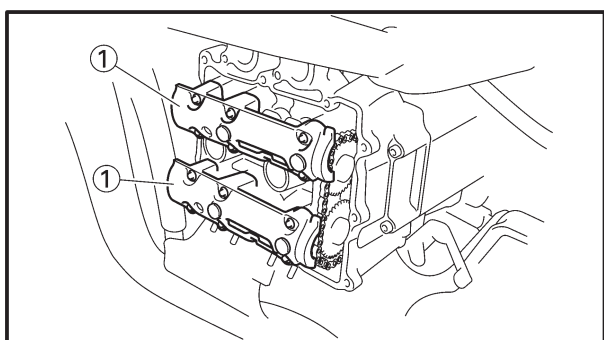
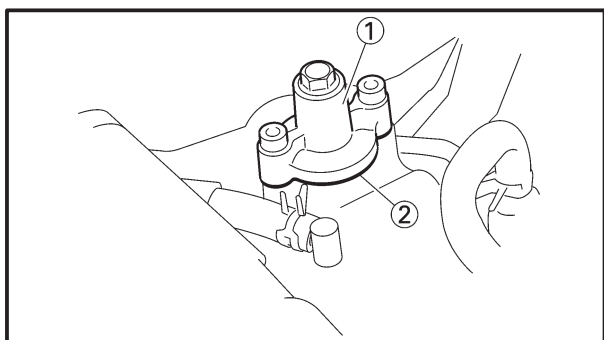
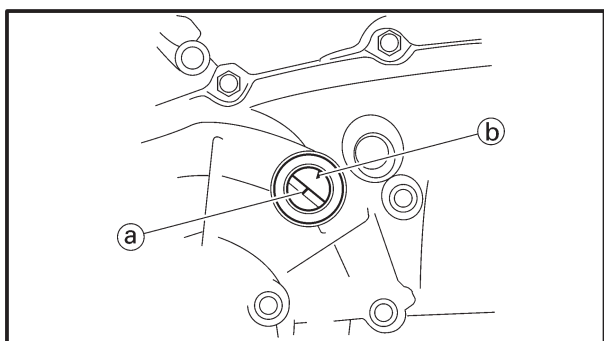
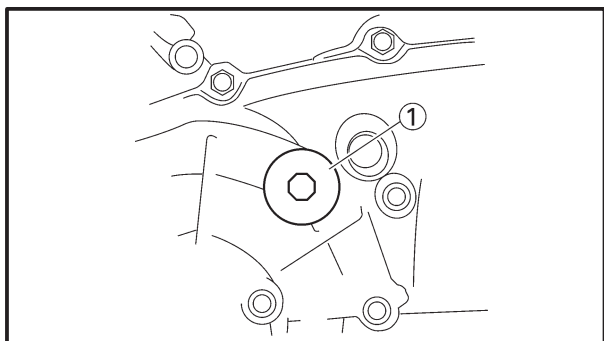
Order	Job/Part	Q'ty	Remarks
	Removing the cylinder head cover		Remove the parts in the order listed. Refer to "CARBURETOR" in chapter 7. Drain.
	Carburetor assembly		Refer to "RADIATOR AND OIL COOLER" in chapter 6.
	Coolant		
	Radiator assembly		
1	Spark plugs	2	
2	Cylinder head cover	1	
3	Cylinder head cover gasket	1	
			For installation, reverse the removal procedure.



CAMSHAFTS

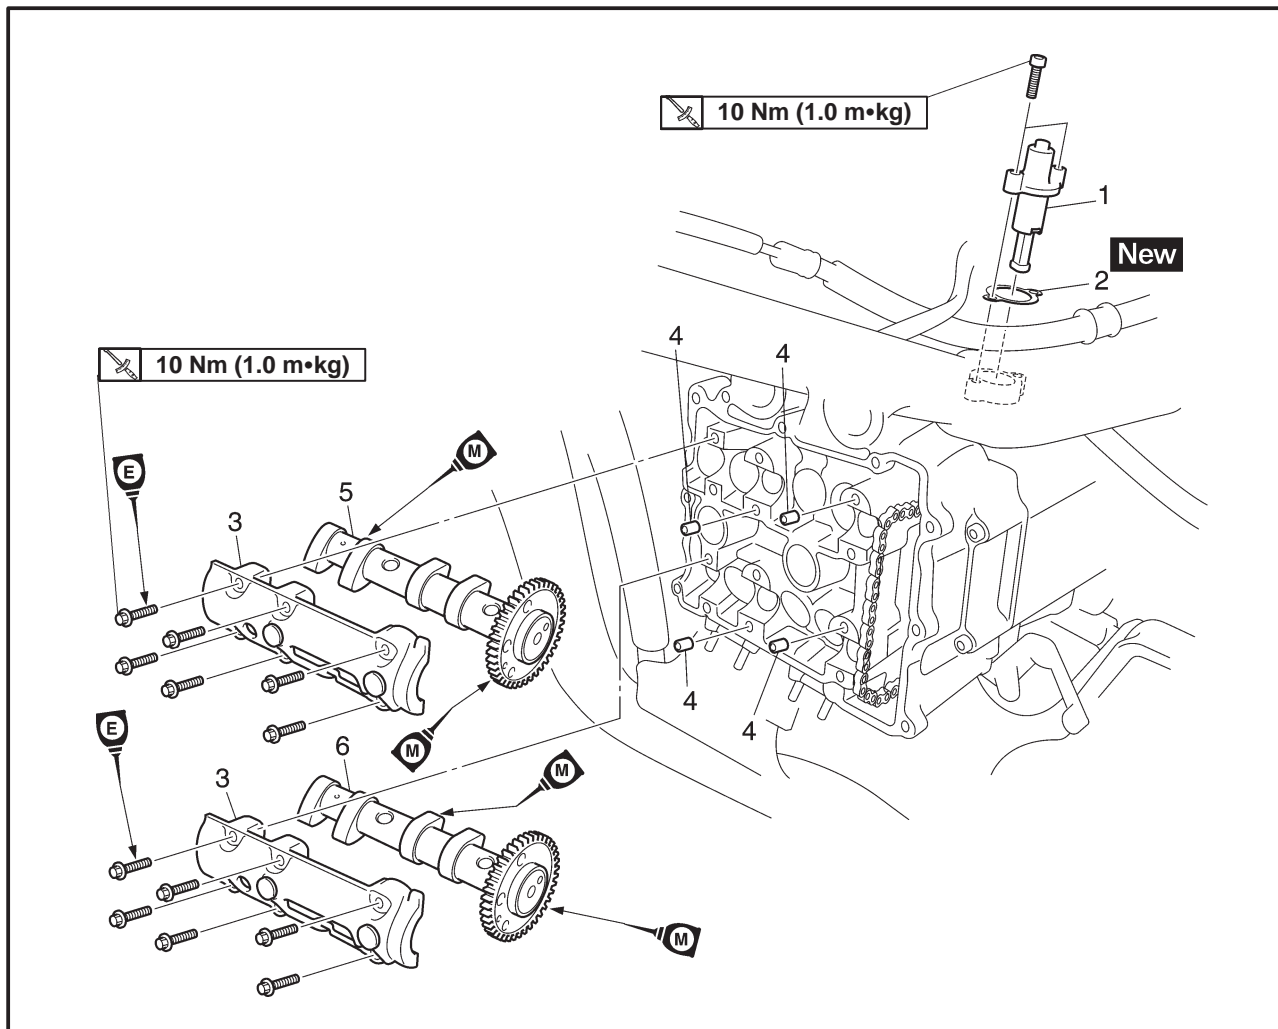

Order	Job/Part	Q'ty	Remarks
	Removing the camshafts		
1	Timing chain tensioner	1	Remove the parts in the order listed.
2	Timing chain tensioner gasket	1	
3	Camshaft caps	2	
4	Dowel pins	4	
			NOTE: _____ During removal, the dowel pins may still be connected to the camshaft cap.
5	In take camshaft	1	For installation, reverse the removal procedure.
6	Exhaust camshaft	1	



REMOVING THE CAMSHAFTS

1. Remove:

- timing plug ①

2. Align:

- "I" mark (a) (with the stationary pointer (b))



- Turn the crankshaft clockwise.
- When piston #1 is at TDC on the compression stroke, align the TDC mark (a) on the stationary pointer (b).

NOTE:

TDC on the compression stroke can be found when the camshaft lobes are turned away from each other.



3. Remove:

- timing chain tensioner ①
- timing chain tensioner gasket ②

4. Remove:


CAUTION:

When removing the camshaft from the cylinder head, first tip up the chassis front side at least 25° from the chassis level position.

- camshaft caps ① (intake and exhaust)
- dowel pins

CAUTION:

To prevent damage to the cylinder head, camshafts or camshaft caps, loosen the camshaft cap bolts in stages and in a criss-cross pattern, working from the outside in.

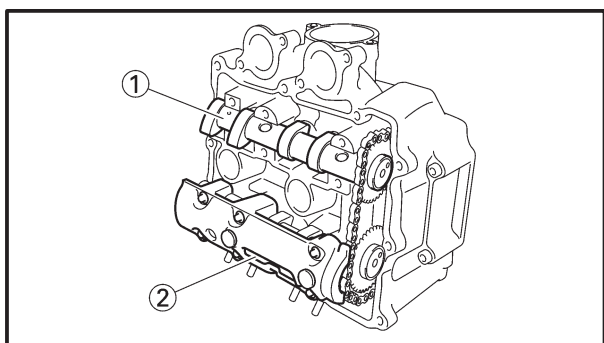


5. Remove:

- intake camshaft ①
- exhaust camshaft ②


NOTE: _____

To prevent the timing chain from falling into the crankcase, fasten it with a wire ③.

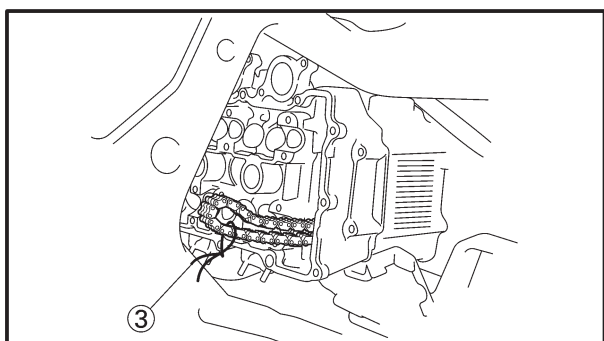

6. Remove:

- timing chain guide (exhaust side)

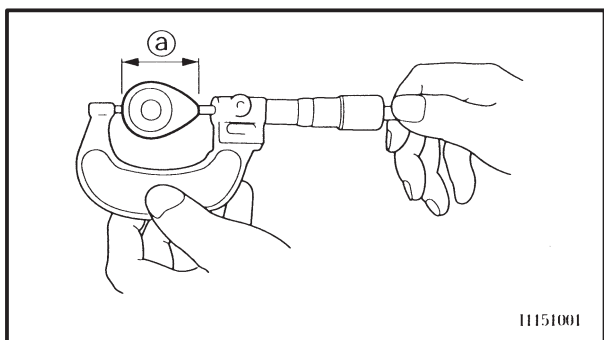

EAS00204


CHECKING THE CAMSHAFTS

1. Check:

- camshaft lobes
Blue discoloration/pitting/scratches → Replace the camshaft.

2. Measure:

- camshaft lobe dimensions ① and ②
Out of specification → Replace the camshaft.

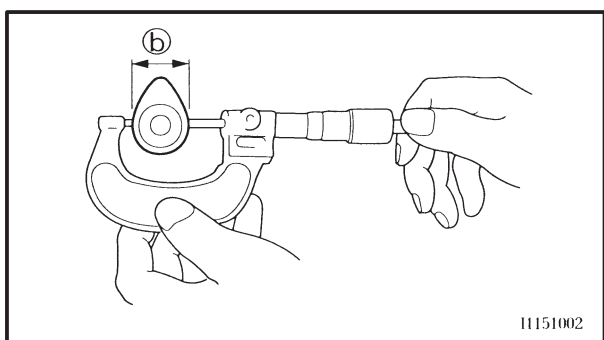

Camshaft lobe dimension limit

Intake


① 33.252 ~ 33.352 mm

② 24.956 ~ 25.056 mm

Exhaust

① 33.252 ~ 33.352 mm

② 24.956 ~ 25.056 mm

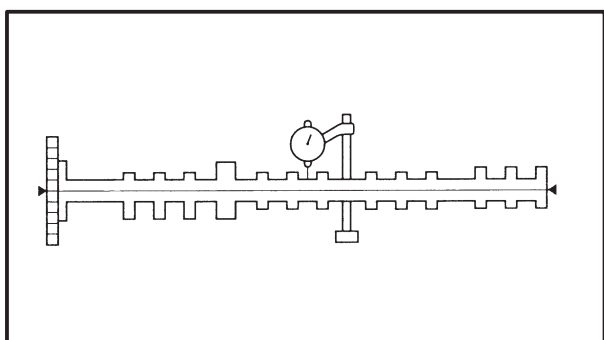

3. Measure:

- camshaft runout
Out of specification → Replace.



Max. camshaft runout

0.03 mm



4. Measure:



- camshaft-journal-to-camshaft-cap clearance

Out of specification → Measure the camshaft journal diameter.



Camshaft-journal-to-camshaft-cap clearance

0.020 ~ 0.054 mm

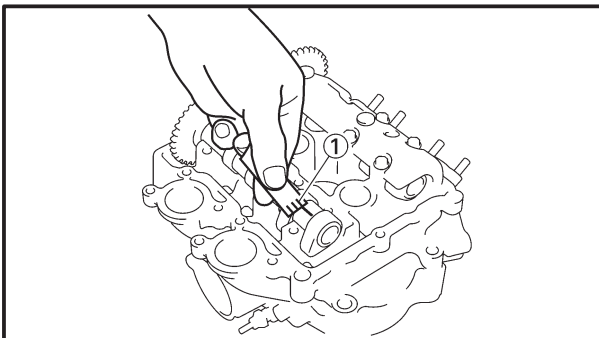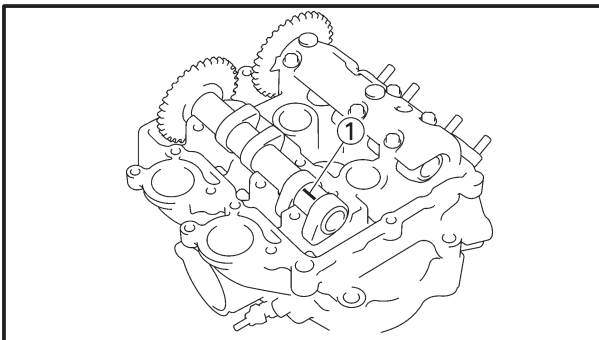

- Install the camshaft into the cylinder head (without the dowel pins and camshaft caps).
- Position a strip of Plastigauge® ① onto the camshaft journal as shown.
- Install the dowel pins and camshaft caps.


NOTE: _____

- Tighten the camshaft cap bolts in stages and in a crisscross pattern, working from the inner caps out.
- Do not turn the camshaft when measuring the camshaft journal-to-camshaft cap clearance with the Plastigauge® ①.



**Camshaft cap bolt
10 Nm (1.0 m•kg)**

- Remove the camshaft caps and then measure the width of the Plastigauge® ①.

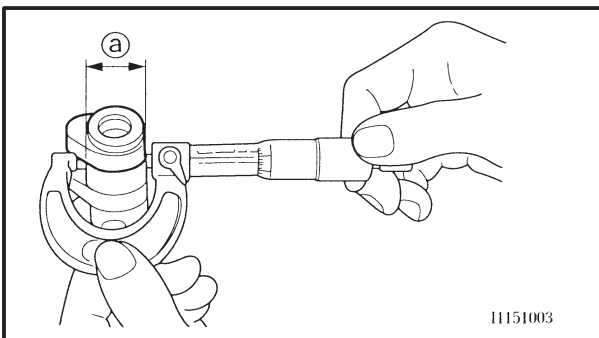

5. Measure:


- camshaft journal diameter ②
- Out of specification → Replace the camshaft.

Within specification → Replace the cylinder head and the camshaft caps as a set.



**Camshaft journal diameter
22,967 ~ 22,980 mm**

11151003

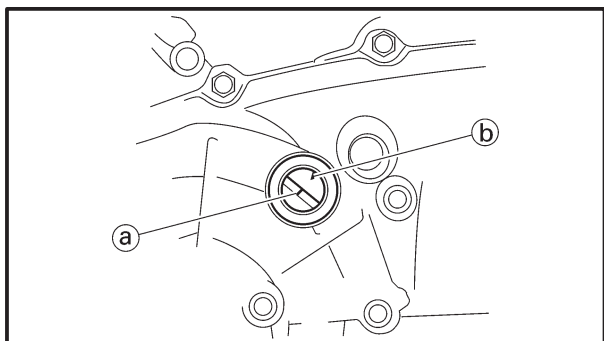
**INSTALLING THE CAMSHAFTS**

1. Install:

- timing chain guide (exhaust side)




- Turn the crankshaft clockwise.
- When piston #1 is at TDC on the compression stroke, align the TDC mark (a) on the stationary pointer (b).

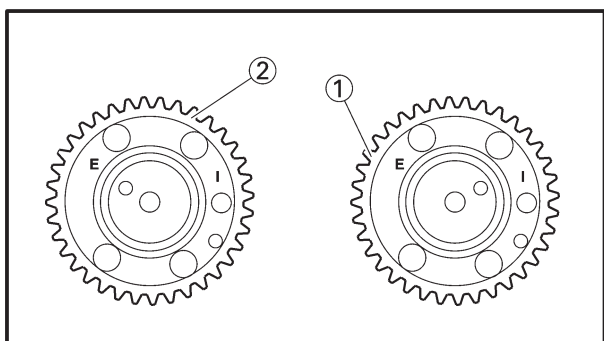

2. Install:

- intake camshaft (1)
- exhaust camshaft (2)

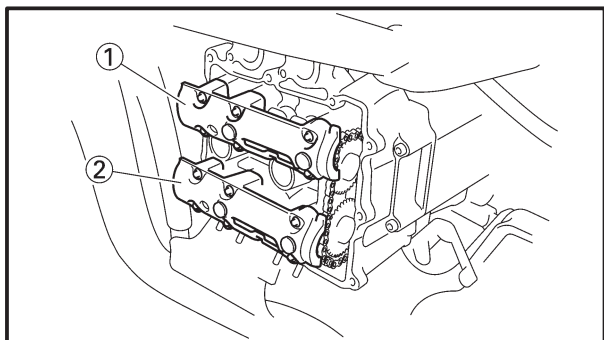

3. Install:

- intake camshaft cap (1)
- exhaust camshaft cap (2)



- Install the timing chain onto both camshaft sprockets.

CAUTION:

Do not turn the crankshaft when installing the camshaft to avoid damage or improper valve timing.


- Install the exhaust and intake camshaft cap.



Camshaft cap bolt
10 Nm (1.0 m•kg)

NOTE:

Make sure that camshaft sprocket timing hole (a) are aligned with the cylinder head edge (b).
Out of alignment → Reinstall.

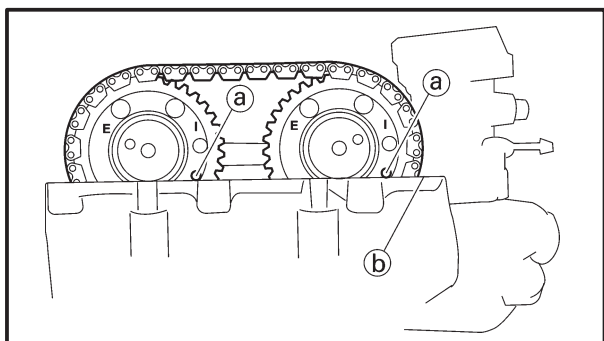

- Remove the wire from the timing chain.





8. Install:


- cylinder head cover gasket
- cylinder head cover

NOTE: _____



Tighten the cylinder head cover bolts in stages and in a crisscross pattern.



CYLINDER HEAD

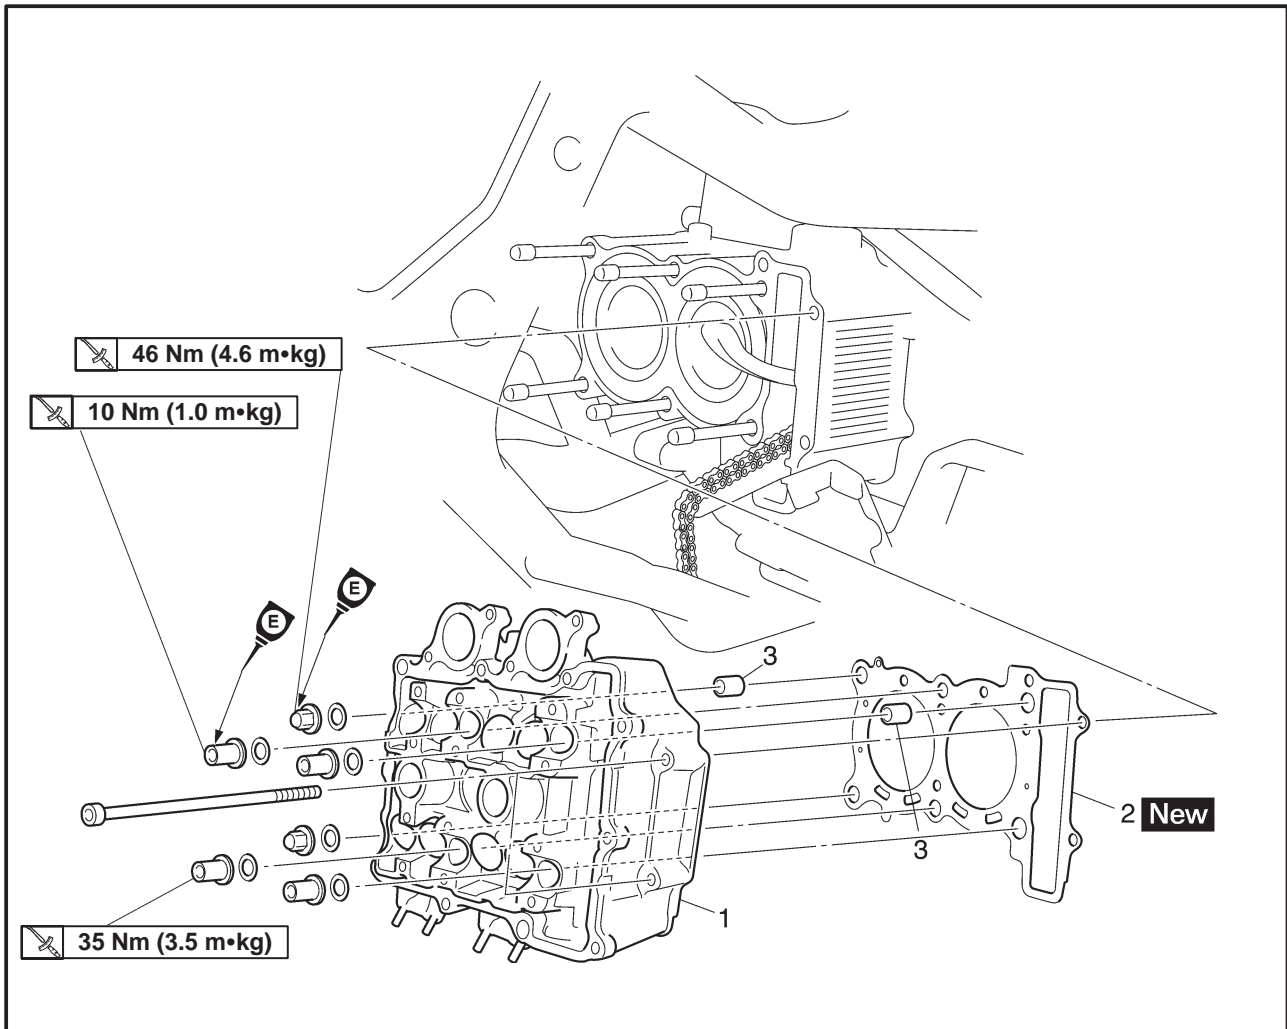

Order	Job/Part	Q'ty	Remarks
	Removing the cylinder head		Remove the parts in the order listed.
	Legshield		Refer to "COVER AND PANEL" in chapter 3.
	Footrest board		
	Carburetors		
	Intake and exhaust camshafts		Refer to "CARBURETOR" in chapter 7.
1	Cylinder head	1	Refer to "CAMSHAFTS".
2	Cylinder head gasket	1	
3	Dowel pin	2	
			For installation, reverse the removal procedure.

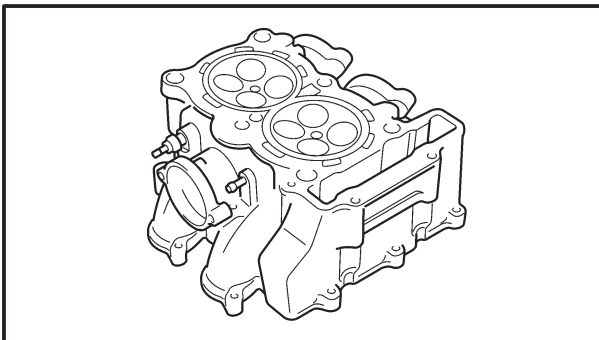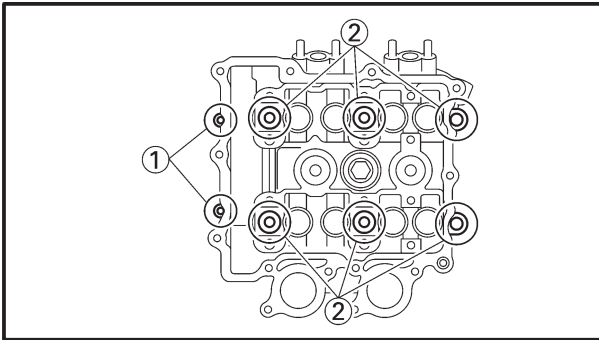

REMOVING THE CYLINDER HEAD

1. Remove:
 - cylinder head bolts ①
 - cylinder head nuts ②

NOTE: _____

- Loosen the nuts in the proper sequence as shown.
- Loosen each nut 1/2 of a turn at a time. After all of the nuts are fully loosened, remove them.

EAS00229

CHECKING THE CYLINDER HEAD

1. Eliminate:
 - combustion chamber carbon deposits (with a rounded scraper)

NOTE: _____

Do not use a sharp instrument to avoid damaging or scratching:

- spark plug threads
- valve seats

2. Check:


- cylinder head
Damage/scratches → Replace.
- cylinder head water jacket
Mineral deposits/rust → Eliminate.

3. Measure:

- cylinder head warpage
Out of specification → Resurface the cylinder head.




**Max. cylinder head warpage
0.10 mm**

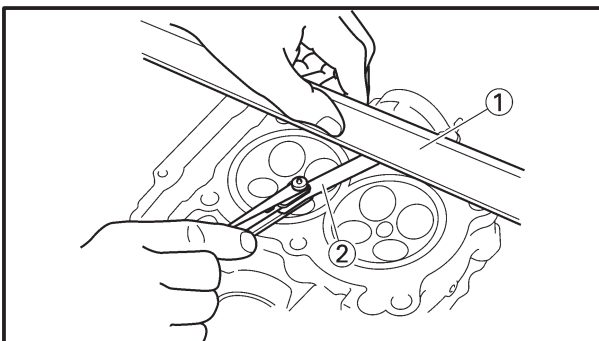

- a. Place a straightedge ① and a thickness gauge ② across the cylinder head.
- b. Measure the warpage.
- c. If the limit is exceeded, resurface the cylinder head as follows.
- d. Place a 400 ~ 600 grit wet sandpaper on the surface plate and resurface the cylinder head using a figure-eight sanding pattern.

NOTE: _____

To ensure an even surface, rotate the cylinder head several times.

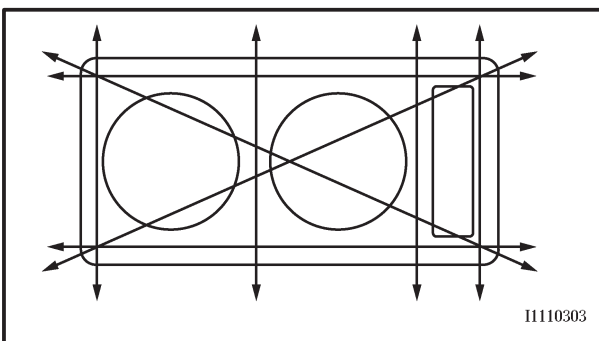

I1110303




INSTALLING THE CYLINDER HEAD

1. Install:
 - dowel pins
 - gasket **New**
2. Install:
 - cylinder head

NOTE: _____

Pass the timing chain through the timing chain cavity.

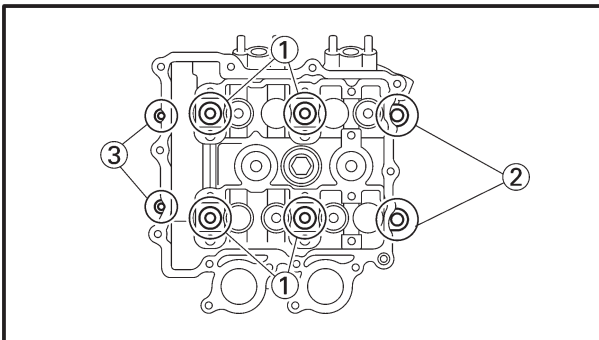

3. Tighten:

- cylinder head nuts ①

	35 Nm (3.5 m•kg)
--	-------------------------
- cylinder head nuts ②

	46 Nm (4.6 m•kg)
--	-------------------------
- cylinder head bolts ③

	10 Nm (1.0 m•kg)
--	-------------------------

NOTE: _____


- Apply engine oil onto the threads of the cylinder head nuts.
 - Tighten the cylinder head nuts in the proper tightening sequence as shown and torque them in two stages.
- _____

4. Install:

- exhaust camshaft
 - intake camshaft
- Refer to "INSTALLING THE CAMSHAFTS".




VALVES AND VALVE SPRINGS

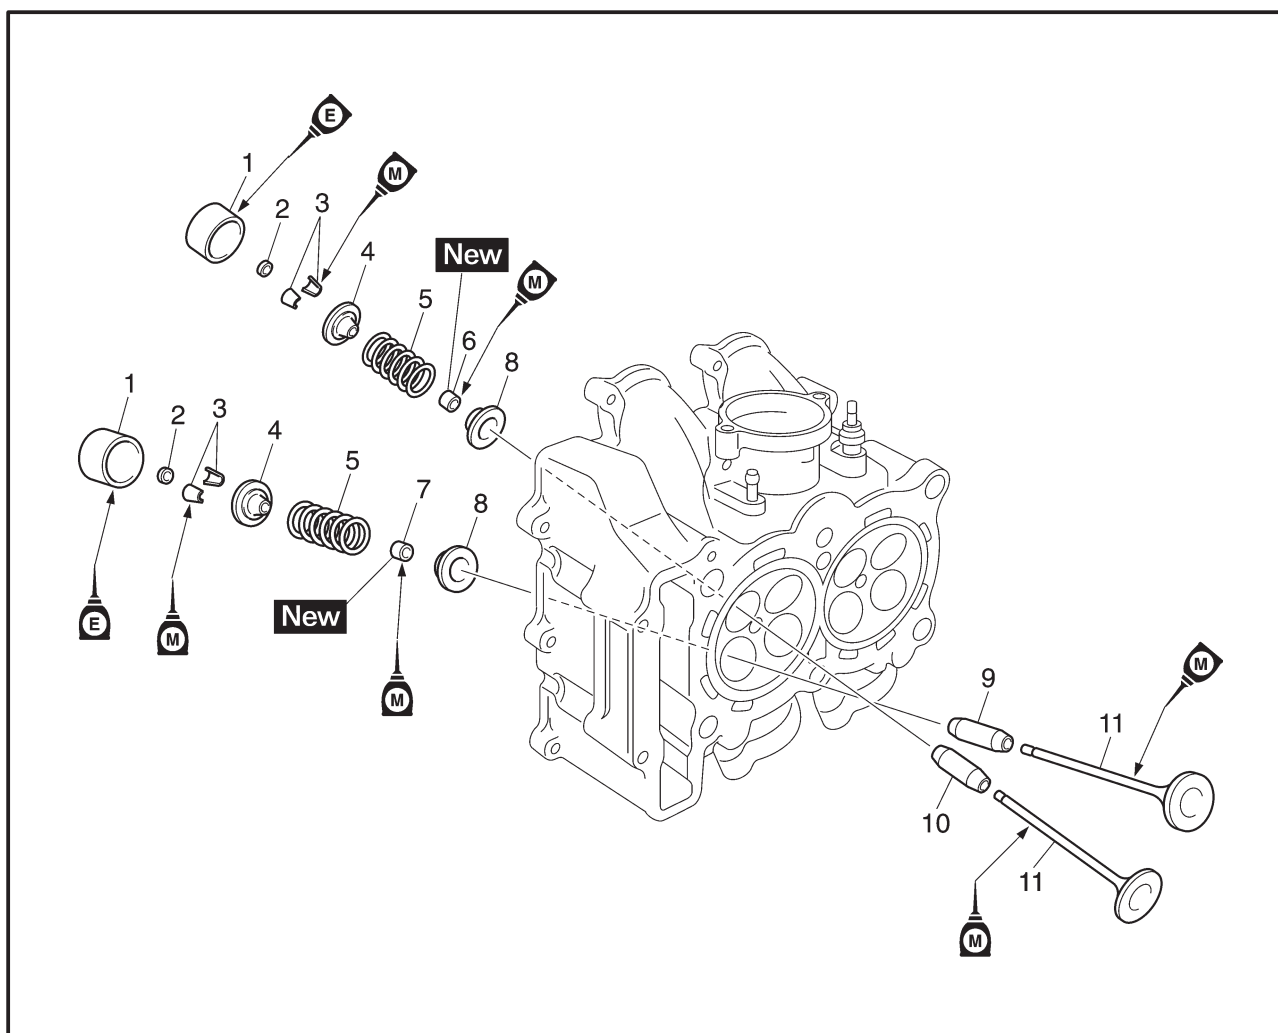

Order	Job/Part	Q'ty	Remarks
	Removing the valves and valve springs		Remove the parts in the order listed.
	Cylinder head		Refer to "CYLINDER HEAD".
1	Valve lifter	8	
2	Valve pad	8	
3	Valve cotter	16	
4	Valve retainer	8	
5	Valve spring	8	
6	Intake valve stem seal	4	
7	Exhaust valve stem seal	4	
8	Valve spring seat	8	
9	Intake valve guide	4	
10	Exhaust valve guide	4	
11	Valve	8	
			For installation, reverse the removal procedure.



Valve spring compressor
90890-04109
Attachment
90890-04114

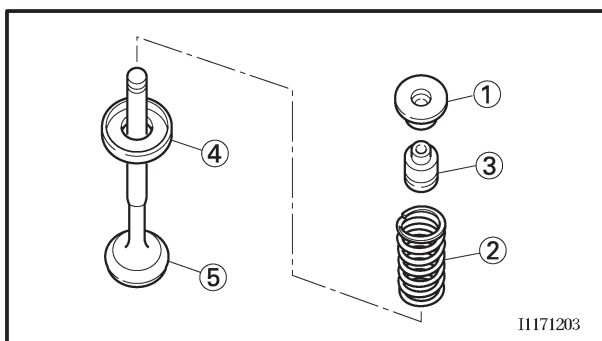


4. Remove:

- valve retainer ①
- valve spring ②
- oil seal ③
- valve spring seat ④
- valve ⑤

NOTE: _____

Identify the position of each part very carefully so that it can be reinstalled in its original place.

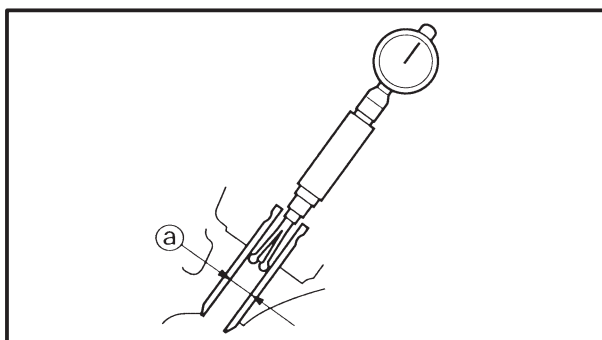

EAS00239

CHECKING THE VALVES AND VALVE GUIDES


The following procedure applies to all of the valves and valve guides.

1. Measure:

- valve-stem-to-valve-guide clearance

Valve-stem-to-valve-guide clearance =
Valve guide inside diameter (a) –
Valve stem diameter (b)

Out of specification → Replace the valve guide.

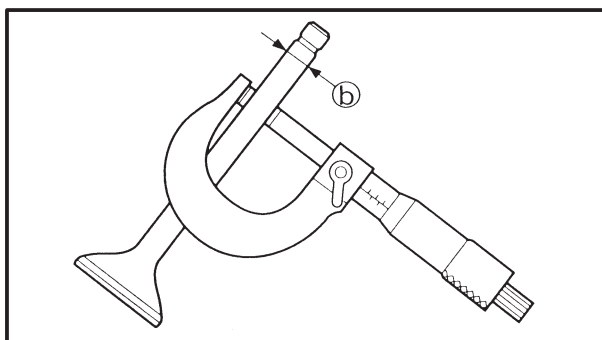

Valve-stem-to-valve-guide clearance

Intake




0.010 ~ 0.037 mm

<Limit>: 0.08 mm

Exhaust

0.025 ~ 0.052 mm

<Limit>: 0.10 mm

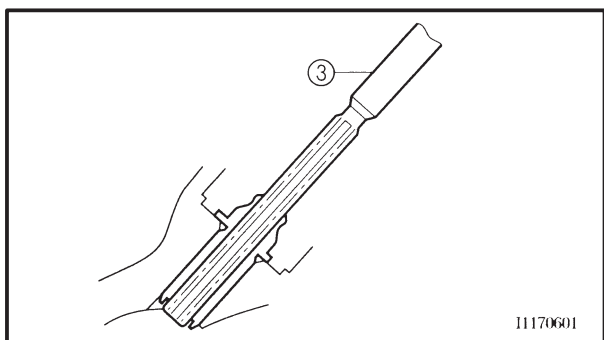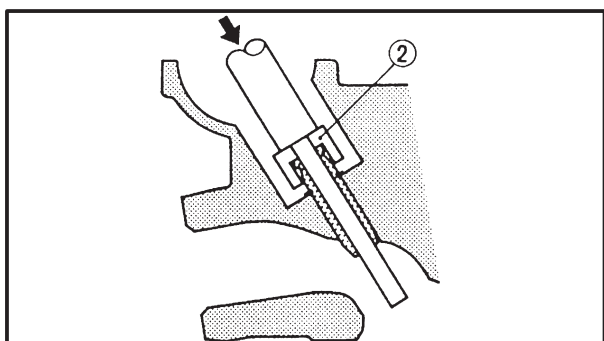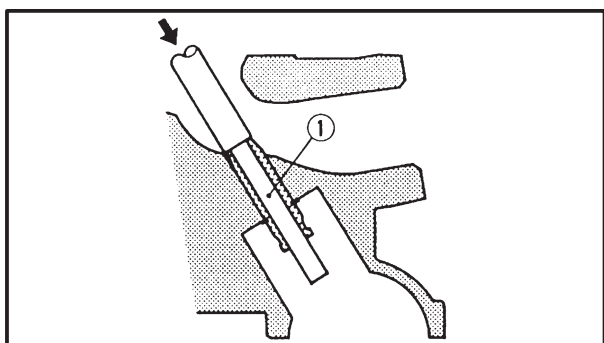

2. Replace:
- valve guide

NOTE: _____

To ease valve guide removal and installation, and to maintain the correct fit, heat the cylinder head to 100° in an oven.



- Remove the valve guide with a valve guide remover ①.
- Install the new valve guide with a valve guide installer ② and valve guide remover ①.
- After installing the valve guide, bore the valve guide with a valve guide reamer ③ to obtain the proper valve-stem-to-valve-guide clearance.

NOTE: _____

After replacing the valve guide, reface the valve seat .



Valve guide remover (4mm)
90890-04111


Valve guide installer (4mm)
90890-04112

Valve guide reamer (4mm)
90890-04113






- Eliminate:
 - carbon deposits
(from the valve face and valve seat)
- Check:
 - valve face
Pitting/wear → Grind the valve face.
 - valve stem end
Mushroom shape or diameter larger than the body of the valve stem → Replace the valve.

- Measure:
 - valve margin thickness (a)
Out of specification → Replace the valve.

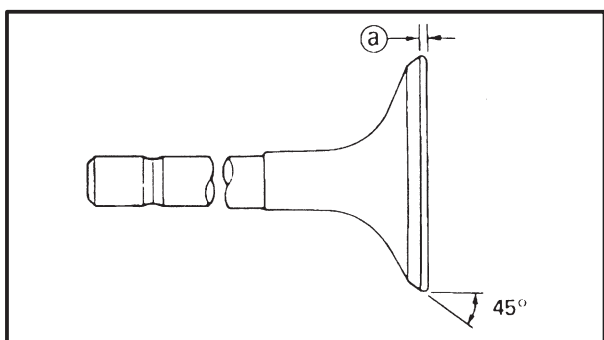

Valve margin thickness
0.6 ~ 0.8 mm
<Limit>: 0.5 mm

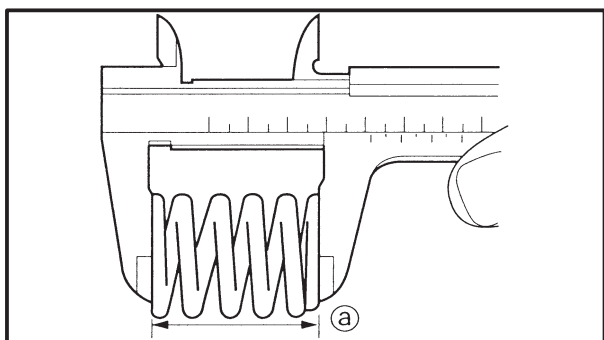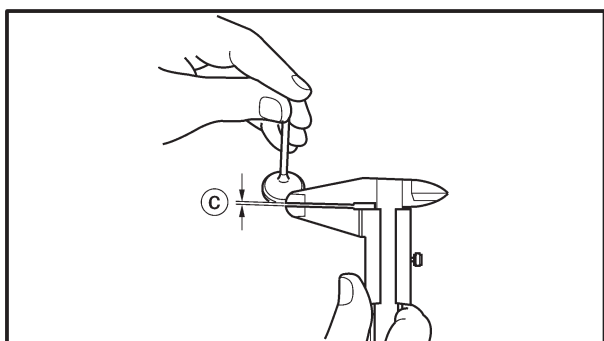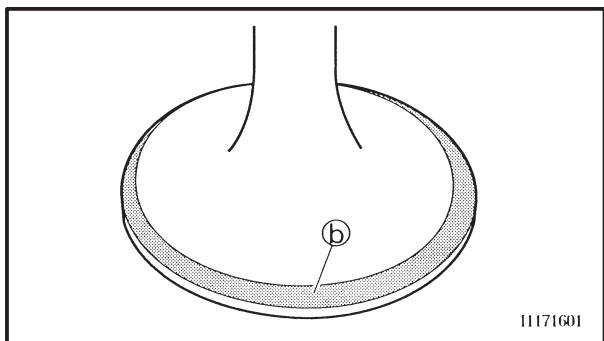

- e. Apply a fine lapping compound to the valve face and repeat the above steps.
- f. After every lapping procedure, be sure to clean off all of the lapping compound from the valve face and valve seat.
- g. Apply Mechanic's blueing dye (Dykem) (b) onto the valve face.
- h. Install the valve into the cylinder head.
- i. Press the valve through the valve guide and onto the valve seat to make a clear impression.
- j. Measure the valve seat width (c) again. If the valve seat width is out of specification, reface and lap the valve seat.



EAS00241

CHECKING THE VALVE SPRINGS


The following procedure applies to all of the valve springs.

1. Measure:
 - valve spring free length (a)
 - Out of specification → Replace the valve spring.

Valve spring free length
(intake and exhaust)

35.59 mm


<Limit>: 33.81 mm

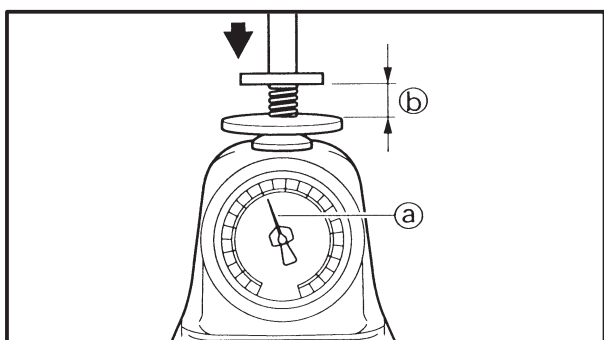

2. Measure:
 - compressed spring force (a)
 - Out of specification → Replace the valve spring.
- (b) Installed length



Compressed spring force
Intake valve spring
 9.3 ~ 10.7 kg at 30.4 mm
Exhaust valve spring
 9.3 ~ 10.7 kg at 30.4 mm

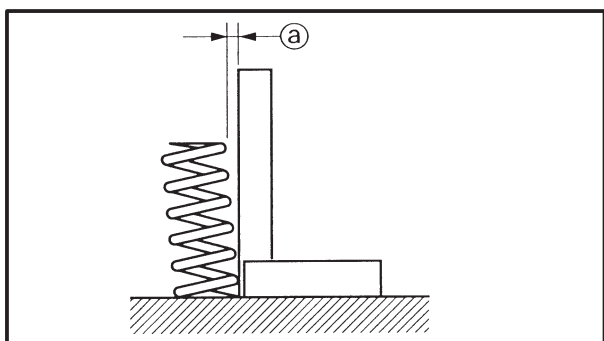


3. Measure:

- valve spring tilt (a)
- Out of specification → Replace the valve spring.



Max. spring tilt
Intake valve spring
 1.6 mm
Exhaust valve spring
 1.6 mm

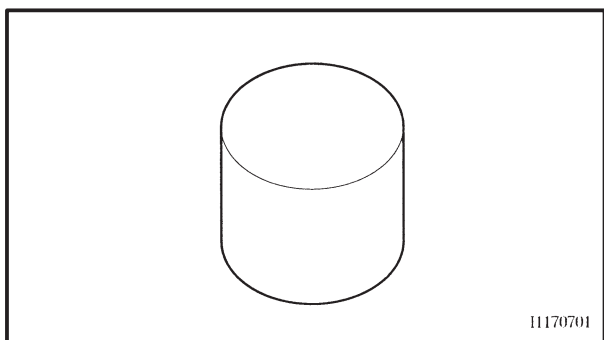


EAS00242

CHECKING THE VALVE LIFTERS

The following procedure applies to all of the valve lifters.

1. Check:
 - valve lifter
 Damage/scratches → Replace the valve lifters and cylinder head.

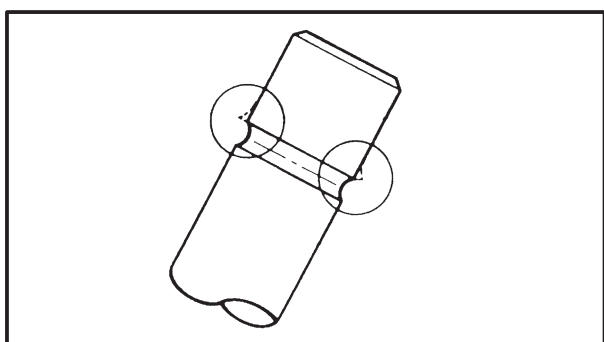


EAS00245


INSTALLING THE VALVES

The following procedure applies to all of the valves and related components.

1. Deburr:
 - valve stem end (with an oil stone)
2. Lubricate:
 - valve stem ①
 - oil seal ② (with the recommended lubricant)

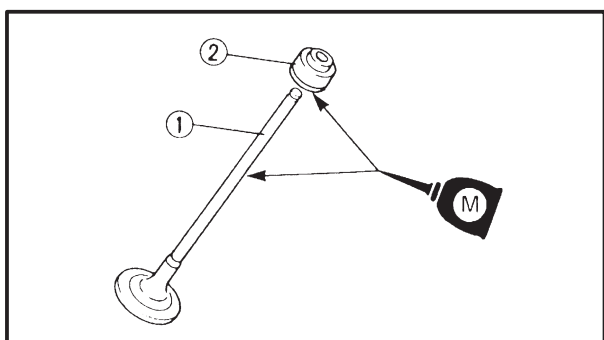

Recommended lubricant
Molybdenum disulfide oil

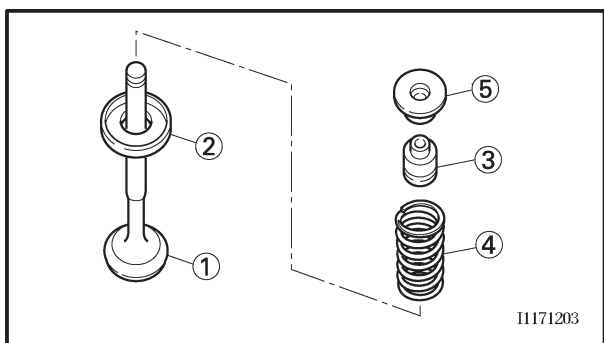


11171203

3. Install:
- valve ①
 - valve spring seat ②
 - oil seal ③ **New**
 - valve spring ④
 - valve retainer ⑤
(into the cylinder head)


NOTE: _____

- Make sure that each valve is installed in its original place.
- Install the valve spring with the larger pitch (a) facing up.

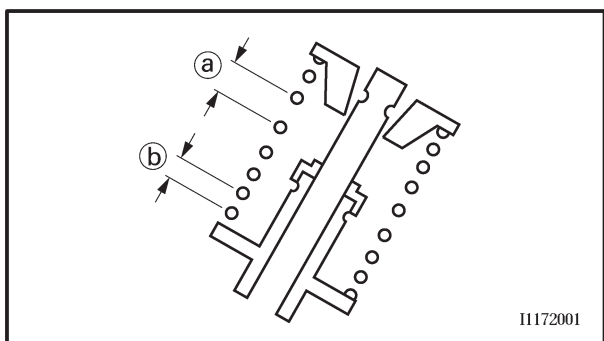

11172001

- (b) Smaller pitch

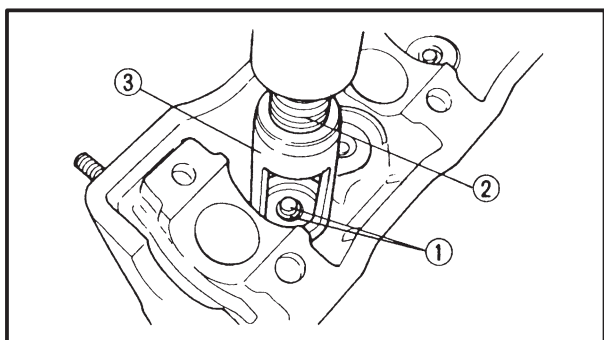


4. Install:
- valve cotteners ①

NOTE: _____

Install the valve cotteners by compressing the valve spring with the valve spring compressor ② and attachment ③.



Valve spring compressor
90890-04109
Attachment
90890-04114

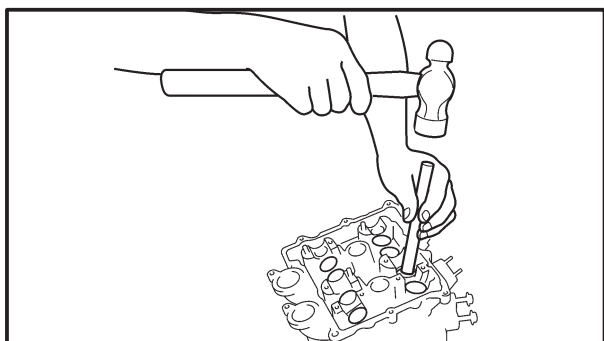

5. To secure the valve cotteners onto the valve stem, lightly tap the valve tip with a soft-face hammer.

CAUTION: _____

Hitting the valve tip with excessive force could damage the valve.



6. Lubricate:
- valve pad
(with the recommended lubricant)



Recommended lubricant
Molybdenum disulfide oil

7. Install:
- valve pad
 - valve lifter


CAUTION: _____

After making sure that the valve pads are fully inserted, install the valve lifter taking care so that the pads do not fall.

NOTE: _____


- The valve lifter must move smoothly when rotated with a finger.
- Each valve lifter and valve pad must be reinstalled in its original position.

STARTER CLUTCH AND GENERATOR

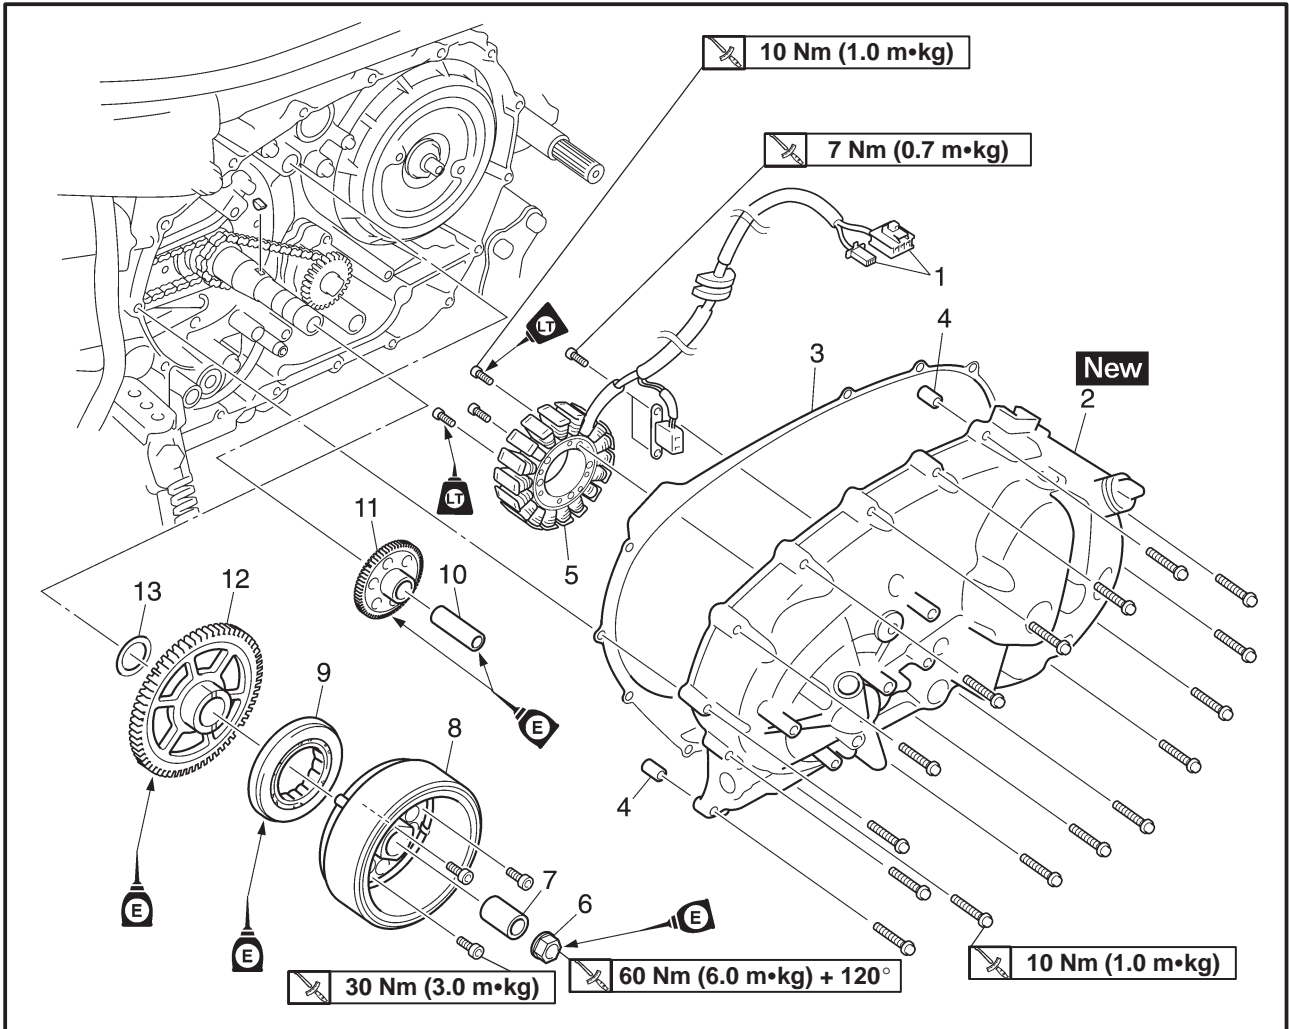

Order	Job/Part	Q'ty	Remarks
	Removing the starter clutch and generator		Remove the parts in the order listed.
	Side panel (left)		
	Lower cover		
	Footrest board		
	Water pump		Refer to "WATER PUMP" in chapter 5. Drain.
	Coolant		Refer to "CHANGING THE COOLANT" in chapter 3.
	Engine oil		Drain. Refer to "CHANGING THE ENGINE OIL" in chapter 3.
1	Starter coil assembly coupler	1	Disconnect.
2	Generator cover	1	Refer to "REMOVING/INSTALLING THE GENERATOR".
3	Generator cover gasket	1	
4	Dowel pin	2	


STARTER CLUTCH AND GENERATOR

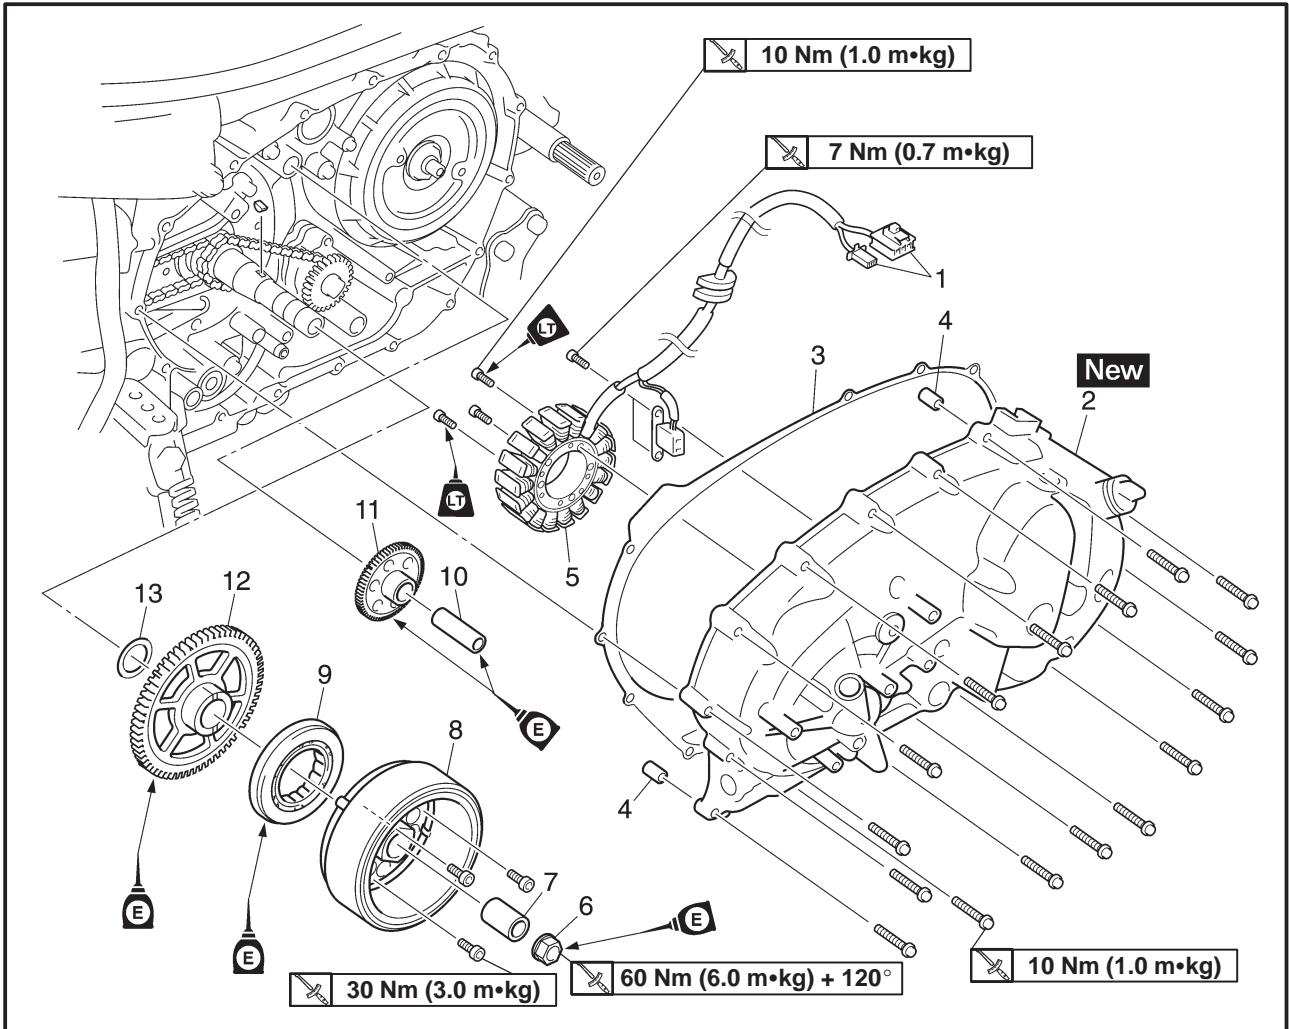

Order	Job/Part	Q'ty	Remarks
5	Starter coil assembly	1	For installation, reverse the removal procedure.
6	Nut	1	
7	Spacer	1	
8	Generator rotor	1	
9	Starter clutch	1	
10	Idler gear shaft	1	
11	Idler gear	1	
12	Starter clutch gear	1	
13	Washer	1	

STARTER CLUTCH AND GENERATOR

ENG

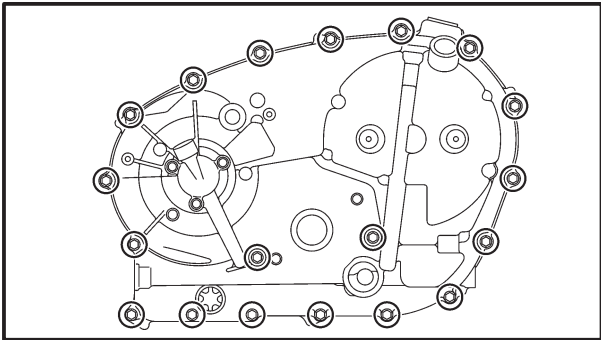


REMOVING THE GENERATOR

1. Remove:

- generator rotor cover

NOTE: _____

Loosen each bolt 1/4 of a turn at a time, in stages and in a crisscross pattern. After all of the bolts are fully loosened, remove them.

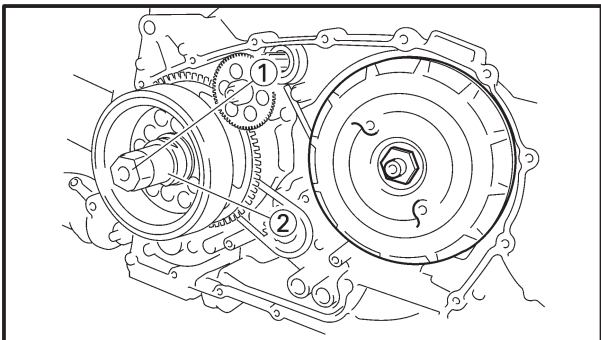


2. Remove:


- generator rotor nut ①
- spacer ②

NOTE: _____

- While holding the generator rotor ③ with the sheave holder ④, loosen the generator rotor nut.
- Do not allow the sheave holder to touch the projection on the generator rotor.

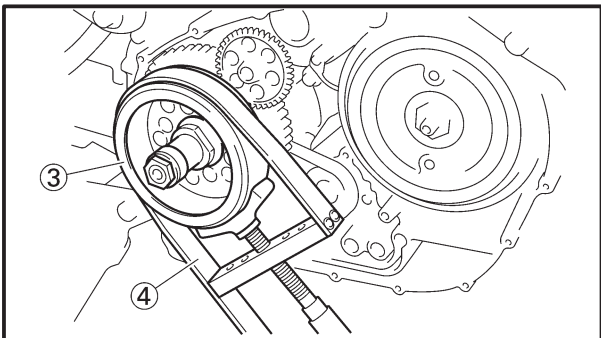

Sheave holder
90890-01701

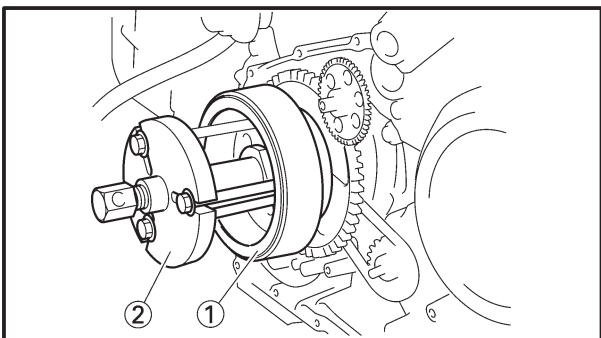

3. Remove:

- generator rotor ①
(with the flywheel puller set ②)
- woodruff key

NOTE: _____

- Remove the rotor ① using the flywheel puller.
- Center the flywheel puller over the rotor. Make sure after installing the holding bolts that the clearance between the flywheel puller and the rotor is the same everywhere. If necessary, one holding bolt may be turned out slightly to adjust the flywheel puller's position.

CAUTION: _____


Cover the crankshaft end with the box wrench for protection.



Flywheel puller set
90890-01362


STARTER CLUTCH AND GENERATOR

ENG

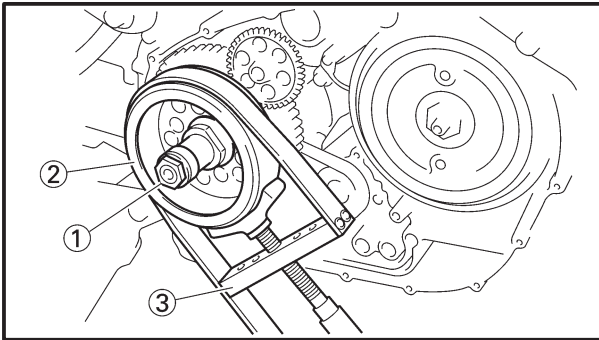


2. Tighten:

- generator rotor nut ①

 **60 Nm (6.0 m•kg) + 120°**

NOTE: _____


- While holding the generator rotor ② with the sheave holder ③, tighten the generator rotor bolt.
- Do not allow the sheave holder to touch the projection on the generator rotor.

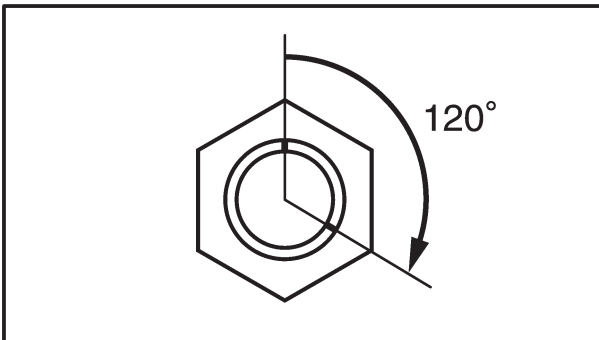

Sheave holder
90890-01701

CAUTION: _____

- When tightening the generator rotor nut, be sure to use an F-type torque wrench.
- After tightening the generator rotor nut, to the specified torque, turn the connecting rod nut another + 120°.

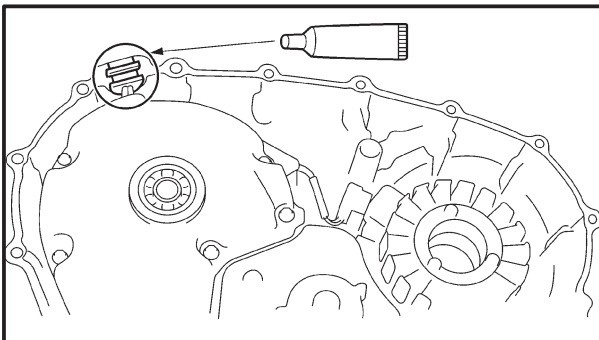

3. Apply:

- sealant
(onto the stator coil assembly lead grommet)



Yamaha bond No1215
90890-85505

4. Install:

- stator coil

5. Install:


- generator rotor cover

NOTE: _____


Tighten the generator rotor cover bolts in stages and in a crisscross pattern.




OIL PUMP

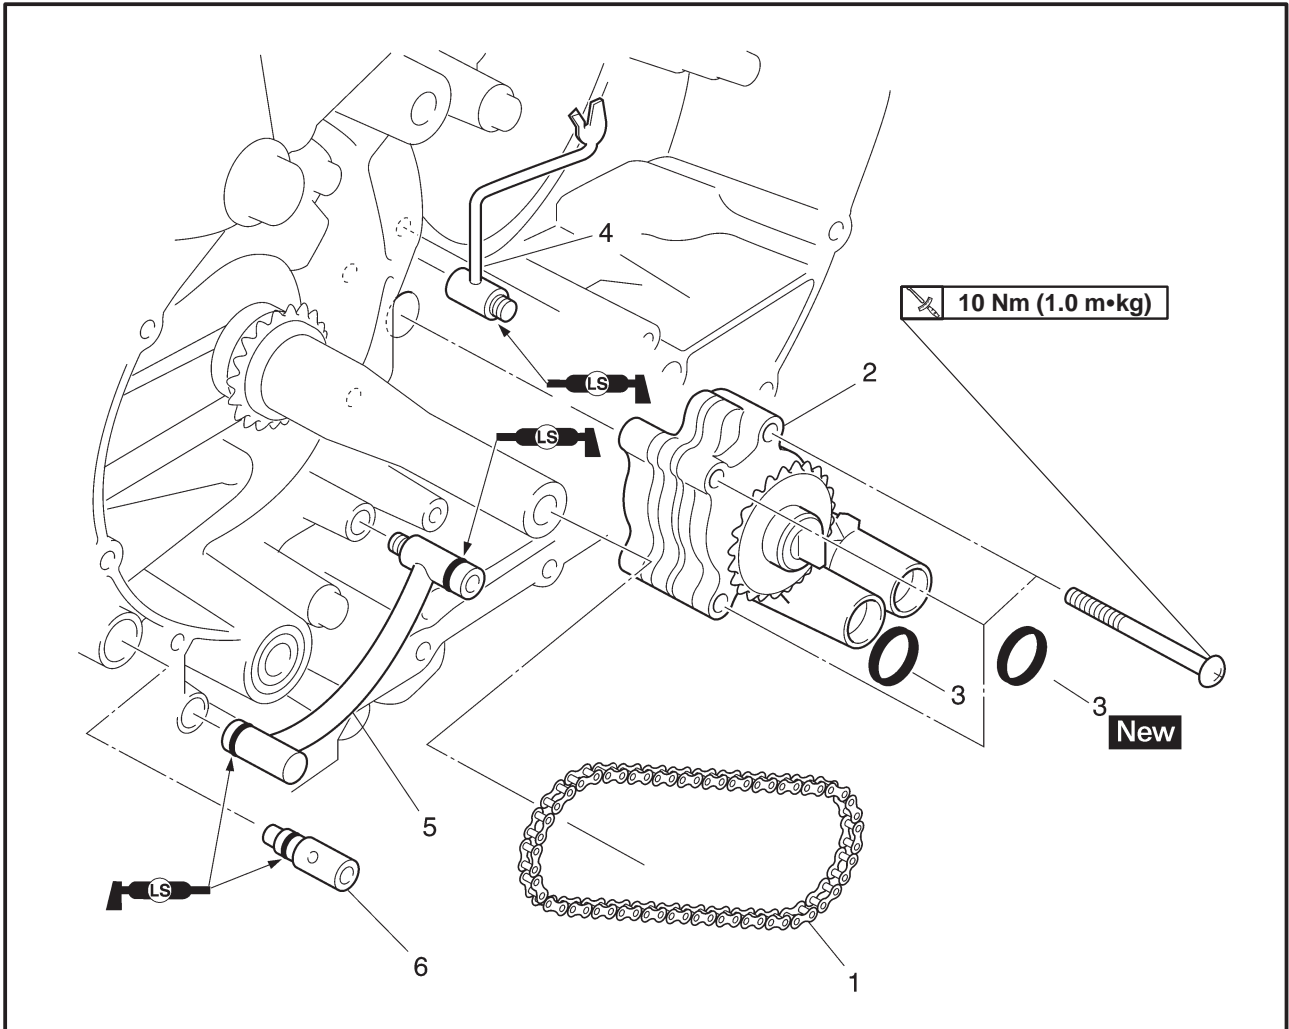



Order	Job/Part	Q'ty	Remarks
	Removing the oil pump		Removing the parts in the order listed.
	Side panel (left)		
	Lower cover		
	Footrest board		
	Coolant		Drain. Refer to "CHANGING THE COOLANT" in chapter 3.
	Engine oil		Drain. Refer to "CHANGING THE ENGINE OIL" in chapter 3.
	Generator cover		Refer to "STARTER CLUTCH AND GENERATOR".
	Starter clutch gear		
1	Oil pump drive chain	1	
2	Oil pump		

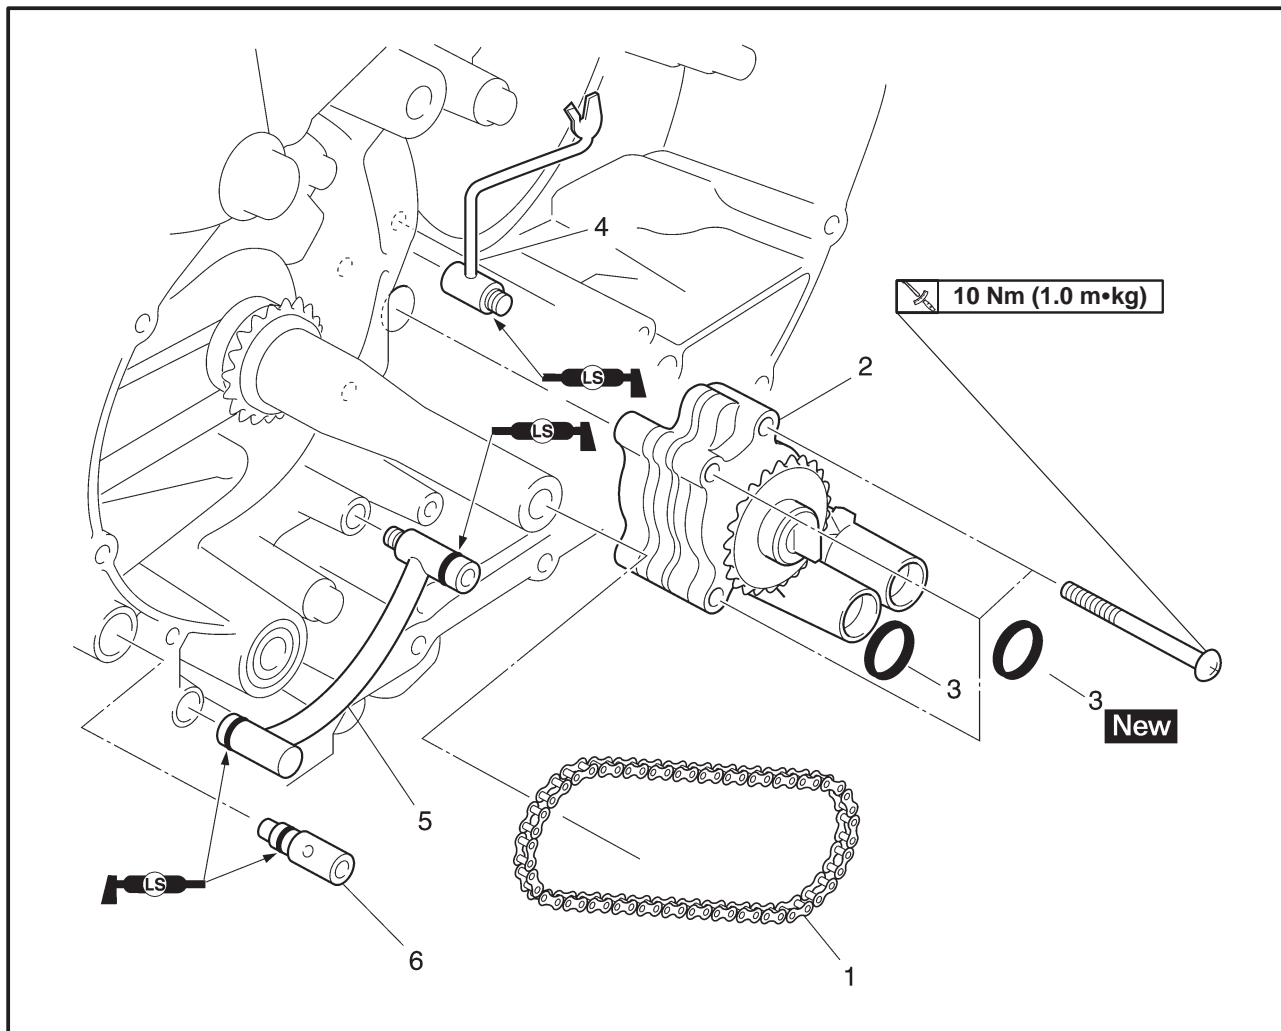

Order	Job/Part	Q'ty	Remarks
3	O-ring	2	For installation, reverse the removal procedure.
4	Oil pipe	1	
5	Oil pipe	1	
6	Relief valve assembly	1	

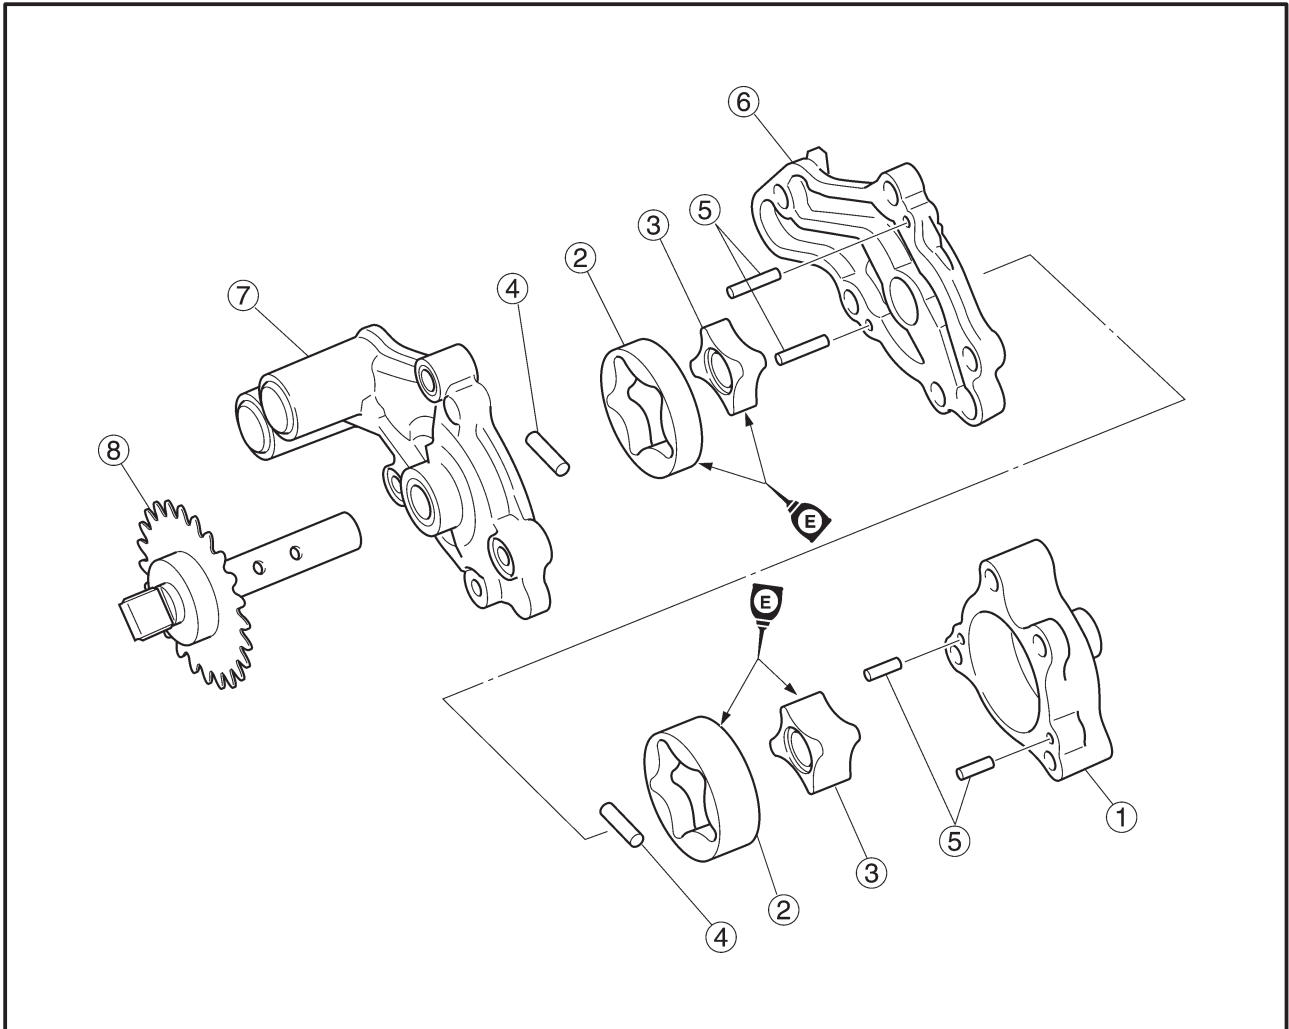

Order	Job/Part	Q'ty	Remarks
	Disassembling the oil pump		Disassemble the parts in the order listed.
①	Oil pump housing	1	
②	Oil pump outer rotor	2	
③	Oil pump inner rotor	2	
④	Pin	2	
⑤	Dowel pin	4	
⑥	Oil pump housing center	1	
⑦	Oil pump cover	1	
⑧	Oil pump driven gear	1	
			For assembly, reverse the disassembly procedure.

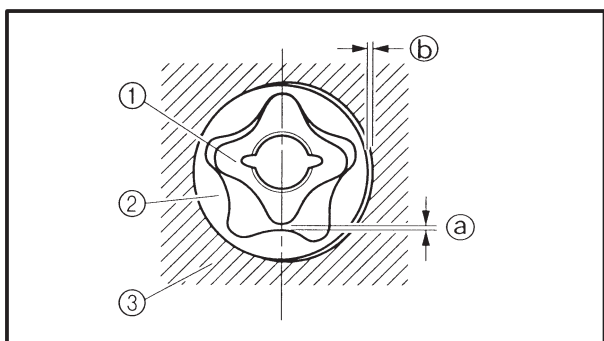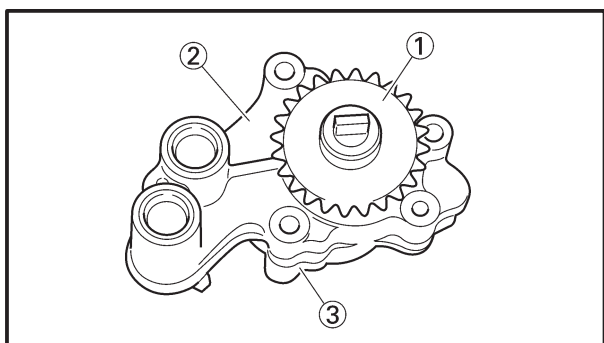

CHECKING THE OIL PUMP

1. Check:

- oil pump driven gear ①
- oil pump housing ②
- oil pump cover ③

Cracks/damage/wear → Replace the defective part(-s).

2. Measure:

- inner-rotor-to-outer-rotor-tip clearance ①
- outer-rotor-to-oil-pump-housing clearance ②

Out of specification → Replace the oil pump.

- ① Inner rotor
- ② Outer rotor
- ③ Oil pump housing



Inner-rotor-to-outer-rotor-tip clearance


0.04 ~ 0.12 mm

<Limit>: 0.20 mm

Outer-rotor-to-oil-pump-housing clearance

0.045 ~ 0.085 mm


<Limit>: 0.15 mm

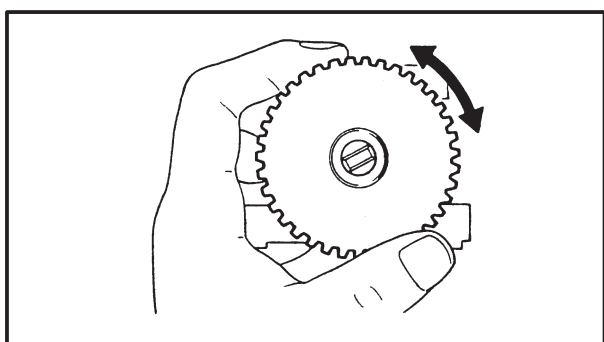

3. Check:

- oil pump operation

Unsmooth → Repair or replace the defective part(-s).

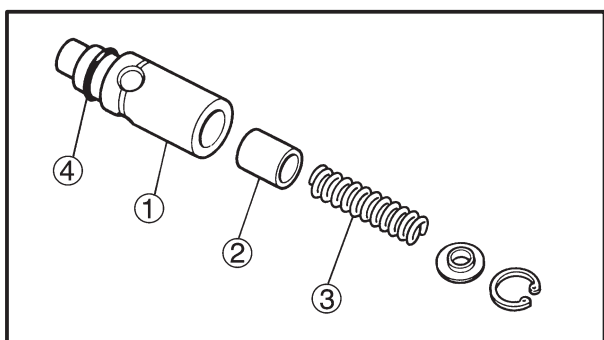


EAS00365

CHECKING THE RELIEF VALVE

1. Check:

- relief valve body ①
- relief valve ②
- spring ③
- O-ring ④

Damage/wear → Replace the defective part(-s).

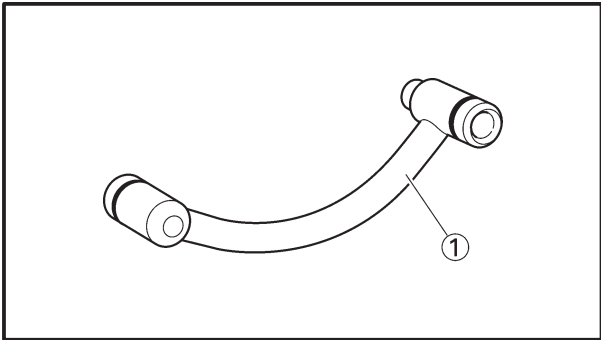

EAS00367

CHECKING THE OIL DELIVERY PIPES

The following procedure applies to all of the oil delivery pipes.

1. Check:


- oil delivery pipe ①
Damage → Replace.
Obstruction → Wash and blow out with compressed air.

EAS00368

CHECKING THE OIL STRAINER

1. Check:

- oil strainer
Damage → Replace.
Contaminants → Clean with engine oil.

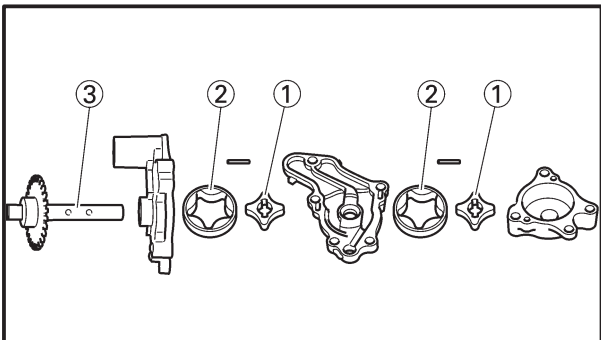


ASSEMBLING THE OIL PUMP

1. Lubricate:

- inner rotor ①
- outer rotor ②
- oil pump driven gear ③
(with the recommended lubricant)

	Recommended lubricant Engine oil
--	---

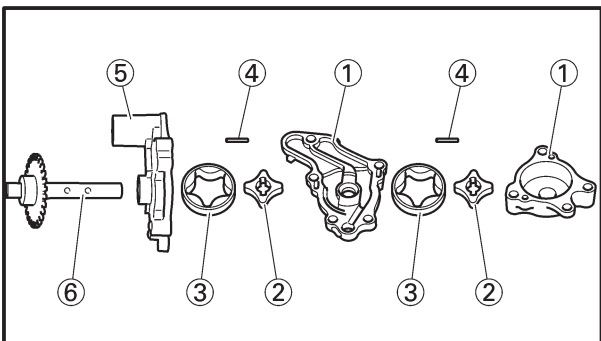


2. Install:

- oil pump housing ①
- outer rotor ②
- inner rotor ③
- pins ④
- oil pump cover ⑤
- oil pump driven gear ⑥

10 Nm (1.0 m•kg)

NOTE:


When installing the inner rotor, align the pin ① in the oil pump shaft with the groove ② on the inner rotor ③.

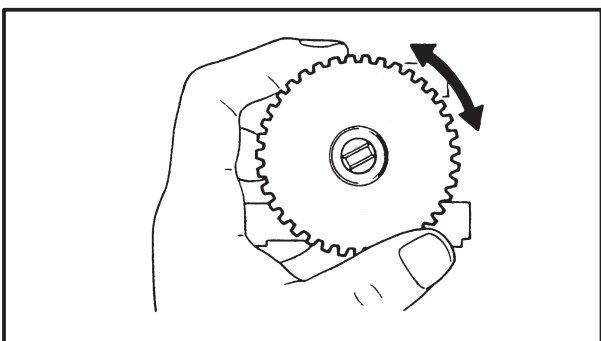


3. Check:

- oil pump operation
Refer to "CHECKING THE OIL PUMP".


CLUTCH 

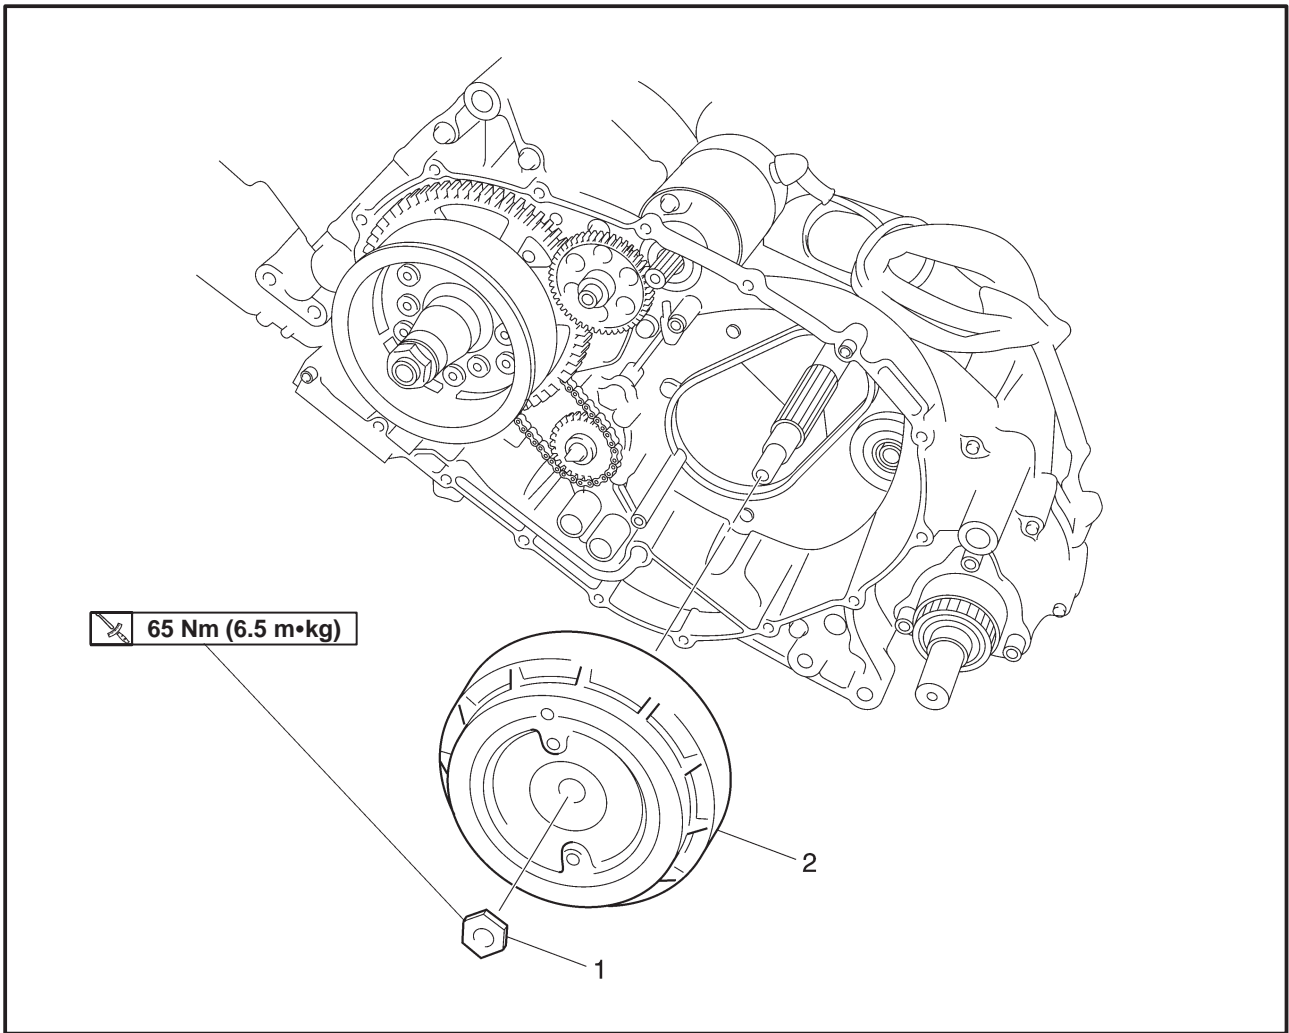


Order	Job/Part	Q'ty	Remarks
	Removing the clutch assembly		
	Generator cover		Remove the parts in the order listed. Refer to "STARTER CLUTCH AND GENERATOR".
1	Nut	1	
2	Clutch assembly	1	
			For installation, reverse the removal procedure.

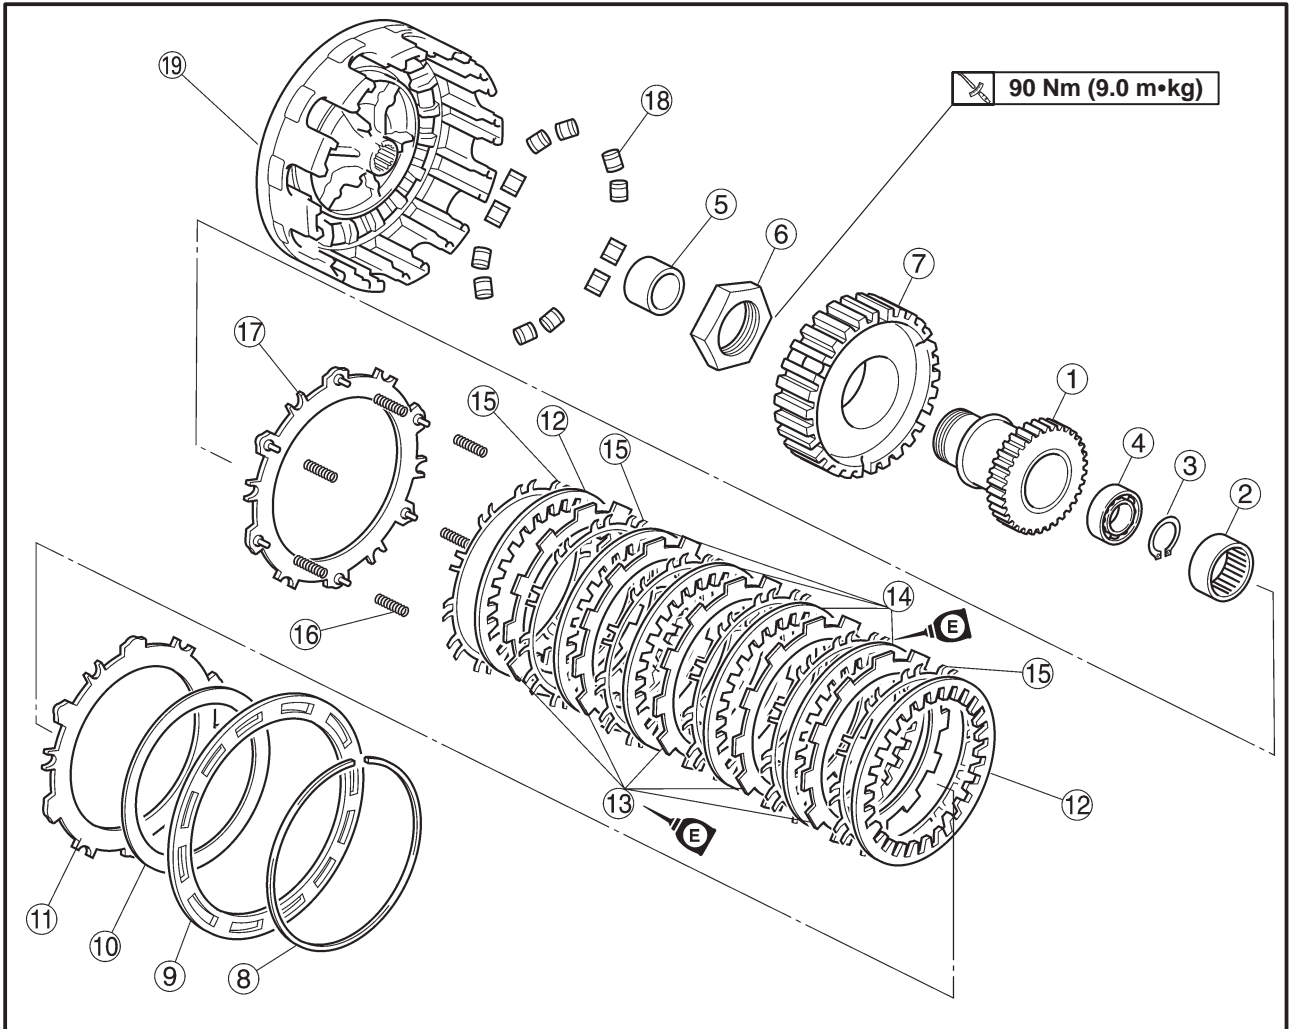

Order	Job/Part	Q'ty	Remarks
	Disassembling the clutch		Disassemble the parts in the order listed.
①	Primary drive gear	1	
②	Rollar bearing	1	
③	Circlip	1	
④	Bearing	1	
⑤	Collar	1	
⑥	Nut	1	
⑦	Clutch boss	1	
⑧	Circlip	1	
⑨	Spring plate stopper	1	
⑩	Clutch spring 2	1	
⑪	Pressure plate	1	
⑫	Clutch plate 2	2	
⑬	Friction plate	5	
⑭	Clutch plate 1	4	
⑮	Clutch spring	6	

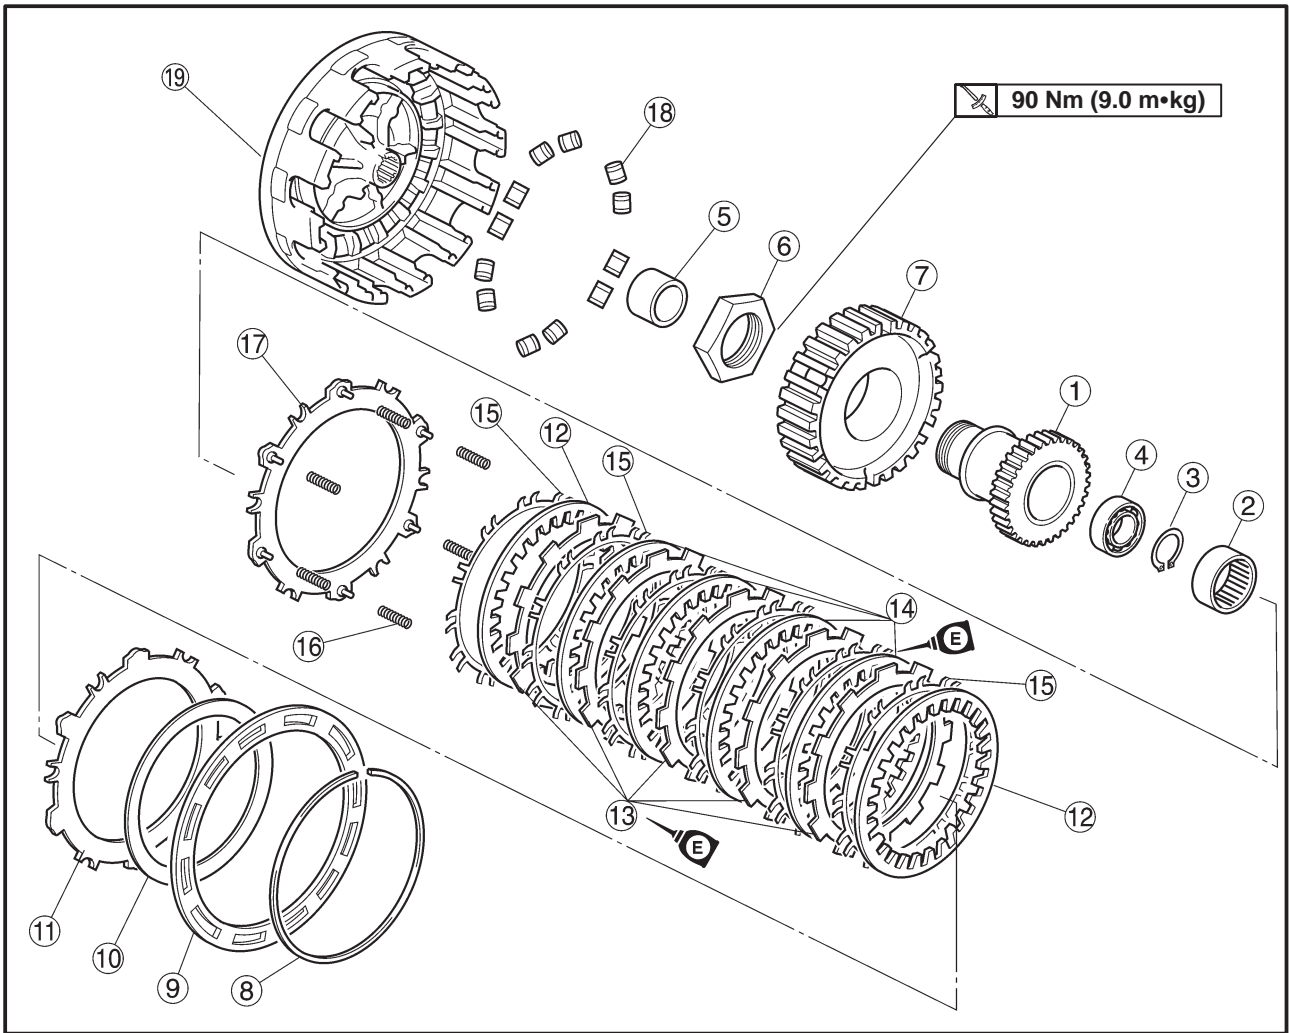

Order	Job/Part	Q'ty	Remarks
①⑥	Spring	6	For assembly, reverse the disassembly procedure.
①⑦	Thrust plate	1	
①⑧	Weight	12	
①⑨	Clutch housing	1	

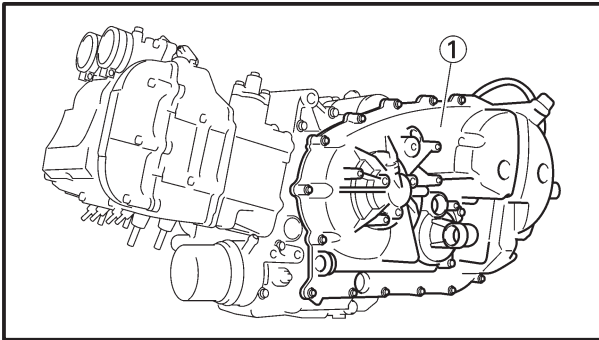**REMOVING THE CLUTCH**

1. Remove:


- generator cover ①

Refer to "STARTER CLUTCH AND GENERATOR".

NOTE:

Loosen each bolt 1/4 of a turn at a time, in stages and in a crisscross pattern.

After all of the bolts are fully loosened, remove them.

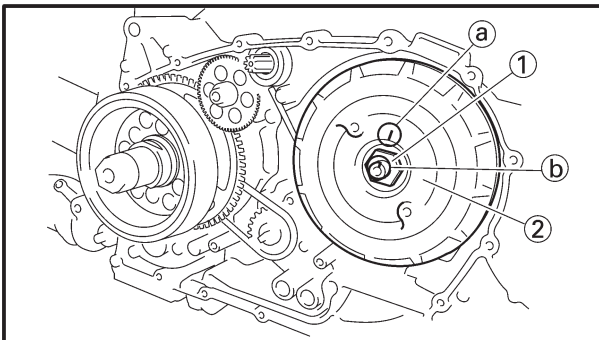


2. Remove:

- nut ①
- clutch assembly ②
- clutch boss

NOTE:

Before removal, apply (a) and (b) alignment marks.

Align these marks during reassembly.

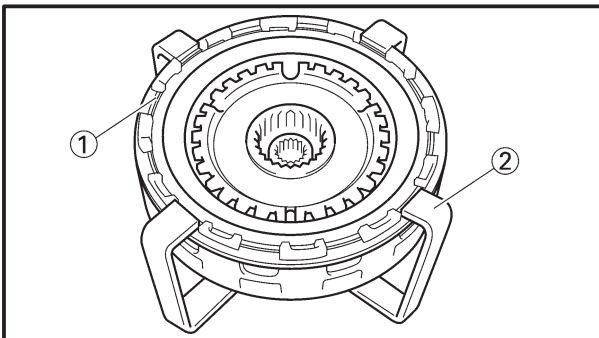

3. Remove:

- circlip ①

NOTE:


Install the clutch spring holder ② onto the clutch assembly as shown. Then, compress the spring, and remove the circlip ①.



Clutch spring compressor
90890-01482

4. Remove:

- spring plate stopper
- clutch spring
- pressure plate
- friction and clutch plates
- weight thrust plate
- weights
- springs

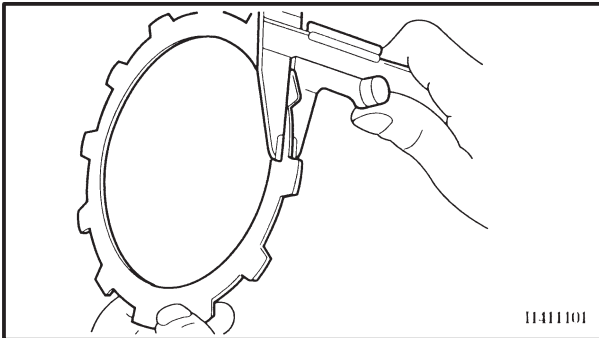

EAS00280

CHECKING THE FRICTION PLATES

The following procedure applies to all of the friction plates.

1. Check:
 - friction plate
Damage/wear → Replace the friction plates as a set.
2. Measure:
 - friction plate thickness
Out of specification → Replace the friction plates as a set.

NOTE:

Measure the friction plate at four places.

**Friction plate thickness**

2.75 ~ 3.05 mm



<Limit>: 2.65 mm

EAS00281

CHECKING THE CLUTCH PLATES

The following procedure applies to all of the clutch plates.

1. Check:
 - clutch plate
Damage → Replace the clutch plates as a set.
2. Measure:
 - clutch plate warpage
(with a surface plate and thickness gauge ①)
Out of specification → Replace the clutch plates as a set.

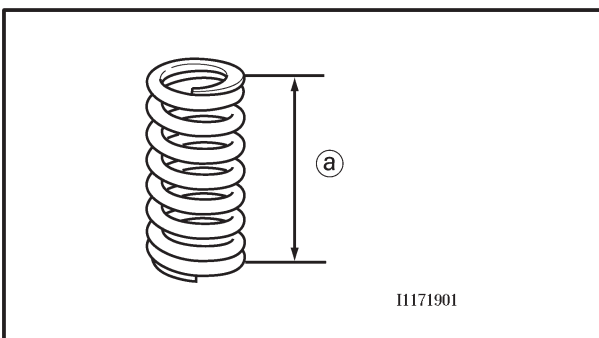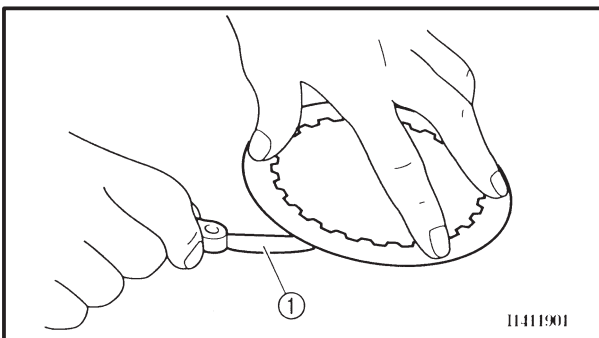**Max. clutch plate warpage**

0.1 mm


CHECKING THE SPRINGS AND CLUTCH SPRINGS

The following procedure applies to all of the springs.

1. Measure:
 - spring free length ②
Out of specification → Replace the spring.

**Spring Limit**

25.4 mm

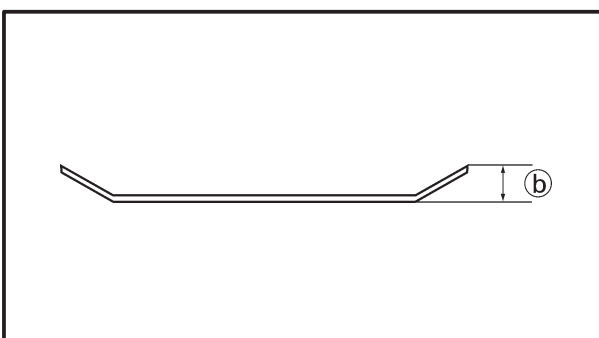


2. Measure:

- clutch spring ③
Out of specification → Replace the clutch spring

**Clutch spring limit**

2.9 mm

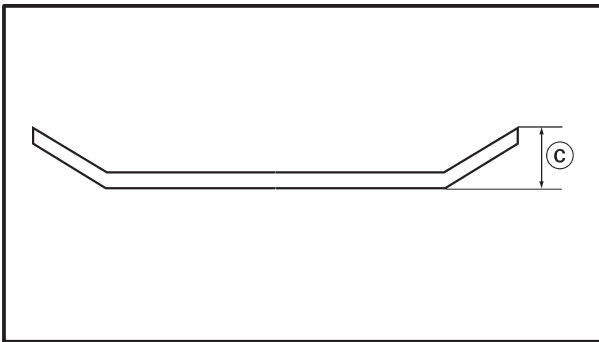


3. Measure:

- clutch spring 2 ©
- Out of specification → Replace the clutch spring 2



Clutch spring 2 limit
4.4 mm

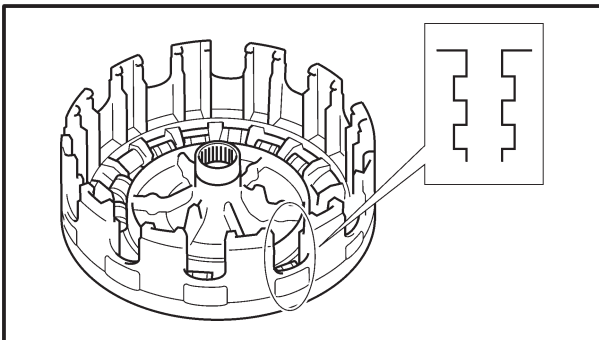

EAS00284


CHECKING THE CLUTCH HOUSING

1. Check:

- clutch housing dogs
- Damage/pitting/wear → Deburr the clutch housing dogs or replace the clutch housing.

NOTE: _____

Pitting on the clutch housing dogs will cause erratic clutch operation.

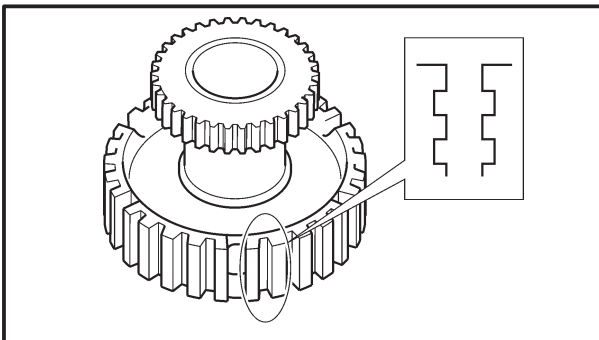

EAS00285


CHECKING THE CLUTCH BOSS

1. Check:

- clutch boss splines
- Damage/pitting/wear → Replace the clutch boss.

NOTE: _____

Pitting on the clutch boss splines will cause erratic clutch operation.

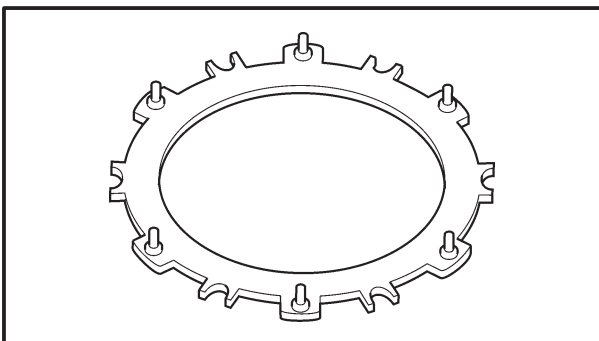


EAS00286

CHECKING THE PRESSURE PLATE

1. Check:

- pressure plate
 - thrust plate
- Cracks/damage → Replace.

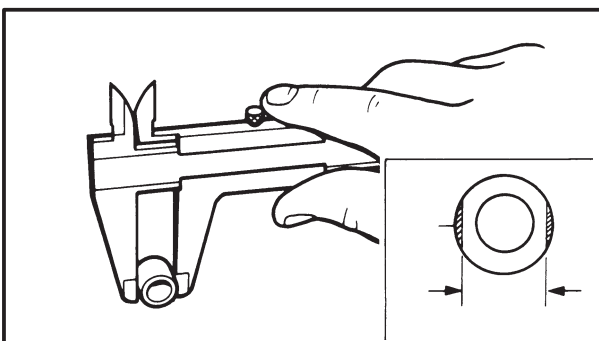

CHECKING THE WEIGHT


- Check:
 - weight
- Cracks/wear/scaling/chipping → Replace.
Out of specification → Replace.



Weight outside diameter:
16.0 mm
<Limit>: 15.5 mm



BELT DRIVE
BELT DRIVE COVER

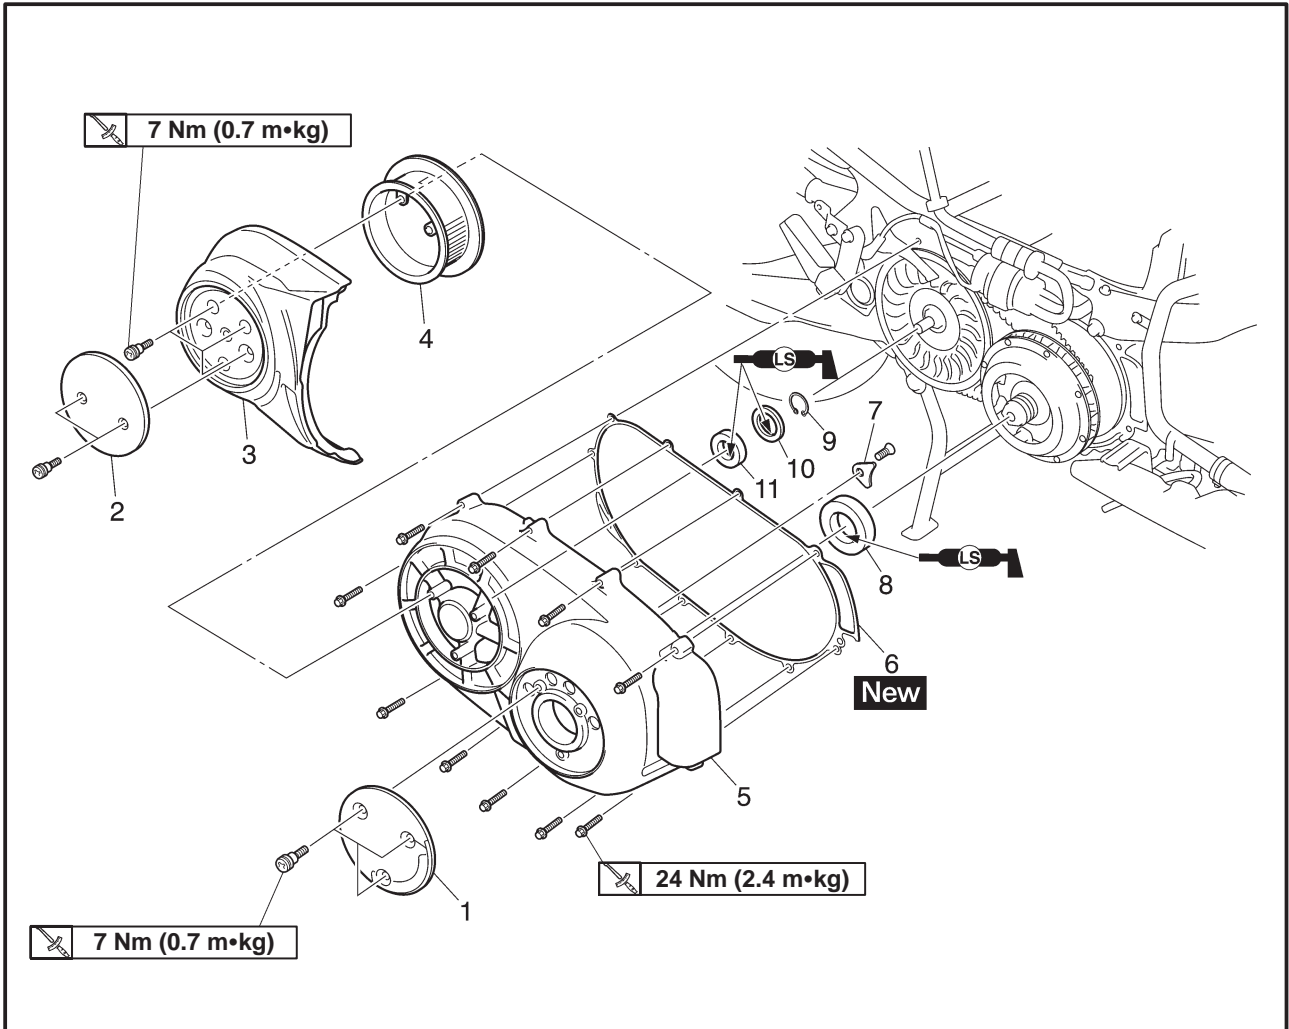


Order	Job/Part	Q'ty	Remarks
	Removing the belt drive cover		Remove the parts in the order listed.
	Side panel (right)		
	Lower cover		
	Footrest board		
1	Protector cover 1	1	
2	Protector cover 2	1	
3	Filter cover	1	
4	Filter	1	
5	Belt drive cover	1	
6	Belt drive cover gasket	1	
7	Bearing cover plate	1	
8	Bearing	1	
9	Circlip	1	
10	Oil seal	1	
11	Bearing	1	
			For installation, reverse the removal procedure.



BELT DRIVE




* Shell BT grease 3®

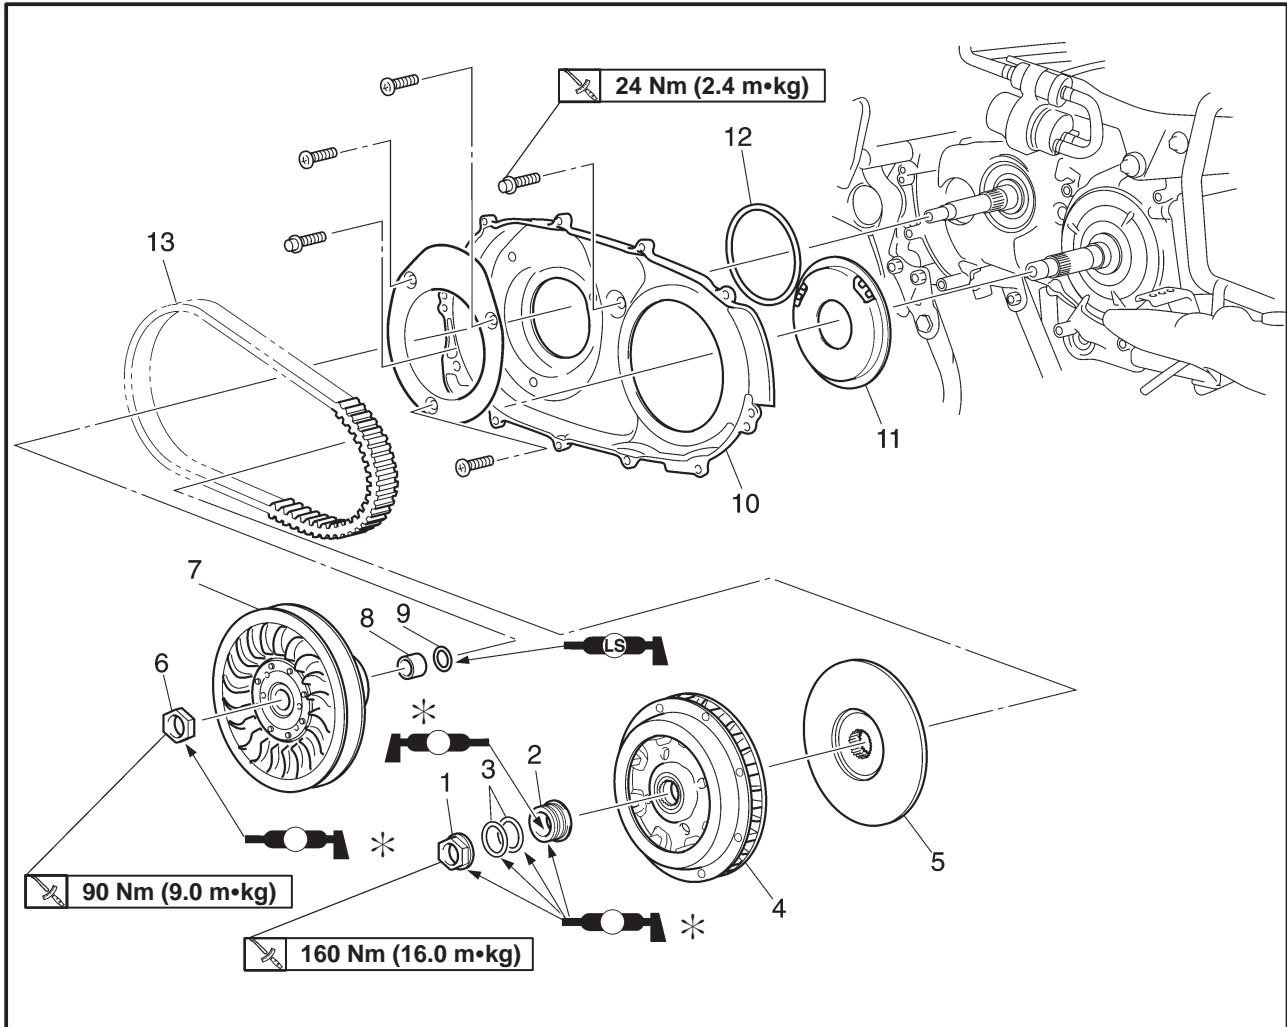

Order	Job/Part	Q'ty	Remarks
	Removing the belt drive		Remove the parts in the order listed.
1	Primary sheave nut	1	
2	Spacer	1	
3	O-ring	2	
4	Primary sheave assembly	1	
5	Primary fixed sheave	1	
6	Secondary sheave nut	1	
7	Secondary sheave assembly	1	
8	Collar	1	
9	O-ring	1	
10	Cover	1	
11	Plate	1	
12	Air duct seal	1	
13	Belt	1	
			For installation, reverse the removal procedure.




* Shell BT grease 3®

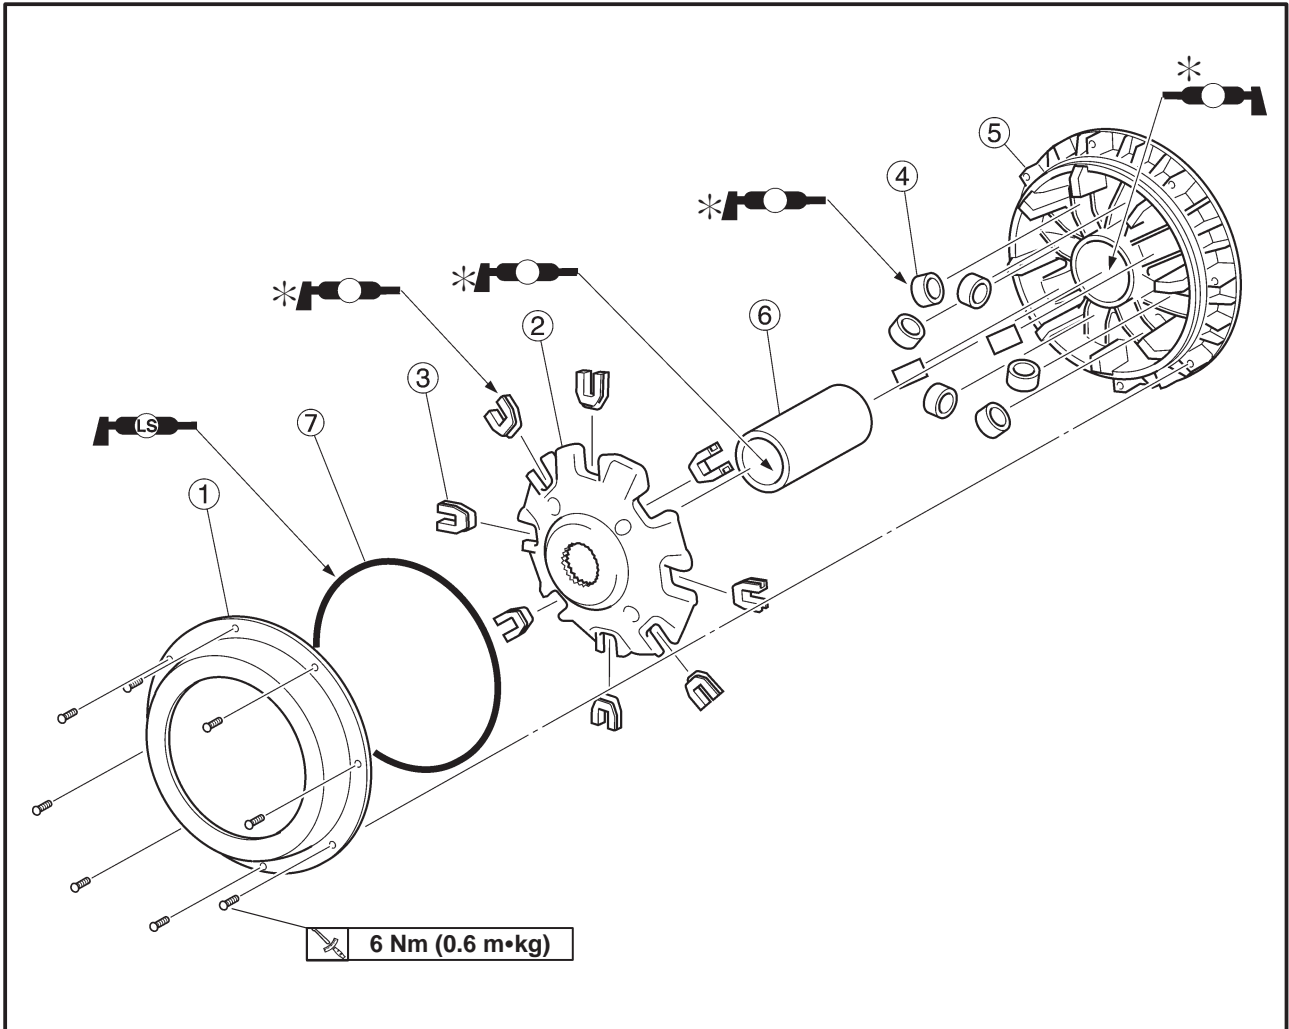


Order	Job/Part	Q'ty	Remarks
	Disassembling the primary sheave		Dissassemble the parts in the order listed.
①	Stopper	1	
②	Cam	1	
③	Slider	8	
④	Weight	8	
⑤	Primary sliding sheave	1	
⑥	Collar	1	
⑦	O ring	1	
			For assembly, reverse the disassembly procedure.



* BEL-RAY assembly lube®

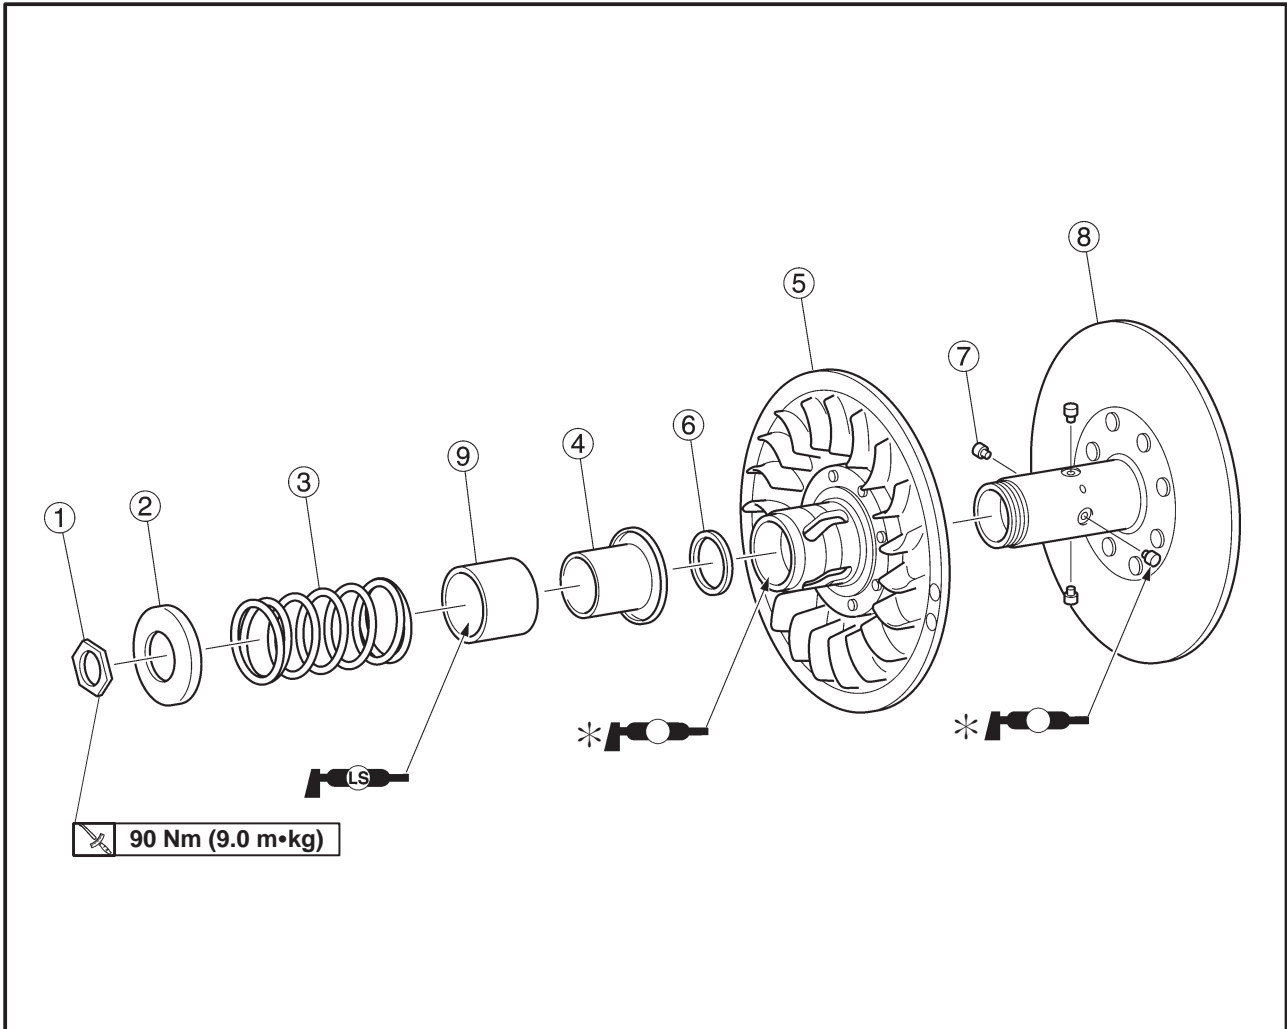

Order	Job/Part	Q'ty	Remarks
	Disassembly the secondary sheave		Disassemble the parts in the order listed.
①	Nut	1	
②	Upper spring seat	1	
③	Compression spring	1	
④	Spring seat	1	
⑤	Secondary sliding sheave	1	
⑥	Oil seal	1	
⑦	Guide pin	4	
⑧	Secondary fixed sheave	1	
⑨	Collar	1	
			For assembly, reverse the disassembly procedure.

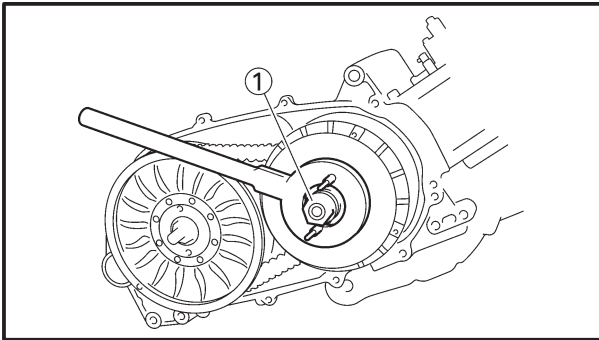


REMOVING THE PRIMARY SHEAVE ASSEMBLY, SECONDARY SHEAVE ASSEMBLY AND V-BELT

1. Remove:


- primary sheave nut ①
- secondary sheave nut ②

NOTE:

While holding the primary and secondary sheave with the sheave holder, loosen the nut.

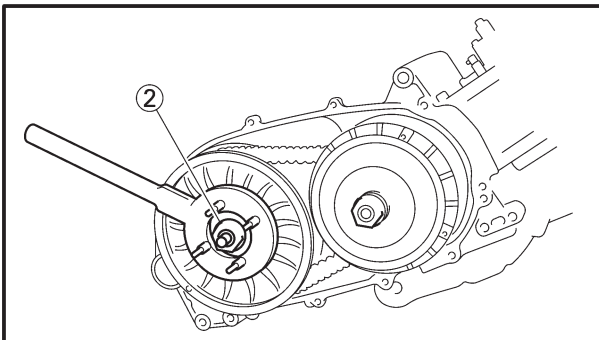

Sheave holder
90890-01481

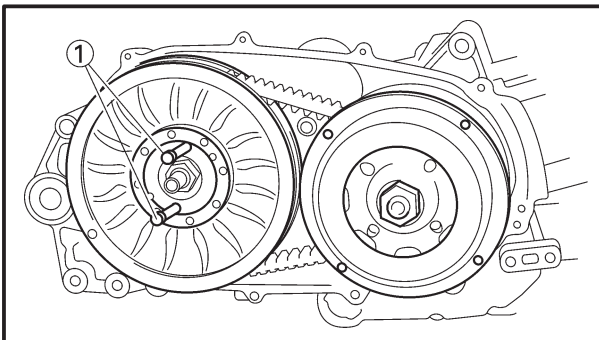


2. Install:

- bolts ①

NOTE:

Insert M6 bolts (more than 45 mm) into the holes of the secondary sheave assembly, and then tighten the bolts to open the secondary sheave assembly.

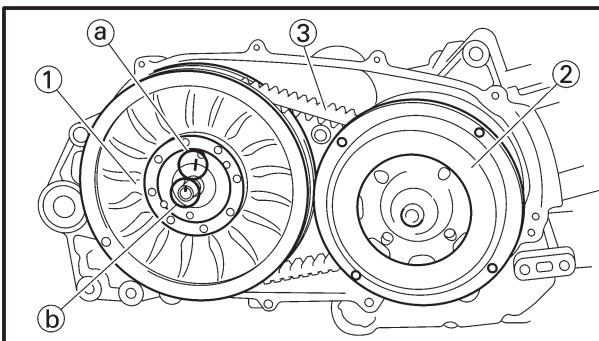

3. Remove:


- primary sliding sheave ②
- secondary sheave assembly ①
- V-belt ③

NOTE:

• Before removal, apply (a) and (b) alignment marks.


Align these marks during reassembly.

• Remove the primary sliding sheave, secondary sheave assembly and V-belt together.

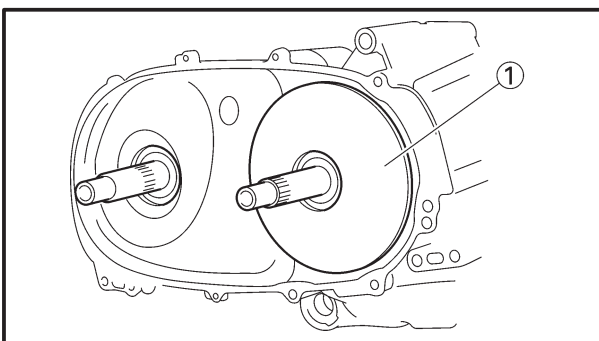


4. Remove:

- primary fixed sheave ①

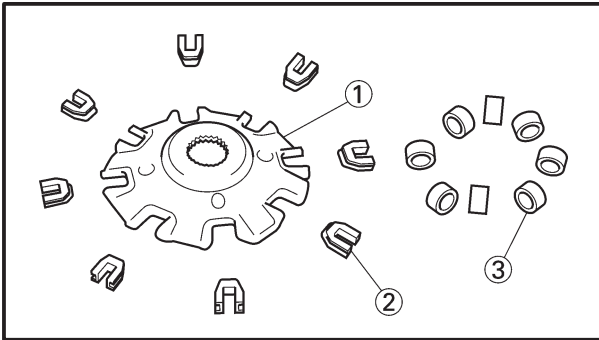

DISASSEMBLING THE PRIMARY SHEAVE

1. Remove:
 - cam ①
 - slider ②
 - weight ③

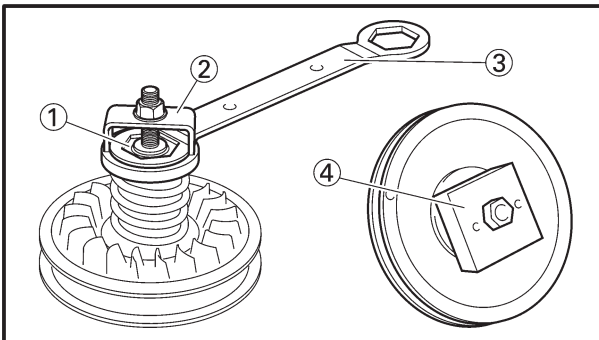

DISASSEMBLING THE SECONDARY SHEAVE

1. Remove:
 - secondary sheave nut ①

NOTE:

Install the sheave spring compressor ② onto the secondary sheave as shown. Then, compress the spring, and remove the secondary pulley nut ① with locknut wrench ③.



Sheave spring compressor ②


90890-04134

Locknut wrench ③

90890-01348

Sheave fixed block ④

90890-04135

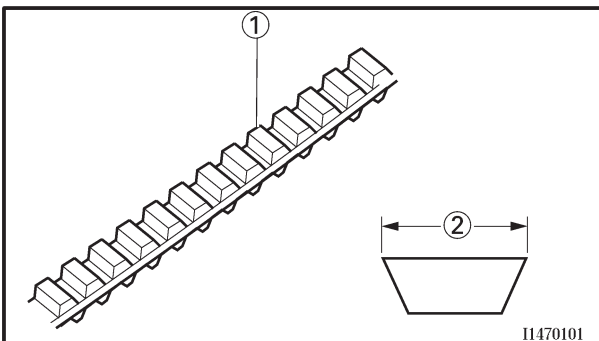

CHECKING THE V-BELT


1. Check:
 - V-belt ①
Cracks/damage/wear → Replace.
Grease/oil → Check the primary and secondary pulleys.
2. Measure:
 - V-belt width ②
Out of specification → Replace.



V-belt width


32 mm

<Limit>: 30.5 mm

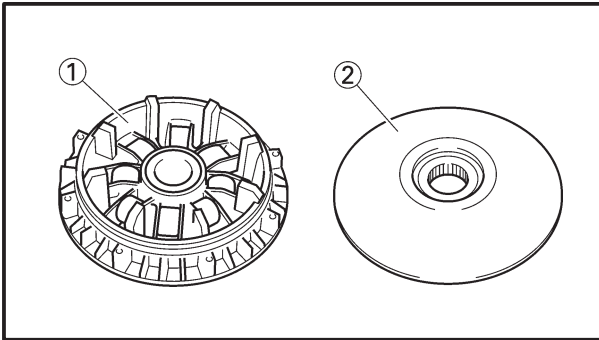

CHECKING THE PRIMARY SHEAVE

1. Check:
 - primary sliding sheave ①
 - primary fixed sheave ②
 Cracks/damage/wear → Replace the primary sliding sheave and primary fixed sheave as a set.

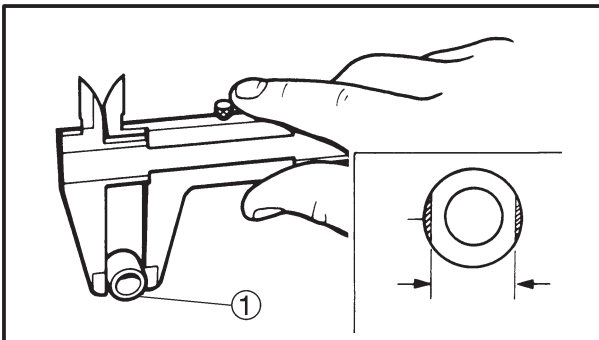


CHECKING THE WEIGHT

1. Check:
 - weight ①
 Cracks/wear/scaling/chipping → Replace.
 Out of specification → Replace.




Weight outside diameter:
25.0 mm
 <Limit>: 24.5 mm

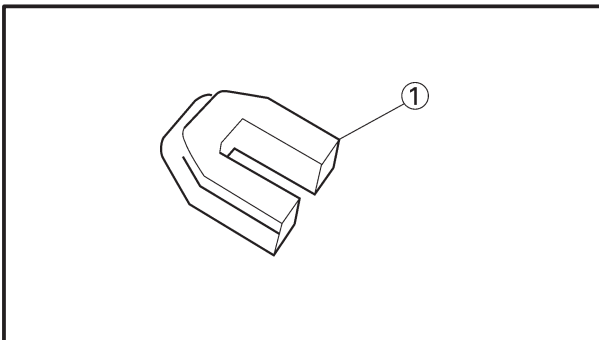

CHECKING THE SLIDER

1. Check:
 - slider ①
 Cracks/damage/wear → Replace

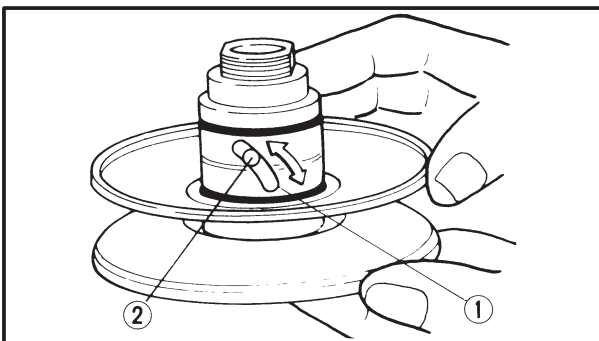

EAS00322

CHECKING THE SECONDARY SHEAVE


1. Check:
 - secondary fixed sheave
 - secondary sliding sheave
 Cracks/damage/wear → Replace the secondary fixed and sliding sheaves as a set.
2. Check:
 - torque cam groove ①
 Damage/wear → Replace the secondary fixed and sliding sheaves as a set.
3. Check:
 - guide pin ②
 Damage/wear → Replace the secondary fixed and sliding sheaves as a set.



ASSEMBLING THE PRIMARY SHEAVE

1. Clean:
- primary fixed sheave
 - primary sliding sheave
 - collar
 - weight
 - slider
 - cam
 - stopper


NOTE: _____
Remove any excess grease.

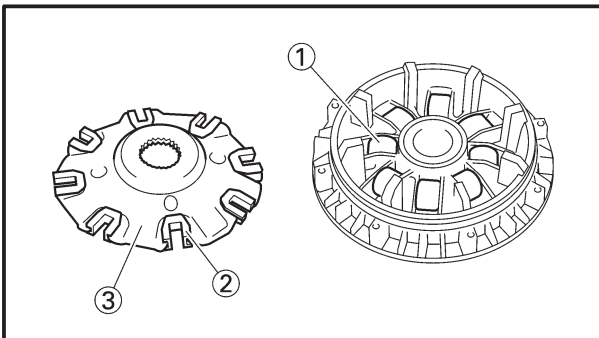

2. Install:
- weight ①
 - slider ②
 - cam ③


NOTE: _____

- Before installing the weights, lubricate the inside and outside of each weight with Shell BT grease 3[®].
- Put in approximately 80 g of grease.

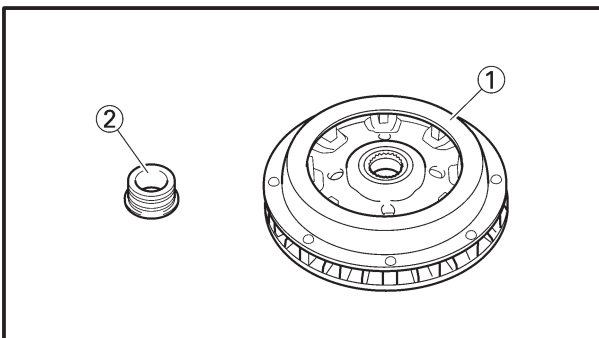


	Recommended lubricant Shell BT grease 3[®]
---	--

3. Install:
- primary sliding sheave cap ①

 **6.0 Nm (0.6 m•kg)**

- collar ②

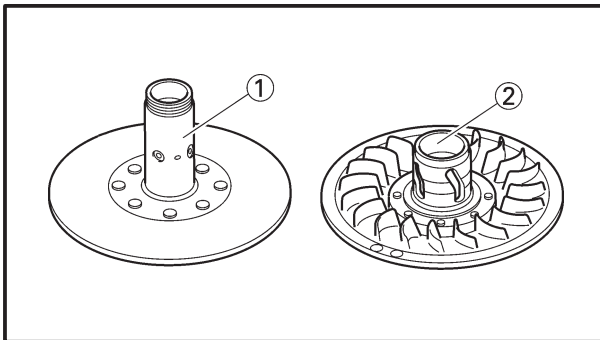


EAS00324

ASSEMBLING THE SECONDARY SHEAVE

1. Lubricate:


- secondary fixed sheave's outer and inner surface ①
 - secondary sliding sheave's outer and inner surface ②
 - grease nipple groove
 - oil seals
 - bearings
- (with the recommended lubricant)

	Recommended lubricant BEL-RAY assembly lube®
---	---

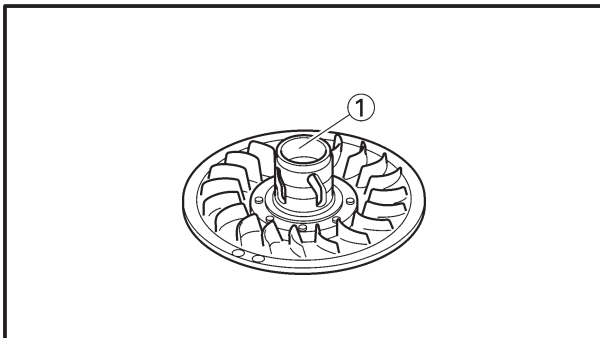

2. Install:

- secondary sliding sheave ①

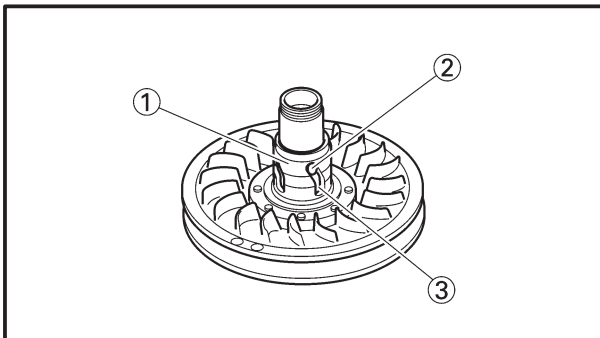

3. Install:


- guide pin ②

4. Lubricate:

- guide pin groove ③
- oil seal **New**


(with the recommended lubricant)

	Recommended lubricant BEL-RAY assembly lube®
---	---

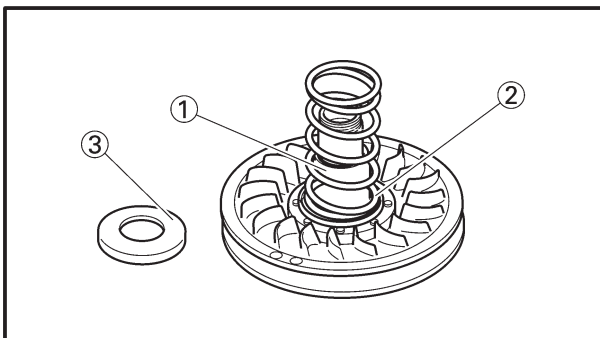

5. Install:

- spring seat ①
- compression spring ②
- upper spring seat ③

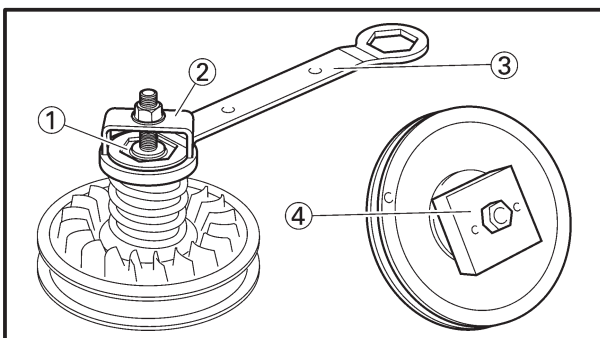

NOTE:


Attach the sheave spring compressor ② onto the secondary sheave as shown.





Then compress the spring, and tighten the secondary sheave nut ① with locknut wrench ③.



Sheave spring compressor ②
90890-04134
Locknut wrench ③
90890-01348
Sheave fixed block ④
90890-04135

6. Tighten:
• nut

 90 Nm (9.0 m•kg)

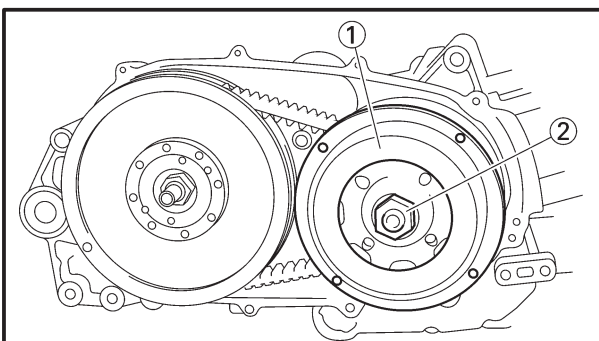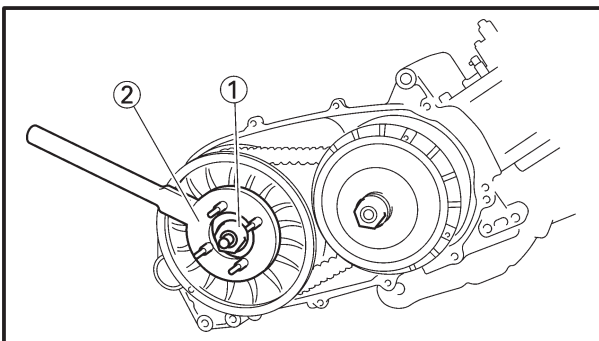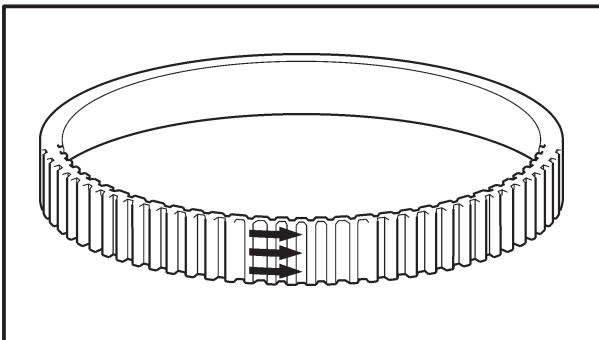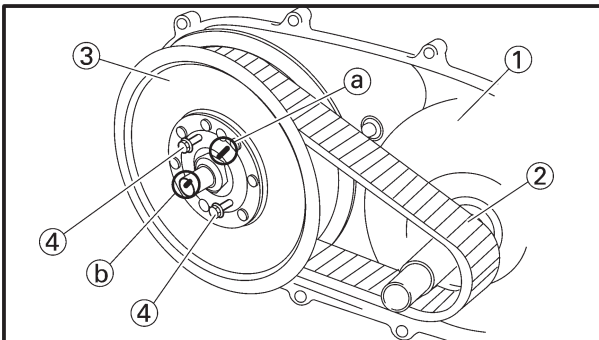

INSTALLING THE BELT DRIVE

1. Install:
- primary fixed sheave ①
 - V-belt ②
 - secondary sheave assembly ③


CAUTION:

Do not allow grease to contact the V-belt and secondary pulley

NOTE:

- When installing the belt, screw M6 (more than 45 mm) bolts ④ to spread apart the secondary sheave and then install the belt. Make sure the belt pullout direction is correct.
- Install the V-belt and secondary sheave assembly onto the primary sheave side.
- Align the ① and ② during reassembly.

2. Tighten:
• secondary sheave nut ①

 90 Nm (9.0 m•kg)


NOTE:

While holding the secondary sheave with the primary/secondary sheave holder ②, tighten the secondary sheave nut ①.



Sheave holder
90890-01481

3. Install:
- primary sliding sheave ①
 - spacer
 - primary sheave nut ②

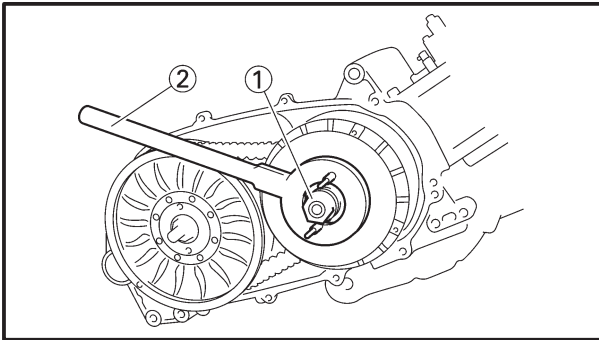

4. Tighten:

- primary sheave nut ①  160 Nm (16.0 m•kg)

CAUTION:

- Before tightening the nut to remount the primary sheave, make sure that the serration of the cam brinells deeply into the serration of the crankshaft. Also, fully tighten the nut as far as the clepths while holding down the cam so as not to allow the serration to disengage.
- Apply grease to the thread and seat of the primary sheave nut.



Recommended lubricant
Shell BT grease 3[®]

NOTE:


While holding the primary sheave with the primary/secondary sheave holder ②, tighten the primary sheave nut ①.





Sheave holder
90890-01481



CYLINDER AND PISTON

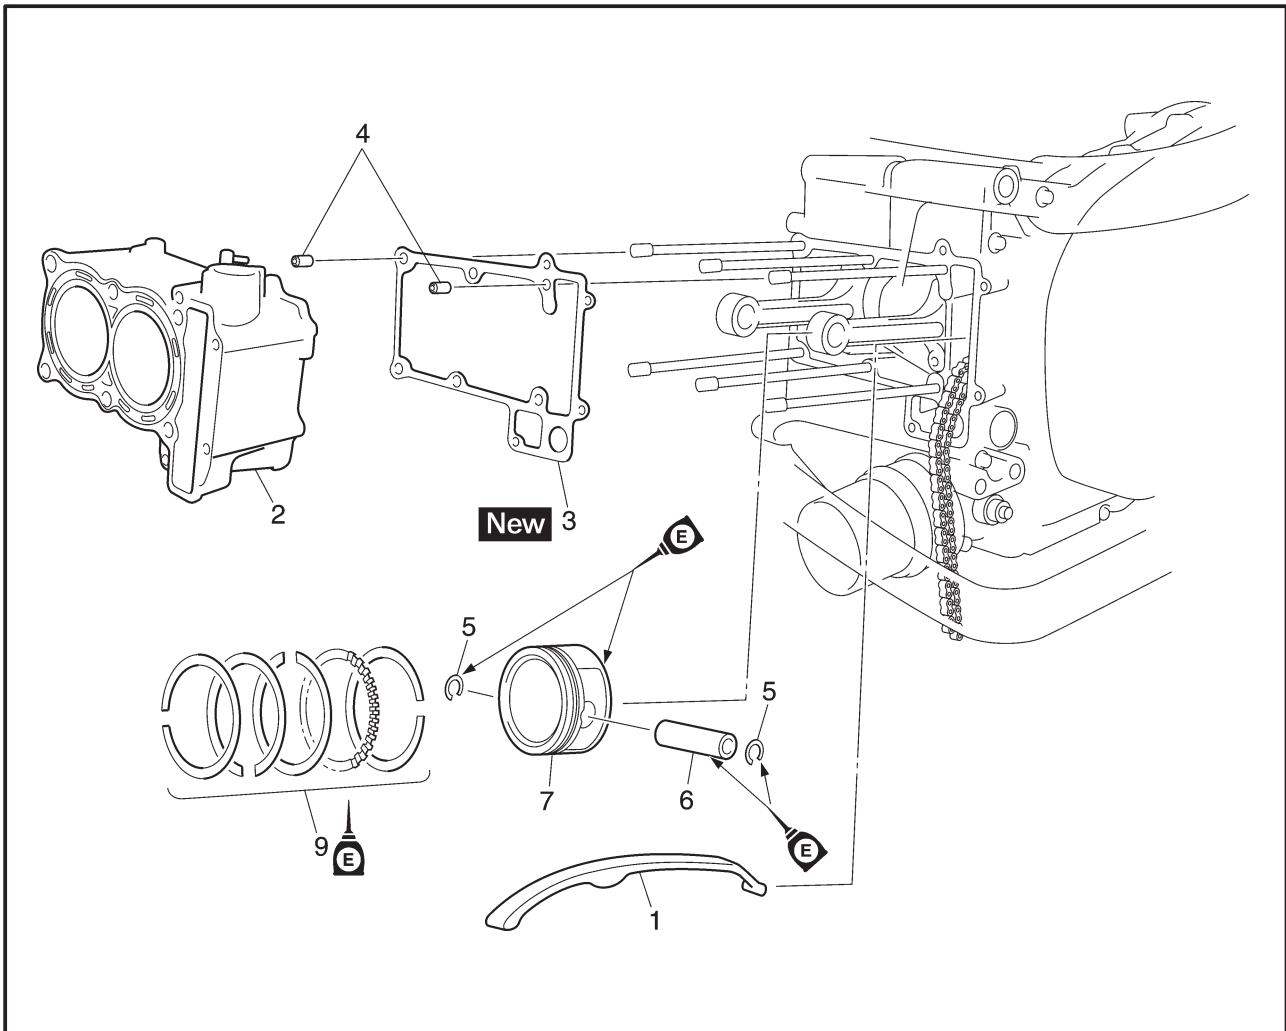

Order	Job/Part	Q'ty	Remarks
	Removing the cylinder and piston		Remove the parts in the order listed. Refer to "CYLINDER HEAD".
1	Timing chain guide (exhaust side)	1	
2	Cylinder	1	
3	Cylinder gasket	1	
4	Dowel pin	2	
5	Circlip	4	
6	Piston pin	2	
7	Piston	2	
8	Piston ring set	2	
			For installation, reverse the removal procedure.

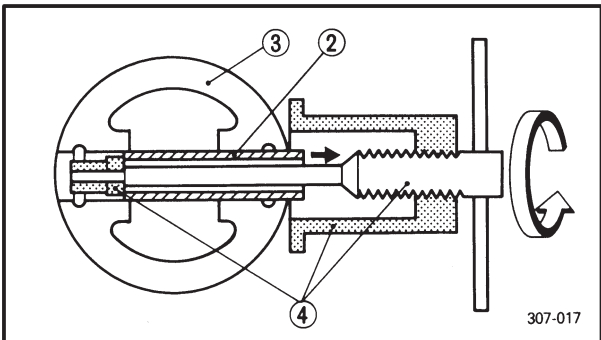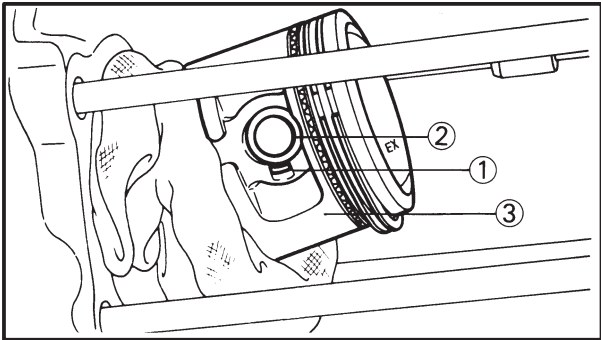

REMOVING THE CYLINDER AND PISTON

The following procedure applies to all of the pistons.

1. Remove:
- piston pin clip ①
 - piston pin ②
 - piston ③

CAUTION: _____


Do not use a hammer to drive the piston pin out.

NOTE: _____

- Before removing the piston pin clip, cover the crankcase opening with a clean rag to prevent the piston pin clip from falling into the crankcase.
- Before removing the piston pin, deburr the piston pin clip's groove and the piston's pin bore area. If both areas are deburred and the piston pin is still difficult to remove, remove it with the piston pin puller ④.



Piston pin puller
90890-01304

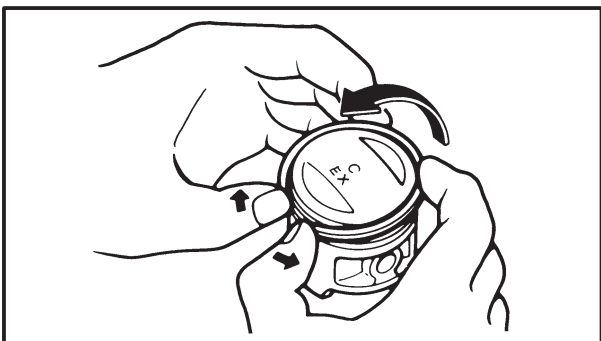


2. Remove:
- top ring
 - 2nd ring
 - oil ring

NOTE: _____


When removing a piston ring, open the end gap with your fingers and lift the other side of the ring over the piston crown.

e. Calculate the piston-to-cylinder clearance with the following formula.

Piston-to-cylinder clearance =
Cylinder bore “C” –
Piston skirt diameter “P”

 **Piston-to-cylinder clearance**
0.020 ~ 0.045 mm
<Limit>: 0.15 mm

f. If out of specification, replace the cylinder, and the piston and piston rings as a set.

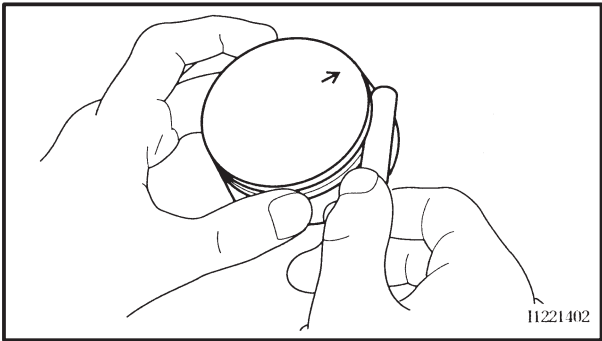


EAS00263

CHECKING THE PISTON RINGS

1. Measure:
- piston ring side clearance
- Out of specification → Replace the piston and piston rings as a set.


NOTE: _____

Before measuring the piston ring side clearance, eliminate any carbon deposits from the piston ring grooves and piston rings.

 **Piston ring side clearance**

Top ring
0.030 ~ 0.065 mm
<Limit>: 0.115 mm

2nd ring
0.020 ~ 0.055 mm
<Limit>: 0.105 mm

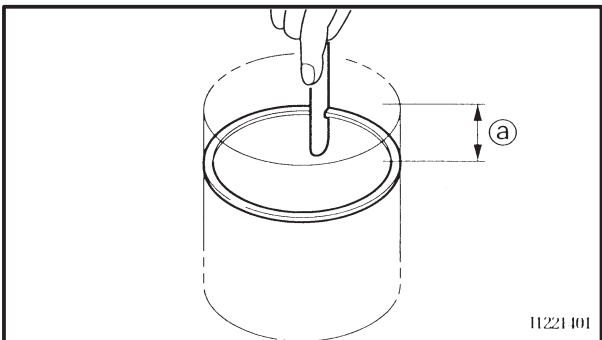

2. Install:
- piston ring (into the cylinder)

NOTE: _____

Level the piston ring in the cylinder with the piston crown as shown.

① 10 mm

3. Measure:

- piston ring end gap
Out of specification → Replace the piston ring.

NOTE: _____

The oil ring expander spacer's end gap cannot be measured. If the oil ring rail's gap is excessive, replace all three piston rings.



Piston ring end gap

Top ring

0.15 ~ 0.25 mm

<Limit>: 0.5 mm

2nd ring

0.4 ~ 0.5 mm

<Limit>: 0.75 mm

Oil ring

0.10 ~ 0.35 mm


EAS00266

CHECKING THE PISTON PINS

The following procedure applies to all of the piston pins.

1. Check:

- piston pin
Blue discoloration/grooves → Replace the piston pin and then check the lubrication system.

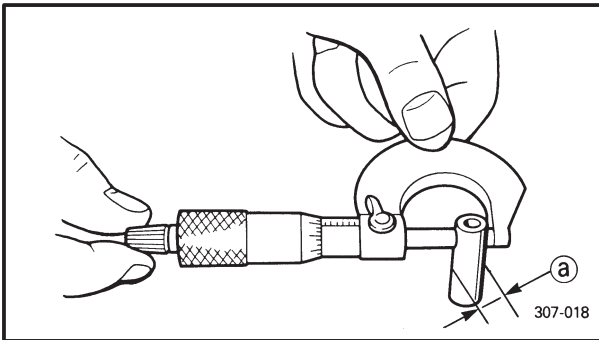


2. Measure:

- piston pin outside diameter (a)
Out of specification → Replace the piston pin.



Piston pin outside diameter ①

15.991 ~ 16.000 mm

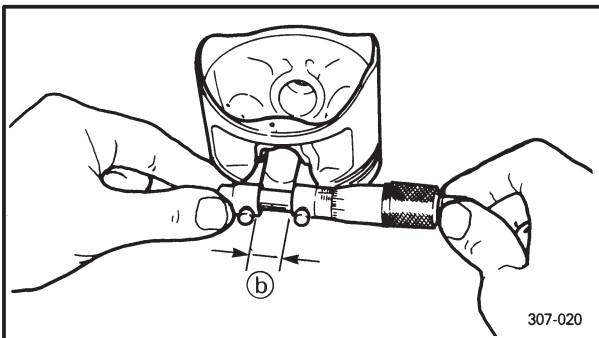

3. Measure:

- piston pin bore diameter (b) (in the piston)
Out of specification → Replace the piston pin.




Piston pin bore diameter


16.002 ~ 16.013 mm



4. Calculate:
- piston-pin-to-piston-pin-bore clearance
Out of specification → Replace the piston pin.

$$\text{Piston-pin-to-piston-pin-bore clearance} = \text{Piston pin bore diameter (in the piston)} - \text{Piston pin outside diameter}$$

 **Piston-pin-to-piston-pin-bore clearance**
0.002 ~ 0.022 mm
<Limit>: 0.072 mm

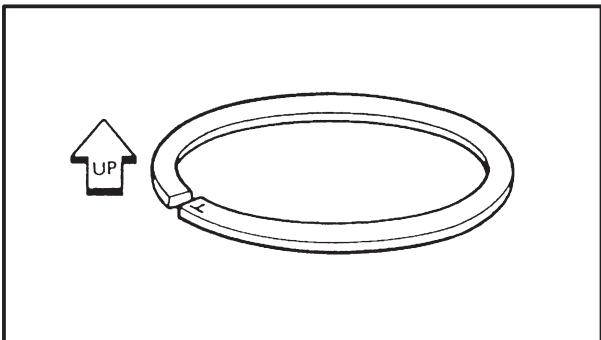

EAS00271


INSTALLING THE PISTONS AND CYLINDERS

The following procedure applies to all of the pistons and cylinders.

1. Install:
- top ring
 - 2nd ring
 - oil ring

NOTE: _____

Be sure to install the piston rings so that the manufacturer's marks or numbers face up.

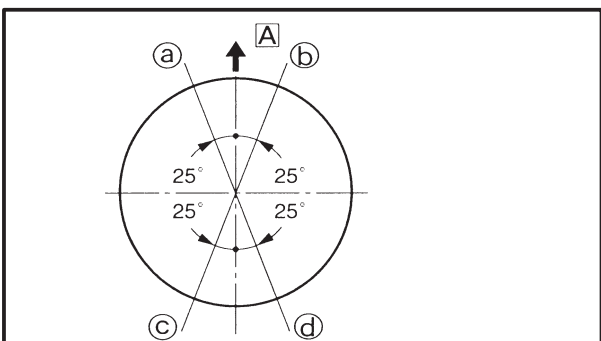


2. Offset:
- piston ring end gaps
- (a) Top ring
(b) Lower oil ring rail
(c) Upper oil ring rail
(d) 2nd ring
(A) Intake side



3. Lubricate:
- piston
 - piston pin


	Recommended lubricant Engine oil
--	---

4. Install:
- piston ③
 - piston pin ②
 - piston pin clip **New** ①

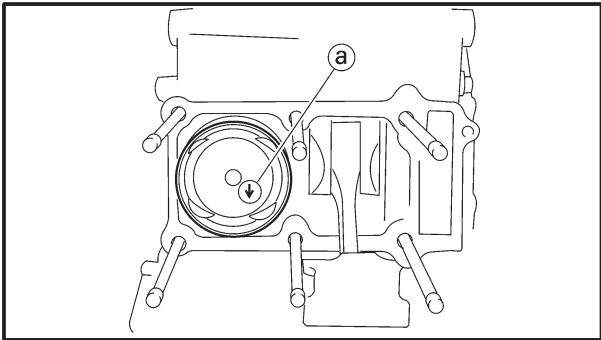

NOTE: _____

- Apply engine oil onto the piston pin.
- Make sure that the arrow mark (a) on the piston points towards the exhaust side of the cylinder.
- Before installing the piston pin clip, cover the crankcase opening with a clean rag to prevent the clip from falling into the crankcase.

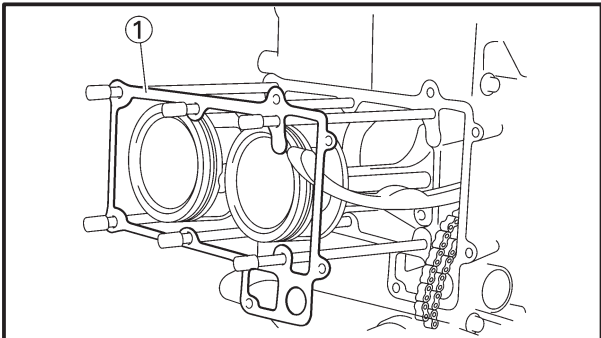

5. Install:
- gasket **New** ①
 - dowel pins
6. Lubricate:
- piston
 - piston rings
 - cylinder
(with the recommended lubricant)

	Recommended lubricant Engine oil
--	---


7. Install:
- cylinder
 - timing chain guide (exhaust side)

NOTE: _____

Pass the timing chain through the timing chain cavity.




**CRANKCASE AND CRANKSHAFT
CRANKSHAFT ASSEMBLY**

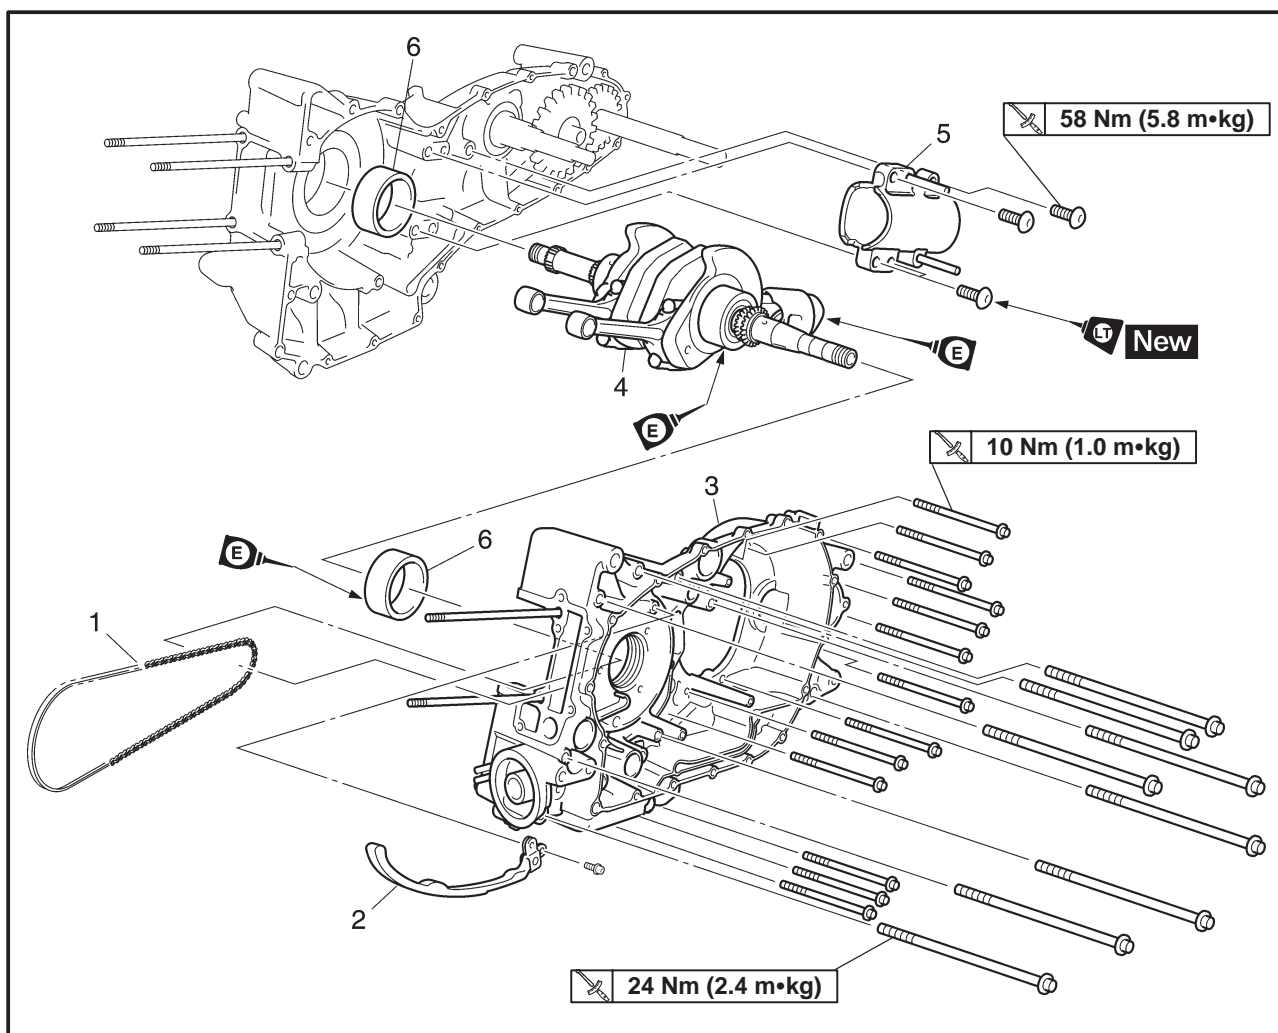

Order	Job/Part	Q'ty	Remarks
	Removing the crankshaft assembly		
	Engine		Remove the parts in the order listed. Refer to "ENGINE".
	Cylinder head		Refer to "CYLINDER HEAD".
	Cylinder		Refer to "CYLINDER AND PISTON".
	Piston		
	Belt drive		Refer to "BELT DRIVE".
	Starter clutch		Refer to "STARTER CLUTCH AND GENERATOR".
	Generator		
	Clutch		Refer to "CLUTCH".
	Oil pump		Refer to "OIL PUMP".
1	Timing chain	1	
2	Timing chain guide (intake side)	1	

CRANKCASE AND CRANKSHAFT


ENG

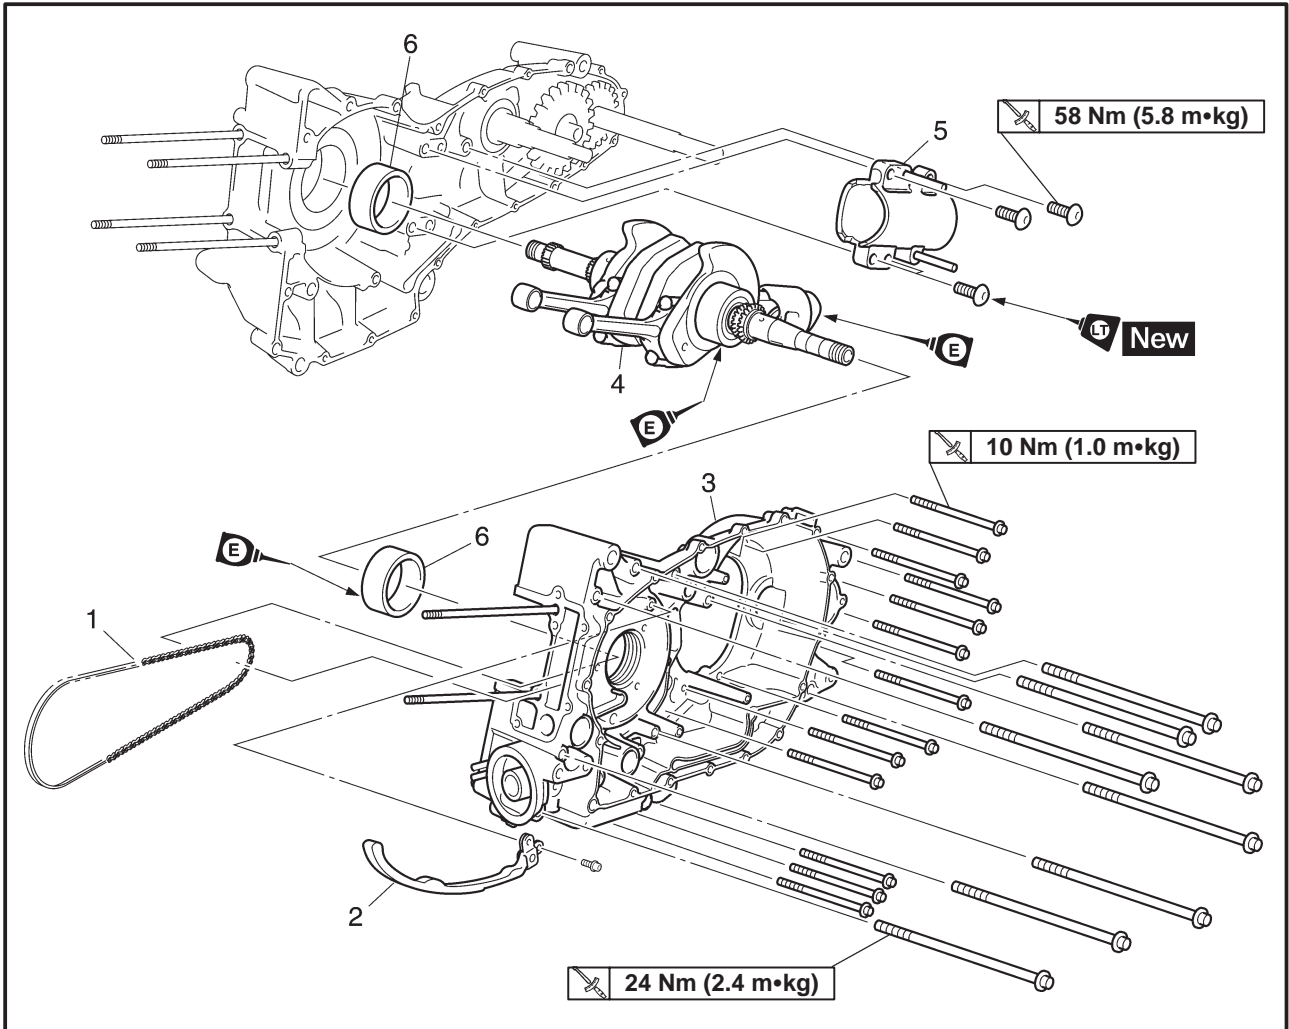


Order	Job/Part	Q'ty	Remarks
3	Crankcase (left)	1	For installation, reverse the removal procedure.
4	Crankshaft	1	
5	Cylinder (barancer)	1	
6	Main journal bearing	2	



CONNECTING ROD

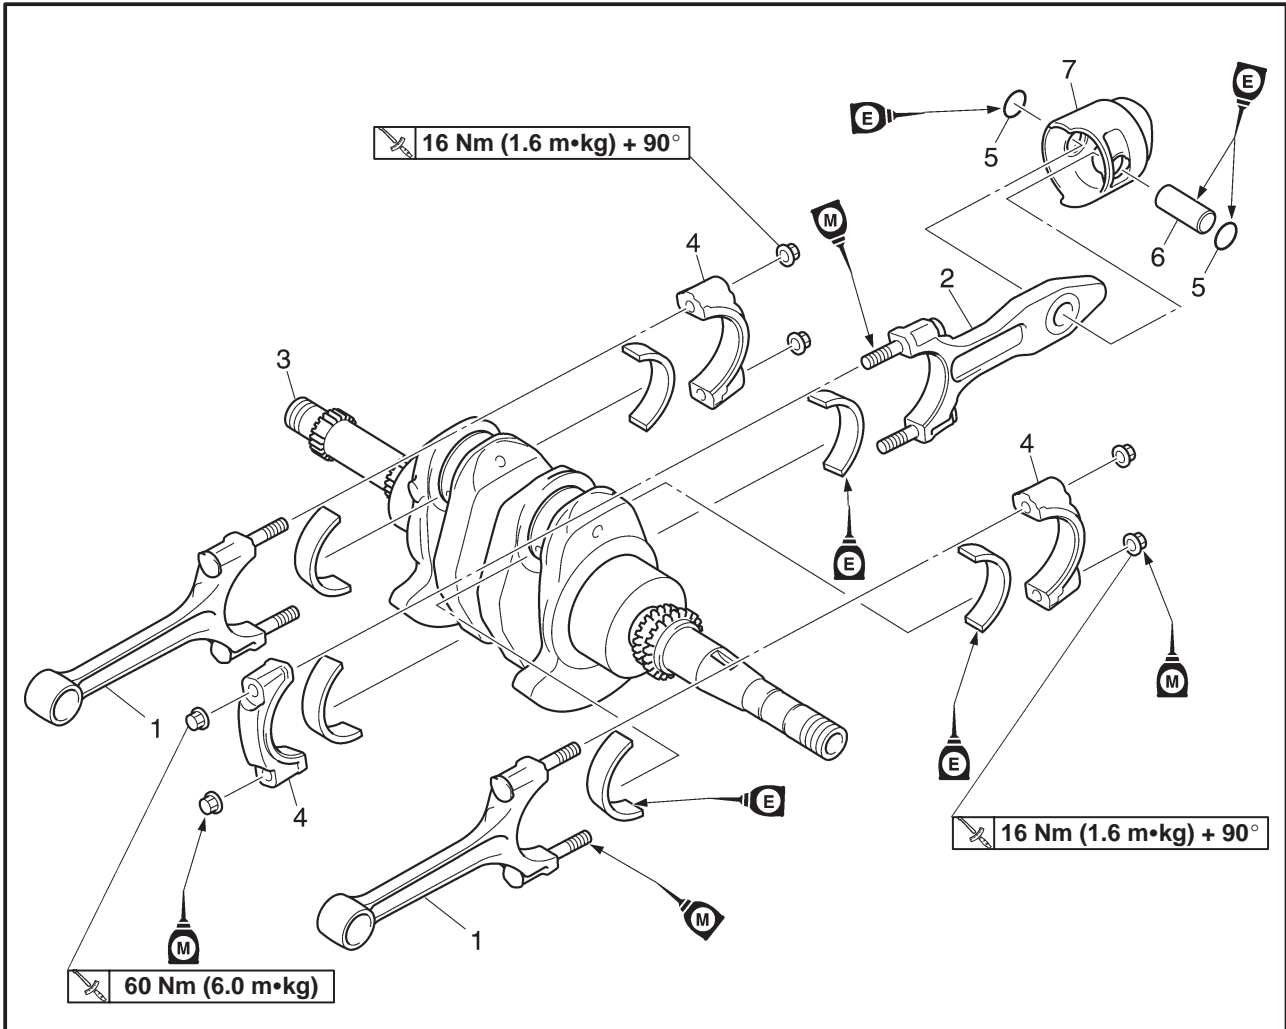

Order	Job/Part	Q'ty	Remarks
	Removing the connecting rod		Remove the parts in the order listed.
1	Connecting rod	2	
2	Connecting rod (balancer)	1	
3	Crankshaft	1	
4	Connecting rod cap	3	
5	Circlip	2	
6	Piston pin	1	
7	Balancer piston	1	
			For installation, reverse the removal procedure.

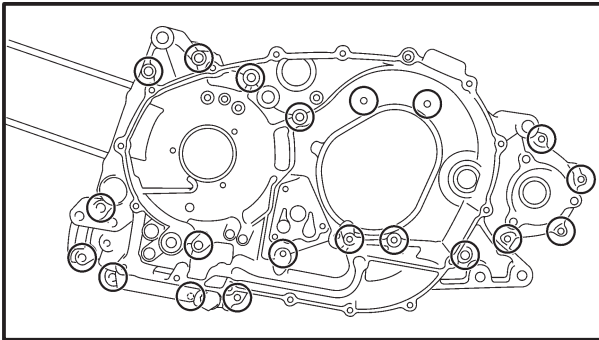

EAS00385

DISASSEMBLING THE CRANKCASE

1. Remove:
 - crankcase bolts

NOTE:

- Loosen each bolt 1/4 of a turn at a time, in stages and in a crisscross pattern. After all of the bolts are fully loosened, remove them.
- Loosen the bolts in decreasing numerical order (refer to the numbers in the illustration).
- The numbers embossed on the crankcase indicate the crankcase tightening sequence.

2. Remove:
 - right crankcase

CAUTION:


Tap on one side of the crankcase with a soft-face hammer. Tap only on reinforced portions of the crankcase, not on the crankcase mating surfaces. Work slowly and carefully and make sure that the crankcase halves separate evenly.

3. Remove:
 - dowel pins

EAS00399

CHECKING THE CRANKCASE

1. Thoroughly wash the crankcase halves in a mild solvent.
2. Thoroughly clean all the gasket surfaces and crankcase mating surfaces.
3. Check:
 - crankcase
Cracks/damage → Replace.
 - oil delivery passages
Obstruction → Blow out with compressed air.

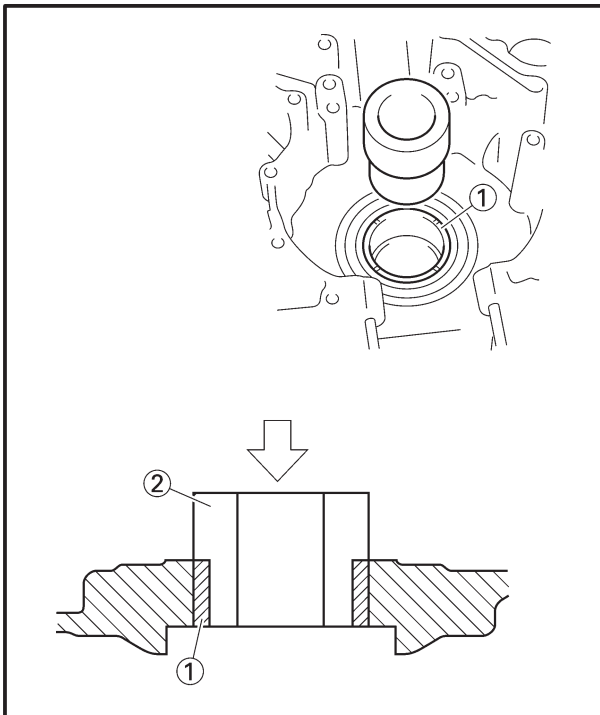

EAS00387

REMOVING THE CRANKSHAFT JOURNAL BEARING

1. Remove:

- crankshaft assembly
- crankshaft main journal bearings ①

NOTE: _____


Remove the main journal bearing by the plane bearing installer/remover ②.



Plane bearing installer/remover
90890-01439

NOTE: _____

Identify the position of each crankshaft main journal bearing so that it can be reinstalled in its original place.

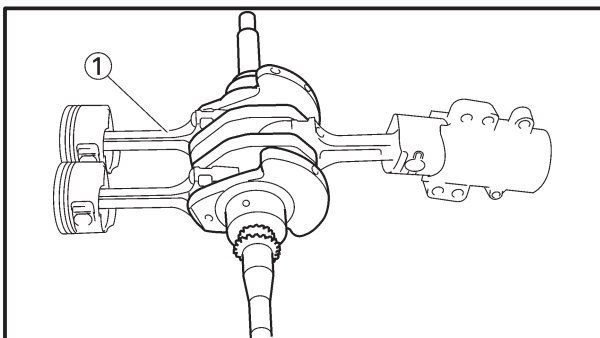

EAS00391

REMOVING THE CONNECTING RODS


The following procedure applies to all of the connecting rods.

1. Remove:

- connecting rod ①
- big end bearings

NOTE: _____

Identify the position of each big end bearing so that it can be reinstalled in its original place.

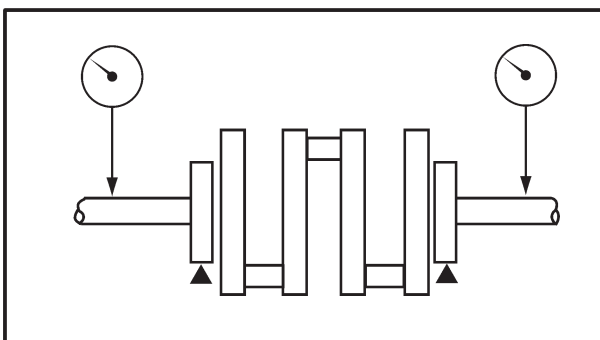

EB413404

CHECKING THE CRANKSHAFT AND CONNECTING RODS

1. Measure:

- crankshaft runout
- Out of specification → Replace the crankshaft.



Crankshaft runout
Less than 0.05 mm

2. Check:

- crankshaft journal surfaces
- crankshaft pin surfaces
- bearing surfaces
- Scratches/wear → Replace the crankshaft.

3. Measure:




- crankshaft-pin-to-big-end-bearing clearance
- Out of specification → Replace the big end bearings.

CAUTION:

- When tightening the connecting rod nuts, be sure to use an F-type torque wrench.
- After tightening the connecting rod nut to the specified torque, turn the connecting rod nut another +90°.

Refer to “INSTALLING THE CONNECTING RODS”.

	<p>Connecting rod nut 16 Nm (1.6 m•kg)+90°</p>
---	---

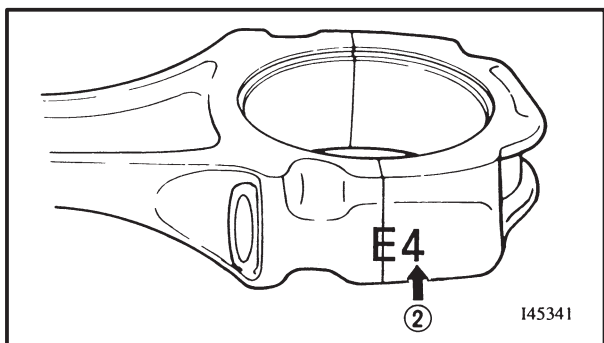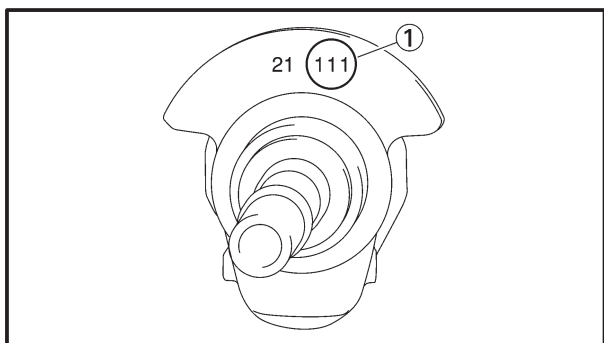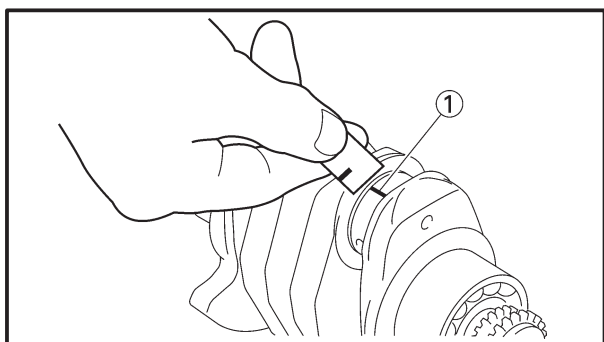

- f. Remove the connecting rod and big end bearings.
Refer to “REMOVING THE CONNECTING RODS”.
- g. Measure the compressed Plastigauge® width ① on each crankshaft pin.
If the clearance is out of specification, select replacement big end bearings.



4. Select:
- big end bearings (P₁, P₂, P₃)

NOTE:

- The numbers ① stamped into the crankshaft web and the numbers ② on the connecting rods are used to determine the replacement big end bearing sizes.
- “P₁, P₂” refer to the bearings shown in the crankshaft illustration.



For example, if the connecting rod “P₁” and the crankshaft web “P₁” numbers are “4” and “2” respectively, then the bearing size for “P₁” is:

<p>Bearing size for “P₁”: “P₁” (connecting rod) – “P₁” (crankshaft web) = 4 – 2 = 2 (black)</p>



e. If journal bearing inside diameter is “45.03” and crankshaft journal outside diameter is “44.98”, then the main journal oil clearance is:

Main journal oil clearance:
Journal bearing inside diameter –
Main journal outside diameter =
45.03 – 44.98 = 0.05 mm

If the oil clearance is out of specification, select a replacement bearings.



6. Select:
 • crankshaft journal bearings (J₁, J₂)

NOTE: _____

- The numbers ① stamped into the crankshaft web and the numbers ② on the crankcase are used to determine the replacement crankshaft journal bearing size.
- “P₁” refer to the bearings shown in the crankshaft illustration.






For example, if the crankcase “J₁” and the crankshaft web “J₁” numbers are “4” and “2” respectively, then the bearing size for “J₁” is:

Bearing size for “J₁”:
“J₁” (crankcase) – “J₁”
(crankshaft web) = 4 – 2 = 2 (black)



BEARING COLOR CODE	
1	blue
2	black
3	brown
4	green

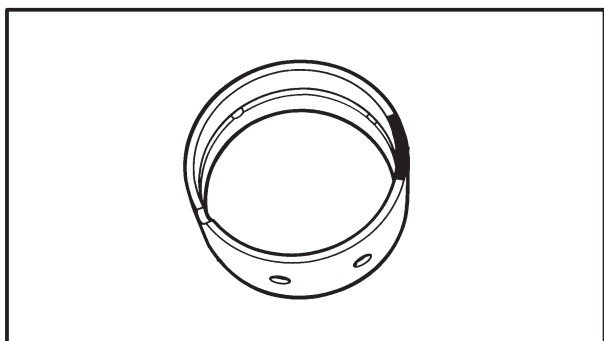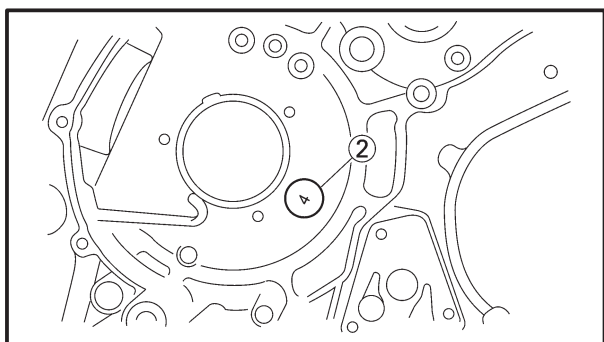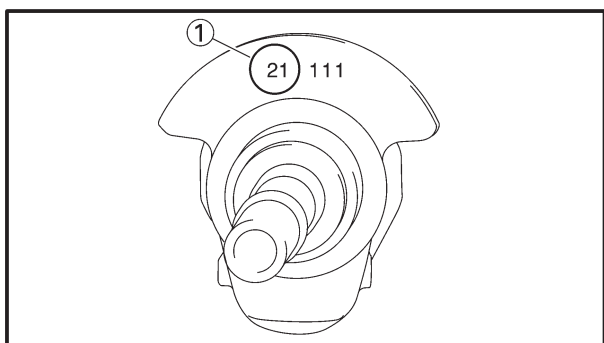



INSTALLING THE CRANKSHAFT JOURNAL BEARING

1. Attach:
 - crankshaft journal bearings

NOTE: _____

- Attach the crankshaft journal bearing to the installer ①.





Plane bearing installer/remover
90890-01439

2. Install:
 - crankshaft journal bearings ②

NOTE: _____

- align the projection ① on the bearing with the projection ② on the crankcase.
- Place an iron ③ plate beneath the crankcase and press fit until the end of the plain bearing installer touches the iron plate.

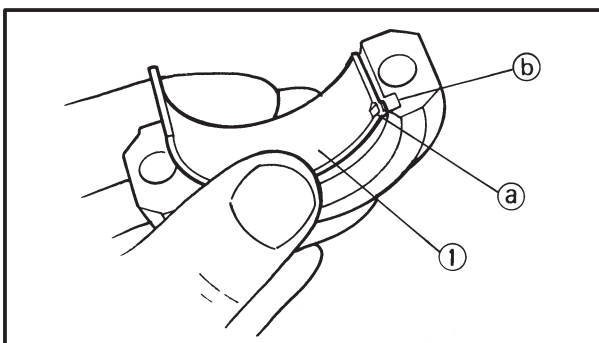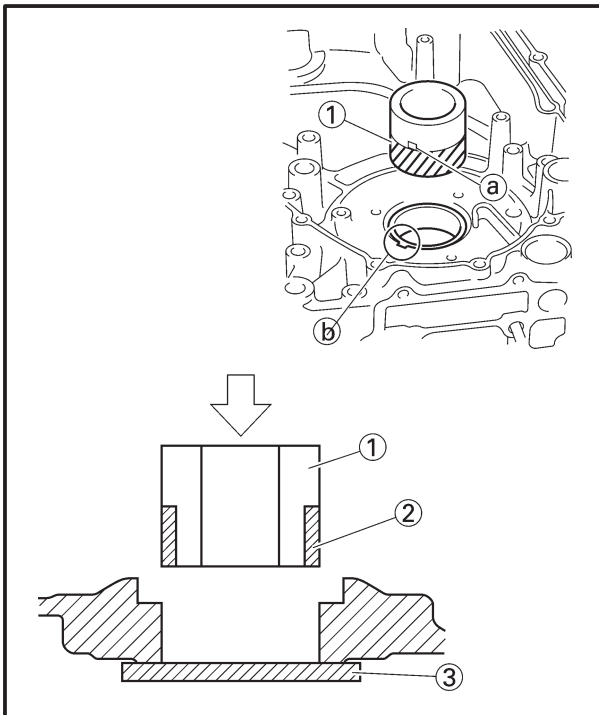


INSTALLING THE CONNECTING RODS

1. Install:
 - connecting rod bearings ①

NOTE: _____

- Align the projection ① of the bearings with the notches ② in the connecting rod cap.
- Install each bearing in its original place.

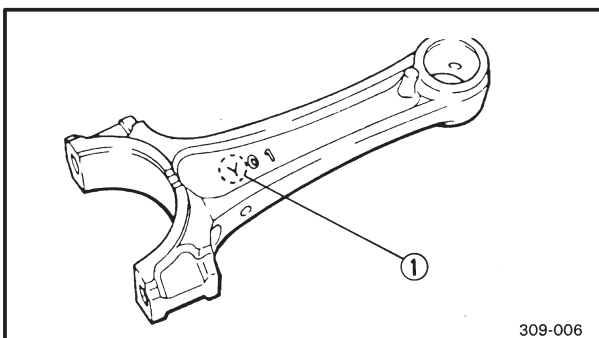

2. Install:
 - connecting rods ①

NOTE: _____

- The stamped "Y" mark ① on the connecting rods should face towards the left side of the crankcase.
- Install each connecting rod in its original place.





5. Install:
- balancer connecting rod
 - connecting rod cap

60 Nm (6.0 m•kg)

CAUTION:

- When tightening the nuts be sure to use an F-type torque wrench.
- Without pausing, tighten to full torque specification. Apply continuous torque between 57 and 63 Nm (5.7 ~ 6.3 m•kg). Once you reach 57 Nm (5.7 m•kg) DO NOT STOP TIGHTENING until final torque is reached. If the tightening is interrupted between 57 and 63 Nm (5.7 ~ 6.3 m•kg) loosen the nut to less than 57 Nm (5.7 m•kg) and start again.

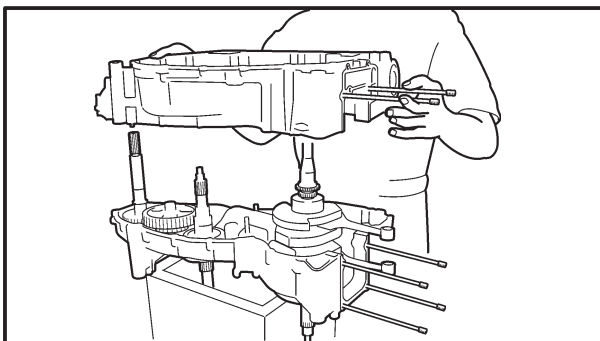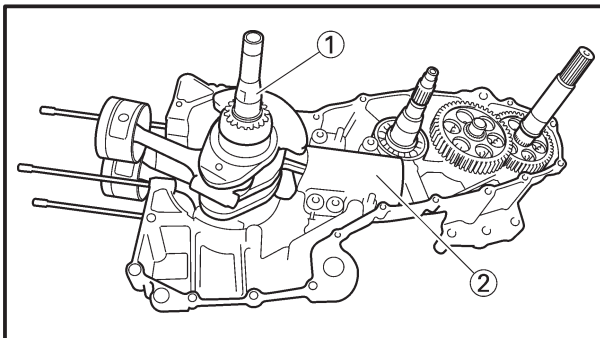

INSTALLING THE CRANKSHAFT

1. Install:
- crankshaft assembly ①
 - balancer piston cylinder ②

58 Nm (5.8 m•kg)

CAUTION:

To avoid scratching the crankshaft and to ease the installation procedure, apply grease onto the oil seal lips and apply engine oil onto each bearing.

EAS00418

ASSEMBLING THE CRANKCASE

1. Thoroughly clean all the gasket mating surfaces and crankcase mating surfaces.
2. Apply:
 - sealant (onto the crankcase mating surfaces)



Yamaha bond No. 1215
90890-85505


NOTE:

Do not allow any sealant to come into contact with the oil gallery.

3. Install:
- dowel pins
 - crankcase (left)



TRANSMISSION


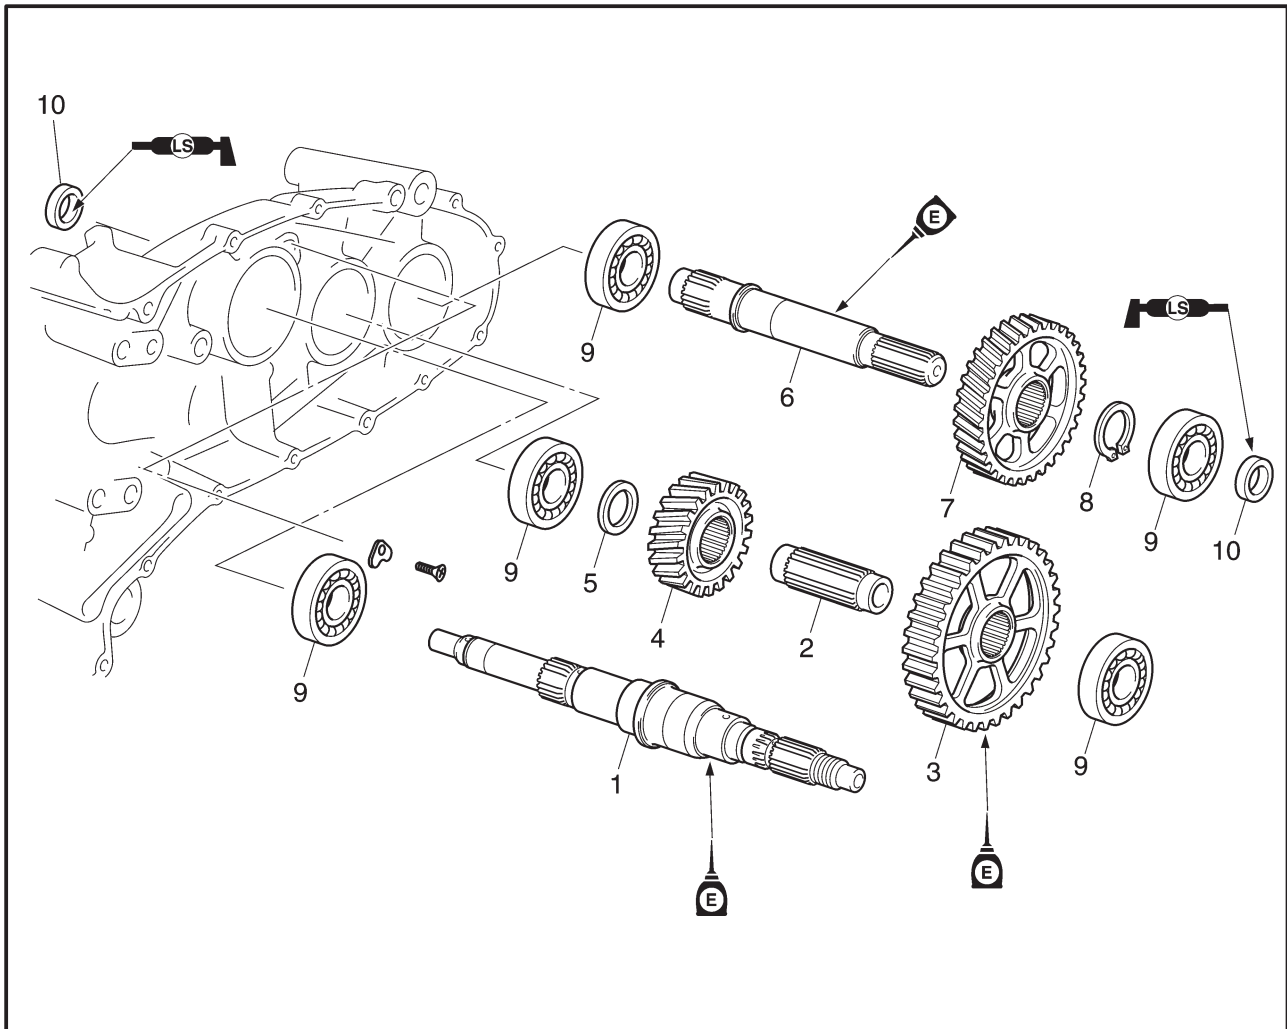


Order	Job/Part	Q'ty	Remarks
	Removing the transmission		
	Crankcase (left)		Remove the parts in the order listed. Refer to "CRANKCASE AND CRANKSHAFT".
1	Secondary shaft	1	
2	Main axle	1	
3	Primary driven gear	1	
4	First pinion gear	1	
5	Washer	1	
6	Drive axle	1	
7	First wheel gear	1	
8	Circlip	1	
9	Bearing	5	
10	Oil seal	2	
			For installation, reverse the removal procedure.



REMOVING THE TRANSMISSION

1. Remove:
 - crankcase (left)
Refer to "CRANKCASE AND CRANK-SHAFT".
2. Remove:
 - secondary shaft ①
 - main axle ②
 - drive axle ③
 - primary driven gear ④
 - first pinion gear ⑤
 - first wheel gear ⑥

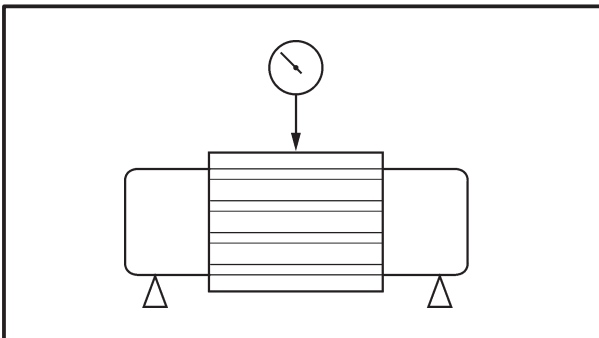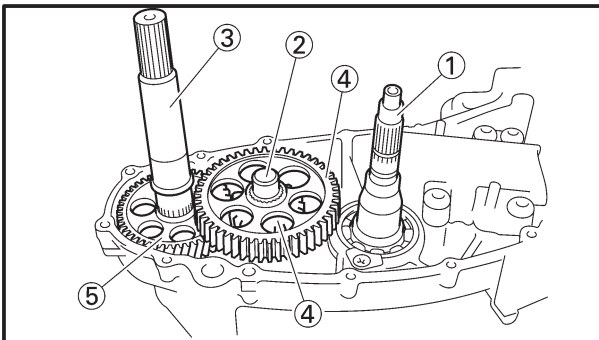


EAS00425

CHECKING THE TRANSMISSION

1. Measure:
 - main axle runout
(with a centering device and dial gauge ①)
Out of specification → Replace the main axle.




Max. main axle runout
0.08 mm

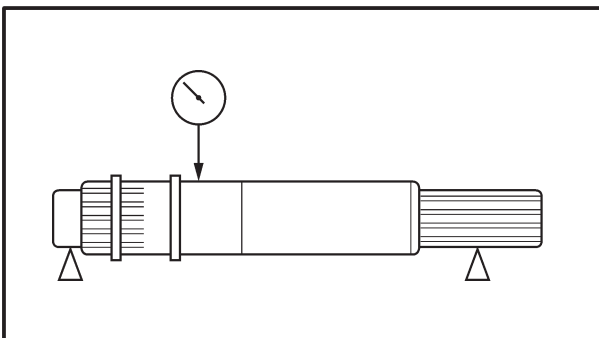

2. Measure:
 - drive axle runout
(with a centering device and dial gauge ①)
Out of specification → Replace the drive axle.




Max. drive axle runout
0.08 mm

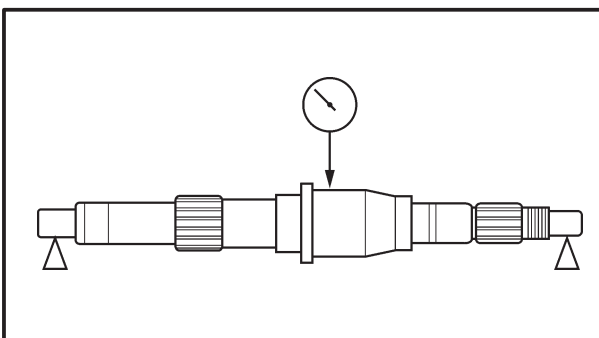


3. Measure:
 - secondary shaft runout
(with a centering device and dial gauge ①)
Out of specification → Replace the secondary shaft.



Max. secondary shaft runout limit
0.08 mm

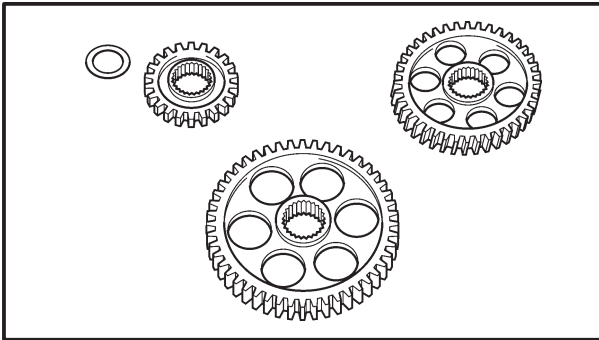

4. Check:
 - transmission gears
Blue discoloration/pitting/wear → Replace the defective gear(-s).
5. Check:
 - transmission gear movement
Rough movement → Replace the defective part(-s).
6. Check:
 - circlips
Damage/bends/looseness → Replace.

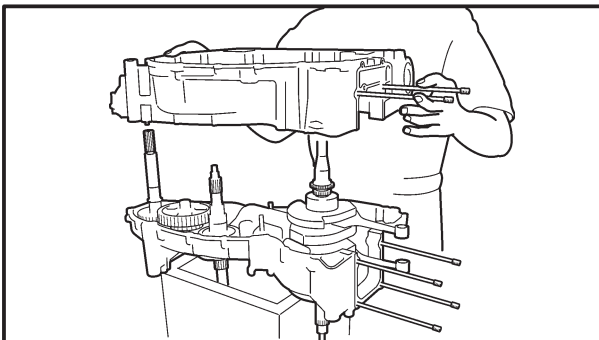

EAS00418

ASSEMBLING THE CRANKCASE

1. Thoroughly clean all the gasket mating surfaces and crankcase mating surfaces.
2. Apply:
 - sealant
(onto the crankcase mating surfaces)


	<p>Yamaha bond No. 1215 90890-85505</p>
--	---

NOTE: _____
Do not allow any sealant to come into contact with the oil gallery.


3. Install:
 - dowel pins
 - crankcase (left)




CHAIN DRIVE

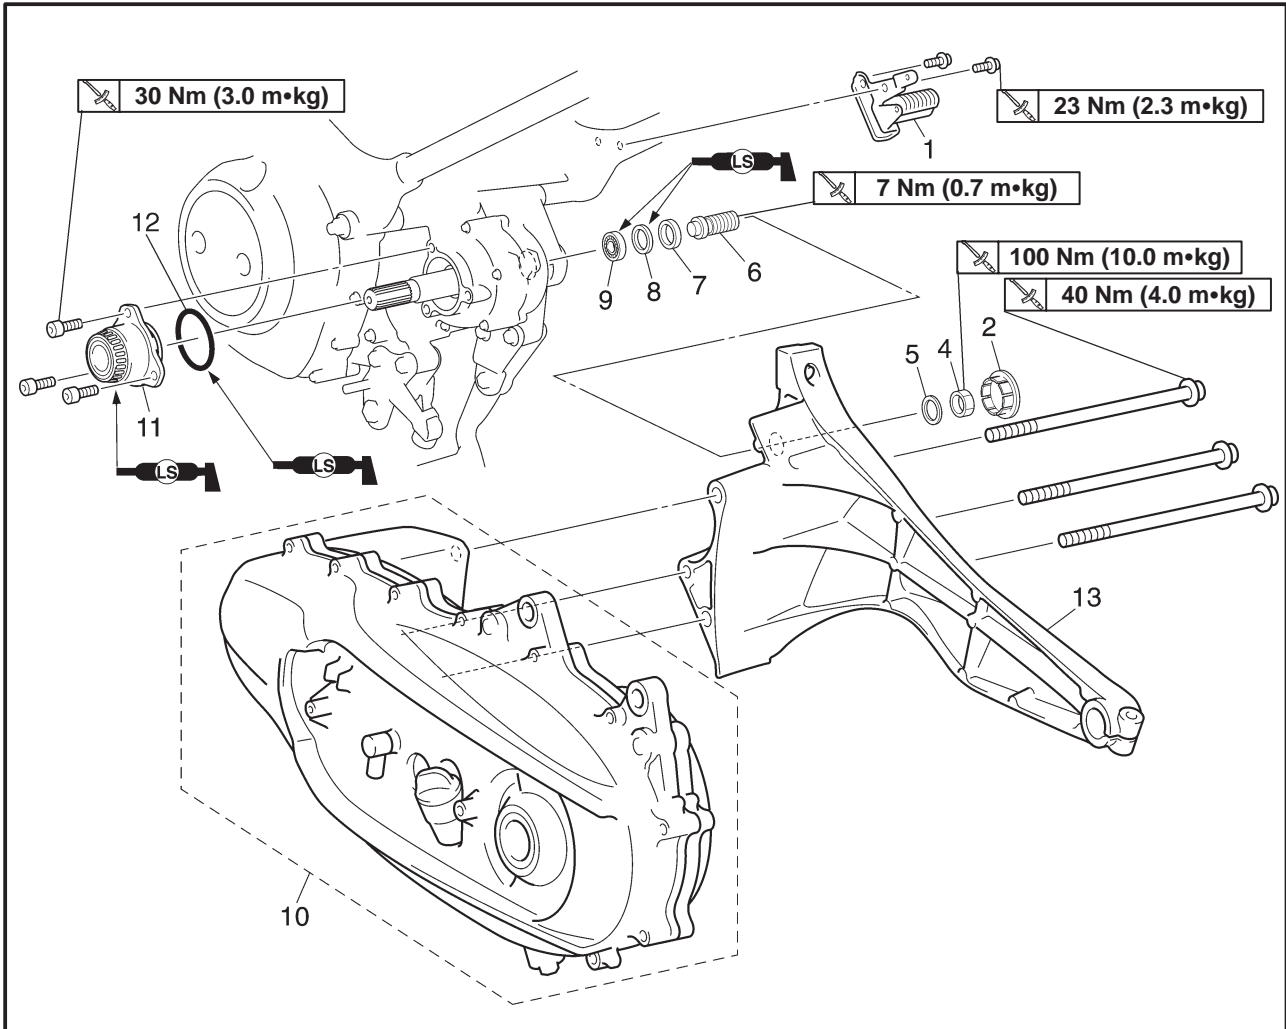


Order	Job/Part	Q'ty	Remarks
	Removing the chain drive assembly		Remove the parts in the order listed.
	Chain drive oil		Drain. Refer to "CHANGING THE TRANSFER OIL" in chapter 3.
	Rear shock absorber		Refer to "REAR SHOCK ABSORBER" in chapter 4.
	Rear wheel		Refer to "REAR WHEEL AND BRAKE DISC" in chapter 4.
1	Rear footrest (right)	1	
2	Cover	1	
3	Swingarm	1	
4	Nut	1	
5	Washer	1	
6	Pivot shaft	1	

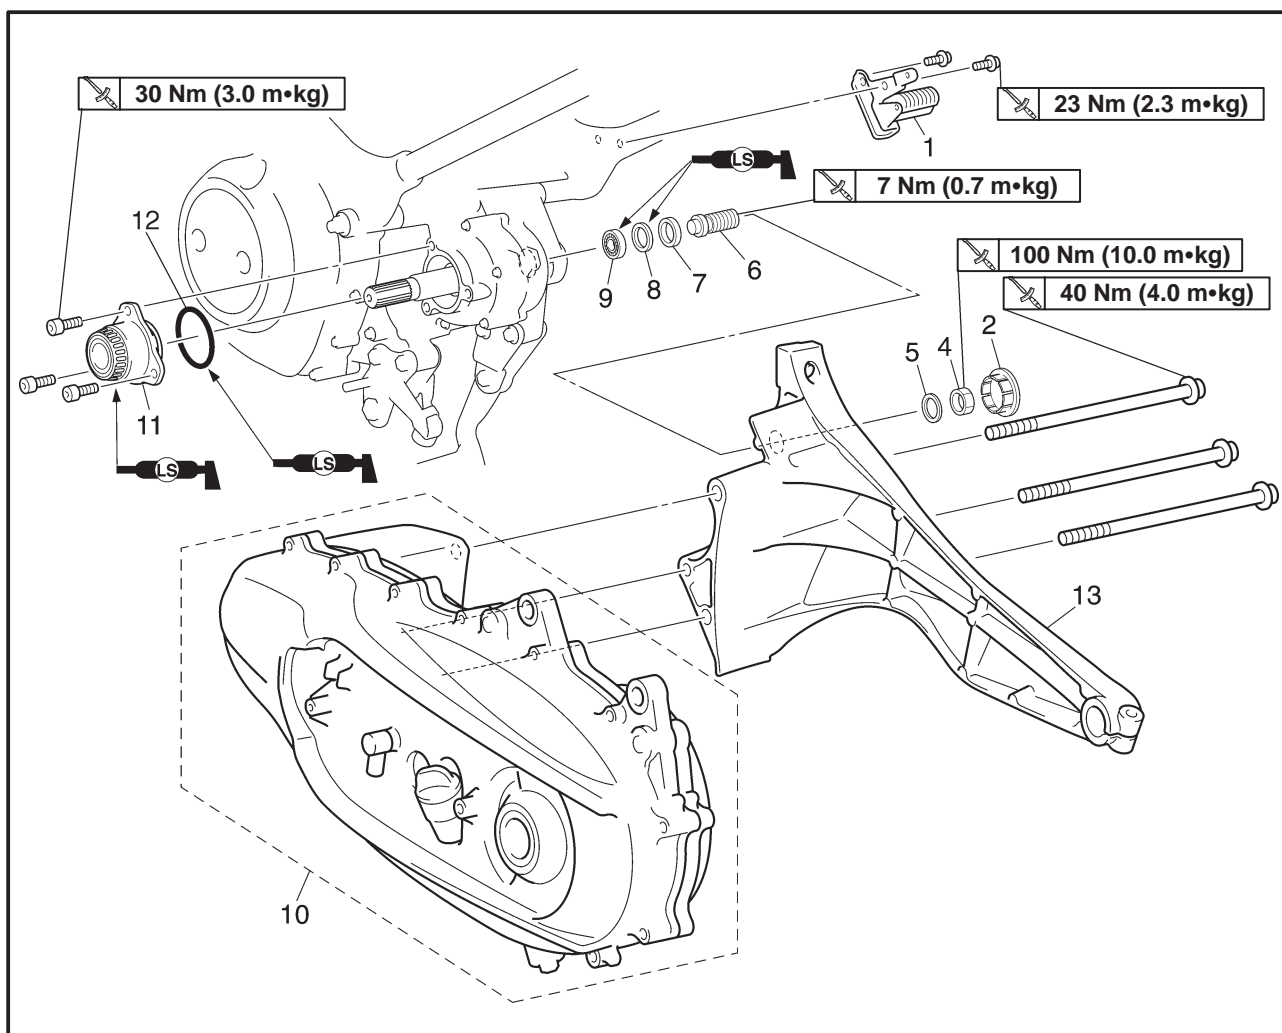

Order	Job/Part	Q'ty	Remarks
7	Collar	1	For installation, reverse the removal procedure.
8	Oil seal	1	
9	Bearing	1	
10	Chain drive assembly	1	
11	Holder	1	
12	O ring	1	

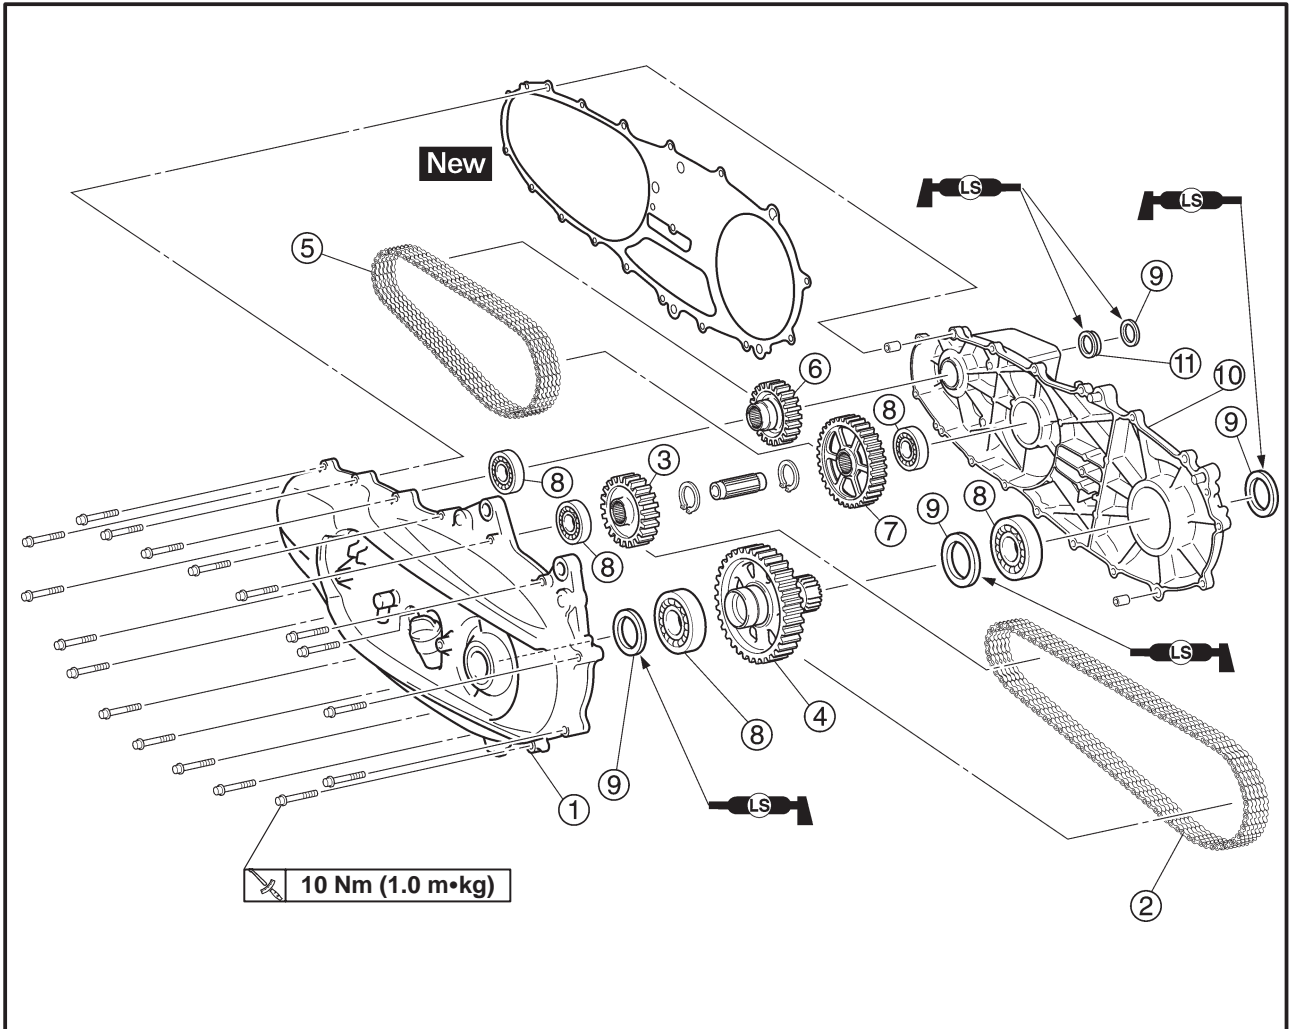


Order	Job/Part	Q'ty	Remarks
	Disassembling the chain drive assembly		Disassemble the parts in the order listed.
①	Chain drive case (outer)	1	
②	Secondary drive chain	1	
③	Secondary drive gear	1	
④	Secondary driven gear	1	
⑤	Primary drive chain	1	
⑥	Primary drive gear	1	
⑦	Primary driven gear	1	
⑧	Bearing	5	
⑨	Oil seal	4	
⑩	Chain drive case (inner)	1	
⑪	Retainer	1	
			For assembly, reverse the disassembly procedure.

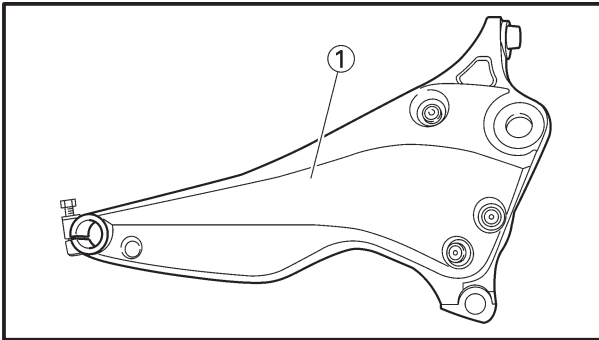**CHECKING THE SWINGARM**


1. Check:

- swingarm ①
Damage/wear → Replace.

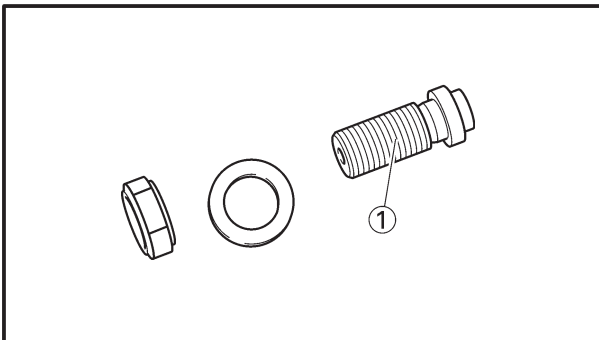


2. Check:

- pivot shaft ①
- collar
- bearing
- oil seal
- Damage/wear → Replace.

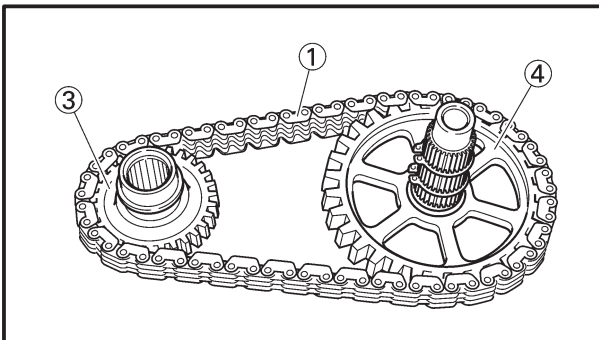**CHECKING THE CHAIN DRIVE ASSEMBLY**

1. Check:

- primary drive chain ①
- secondary drive chain ②
Damage/stiffness → Replace the drive chain and its respective gears as a set.

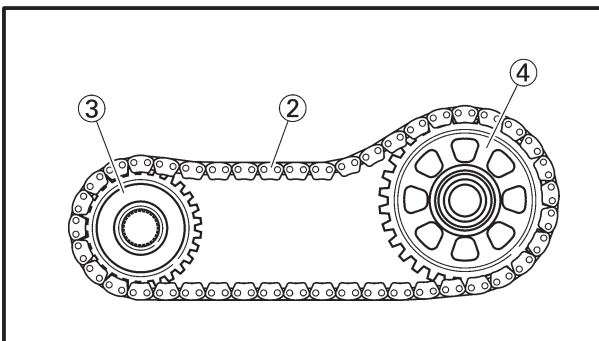


2. Check:

- primary/secondary drive gear ③
- primary/secondary driven gear ④
Damage/wear → Replace the respective drive gears and respective drive chains as a set.

**INSTALLING THE CHAIN DRIVE**

1. Install:
 - chain drive assembly
 - swingarm
2. Tighten:
 - swingarm bolt


 **40 Nm (4.0 m•kg)**

3. Adjust:
 - pivot shaft


NOTE: _____

- With your fingers, screw in the pivot shaft until it touches the collar and then tighten the pivot shaft to the tightening torque.
- Tighten the nut to the tightening torque.
- Install the shock absorber and rear wheel after the swingarm is installed.

-
4. Fill:
 - chain drive oil

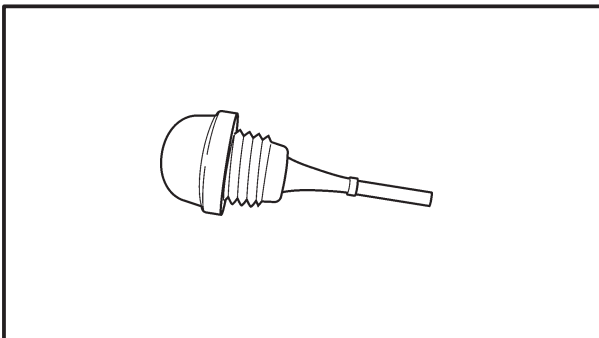

5. Check:
 - chain drive oil levelRefer to “CHECKING THE TRANSFER OIL LEVEL” in chapter 3.

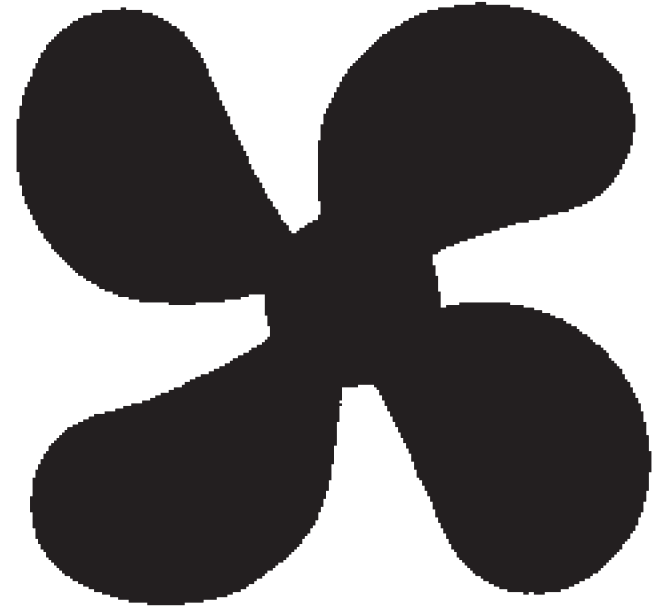

COOL

6



CHAPTER 6 COOLING SYSTEM

RADIATOR	6-1
RADIATOR AND OIL COOLER	6-1
CHECKING THE RADIATOR	6-3
INSTALLING THE RADIATOR	6-4
CHECKING THE OIL COOLER	6-4
INSTALLING THE OIL COOLER	6-4
THERMOSTAT	6-6
CHECKING THE THERMOSTAT	6-7
INSTALLING THE THERMOSTAT	6-7
WATER PUMP	6-9
CHECKING THE WATER PUMP	6-11
ASSEMBLING THE WATER PUMP	6-11







COOLING SYSTEM



RADIATOR
RADIATOR AND OIL COOLER

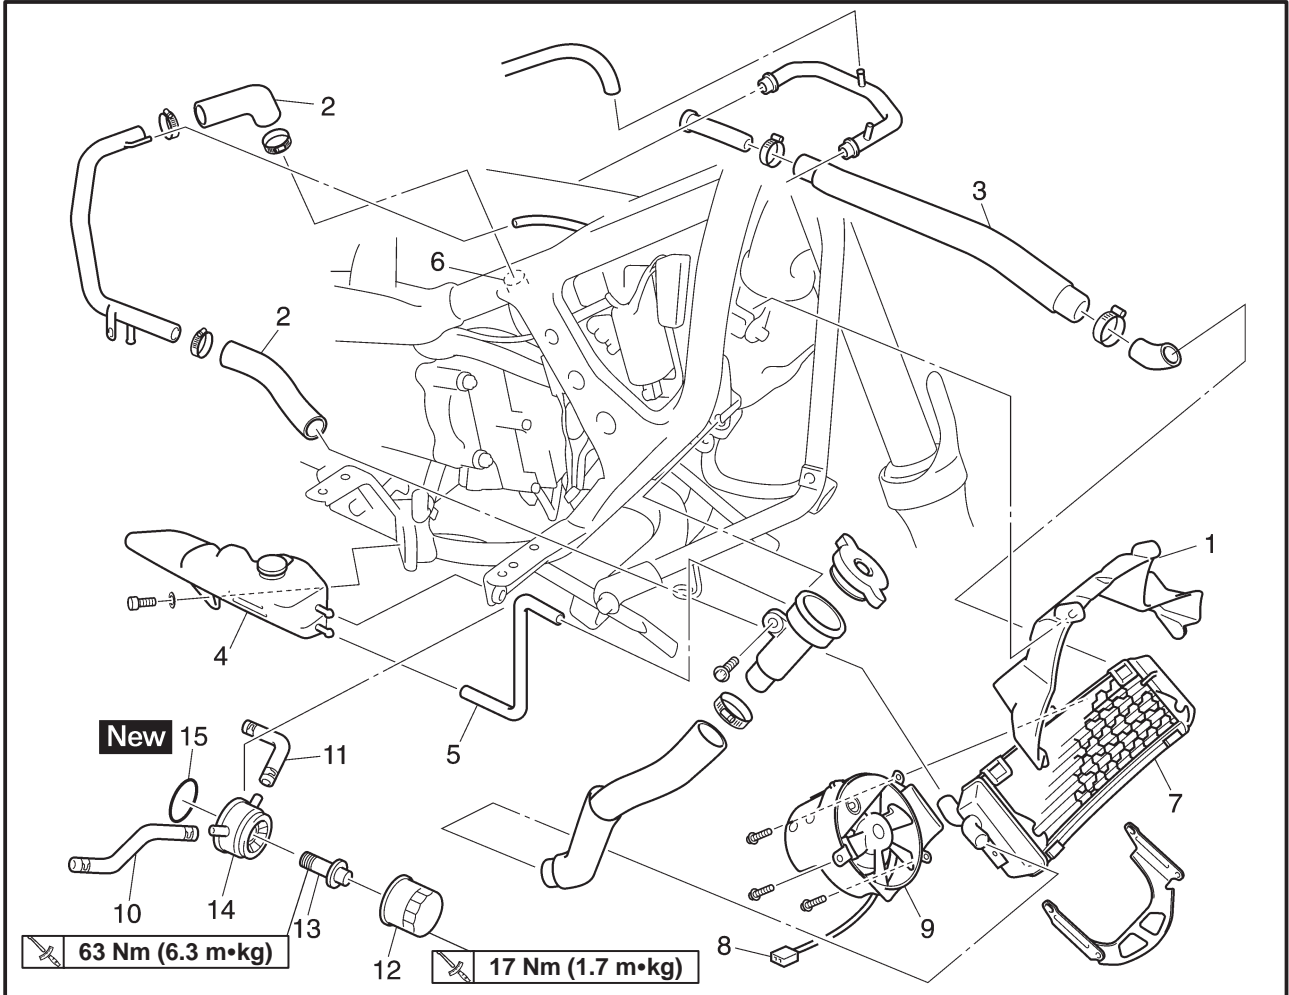

Order	Job/Part	Q'ty	Remarks
	Removing the radiator and oil cooler		Remove the parts in the order listed.
	Footrest board		Refer to "COVER AND PANEL" in chapter 3.
	Lower cover		
	Side panel		
	Leg shield		
	Coolant		
			Drain.
1	Inner fender (rear)	1	
2	Radiator hose	2	
3	Radiator outlet hose	1	
4	Coolant reservoir tank	1	
5	Coolant reservoir hose	1	
6	Thermo	1	

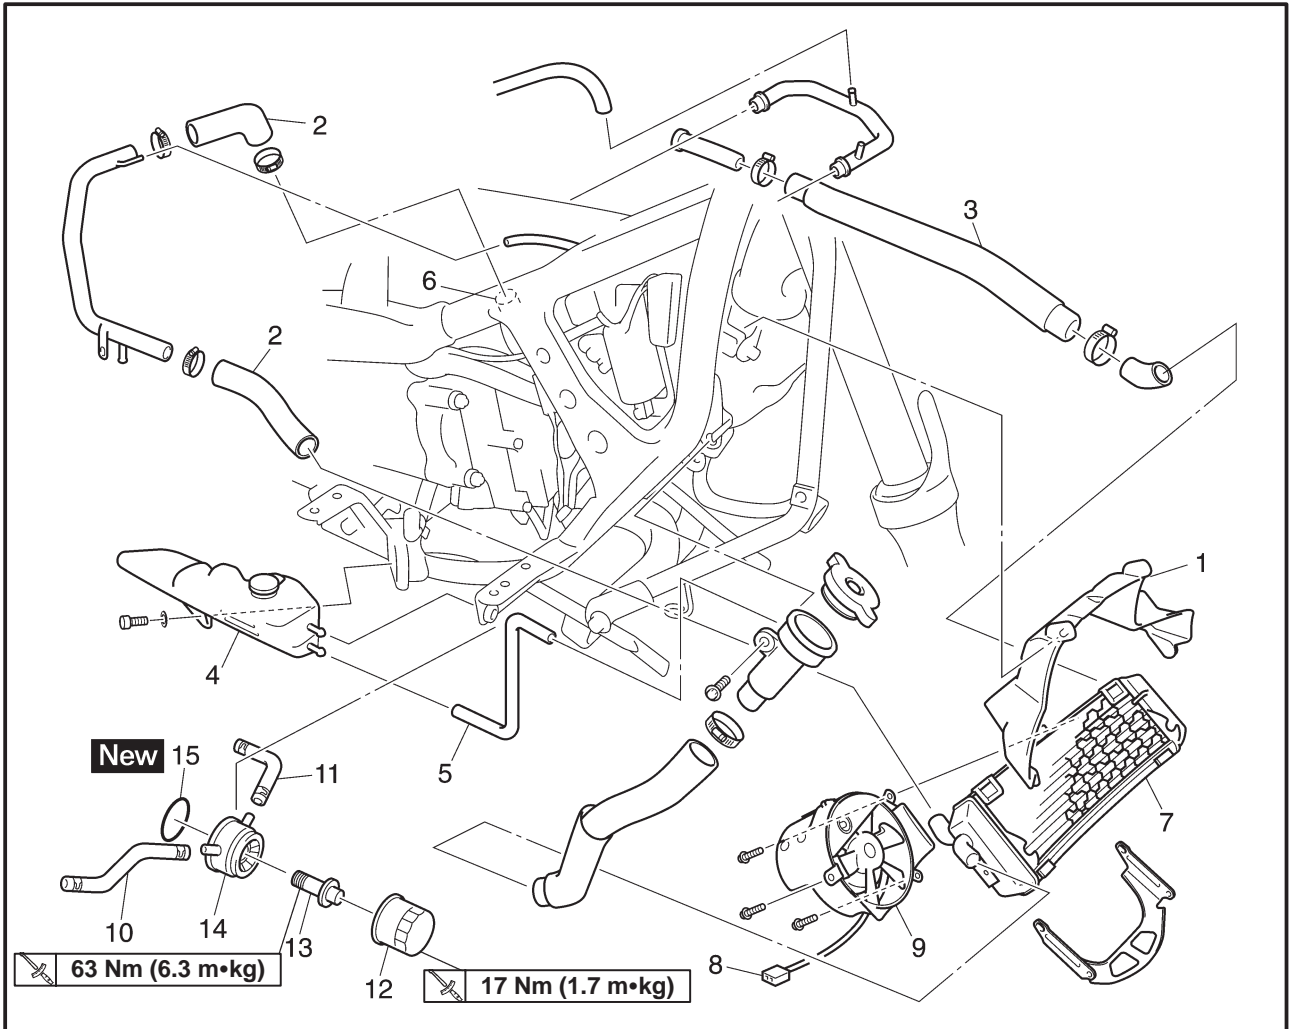

Order	Job/Part	Q'ty	Remarks
7	Radiator	1	For installation, reverse the removal procedure.
8	Radiator fan coupler	1	
9	Radiator fan	1	
10	Oil cooler inlet hose	1	
11	Oil cooler outlet hose	1	
12	Oil filter	1	
13	Bolt	1	
14	Oil cooler	1	
15	O-ring	1	



EAS00456

INSTALLING THE RADIATOR

1. Fill:

- cooling system
(with the specified amount of the recommended coolant)
Refer to "CHANGING THE COOLANT" in chapter 3.

2. Check:

- cooling system
Leaks → Repair or replace any faulty part.

3. Measure:

- radiator cap opening pressure
Below the specified pressure → Replace the radiator cap.
Refer to "CHECKING THE RADIATOR".

EAS00458

CHECKING THE OIL COOLER

1. Check:

- oil cooler
Cracks/damage → Replace.

2. Check:

- oil cooler inlet hose
- oil cooler outlet hose
Cracks/damage/wear → Replace.

EAS00459


INSTALLING THE OIL COOLER

1. Clean:


- mating surfaces of the oil cooler and the crankcase
(with a cloth dampened with lacquer thinner)

2. Install:

- O-ring **New**
- oil cooler ①
- bolt ②

 **63 Nm (6.3 m•kg)**
NOTE:

- Before installing the oil cooler, lubricate the oil cooler bolt and O-ring with a thin coat of engine oil.
- Make sure that the O-ring is positioned properly.
- Align the projection ① on the oil cooler with the slot ② in the crankcase.

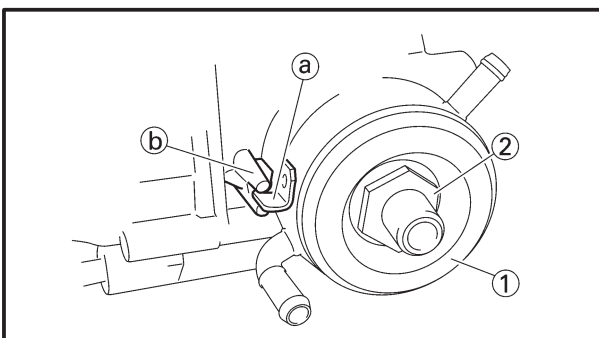




3. Bend the lock washer tab along a flat side of the bolt.
4. Fill:
 - cooling system
(with the specified amount of the recommended coolant)
Refer to “CHANGING THE COOLANT” in chapter 3.
 - crankcase
(with the specified amount of the recommended engine oil)
Refer to “CHANGING THE ENGINE OIL” in chapter 3.
5. Check:
 - cooling system
Leaks → Repair or replace any faulty part.
6. Measure:
 - radiator cap opening pressure
Below the specified pressure → Replace the radiator cap.
Refer to “CHECKING THE RADIATOR”.




THERMOSTAT

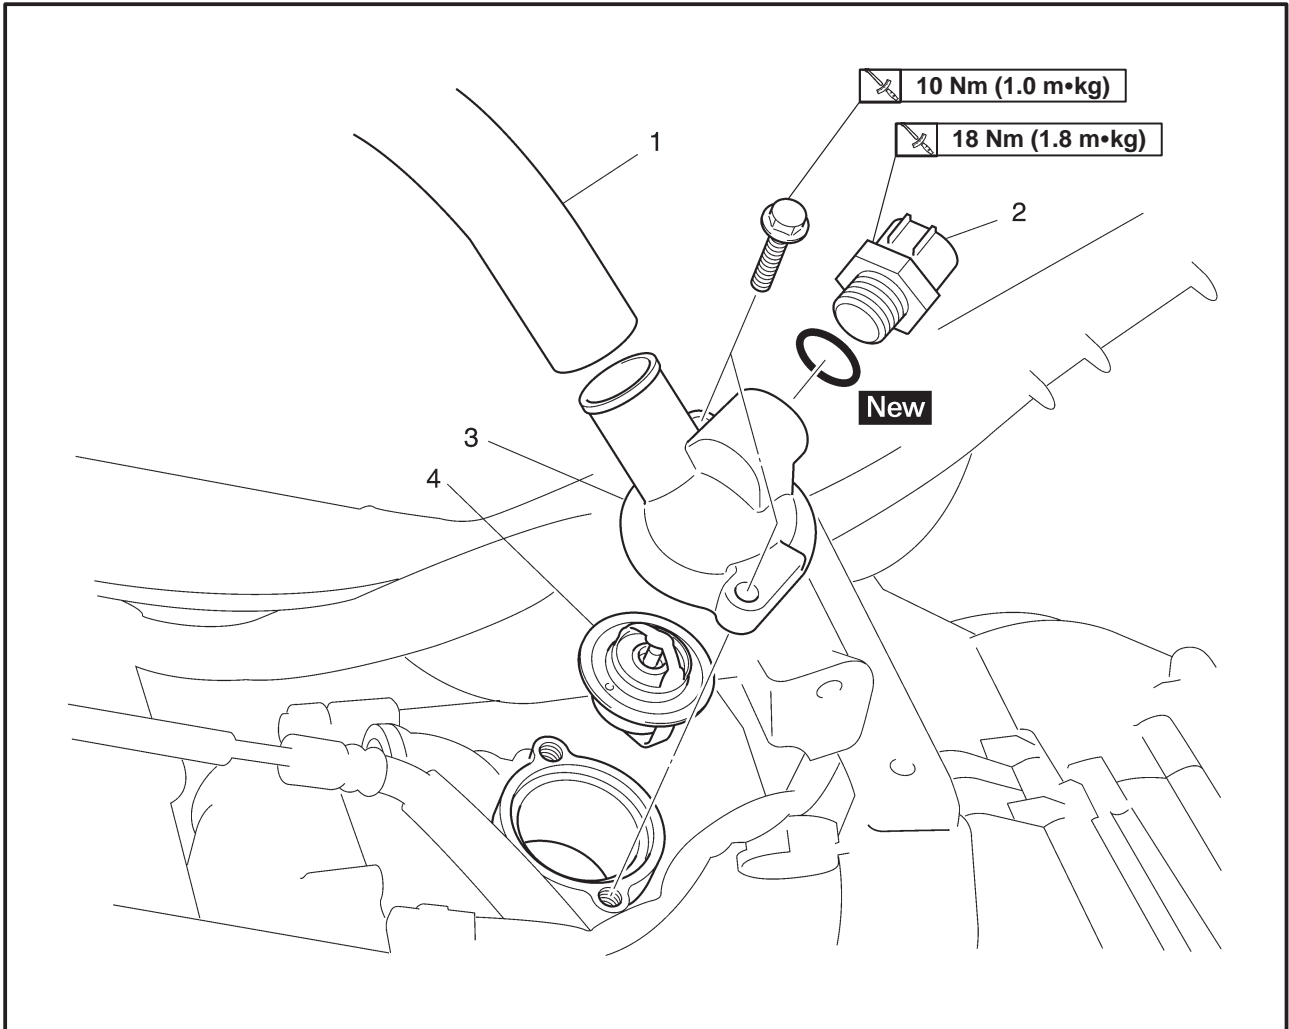


Order	Job/Part	Q'ty	Remarks
	Removing the thermostat		Remove the parts in the order listed.
	Footrest board		Refer to "COVER AND PANEL" in chapter 3.
	Leg shield		
	Side panel		
	Lower cover		
	Coolant		Drain.
	Carburetor assembly		Refer to "CARBURETORS" in chapter 7.
1	Radiator outlet hose	1	
2	Thermo switch	1	Disconnect.
3	Thermostat cover	1	
4	Thermostat	1	
			For installation, reverse the removal procedure.

THERMOSTAT

COOL

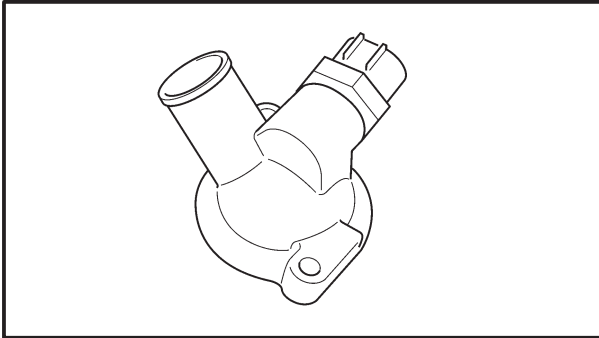

2. Install
 - thermostat cover

 **10 Nm (1.0 m•kg)**


NOTE: _____

Before installing the thermostat cover to the cylinder head, lubricate the O-ring with a thin coat of lithium soap base grease.


3. Fill:
 - cooling system
(with the specified amount of the recommended coolant)
Refer to "CHANGING THE COOLANT" in chapter 3.
4. Check:
 - cooling system
Leaks → Repair or replace any faulty part.
5. Measure:
 - radiator cap opening pressure
Below the specified pressure → Replace the radiator cap.
Refer to "CHECKING THE RADIATOR".




WATER PUMP

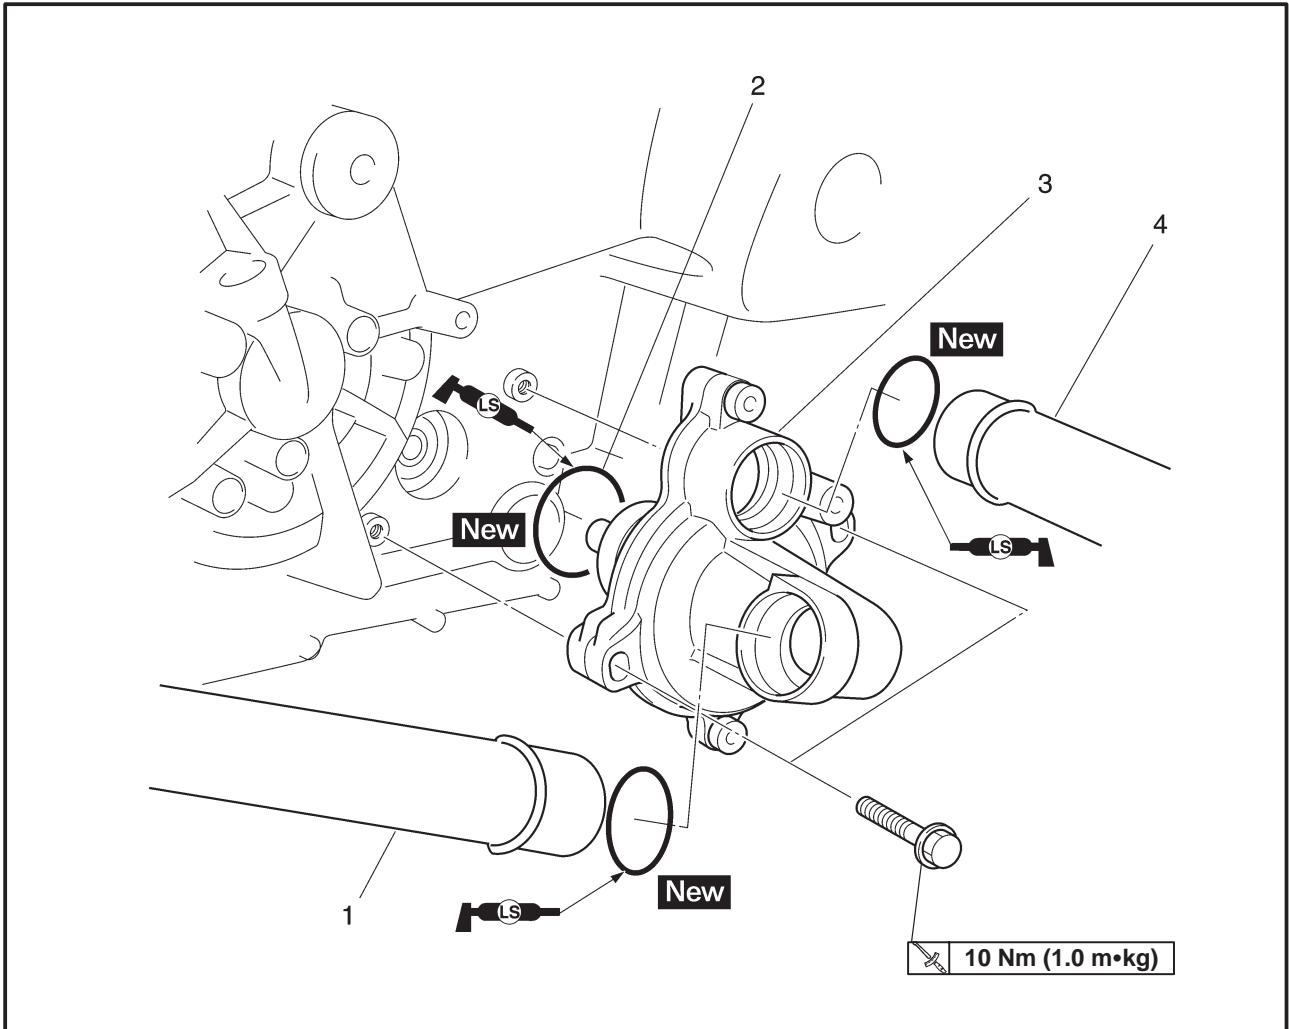

Order	Job/Part	Q'ty	Remarks
	Removing the water pump		Remove the parts in the order listed.
	Footrest board	1	
	Lower cover	1	
	Side panel (left)	1	
	Leg shield		
	Coolant		Drain.
1	Pipe 1	1	
2	O-ring	2	
3	Water pump	1	
4	Pipe 2	1	
			For installation, reverse the removal procedure.

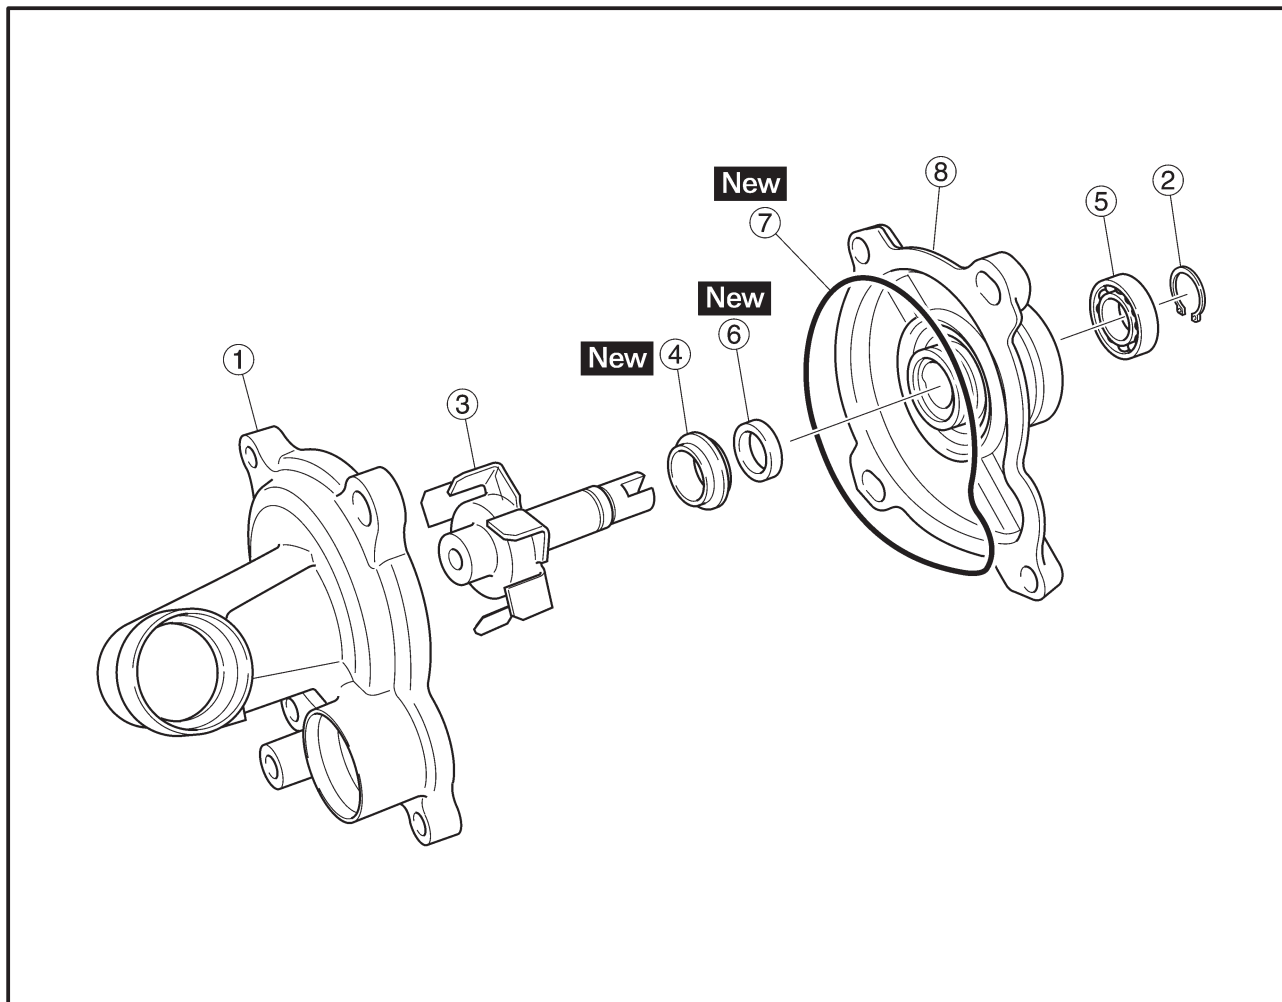

Order	Job/Part	Q'ty	Remarks
	Disassembling the water pump		Disassemble the parts in the order listed. NOTE: _____ It is not necessary to remove the impeller shaft, unless the coolant level is extremely low or coolant contains to engine oil. _____
①	Water pump cover	1	
②	Cir clip	1	
③	Impeller shaft (along with the impeller)	1	
④	Water pump seal	1	
⑤	Bearing	1	
⑥	Oil seal	1	
⑦	O-ring	1	
⑧	Water pump housing	1	
			For assembly, reverse the disassembly procedure.

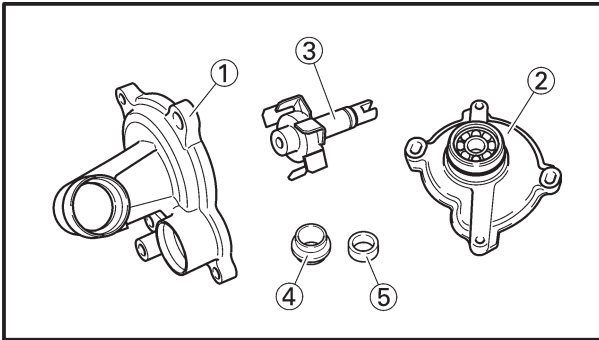


EAS00474

CHECKING THE WATER PUMP

1. Check:

- water pump housing cover ①
- water pump housing ②
- impeller shaft ③
- water pump seal ④
- oil seal ⑤

Cracks/damage/wear → Replace.

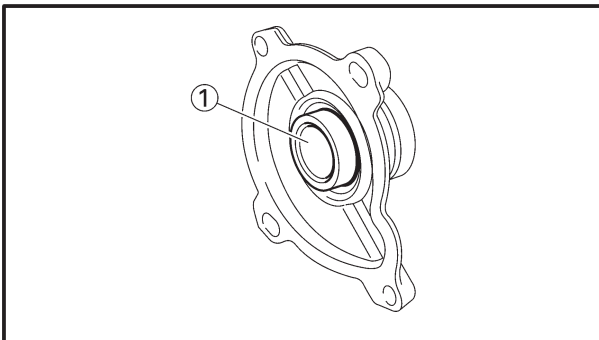

2. Check:

- water pump seal ①
- oil seal

Cracks/damage/wear → Replace.

3. Check:

- bearing

Roughness → Replace.

EAS00475


ASSEMBLING THE WATER PUMP

1. Install:

- oil seal **New**
(to the water pump housing)

NOTE:

- Install the oil seal with a socket that matches its outside diameter.
- Before installing the oil seal, apply tap water or coolant onto its outer surface.


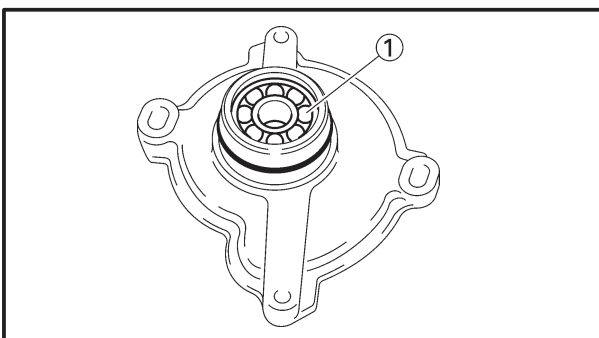


2. Install:

- bearing ①

WATER PUMP

COOL

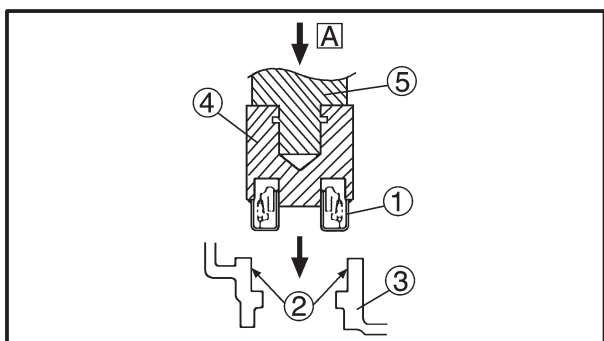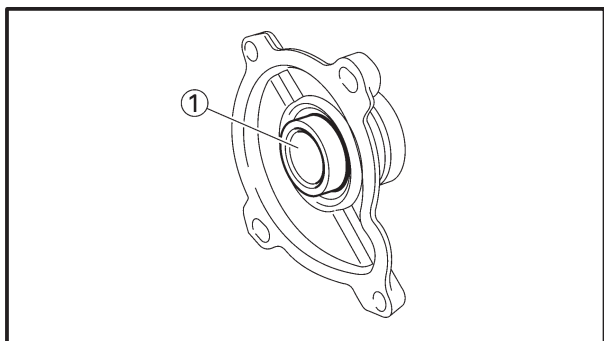

3. Install:
- water pump seal **New** ①

CAUTION: _____

Never apply oil or grease onto the water pump seal surface.

NOTE: _____

- Install the water pump seal with the water pump seal installers.
- Before installing the water pump seal, apply Yamaha bond No.1215 ② to the water pump housing ③.



Water pump seal installer



90890-04078 ④

90890-04058 ⑤

Yamaha bond No.1215

90890-85505

A Push down

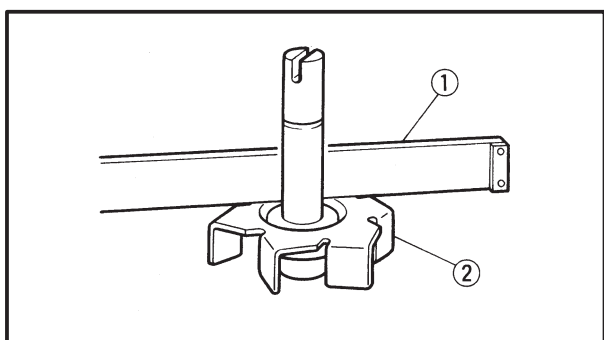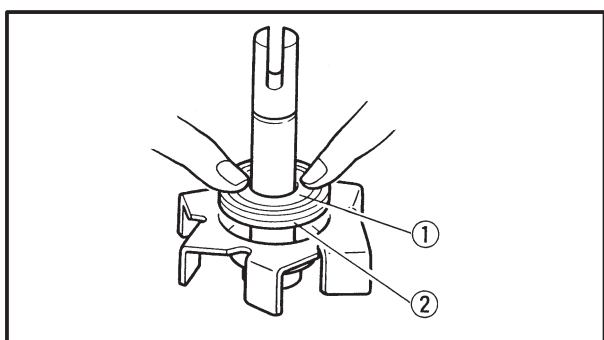

4. Install:
- rubber damper **New** ①
 - rubber damper holder **New** ②

NOTE: _____

Before installing the rubber damper, apply tap water or coolant onto its outer surface.

5. Measure:
- tilt
- Out of specification → Repeat steps (3) and (4).

CAUTION: _____

Make sure that the rubber damper and rubber damper holder are flush with the impeller.



Max. impeller shaft tilt
0.15 mm

- ① Straightedge
- ② Impeller



CARB

7

**CHAPTER 7
CARBURETORS**


CARBURETORS 7-1
 CHECKING THE CARBURETORS 7-5
 ASSEMBLING THE CARBURETORS 7-7
 INSTALLING THE CARBURETORS 7-8
 MEASURING AND ADJUSTING THE FUEL LEVEL 7-9
 CHECKING AND ADJUSTING THE THROTTLE POSITION
 SENSOR 7-10
 CHECKING THE FUEL PUMP 7-12

AIR INDUCTION SYSTEM 7-13
 AIR INDUCTION 7-13
 AIR CUT OFF VALVE 7-13
 AIR INDUCTION SYSTEM DIAGRAMS 7-14
 CHECKING THE AIR INDUCTION SYSTEM 7-15




CARBURETORS


CARBURETORS

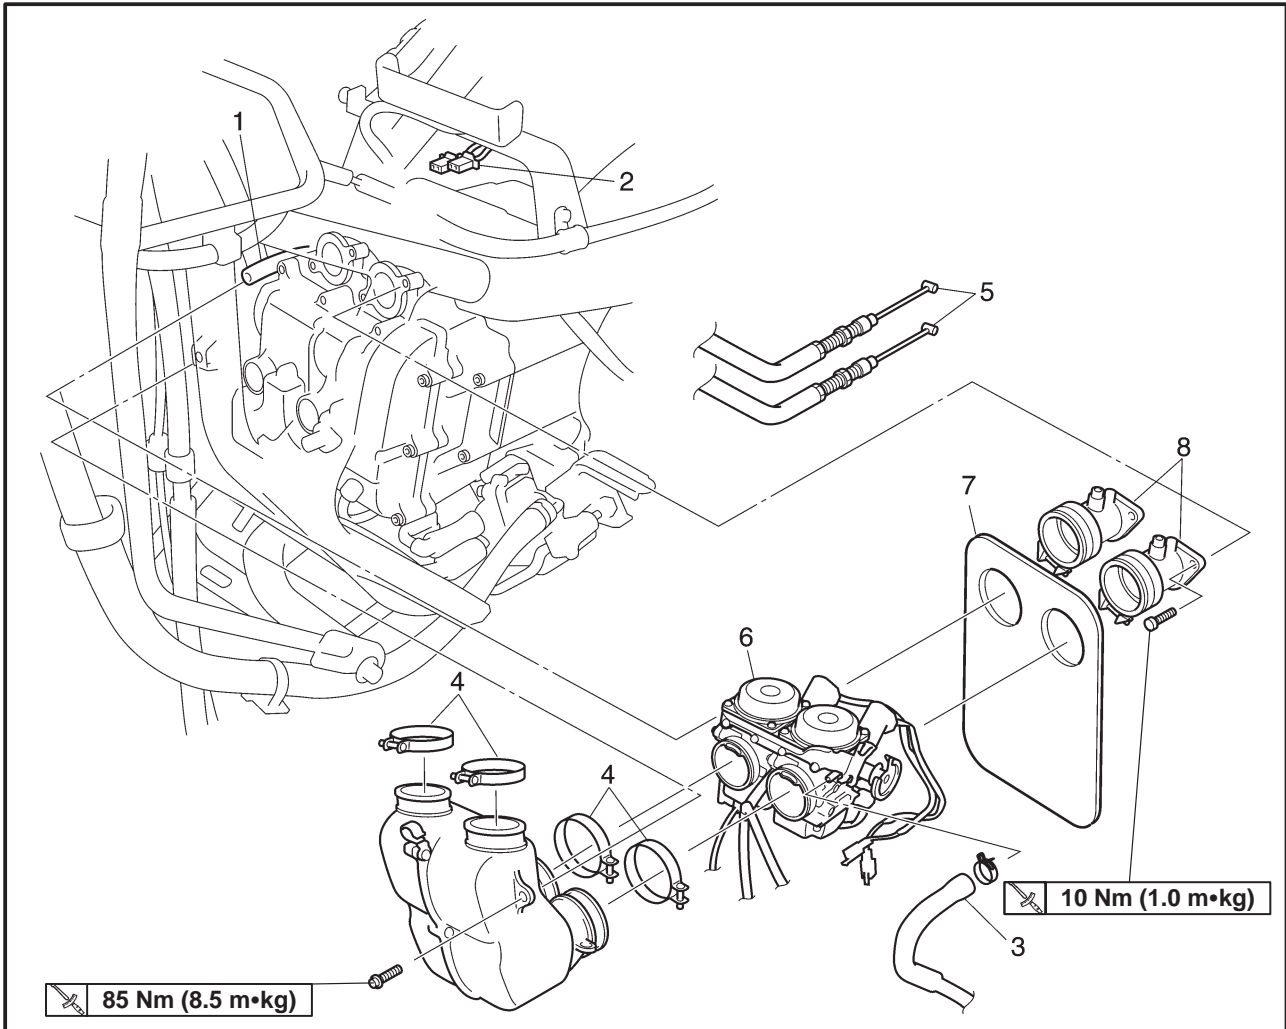


Order	Job/Part	Q'ty	Remarks
	Removing the carburetors		Remove the parts in the order listed.
	Footrest board		Refer to "COVER AND PANEL" in chapter 3.
	Leg shield		
	Center cover		
	Silencer		
1	Fuel hose	1	
2	Throttle position sensor coupler	1	Disconnect.
3	Coolant hose	1	
4	Carburetor joint cramp	4	Loosen.
5	Throttle cable	2	
6	Carburetor assembly	1	
7	Heat protector	1	
8	Intake manifold	2	For installation, reverse the removal procedure.

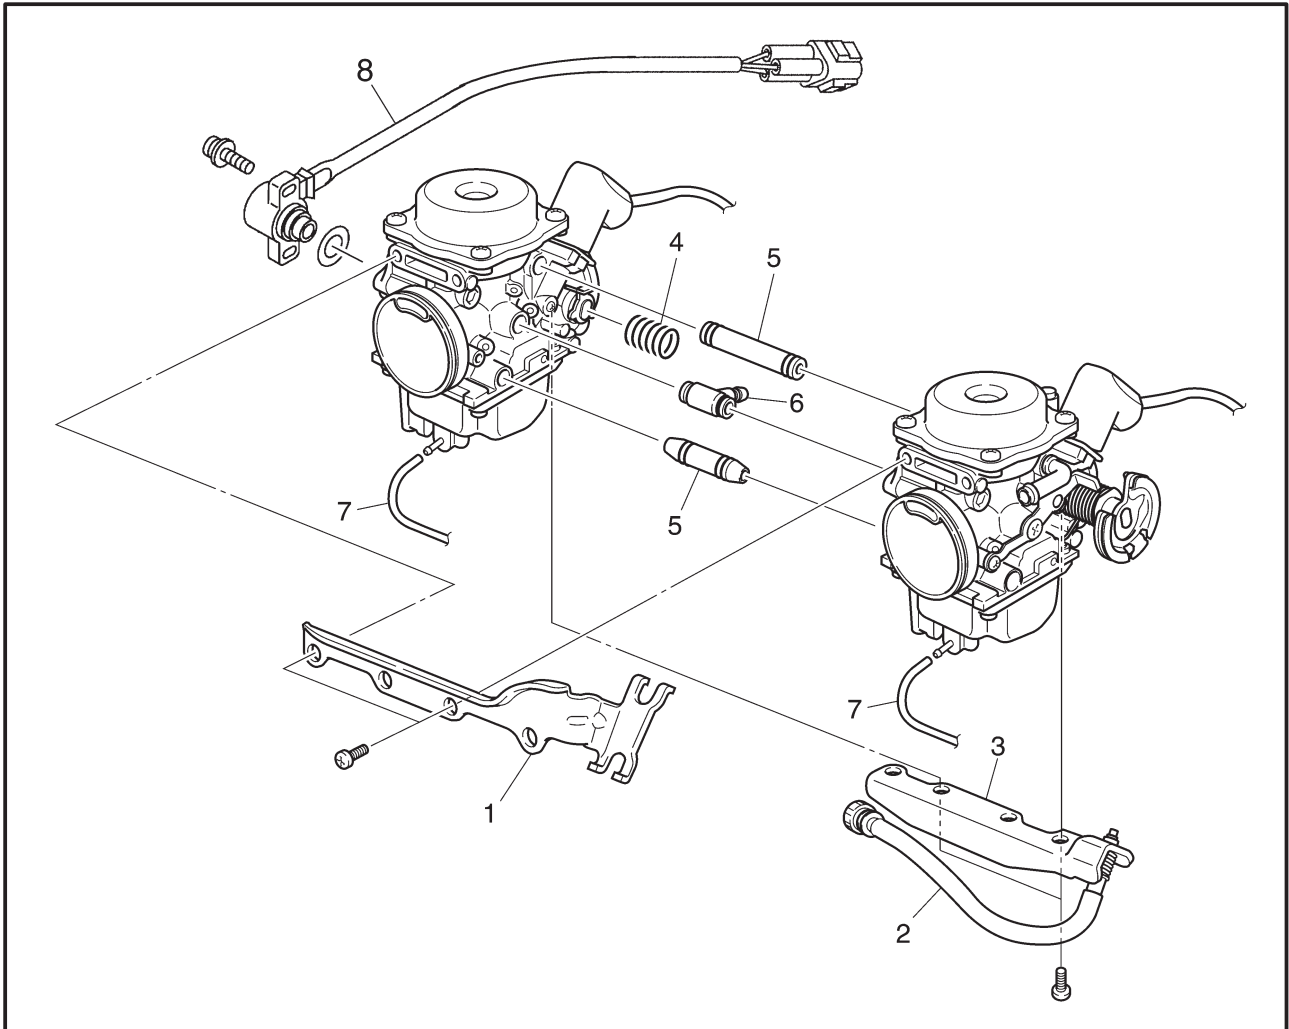


Order	Job/Part	Q'ty	Remarks
	Separating the carburetors		Remove the parts in the order listed.
1	Bracket	1	
2	Throttle stop screw	1	
3	Throttle stop screw bracket	1	
4	Spring	1	
5	Pipe	2	
6	Hose joint	1	
7	Float chamber air vent hose	1	
8	Throttle position sensor	1	
			For installation, reverse the removal procedure.

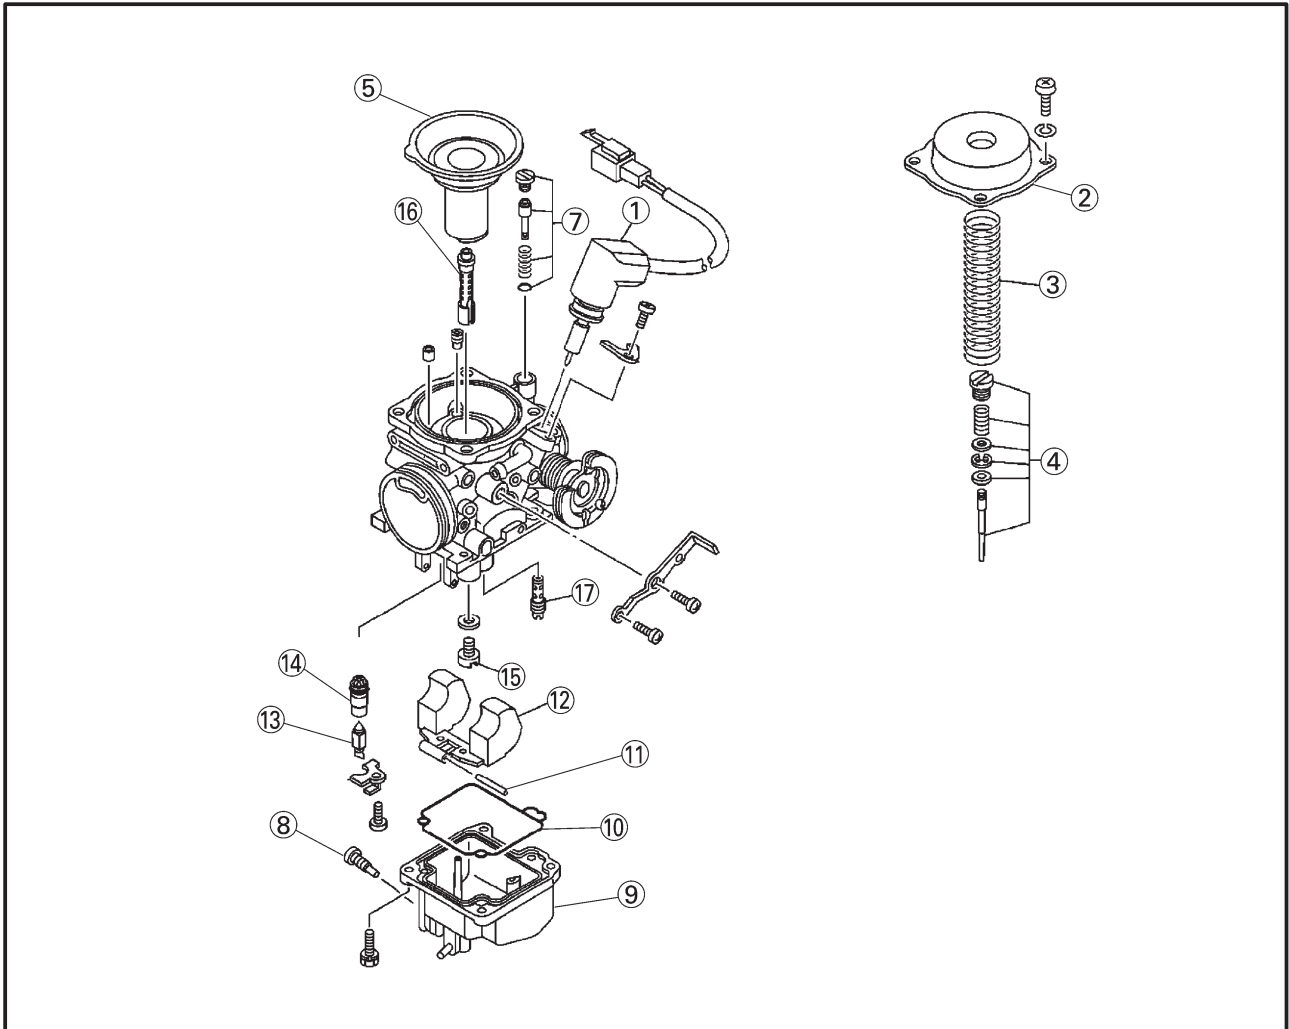


Order	Job/Part	Q'ty	Remarks
	Disassembling the carburetor		Disassembly the parts in the order listed. NOTE: _____ The following procedure applies to all of the carburetors.
①	Starter plunger	1	
②	Vacuum chamber cover	1	
③	Piston valve spring	1	
④	Jet needle kit	1	
⑤	Piston valve	1	
⑥	Screw plug	1	
⑦	Pilot screw	1	
⑧	Fuel drain bolt	1	
⑨	Float chamber cover	1	
⑩	Float chamber gasket	1	
⑪	Float pivot pin	1	

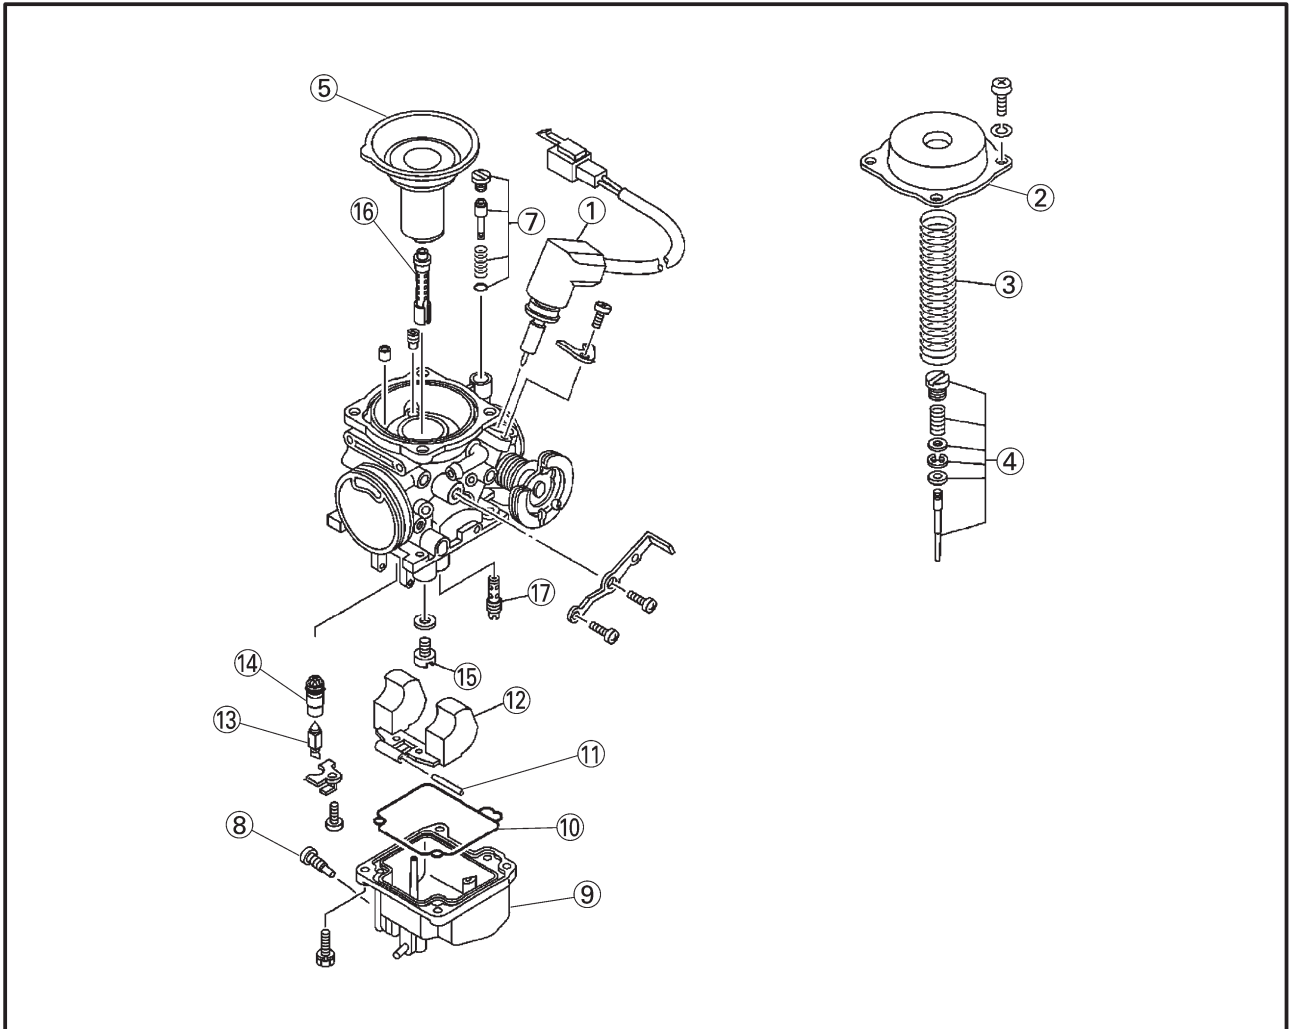


Order	Job/Part	Q'ty	Remarks
⑫	Float	1	For assembly, reverse the disassembly procedure.
⑬	Needle valve	1	
⑭	Needle valve seat	1	
⑮	Main jet	1	
⑯	Main jet holder	1	
⑰	Pilot jet	1	

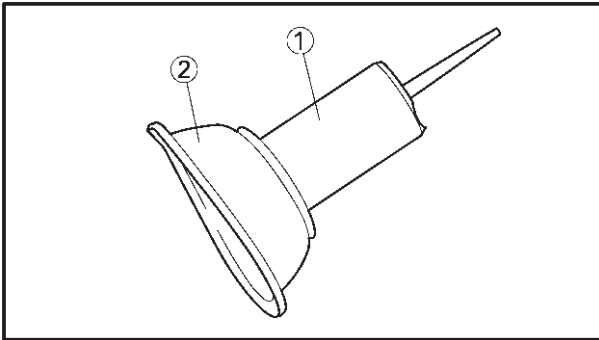


8. Check:
- piston valve ①
Damage/scratches/wear → Replace.
 - piston valve diaphragm ②
Cracks/tears → Replace.

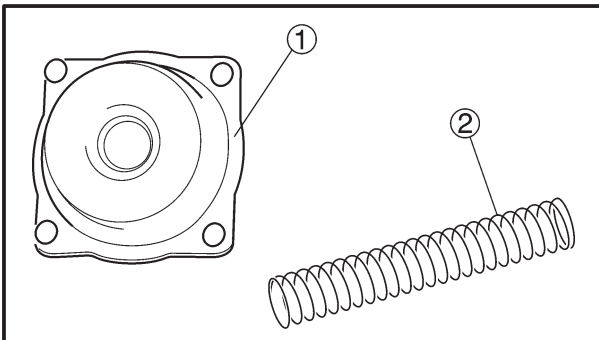


9. Check:
- vacuum chamber cover ①
 - piston valve spring ②
Cracks/damage → Replace.

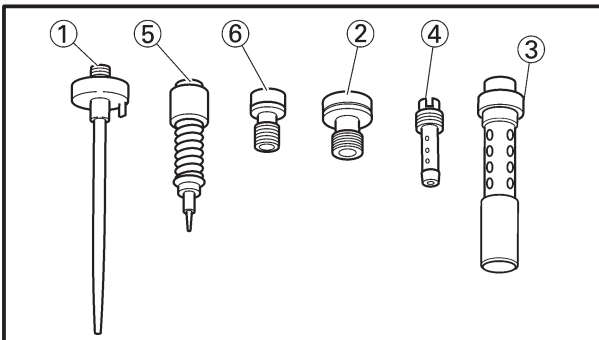

10. Check:
- jet needle ①
 - main jet ②
 - main jet holder ③
 - pilot jet ④
 - pilot screw ⑤
 - pilot air jet ⑥
Bends/damage/wear → Replace.
Obstruction → Clean.
Blow out the jets with compressed air.

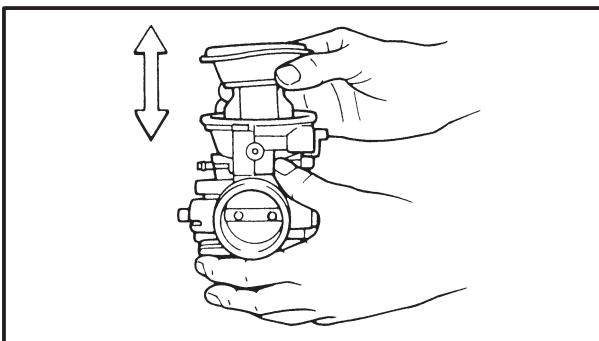

11. Check:
- piston valve movement
Insert the piston valve into the carburetor body and move it up and down.
Tightness → Replace the piston valve.

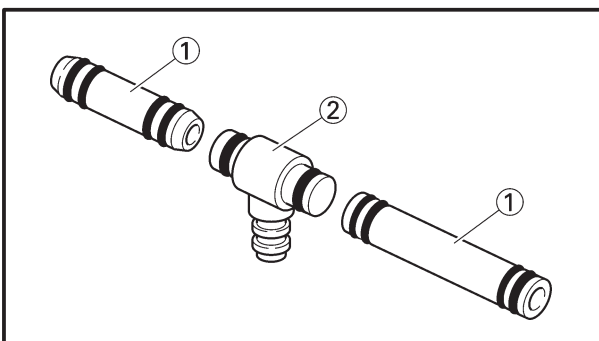

12. Check:
- pipes ①
 - hose joints ②
Cracks/damage → Replace.
Obstruction → Clean.
Blow out the pipes with compressed air.



13. Check:

- fuel hoses
Cracks/damage/wear → Replace.
Obstruction → Clean.
Blow out the hoses with compressed air.


EAS00488

ASSEMBLING THE CARBURETORS

The following procedure applies to all of the carburetors.

CAUTION:

- **Before assembling the carburetors, wash all of the parts in a petroleum-based solvent.**
- **Always use a new gasket.**

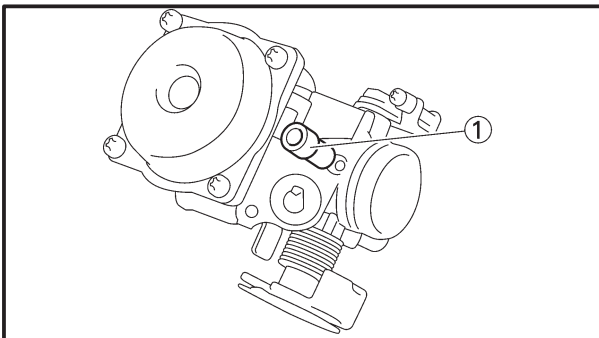

1. Install:

- O-ring **New**
- washer
- pilot screw spring
- pilot screw ①



**Pilot screw
2 turns out**

2. Install:


- piston valve
- jet needle kit
- jet needle holder
- piston valve spring
- vacuum chamber cover

NOTE:

- Insert the end of the piston valve spring onto the spring guide on the vacuum chamber cover.
- Align the tab on the piston valve diaphragm with the recess in the carburetor body.




3. Install:
 - pipe
 - fuel feed pipes
 - spring
 - float chamber air vent hoses
 - hose joint
 - copper washer
 - throttle stop screw

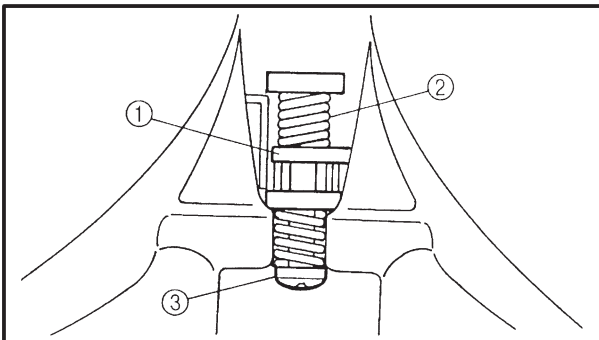

NOTE: _____

- Install the throttle valve lever ① onto carburetors #1, and #2 between the spring ② and synchronizing screw ③.

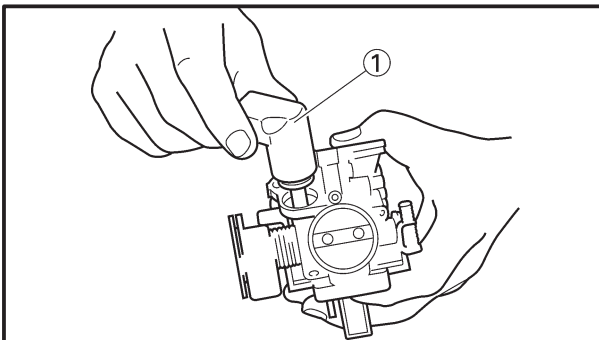

4. Install:
 - auto choke unit ①

EB600051

INSTALLING THE CARBURETORS

1. Adjust:
 - carburetor synchronization
Refer to “SYNCHRONIZING THE CARBURETORS” in chapter 3.
2. Adjust:
 - engine idling speed



Engine idling speed
1,150 ~ 1,250 r/min


Refer to “ADJUSTING THE ENGINE IDLING SPEED” in chapter 3.

3. Adjust:
 - throttle cable free play



Throttle cable free play (at the flange of the throttle grip)
3 ~ 5 mm

Refer to “ADJUSTING THE THROTTLE CABLE FREE PLAY” in chapter 3.

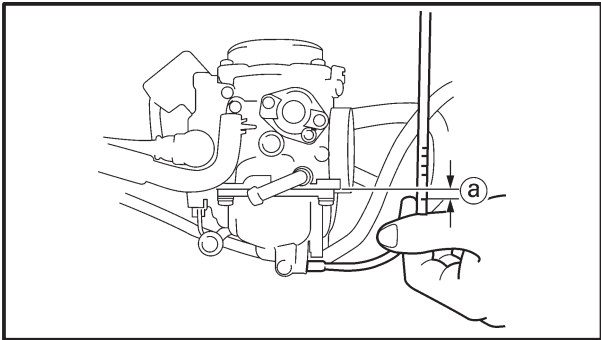

EAS00496

MEASURING AND ADJUSTING THE FUEL LEVEL

1. Measure:

- fuel level (a)

Out of specification → Adjust



Fuel level (below the float chamber mating surface)
5.5 ~ 6.5 mm



- a. Stand the motorcycle on a level surface.
- b. Place the motorcycle on a suitable stand to ensure that the motorcycle is standing straight up.
- c. Install the fuel level gauge to the fuel drain pipe.



Fuel level gauge
90890-01312

- d. Loosen the fuel drain screw.
- e. Hold the fuel level gauge vertically next to the float chamber.
- f. Measure the fuel level (a).

NOTE: _____

Fuel level readings should be equal on both sides of the carburetor assembly.




2. Adjust:

- fuel level



- a. Remove the carburetor assembly.
- b. Check the needle valve seat and needle valve.
- c. If either is worn, replace them as a set.
- d. If both are fine, adjust the float level by slightly bending the float tang (1).
- e. Install the carburetor assembly.
- f. Measure the fuel level again.
- g. Repeat steps (a) to (f) until the fuel level is within specification.

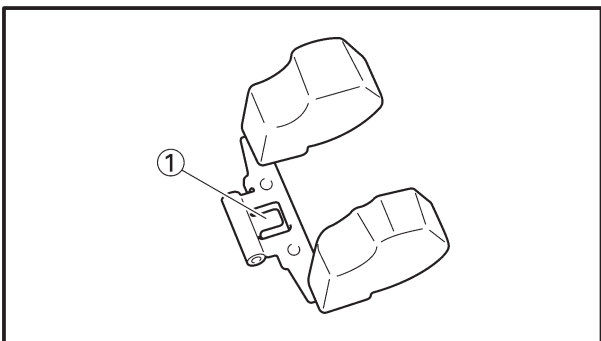

CARBURETORS

CARB




Closed-throttle resistance
0.56 ~ 0.84 k Ω at 20°C
(yellow – black)

c. Tighten the throttle position sensor screws.

NOTE: _____

Remove the pocket tester leads and connect the throttle position sensor coupler.



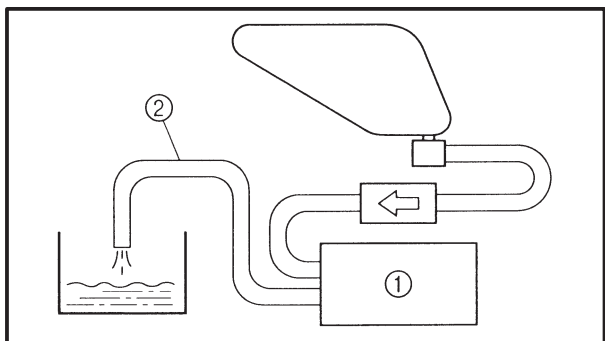

CHECKING THE FUEL PUMP

1. Check:

- fuel pump ①



- a. Disconnect the fuel pump to carburetor fuel hose ② from the carburetor.
- b. Place a container under the end of the fuel hose.
- c. Start the engine and check if fuel flows from the fuel hose ②.

Fuel flows.	Fuel pump is OK.
Fuel does not flow.	Replace the fuel pump.

- d. Stop The engine and check if the fuel stops flowing from the fuel hose ②.

Fuel stops flowing.	Fuel pump is OK.
Fuel flows.	Replace the fuel pump.






EAS00507

**AIR INDUCTION SYSTEM
AIR INJECTION**

The air induction system burns unburned exhaust gases by injecting fresh air (secondary air) into the exhaust port, reducing the emission of hydrocarbons.

When there is negative pressure at the exhaust port, the reed valve opens, allowing secondary air to flow into the exhaust port. The required temperature for burning the unburned exhaust gases is approximately 600 to 700°C.

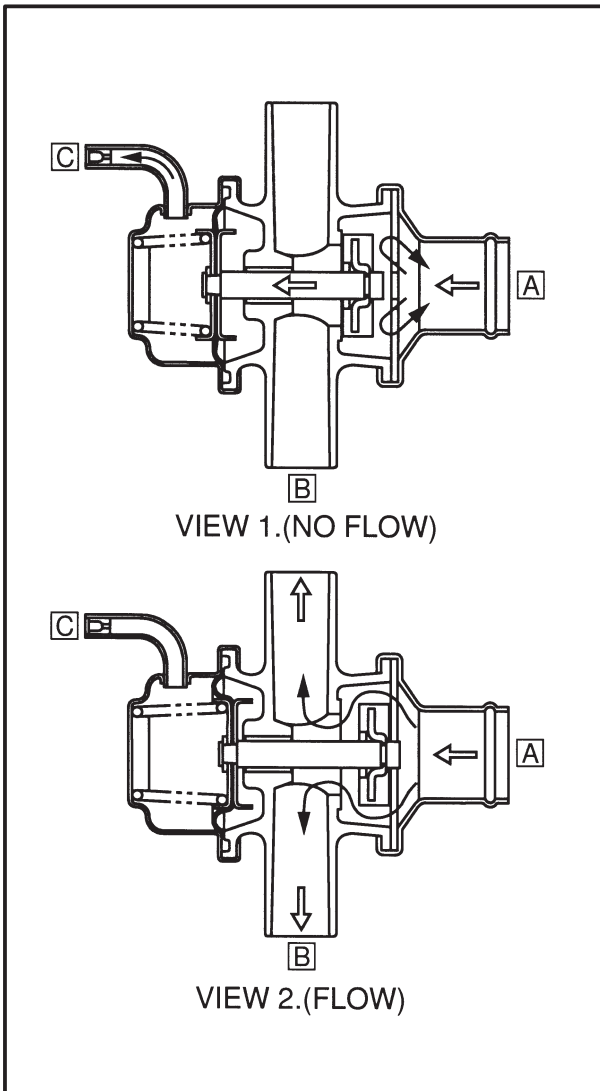

EAS00508

AIR CUTOFF VALVE

The air cutoff valve is operated by the intake gas pressure through the piston valve diaphragm. Normally, the air cutoff valve is open to allow fresh air to flow into the exhaust port. During sudden deceleration (the throttle valve suddenly closes), negative pressure is generated and the air cutoff valve is closed in order to prevent after-burning.

Additionally, at high engine speeds and when the pressure decreases, the air cutoff valve automatically closes to guard against a loss of performance due to self-EGR.

(This “low-boost close” function is the same as on the FZR600 (3HW).)

VIEW 1. (NO FLOW)

When decelerating (the throttle closes), the valve will close.

VIEW 2. (FLOW)


During normal operation the valve is open.

- A** From the air filter
- B** To the reed valve
- C** To the carburetor joint



EAS00509

AIR INDUCTION SYSTEM DIAGRAMS

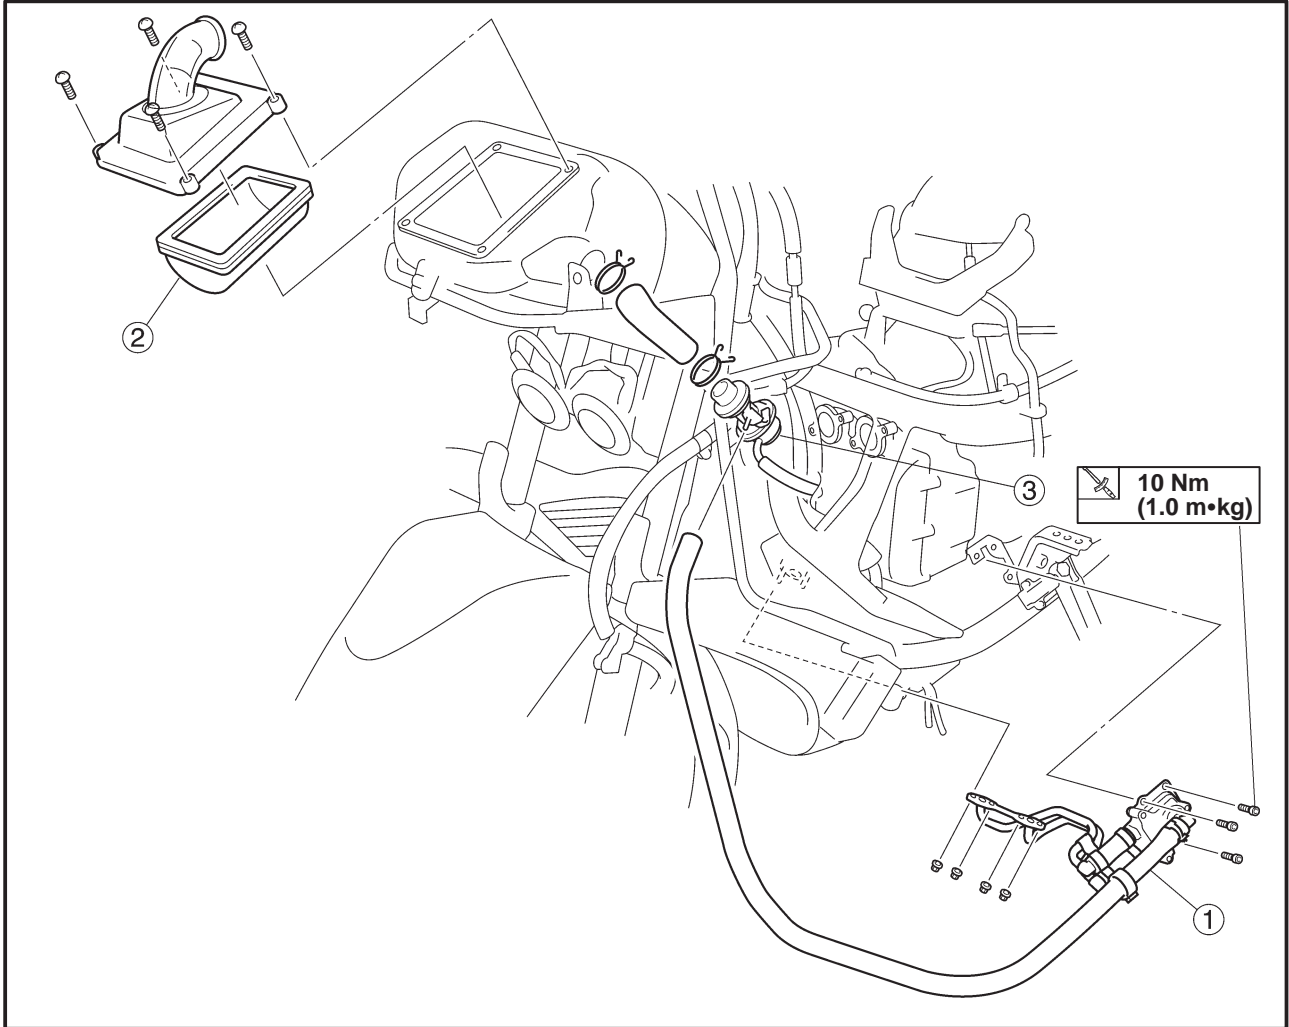

- ① Reed valve
- ② Air filter
- ③ Air cutoff valve




EAS00510

CHECKING THE AIR INDUCTION SYSTEM


1. Check:

- hoses
Loose connection → Connect properly.
Cracks/damage → Replace.
- pipes
Cracks/damage → Replace.

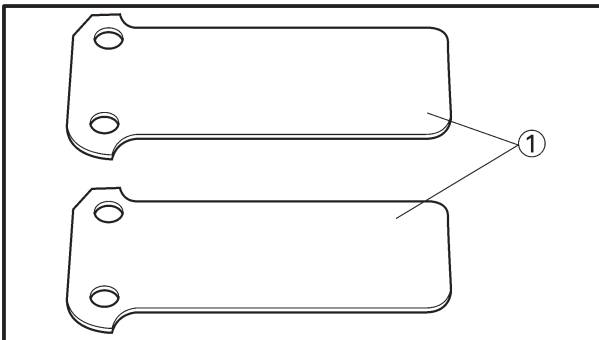

2. Check:

- reed valve ①
- reed valve stopper
- reed valve seat
Cracks/damage → Replace the reed valve.

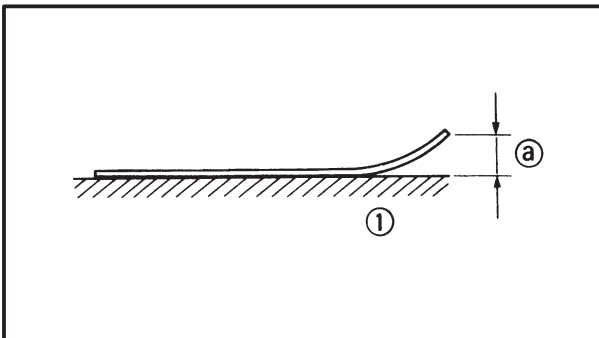


3. Measure:

- reed valve bending ②
Out of specification → Replace the reed valve.



**Maximum reed valve bending
0.4 mm**

① Surface plate

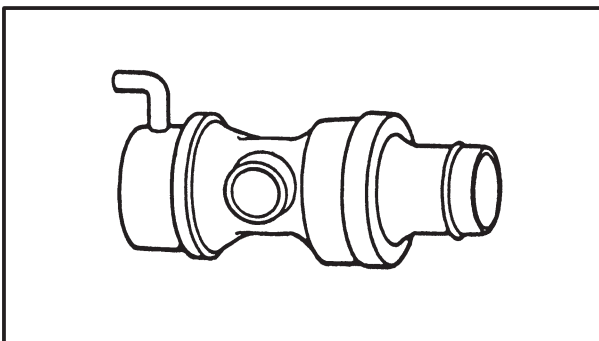


4. Check:

- air cutoff valve
Cracks/damage → Replace.



ELEEC

8



CHAPTER 8 ELECTRICAL

ELECTRICAL COMPONENTS	8-1
ARRANGEMENT OF THE ELECTRICAL COMPONENTS AND COUPLERS	8-2
INSTRUMENT FUNCTIONS	8-5
INDICATOR LIGHTS	8-5
SWITCHES	8-8
CHECKING THE SWITCH CONTINUITY	8-8
CHECKING THE SWITCHES	8-9
CHECKING THE BULBS AND BULB SOCKETS	8-10
TYPES OF BULBS	8-10
CHECKING THE CONDITION OF THE BULBS	8-10
CHECKING THE CONDITION OF THE BULB SOCKETS	8-12
IGNITION SYSTEM	8-13
CIRCUIT DIAGRAM	8-13
TROUBLESHOOTING	8-14
ELECTRICAL STARTING SYSTEM	8-17
CIRCUIT DIAGRAM	8-17
STARTING CIRCUIT CUT OFF SYSTEM OPERATION	8-19
TROUBLESHOOTING	8-20
STARTER MOTOR	8-23
CHECKING THE STARTER MOTOR	8-25
ASSEMBLING THE STARTER MOTOR	8-26
CHARGING SYSTEM	8-28
CIRCUIT DIAGRAM	8-28
TROUBLESHOOTING	8-29
LIGHTING SYSTEM	8-31
CIRCUIT DIAGRAM	8-31
TROUBLESHOOTING	8-32
CHECKING THE LIGHTING SYSTEM	8-34
SIGNAL SYSTEM	8-37
CIRCUIT DIAGRAM	8-37
TROUBLESHOOTING	8-39
CHECKING THE SIGNAL SYSTEM	8-39
COOLING SYSTEM	8-46
CIRCUIT DIAGRAM	8-46
TROUBLESHOOTING	8-47

FUEL PUMP SYSTEM 8-50
 CIRCUIT DIAGRAM 8-50
 FUEL PUMP CIRCUIT OPERATION 8-51
 TROUBLESHOOTING 8-52
 CHECKING THE FUEL PUMP 8-54


AUTO CHOKE SYSTEM 8-55
 CIRCUIT DIAGRAM 8-55
 TROUBLESHOOTING 8-56

SELF-DIAGNOSIS 8-58
 TROUBLESHOOTING 8-60

ELECTRICAL

ELECTRICAL COMPONENTS

- ① Front brake light switch
- ② Rear brake light switch
- ③ Thermo unit
- ④ Fuel sender
- ⑤ Starting circuit cut-off relay
- ⑥ Fuel pump relay
- ⑦ Flasher relay
- ⑧ Battery
- ⑨ Fuse box
- ⑩ Starter relay
- ⑪ Rectifier/regulator
- ⑫ Sidestand switch
- ⑬ Pickup coil
- ⑭ Stator coil
- ⑮ Thermo switch
- ⑯ Radiator fan
- ⑰ Speed sensor
- ⑱ Horn
- ⑲ Throttle position sensor
- ⑳ Ignition coil
- ㉑ Lean angle cut-off switch
- ㉒ Main switch

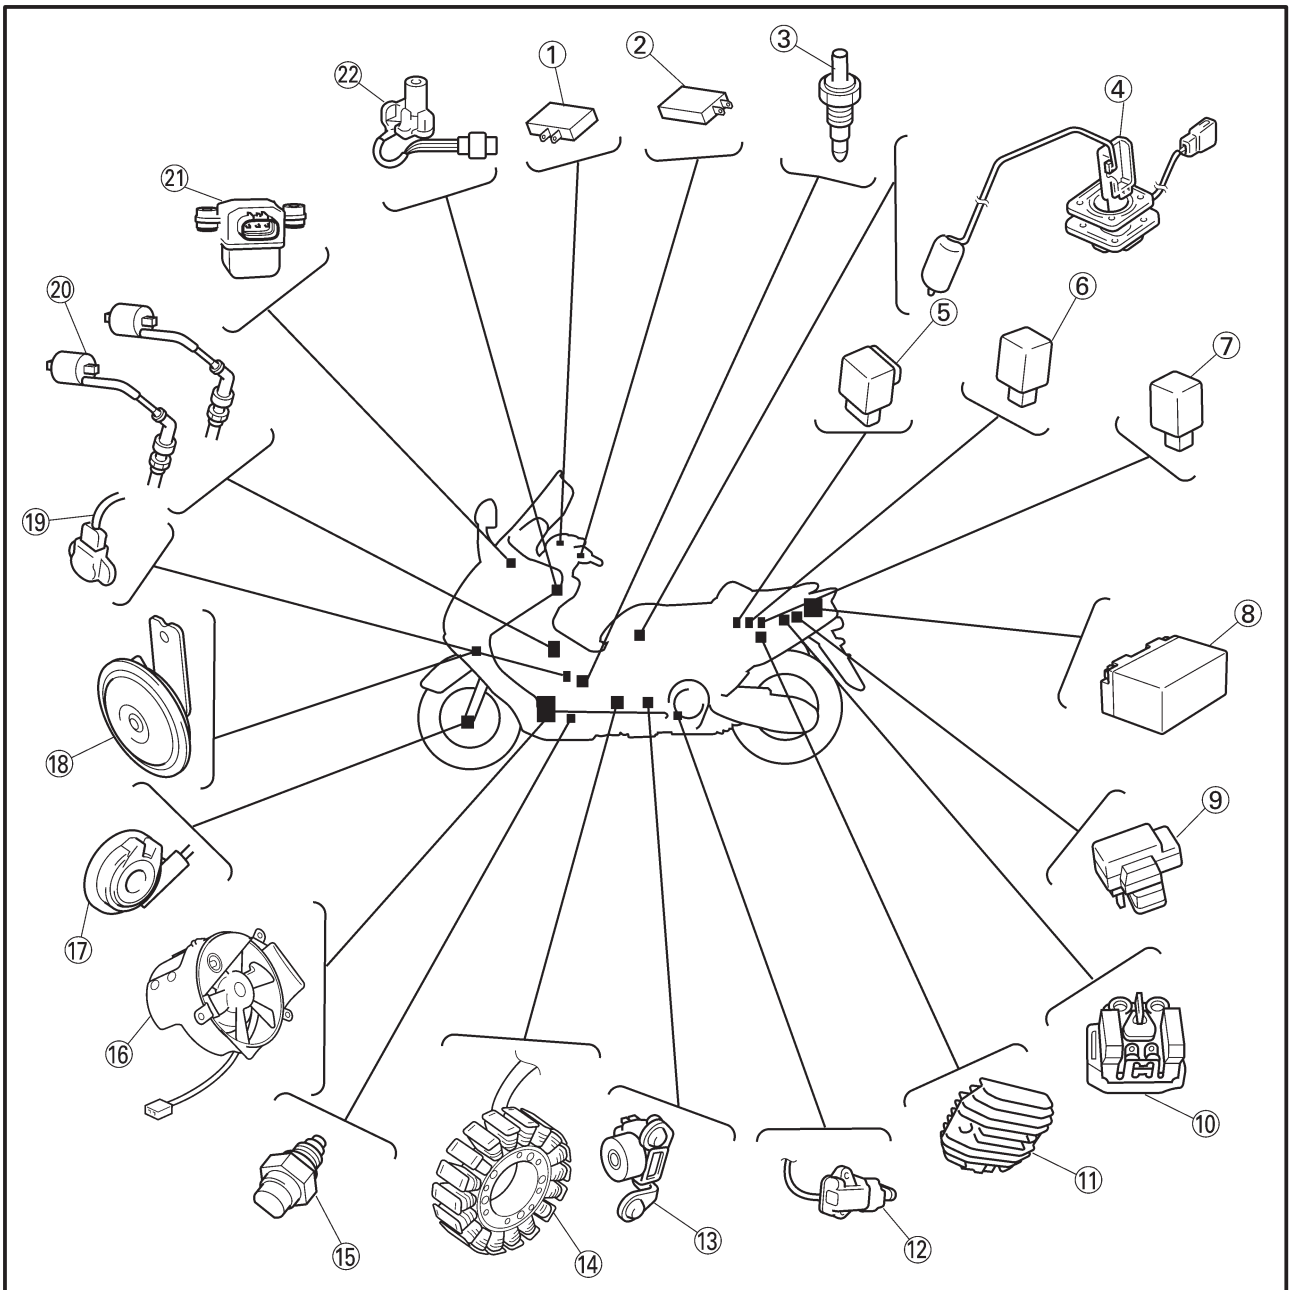


ARRANGEMENT OF THE ELECTRICAL COMPONENTS AND COUPLERS



ARRANGEMENT OF THE ELECTRICAL COMPONENTS AND COUPLERS


- ① Headlight couplers
- ② Handlebar switch couplers
- ③ Lean angle cut-off switch
- ④ Meter
- ⑤ Horns
- ⑥ Speed sensor

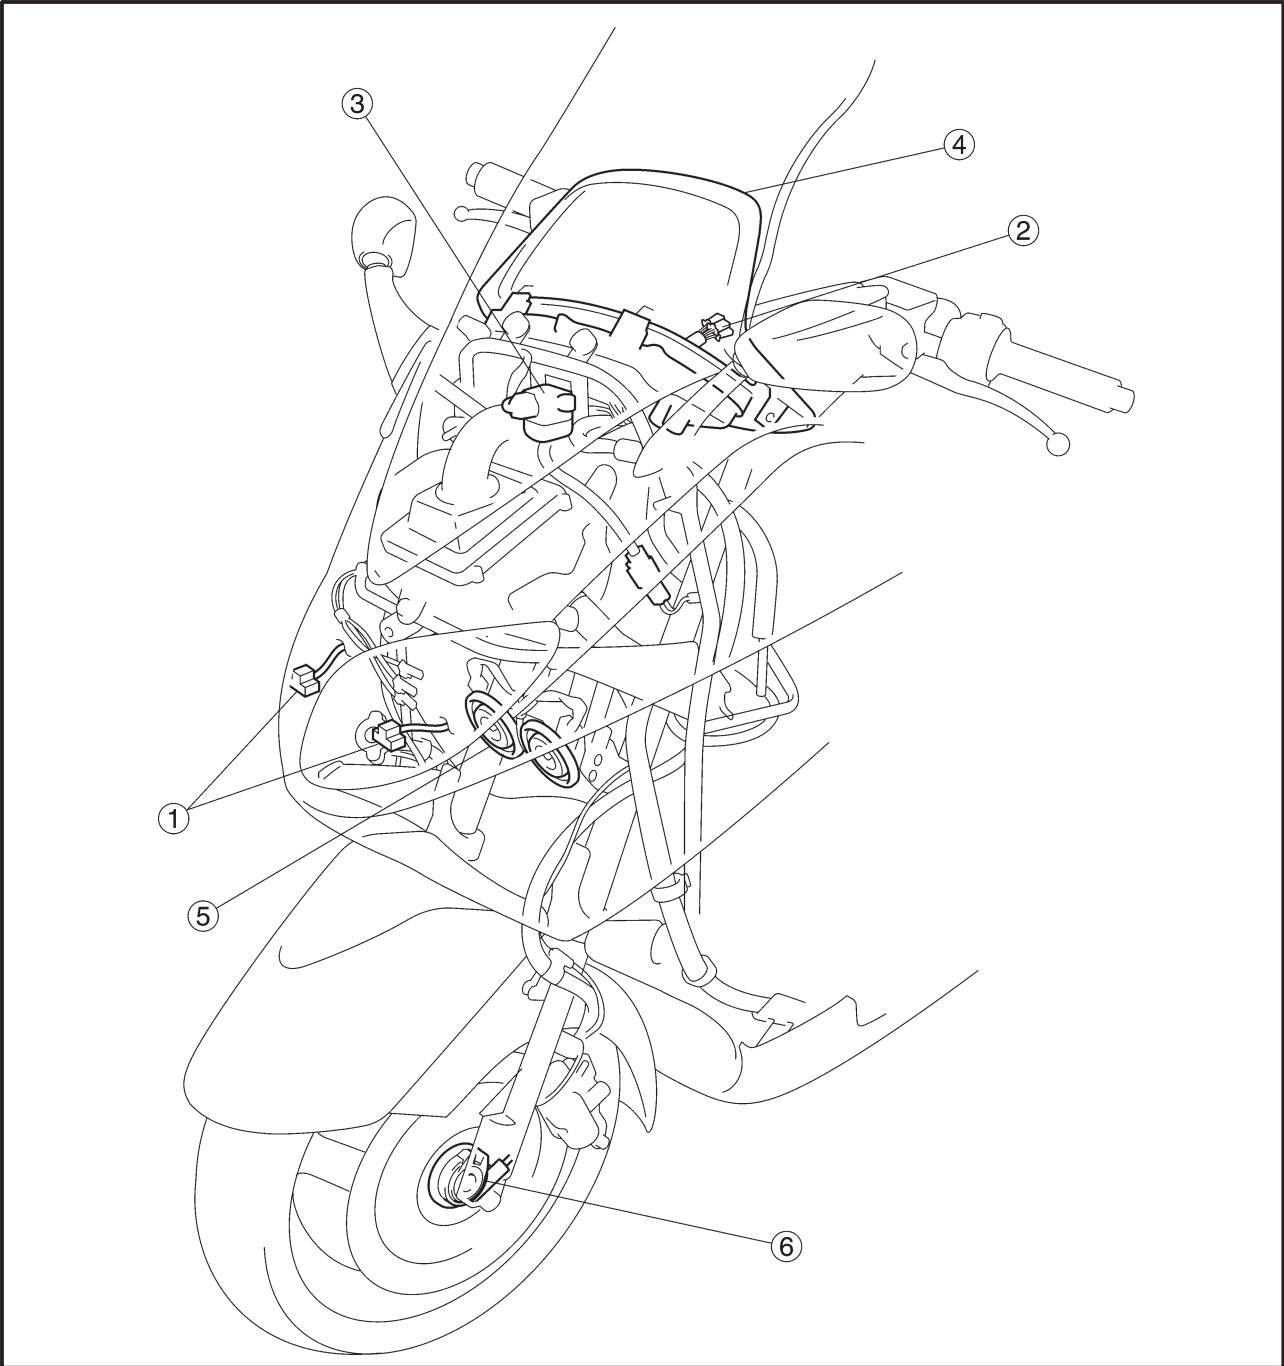


ARRANGEMENT OF THE ELECTRICAL COMPONENTS AND COUPLERS



- ① Main switch
- ② Ignition coils
- ③ Fuel sender
- ④ Fuel pump
- ⑤ Reset coupler
- ⑥ Starting circuit cut-off relay
- ⑦ Turn signal relay
- ⑧ Pump relay
- ⑨ Rectifier/regulator

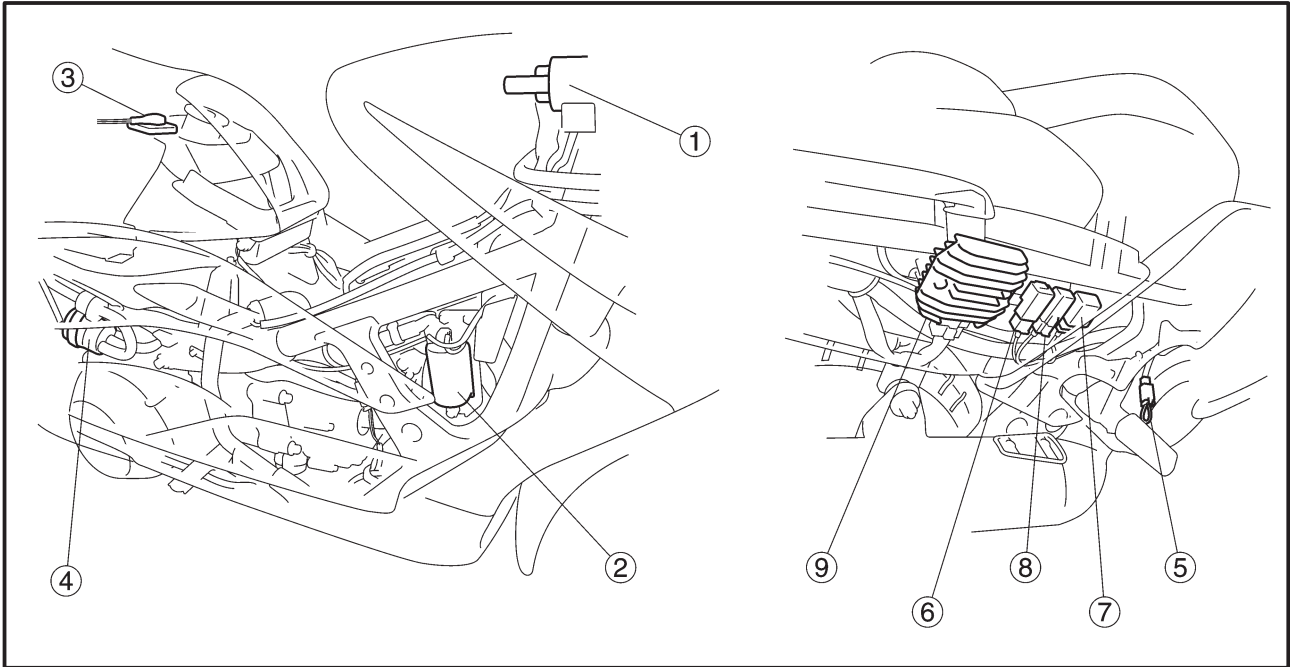

- ① Radiator fan motor
- ② Thermo switch (fan motor)
- ③ Sidestand switch
- ④ Auto chokes
- ⑤ Thermo switch (auto choke)
- ⑥ Throttle position sensor
- ⑦ Thermo unit
- ⑧ Pickup coil
- ⑨ A.C. magneto

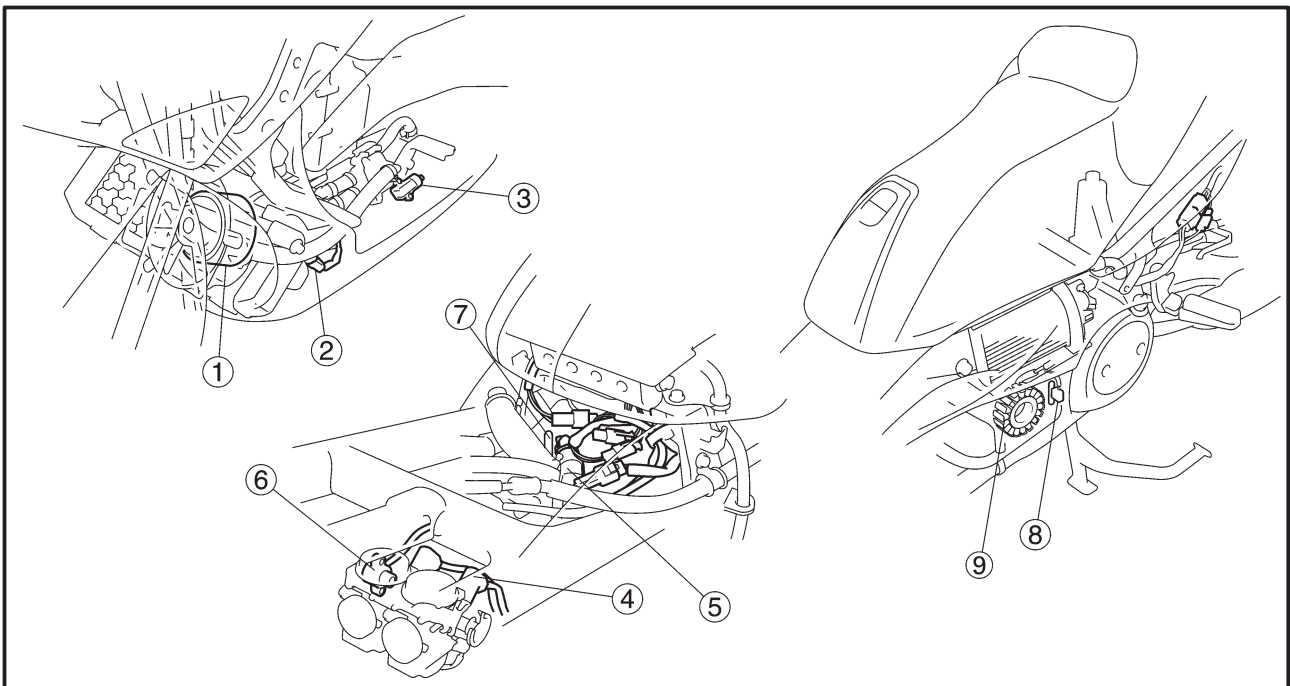



ARRANGEMENT OF THE ELECTRICAL COMPONENTS AND COUPLERS


ELEC



- ① Fuse box
- ② Battery negative lead
- ③ Battery positive lead
- ④ Tail/brake light coupler
- ⑤ Starter relay

- ⑥ Box light

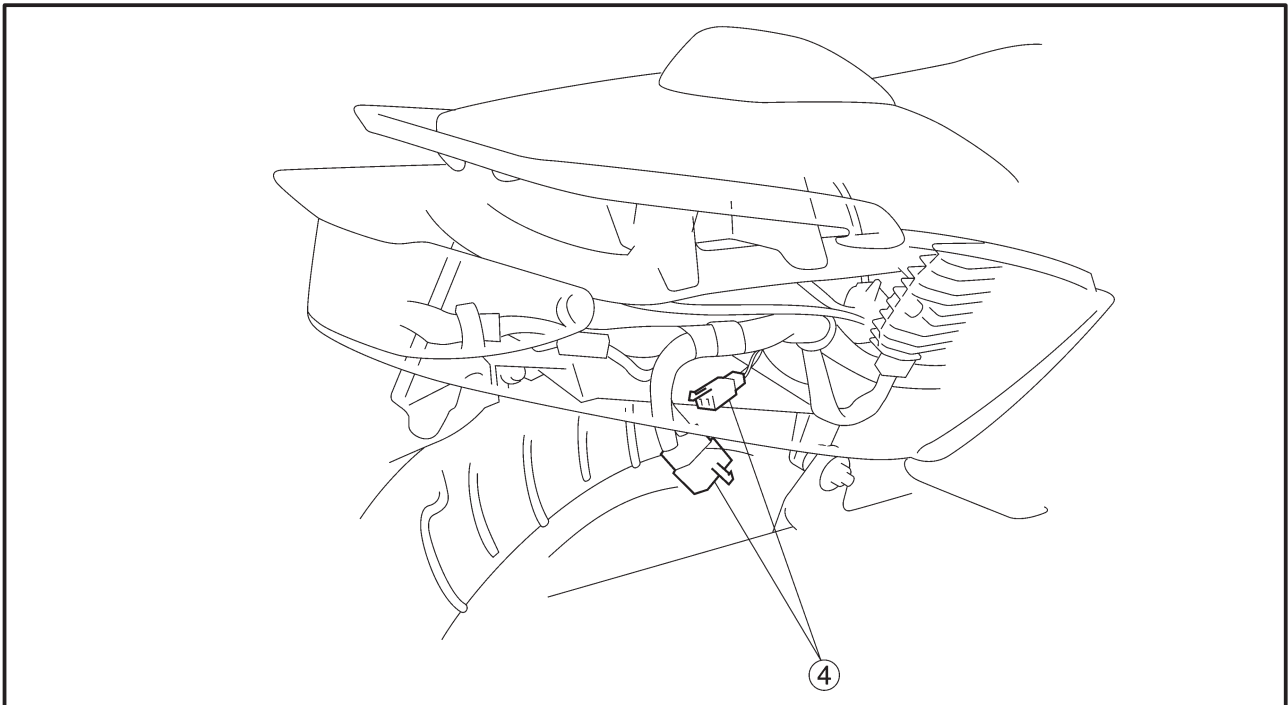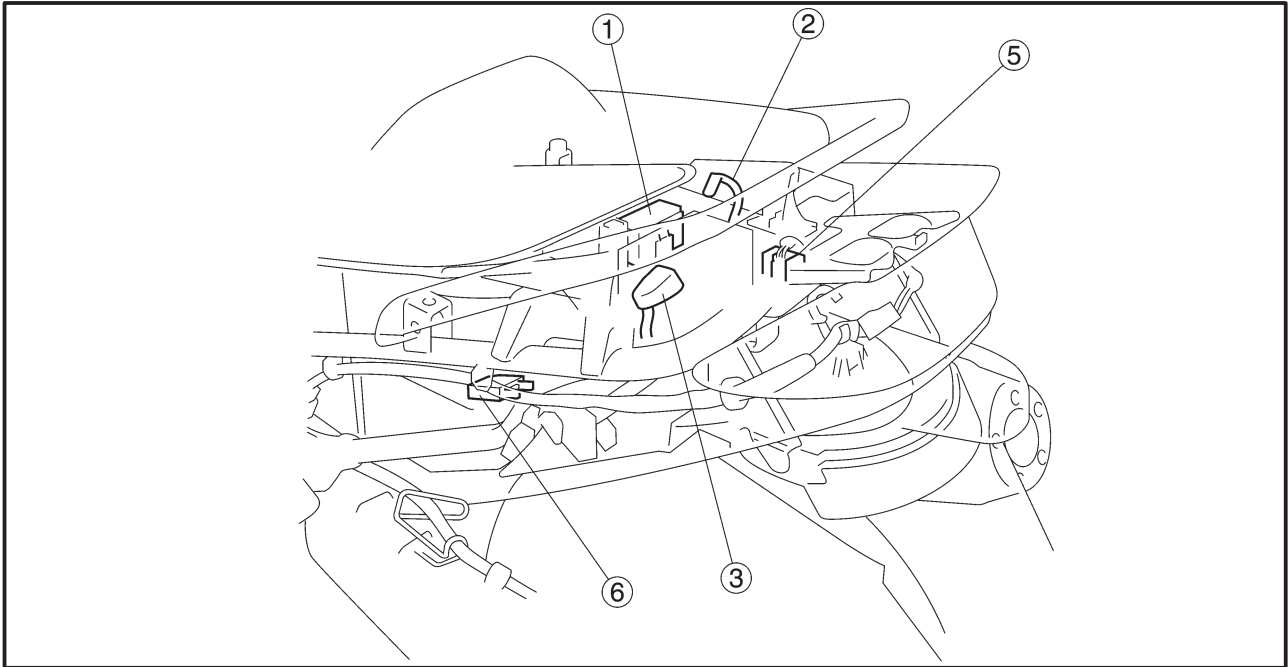

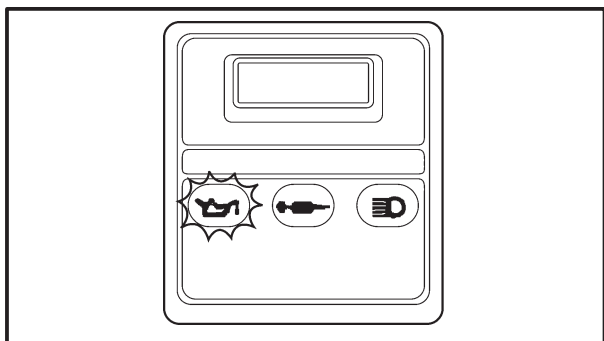

INSTRUMENT FUNCTIONS

INDICATOR LIGHTS

Engine oil change indicator light

(display functions based on the oil indicator)

The display functions based on the engine oil change indicator can be divided into three major types:

1. Bulbs disconnections confirmation (light ON) by main switch ON.
 - Main switch on activates the oil indicator for 1.4 seconds to allow the user to check if bulb disconnections have occurred.
2. Oil replacement timing notification (light on)
 - Turn the key to "ON".
 - Hold the reset button pushed for two to five seconds.
 - Release the reset button, and the oil change indicator light will go off.

NOTE:

If the engine oil is changed before the oil change indicator light comes on (i.e. before the periodic oil change interval has been reached), the indicator light must be reset after the oil change for the next periodic oil change to be indicated at the correct time. To reset the oil change indicator light before the periodic oil change interval has been reached, follow the above procedure, but note that the indicator light will come on for 1.4 seconds after releasing the reset button, otherwise repeat the procedure.

- Setting the indicator light on distance
The indicator initially light up at 1,000 km.
It light up at 5,000 km next time.
Subsequently, the indicator repeat lighting up every 5,000 km after it has been reset.
- Detection of initial reset switch on operation before arrival at 1,000 km. (When the indicator is off)
When 2 ~ 5 second reset switch on is detected, the indicator will light on for 1.4 seconds and initial 1,000 km judgment will not occur (the indicator will not light on at 1,000 km).
- Detection of reset switch on operation during the time from initial 1,000 km judgment to arrival at 5,000 km.
(When the indicator is light on)
When 2 ~ 5 second reset switch on is detected, the indicator will go off.
Cumulative distance data will not be reset.





- Detection of the second and subsequent re-set switch on operations with the indicator light off when 2 ~ 5 second reset switch on is detected, the indicator will light on for 1.4 seconds and then after it has gone off, cumulative distance data will be reset.
 - Detection of the second and subsequent re-set switch on operations with the indicator on when 2 ~ 5 second reset switch on is detected, the indicator will go off and cumulative distance data will be reset.
3. Fault code display (blinks) based on self diagnostics.
- If it detects the following faults, the igniter will blink the display of a 5 second ON/OFF code and then blink the engine oil change indicator light at intervals of 3.0 seconds. If multiple faults are detected, the appropriate fault codes will be displayed in order of occurrence.

Detected fault

- Throttle position sensor
- Speed sensor
- Lean angle cutt-off switch

NOTE:


- The fault code is reset by main switch off (igniter unit power off). Also, the display of the fault code is terminated with the recovery of the circuits from the fault.

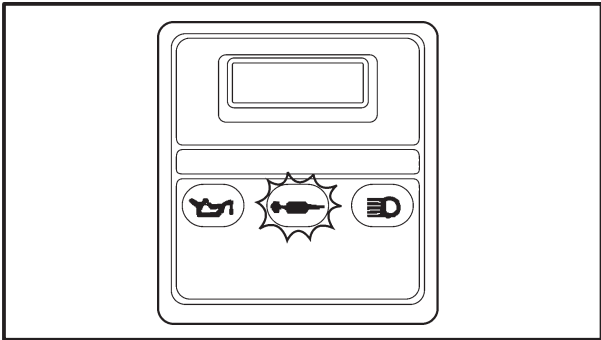



V-belt indicator light

Indicates V-belt change timing every 20,000 km (the V-belt indicator light reset connector is located in the side cover at right).

When change the V-belt, temporarily disconnect the short connector of the double-pole for about 2 ~ 5 seconds and then reconnect the connector to complete the resetting operation.

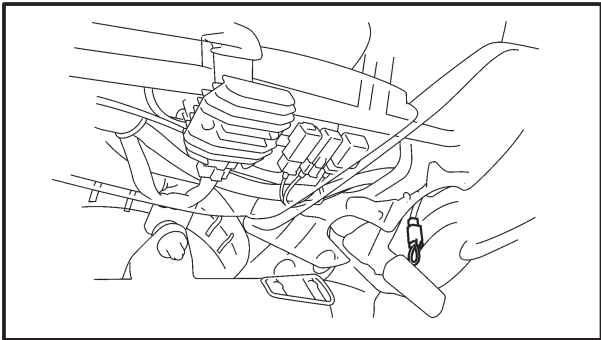

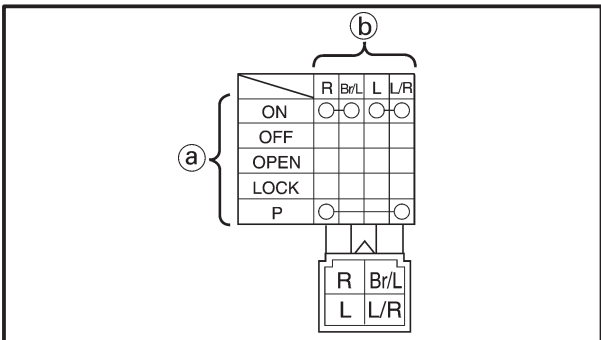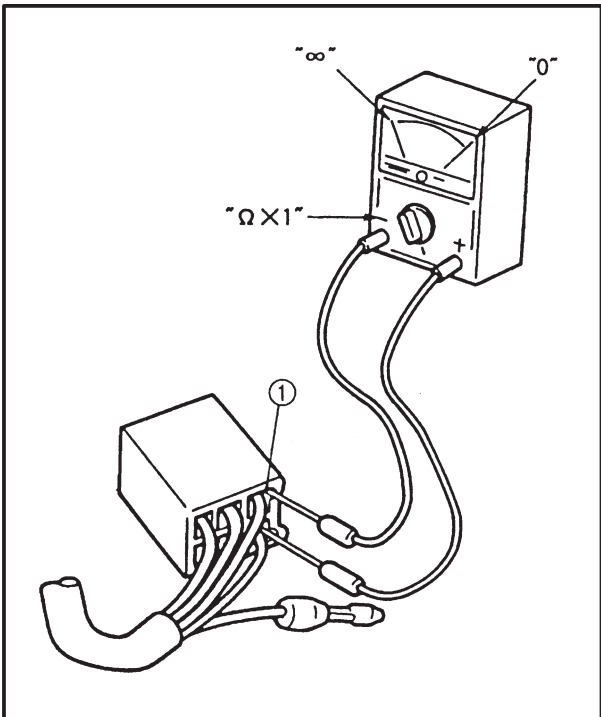

EAS00730

SWITCHES

CHECKING SWITCH CONTINUITY

Check each switch for continuity with the pocket tester. If the continuity reading is incorrect, check the wiring connections and if necessary, replace the switch.

CAUTION:

Never insert the tester probes into the coupler terminal slots ①. Always insert the probes from the opposite end of the coupler, taking care not to loosen or damage the leads.



Pocket tester
90890-03112

NOTE:

- Before checking for continuity, set the pocket tester to “0” and to the “Ω × 1” range.
- When checking for continuity, switch back and forth between the switch positions a few times.

The terminal connections for switches (e.g., main switch, engine stop switch) are shown in an illustration similar to the one on the left. The switch positions ① are shown in the far left column and the switch lead colors ② are shown in the top row in the switch illustration.

NOTE:

“○—○” indicates a continuity of electricity between switch terminals (i.e., a closed circuit at the respective switch position).

The example illustration on the left shows that:

There is continuity between brown/blue and red, and between blue and blue/red when the switch is set to “ON”.



EAS00731


CHECKING THE SWITCHES

Check each switch for damage or wear, proper connections, and also for continuity between the terminals. Refer to "CHECKING SWITCH CONTINUITY".

Damage/wear → Repair or replace the switch.

Improperly connected → Properly connect.

Incorrect continuity reading → Replace the switch.

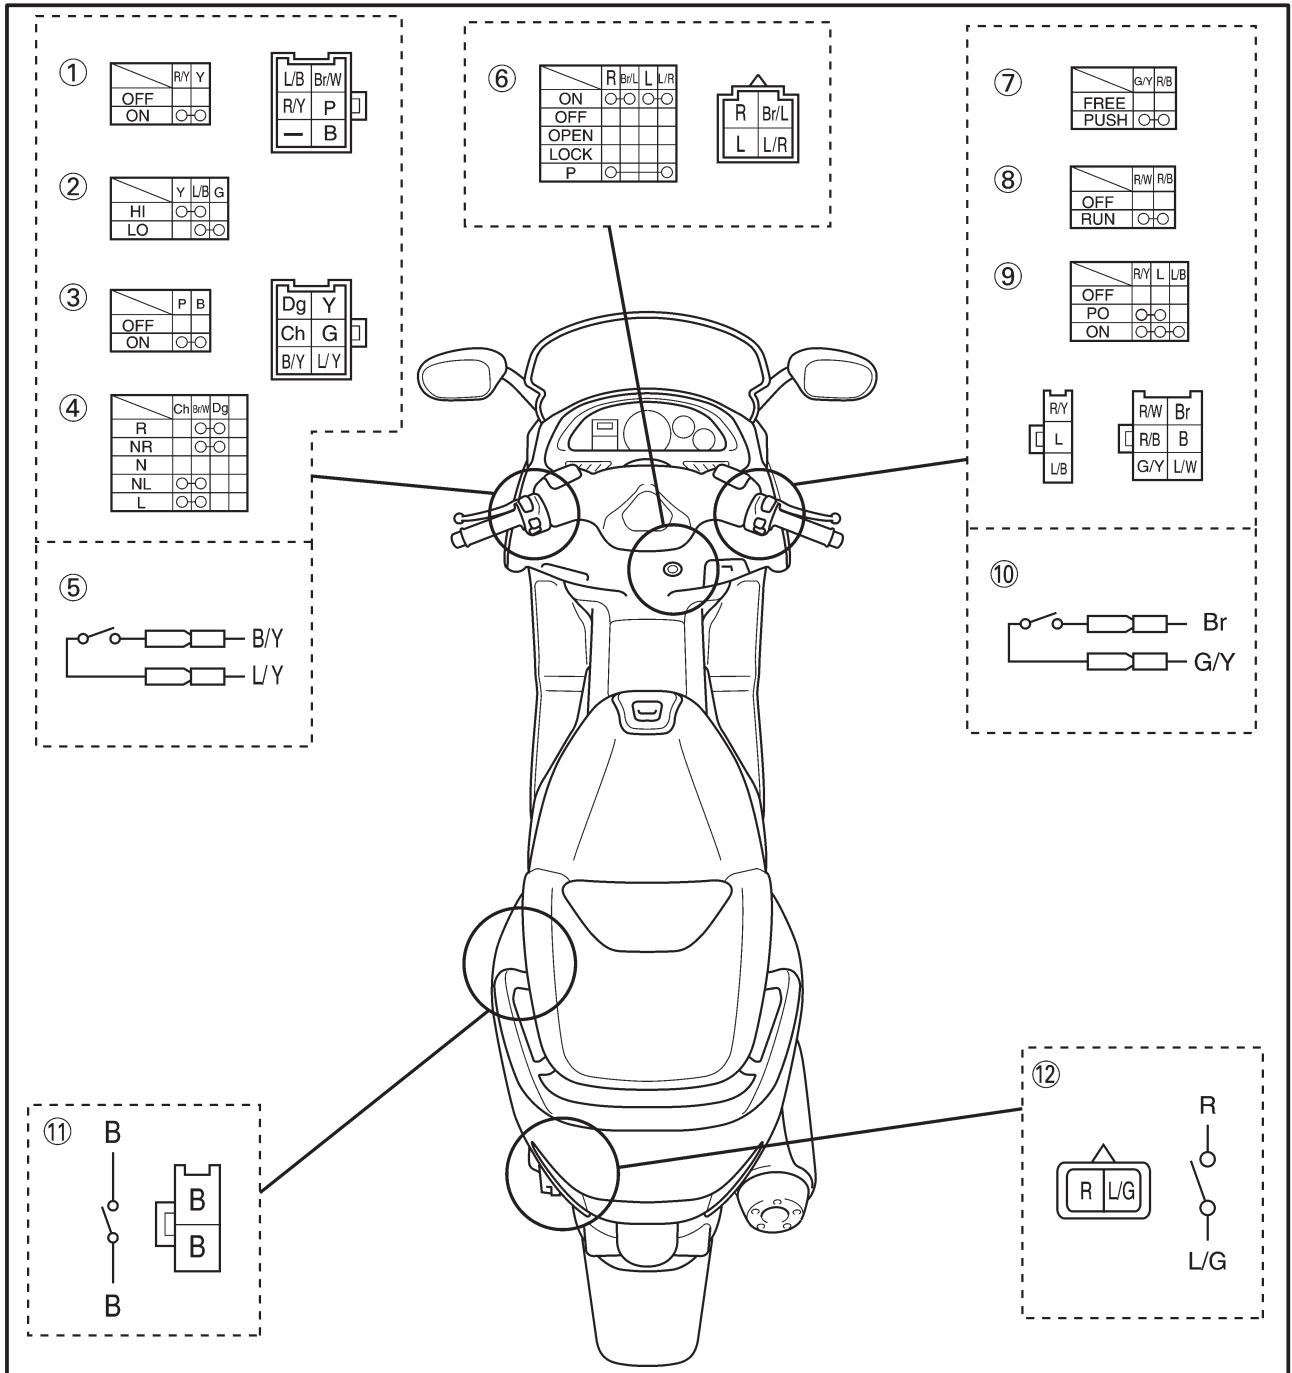

- ① Pass switch
- ② Dimmer switch
- ③ Horn switch
- ④ Turn signal switch
- ⑤ Rear brake light switch
- ⑥ Main switch

- ⑦ Start switch
- ⑧ Engine stop switch
- ⑨ Light switch
- ⑩ Front brake light switch
- ⑪ Sidestand switch
- ⑫ Box light switch


EAS00732



CHECKING THE BULBS AND BULB SOCKETS

Check each bulb and bulb socket for damage or wear, proper connections, and also for continuity between the terminals.

Damage/wear → Repair or replace the bulb, bulb socket or both.

Improperly connected → Properly connect.

Incorrect continuity reading → Repair or replace the bulb, bulb socket or both.

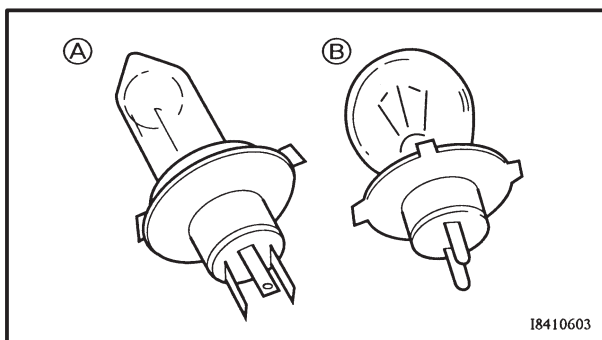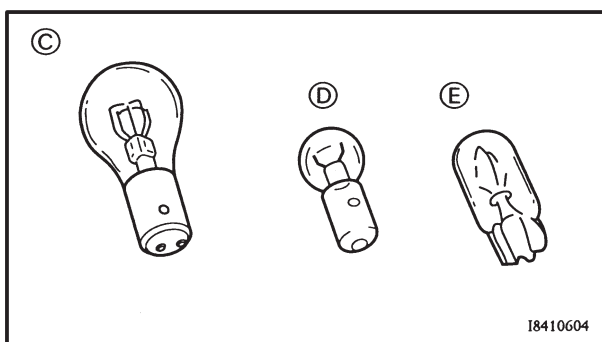
18410603

18410604

TYPES OF BULBS

The bulbs used on this motorcycle are shown in the illustration on the left.

- Bulbs **(A)** and **(B)** are used for headlights and usually use a bulb holder which must be detached before removing the bulb. The majority of these bulbs can be removed from their respective socket by turning them counterclockwise.
- Bulb **(C)** is used for turn signal and tail/brake lights and can be removed from the socket by pushing and turning the bulb counterclockwise.
- Bulbs **(D)** and **(E)** are used for meter and indicator lights and can be removed from their respective socket by carefully pulling them out.

CHECKING THE CONDITION OF THE BULBS


The following procedure applies to all of the bulbs.

1. Remove:
 - bulb




DAS00734

IGNITION SYSTEM CIRCUIT DIAGRAM

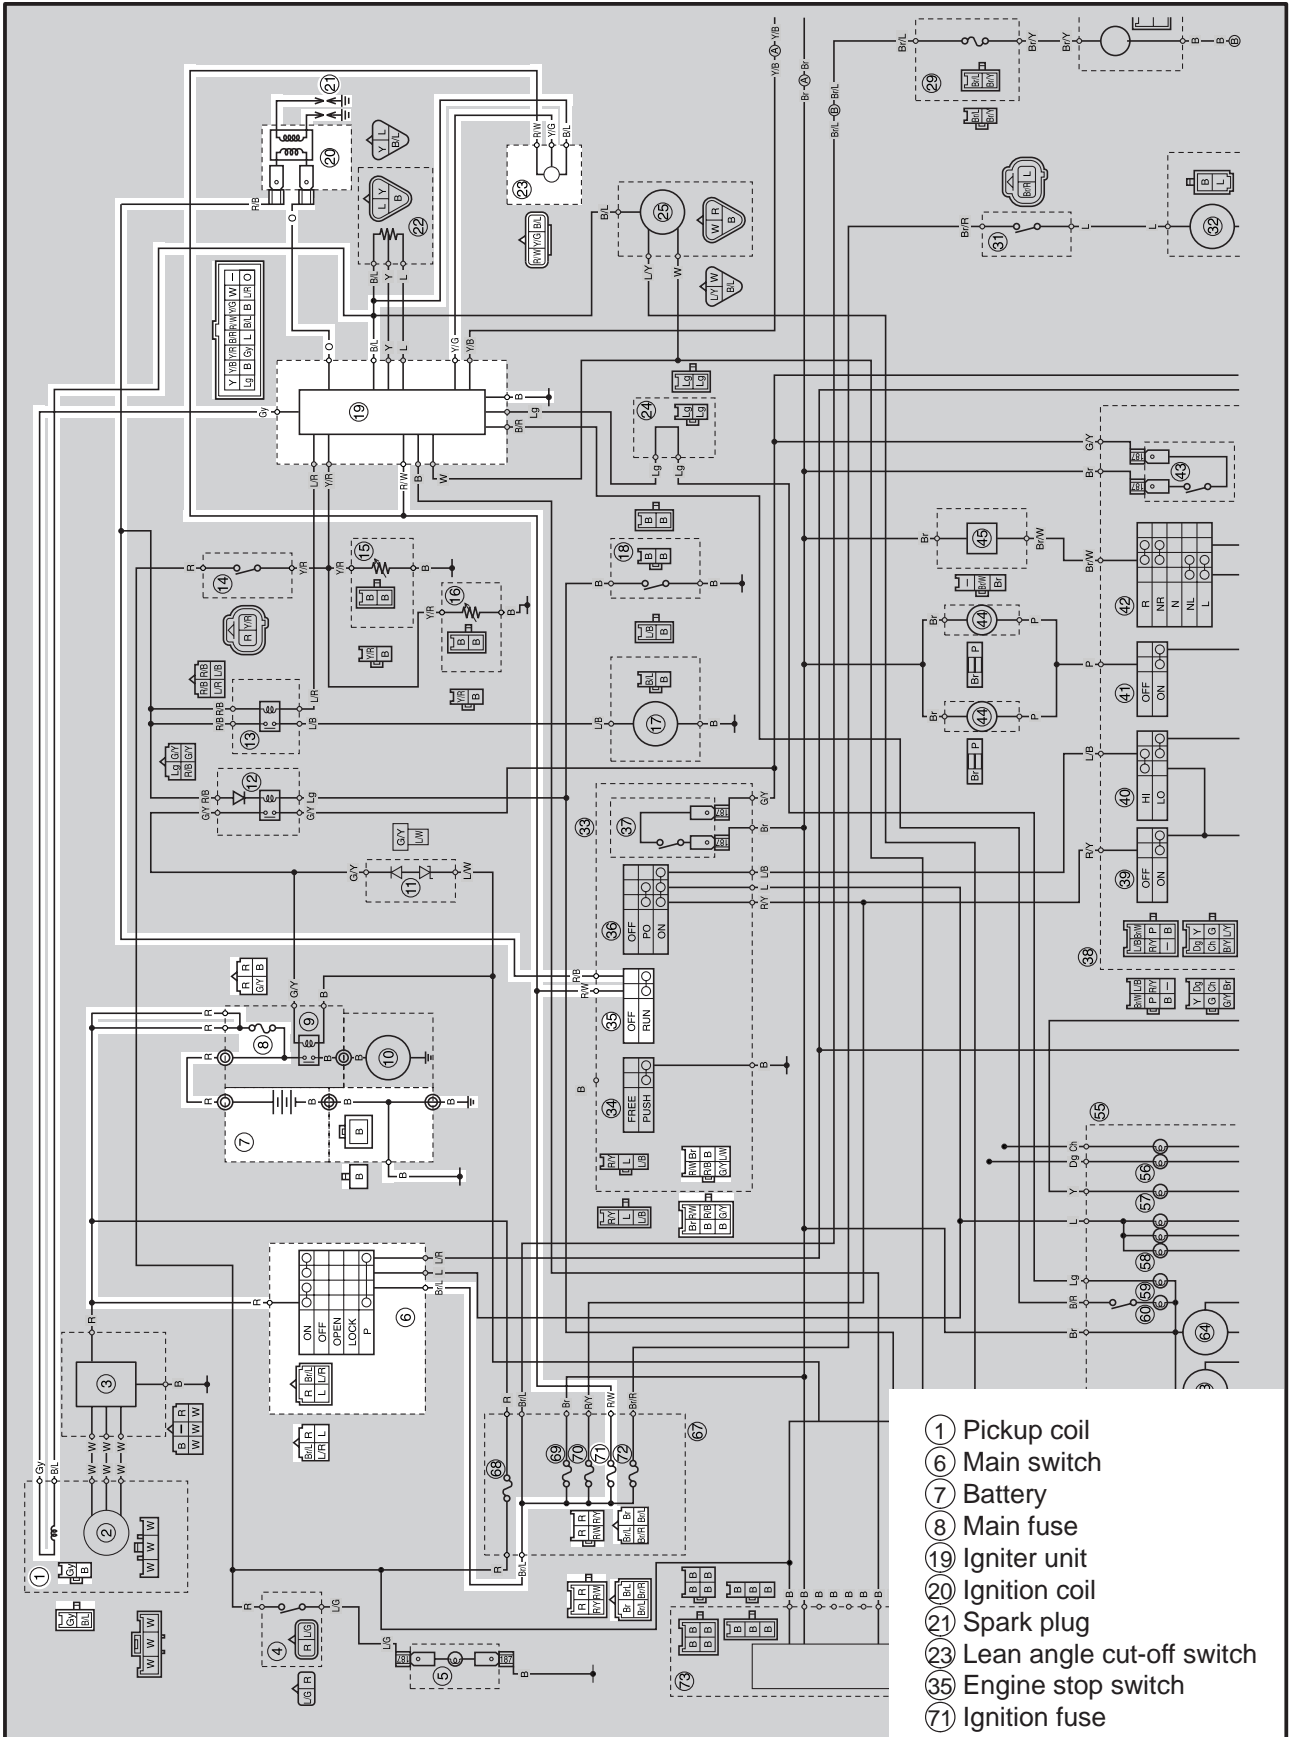

- ① Pickup coil
- ⑥ Main switch
- ⑦ Battery
- ⑧ Main fuse
- ⑱ Igniter unit
- ⑳ Ignition coil
- ㉑ Spark plug
- ㉓ Lean angle cut-off switch
- ㉕ Engine stop switch
- ㉗ Ignition fuse



EAS00737

TROUBLESHOOTING

The ignition system fails to operate (no spark or intermittent spark).

Check:

1. Main and ignition fuses
2. Battery
3. Spark plugs
4. Ignition spark gap
5. Spark plug cap resistance
6. Ignition coil resistance
7. Pickup coil resistance
8. Main switch
9. Engine stop switch
10. Sidestand switch
11. Lean angle cut-off switch
12. Wiring connections
(of the entire ignition system)

NOTE:

Before troubleshooting, remove the following part(-s):

- 1) Leg shield
 - 2) Footrest board
- Troubleshoot with the following special tool(-s).



Ignition checker
90890-06754
Pocket tester
90890-03112

EAS00738

1. Main and ignition fuses

- Check the main and ignition fuses for continuity. Refer to "CHECKING THE FUSES" in CHAPTER 3.
- Are the main and ignition fuses OK?

↓ YES

↓ NO

Replace the fuse(-s).

EAS00739

2. Battery

- Check the condition of the battery. Refer to "CHECKING THE BATTERY" in CHAPTER 3.



Open-circuit voltage
12.8 V or more at 20°C

- Is the battery OK?

↓ YES

↓ NO

- Clean the battery terminals.
- Recharge or replace the battery.

EAS00741

3. Spark plugs

- The following procedure applies to all of the spark plugs.
- Check the condition of the spark plug.
- Check the spark plug type.
- Measure the spark plug gap. Refer to "CHECKING THE SPARK PLUGS" in CHAPTER 3.




Standard spark plug
CR7E (NGK)
Spark plug gap
0.7 ~ 0.8 mm

- Is the spark plug in good condition, it is of the correct type, and its gap within specification?

↓ YES

↓ NO


Re-gap or replace the spark plug.



EAS00743

4. Ignition spark gap

- The following procedure applies to all of the spark plugs.
- Disconnect the spark plug cap from the spark plug.
- Connect the ignition checker ① as shown.
- ② Spark plug cap
- Set the main switch to "ON".
- Measure the ignition spark gap (a).
- Crank the engine by pushing the start switch and gradually increase the spark gap until a misfire occurs.

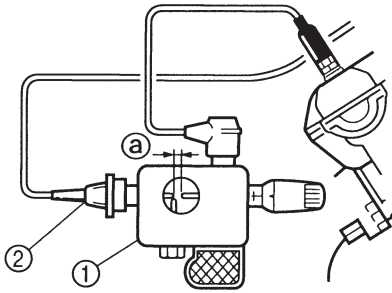

18110202



**Minimum ignition spark gap
0.8 mm**

- Is there a spark and is the spark gap within specification?

NO


YES

The ignition system is OK.

EAS00745

5. Spark plug cap resistance

- The following procedure applies to all of the spark plug caps.
- Remove the spark plug cap.
- Connect the pocket tester ($\Omega \times 1k$ range) to the spark plug cap as shown.
- Measure the spark plug cap resistance.

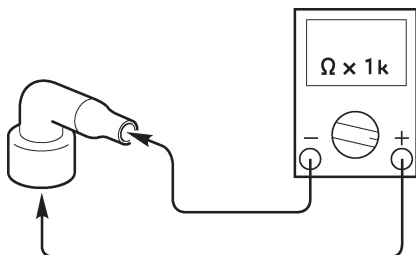

18040101



**Spark plug cap resistance
10 k Ω at 20°C**

- Is the spark plug cap OK?

YES

NO


Replace the spark plug cap.

EAS00747

6. Ignition coil resistance

- The following procedure applies to all of the ignition coils.
- Disconnect the ignition coil leads from the wireharness.
- Connect the pocket tester ($\Omega \times 1$) to the ignition coil as shown.

**Tester positive probe → red/black
Tester negative probe → orange (gray)**

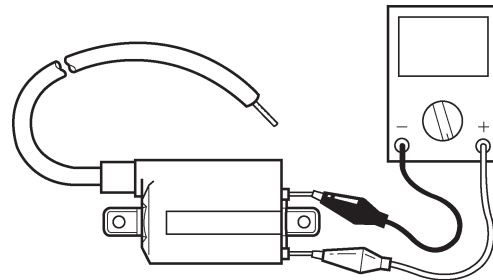

18110104


- Measure the primary coil resistance.



**Primary coil resistance
0.204 ~ 0.276 Ω at 20°C**

- Connect the pocket tester ($\Omega \times 1k$) to the ignition coil as shown.
- Measure the secondary coil for the specified resistance.

**Tester positive probe → red/black
Tester negative probe → spark plug lead**

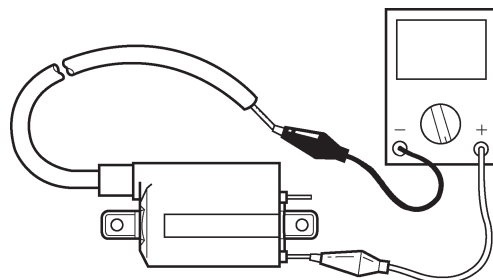

18110104

IGNITION SYSTEM



Secondary coil resistance
12 ~ 18 kΩ at 20°C

- Is the ignition coil OK?

↓ YES ↓ NO

Replace the ignition coil.

7. Pickup coil resistance

- Disconnect the pickup coil coupler from the wireharness.
- Connect the pocket tester ($\Omega \times 100$) to the pickup coil terminal as shown.

Tester positive probe – gray ①
Tester negative probe – black/blue ②

- Measure the pickup coil resistance.

Pickup coil resistance
189 ~ 231 Ω at 20°C
(between gray and black/blue)

- Is the pickup coil OK?

↓ YES ↓ NO

Replace the pickup coil.

8. Main switch

- Check the main switch for continuity. Refer to “CHECKING THE SWITCHES”.
- Is the main switch OK?

↓ YES ↓ NO

Replace the main switch.

9. Engine stop switch

- Check the engine stop switch for continuity. Refer to “CHECKING THE SWITCHES”.
- Is the engine stop switch OK?

↓ YES ↓ NO

Replace the right handlebar switch.

10. Sidestand switch

- Check the neutral switch for continuity. Refer to “CHECKING THE SWITCHES”.
- Is the neutral switch OK?

↓ YES ↓ NO

Replace the sidestand switch.

11. Lean angle cut-off switch

- Check the lean angle cut-off switch. Refer to “SELF-DIAGNOSIS”.
- Is the lean angle cut-off switch OK?

↓ YES ↓ NO

Replace the lean angle cut-off switch.

12. Wiring


- Check the entire ignition system’s wiring. Refer to “CIRCUIT DIAGRAM”.
- Is the ignition system’s wiring properly connected and without defects?

↓ NO ↓ YES

Properly connect or repair the ignition system’s wiring. Replace the ignitor unit.


ELECTRIC STARTING SYSTEM

ELEC




EAS00755

ELECTRIC STARTING SYSTEM CIRCUIT DIAGRAM

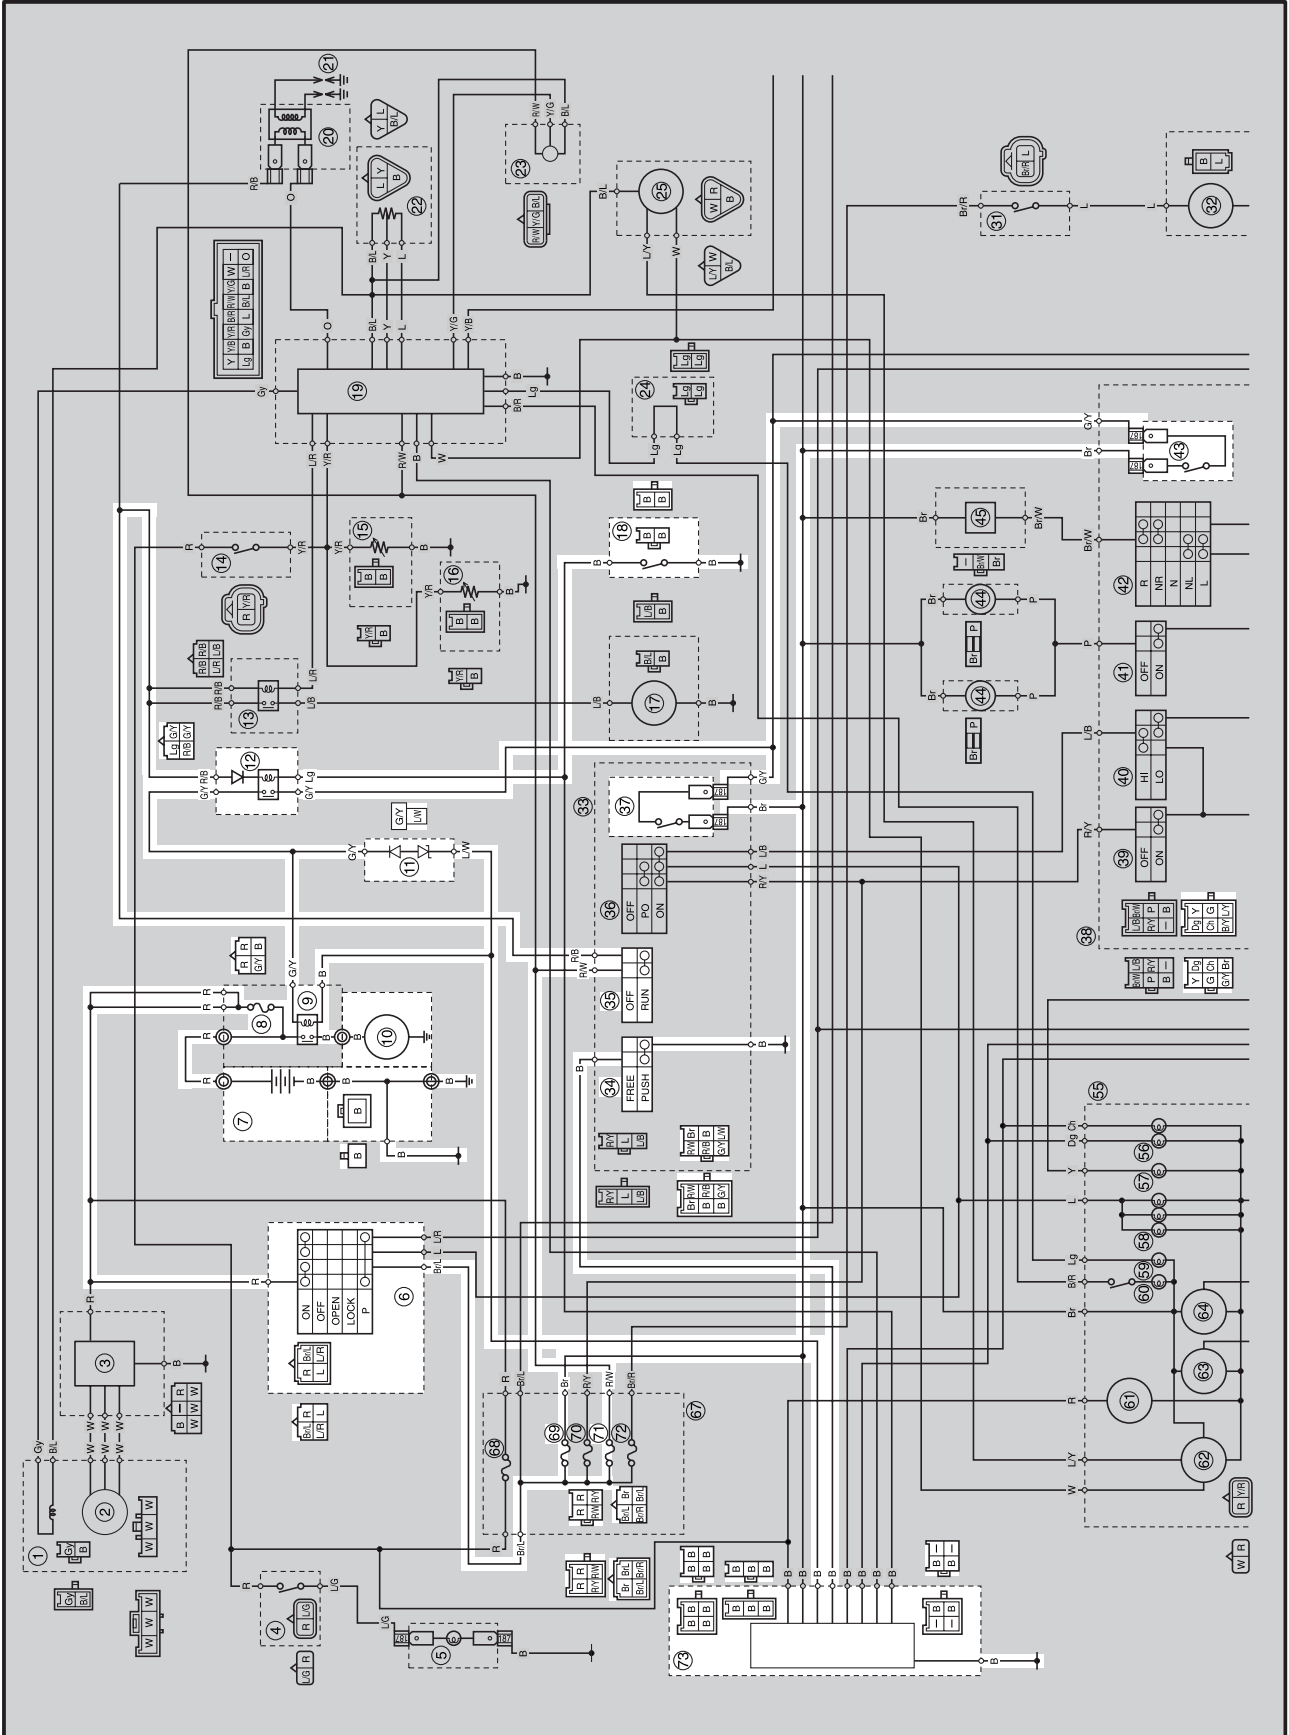


ELECTORIC STARTING SYSTEM

ELEC



- ⑥ Main switch
- ⑦ Battery
- ⑧ Main fuse
- ⑨ Starter relay
- ⑩ Starter motor
- ⑪ Diode
- ⑫ Starting circuit cut-off relay
- ⑰ Sidestand switch
- ⑳ Start switch
- ㉓ Engine stop switch
- ㉗ Front brake light switch
- ㉛ Rear brake light switch
- ㉟ Signal fuse
- ㊱ Ignition fuse

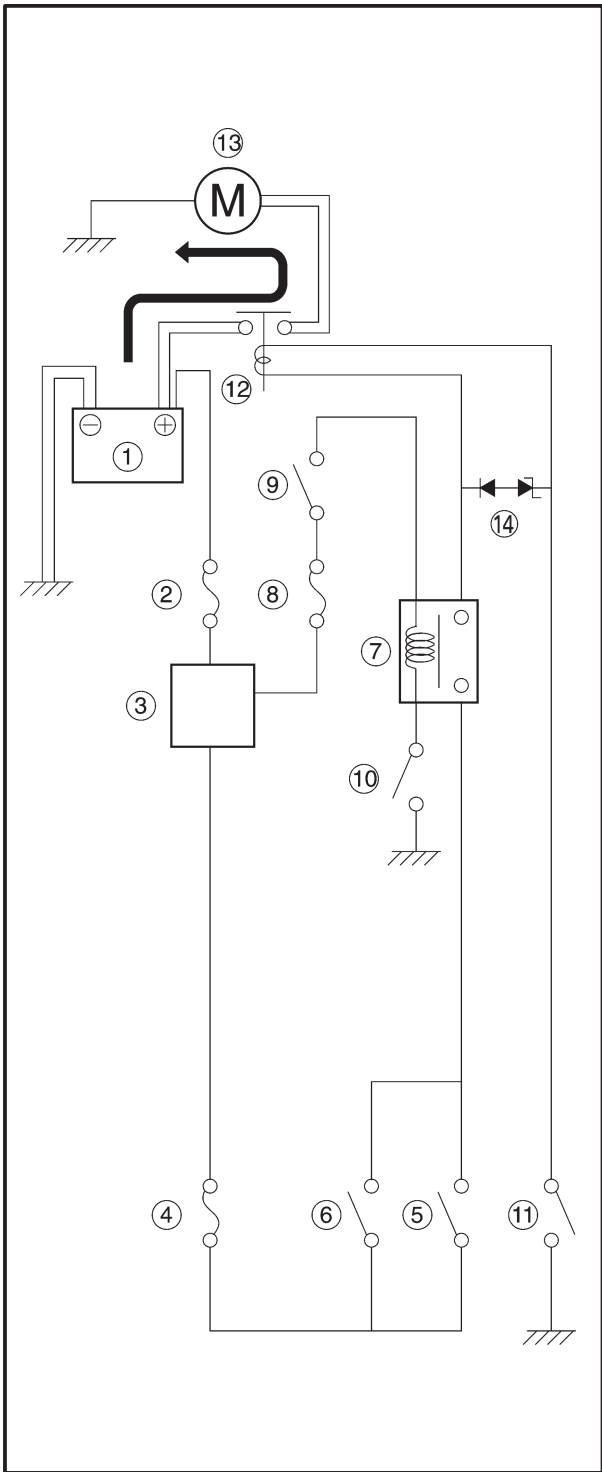

EAS00756

STARTING CIRCUIT CUTOFF SYSTEM OPERATION

If the engine stop switch is set to “○” and the main switch is set to “ON” (both switches are closed), the starter motor can operate

- The brake light switch lever is pulled to the handlebar (the brake light switch switch is closed) and the sidestand is up (the sidestand switch is closed).

- ① Battery
- ② Fuse (main)
- ③ Main switch
- ④ Fuse (signal)
- ⑤ Front brake light switch
- ⑥ Rear brake light switch
- ⑦ Starting circuit cut-off switch
- ⑧ Ignition fuse
- ⑨ Engine stop switch
- ⑩ Sidestand switch
- ⑪ Start switch
- ⑫ Starter relay
- ⑬ Starter motor
- ⑭ Diode



EAS00757

TROUBLESHOOTING

The starter motor fails to turn.

Check:

1. Main, signal and ignition fuses
2. Battery
3. Starter motor
4. Starting circuit cut-off relay
5. Starter relay
6. Main switch
7. Engine stop switch
8. Brake light switch (front and rear)
9. Sidestand switch
10. Start switch
11. Wiring connections
(of the entire starting system)

NOTE:

- Before troubleshooting, remove the following part(-s):
 - 1) Leg shield
 - 2) Footrest board
 - 3) Fuel tank
- Troubleshoot with the following special tool(-s).



Pocket tester
90890-03112

EAS00738

1. Main, signal and ignition fuses

- Check the main, signal and ignition fuses for continuity. Refer to "CHECKING THE FUSES" in CHAPTER 3.

• Are the main and ignition fuses OK?



YES



NO

Replace the fuse (-s).

EAS00739

2. Battery

- Check the condition of the battery. Refer to "CHECKING THE BATTERY" in CHAPTER 3.



Open-circuit voltage
12.8 V or more at 20°C

• Is the battery OK?



YES




NO

- Clean the battery terminals.
- Recharge or replace the battery.

EAS00758

3. Starter motor

- Connect the battery positive terminal ① and starter motor lead ② with a jumper lead ③.

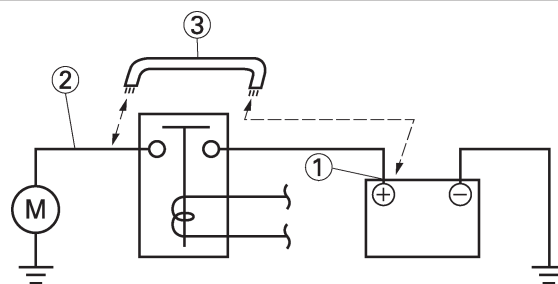

18210801

⚠ WARNING

- A wire that is used as a jumper lead must have the equivalent capacity or more as that of the battery lead, otherwise the jumper lead may burn.
- This check is likely to produce sparks, therefore make sure that no flammable gas or fluid is in the vicinity.

• Does the starter motor turn?



YES



NO

Repair or replace the starter motor.



EAS00759

4. Starting circuit cut-off relay


- Disconnect the starting circuit cut-off relay coupler from the wireharness.
- Connect the pocket tester ($\Omega \times 1$) and battery (12 V) to the starting circuit cut-off relay coupler as shown.

Battery positive terminal → red/black ①

Battery negative terminal → light green ②

Tester positive probe → green/yellow ③

Tester negative probe → green/yellow ④

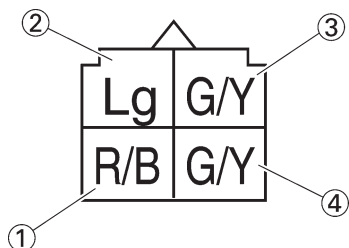

- Does the starting circuit cut-off relay have continuity between green/yellow ③ and green/yellow ④?

↓ YES ↓ NO

Replace the starting circuit cut-off relay.

EAS00761

5. Starter relay


- Disconnect the starter relay coupler from the wireharness.
- Connect the pocket tester ($\Omega \times 1$) and battery (12 V) to the starter relay coupler as shown.

Battery positive terminal → green/yellow ①

Battery negative terminal → black ②

Tester positive probe → red ③

Tester negative probe → black ④

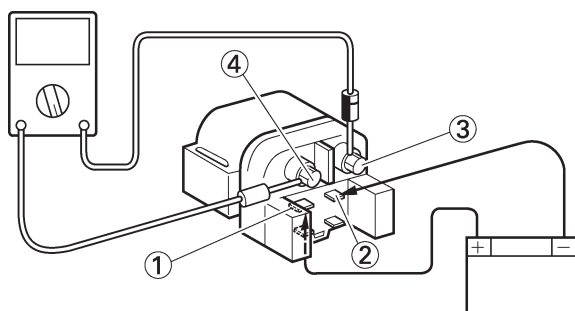

18211002

- Does the starter relay have continuity between red and black?

↓ YES ↓ NO

Replace the starter relay.

EAS00749

6. Main switch

- Check the main switch for continuity. Refer to "CHECKING THE SWITCHES".

- Is the main switch OK?

↓ YES ↓ NO

Replace the main switch.

EAS00750

7. Engine stop switch

- Check the engine stop switch for continuity. Refer to "CHECKING THE SWITCHES".

- Is the engine stop switch OK?

↓ YES ↓ NO

Replace the right handlebar switch.

EAS00751

8. Brake light switch (front and rear)

- Check the brake light switch for continuity. Refer to "CHECKING THE SWITCHES".
- Is the brake switch OK?

↓ YES ↓ NO

Replace the brake light switch.



EAS00752

9. Sidestand switch

- Check the sidestand switch for continuity. Refer to "CHECKING THE SWITCHES".
- Is the sidestand switch OK?

↓ YES

↓ NO

Replace the sidestand switch.

EAS00764

10. Start switch

- Check the start switch for continuity. Refer to "CHECKING THE SWITCHES".
- Is the start switch OK?

↓ YES

↓ NO

Replace the right handlebar switch.

EAS00766

11. Wiring

- Check the entire starting system's wiring. Refer to "CIRCUIT DIAGRAM".
- Is the starting system's wiring properly connected and without defects?


↓ YES

↓ NO


The starting system circuit is OK?

Properly connect or repair the starting system's wiring.


STARTER MOTOR

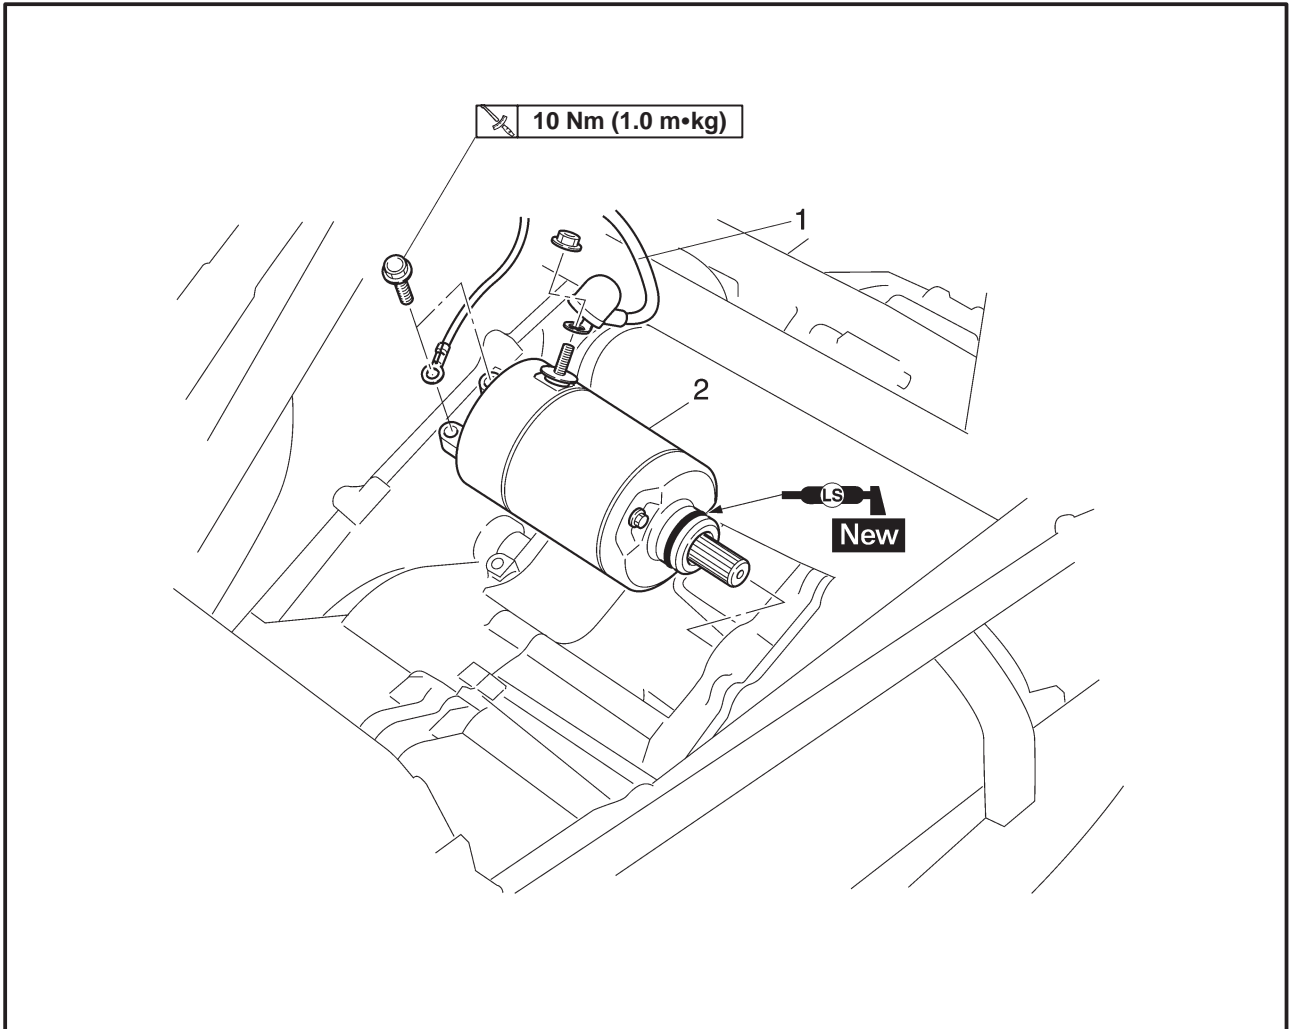

Order	Job/Part	Q'ty	Remarks
	Removing the starter motor		
	Fuel tank		Remove the parts in the order listed. Refer to "FUEL TANK" in chapter 3.
	Battery negative lead		
1	Starter motor lead	1	
2	Starter motor	1	
			For installation, reverse the removal procedure.

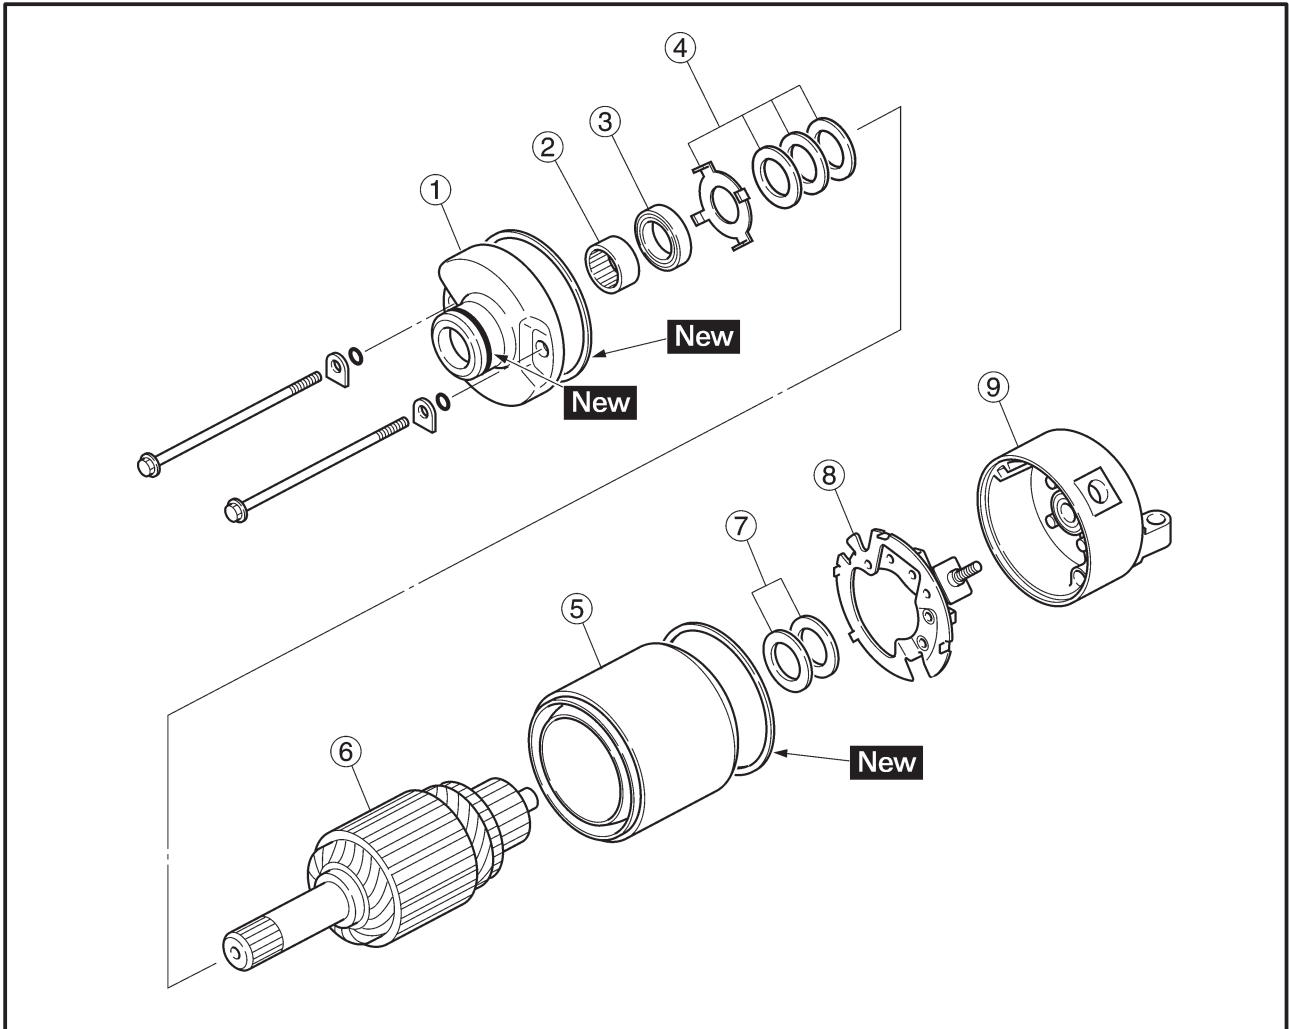

Order	Job/Part	Q'ty	Remarks
	Disassembling the starter motor		Disassemble the parts in the order listed.
①	Front bracket	1	
②	Bearing	1	
③	Oil seal	1	
④	Wahser kit	1	
⑤	Starter motor yoke	1	
⑥	Armature assembly	1	
⑦	Washer kit	1	
⑧	Brush holder	1	
⑨	Rear bracket	1	
			For assembly reverse the disassembly procedure.

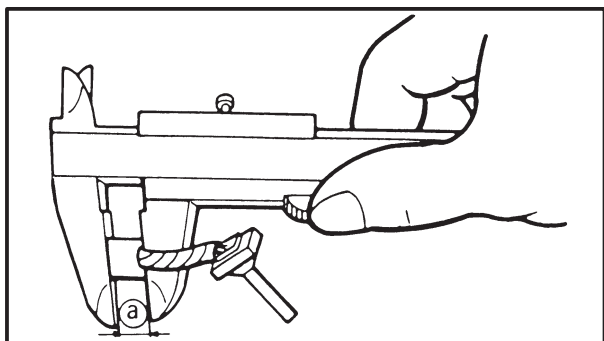

5. Measure:
- brush length ①
- Out of specification → Replace the brushes as a set.






Brush length wear limit
4.0 mm

6. Measure:
- brush spring force
- Fatigue/out of specification → Replace the brush springs as a set.



Brush spring force
7.65 ~ 10.01 N

7. Check:
- gear teeth
- Damage/wear → Replace the gear.
8. Check:
- bearing ①
 - oil seal ②
 - bushing ③
- Damage/wear → Replace the defective part(-s).

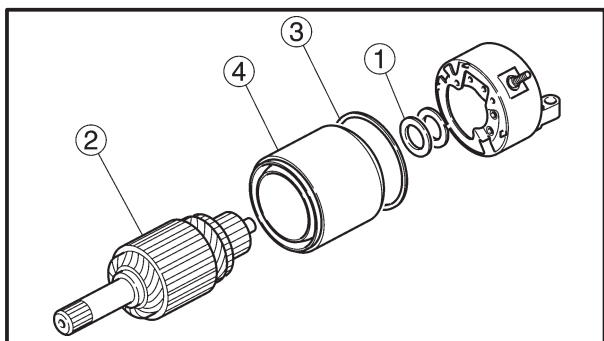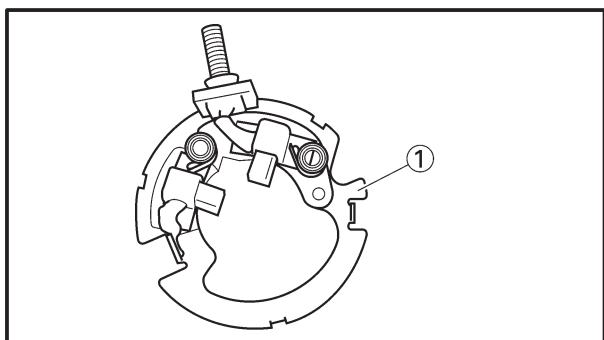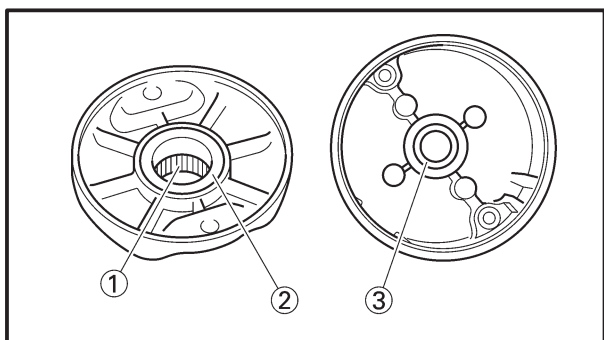

EAS00772

ASSEMBLING THE STARTER MOTOR



1. Install:
- brush seat ①
2. Install:
- washers ①
 - armature coil ②
 - o-ring ③
 - starter motor yoke ④

NOTE: _____


To prevent damaging the brushes during installation push down on the brush springs.

ELECTRIC STARTING SYSTEM


ELEC

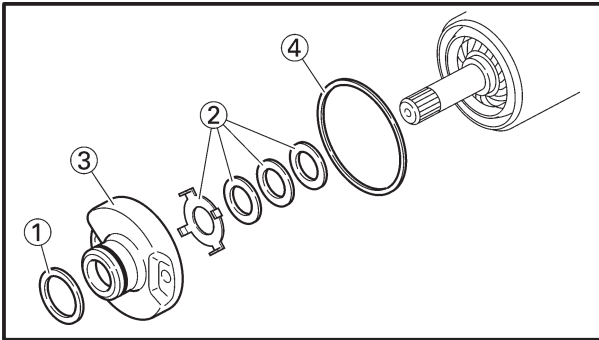


3. Install:
- o-ring ① **New**
 - washers ②
 - front bracket ③
 - o-ring ④ **New**

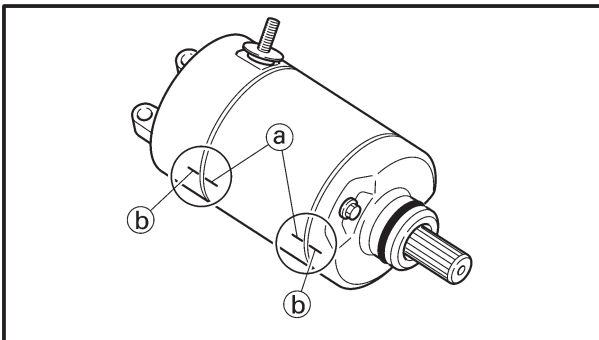

NOTE: _____
Align the match marks ① on the yoke with the match marks ② on the brackets.

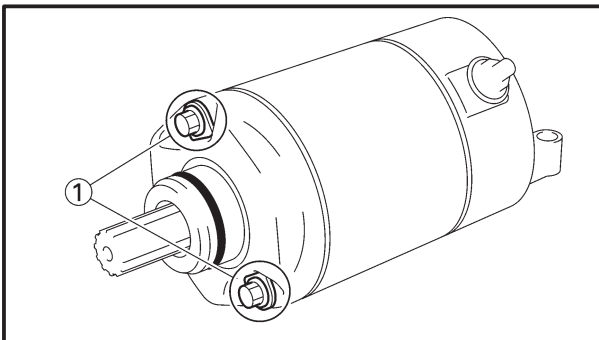


4. Install:
- bolts ①

 **7 Nm (0.7 m•kg)**



YP80400

CHARGING SYSTEM CIRCUIT DIAGRAM

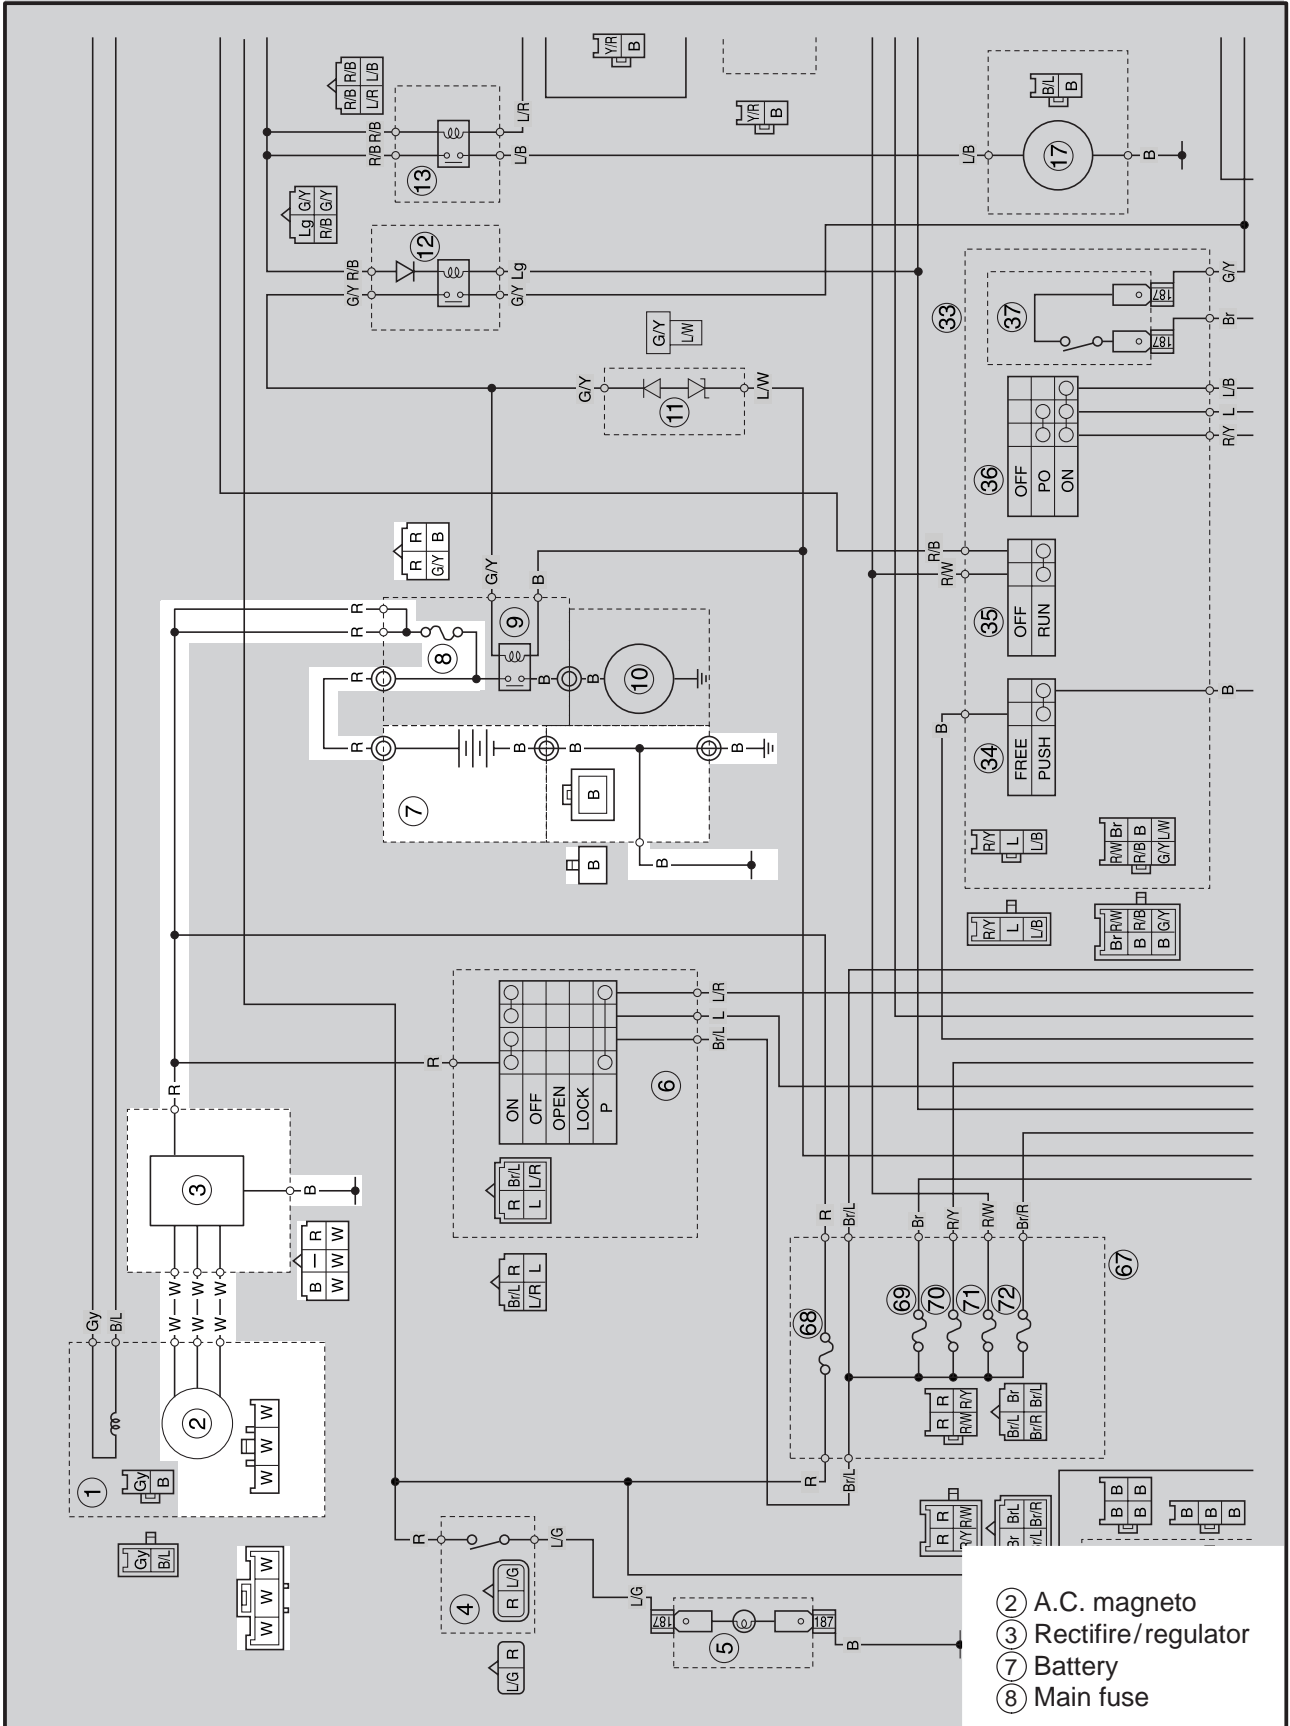



EAS00774

TROUBLESHOOTING

The battery is not being charged.

Check:

1. Main fuse
2. Battery
3. Charging voltage
4. Stator coil resistance
5. Wiring connections
(of the entire charging system)

NOTE:

- Before troubleshooting, remove the following part(-s):
 - 1) Left side cover mole
 - 2) Footrest board
- Troubleshoot with the following special tool(-s).



Engine tachometer
90890-03113
Pocket tester
90890-03112

EAS00738

1. Main fuses

- Check the fuses for continuity.
Refer to "CHECKING THE FUSES" in CHAPTER 3.

- Are the fuses OK?



Replace the fuse (-s).

EAS00739

2. Battery

- Check the condition of the battery.
Refer to "CHECKING THE BATTERY" in CHAPTER 3.



Open-circuit voltage
12.8 V or more at 20°C

- Is the battery OK?




- Clean the battery terminals.
- Recharge or replace the battery.

EAS00775

3. Charging voltage

- Connect the engine tachometer to the spark plug lead of cylinder #1.
- Connect the pocket tester (20 V DC) to the battery as shown.

Tester positive probe →
battery positive terminal
Tester negative probe →
battery negative terminal

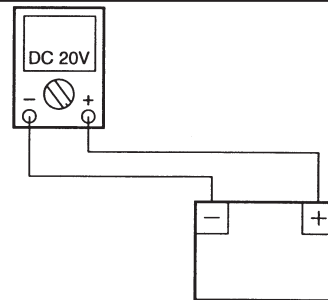

- Start the engine and let it run at approximately 5,000 r/min.
- Measure the charging voltage.



Charging voltage
14 V at 5,000 r/min

NOTE:

Make sure that the battery is fully charged.

- Is the charging voltage within specification?



The charging circuit is OK.


EAS00776

4. Stator coil resistance


- Remove the generator cover.
- Connect the pocket tester ($\Omega \times 1$) to the stator coils as shown.

Tester positive probe → white ①
Tester negative probe → white ②

Tester positive probe → white ③
Tester negative probe → white ①

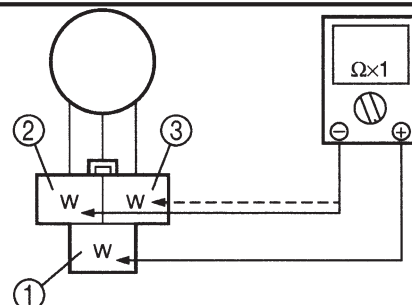

• Measure the stator coil resistances.

	Stator coil resistance 0.338 ~ 0.413 Ω at 20°C
---	--

• Is the stator coil OK?

↓ YES ↓ NO

Replace the stator coil assembly.

EAS00779

5. Wiring

• Check the wiring connections of the entire charging system.
Refer to "CIRCUIT DIAGRAM".

• Is the charging system's wiring properly connected and without defects?


↓ YES ↓ NO

Replace the rectifier/regulator. Properly connect or repair the charging system's wiring.



EB804000

LIGHTING SYSTEM CIRCUIT DIAGRAM

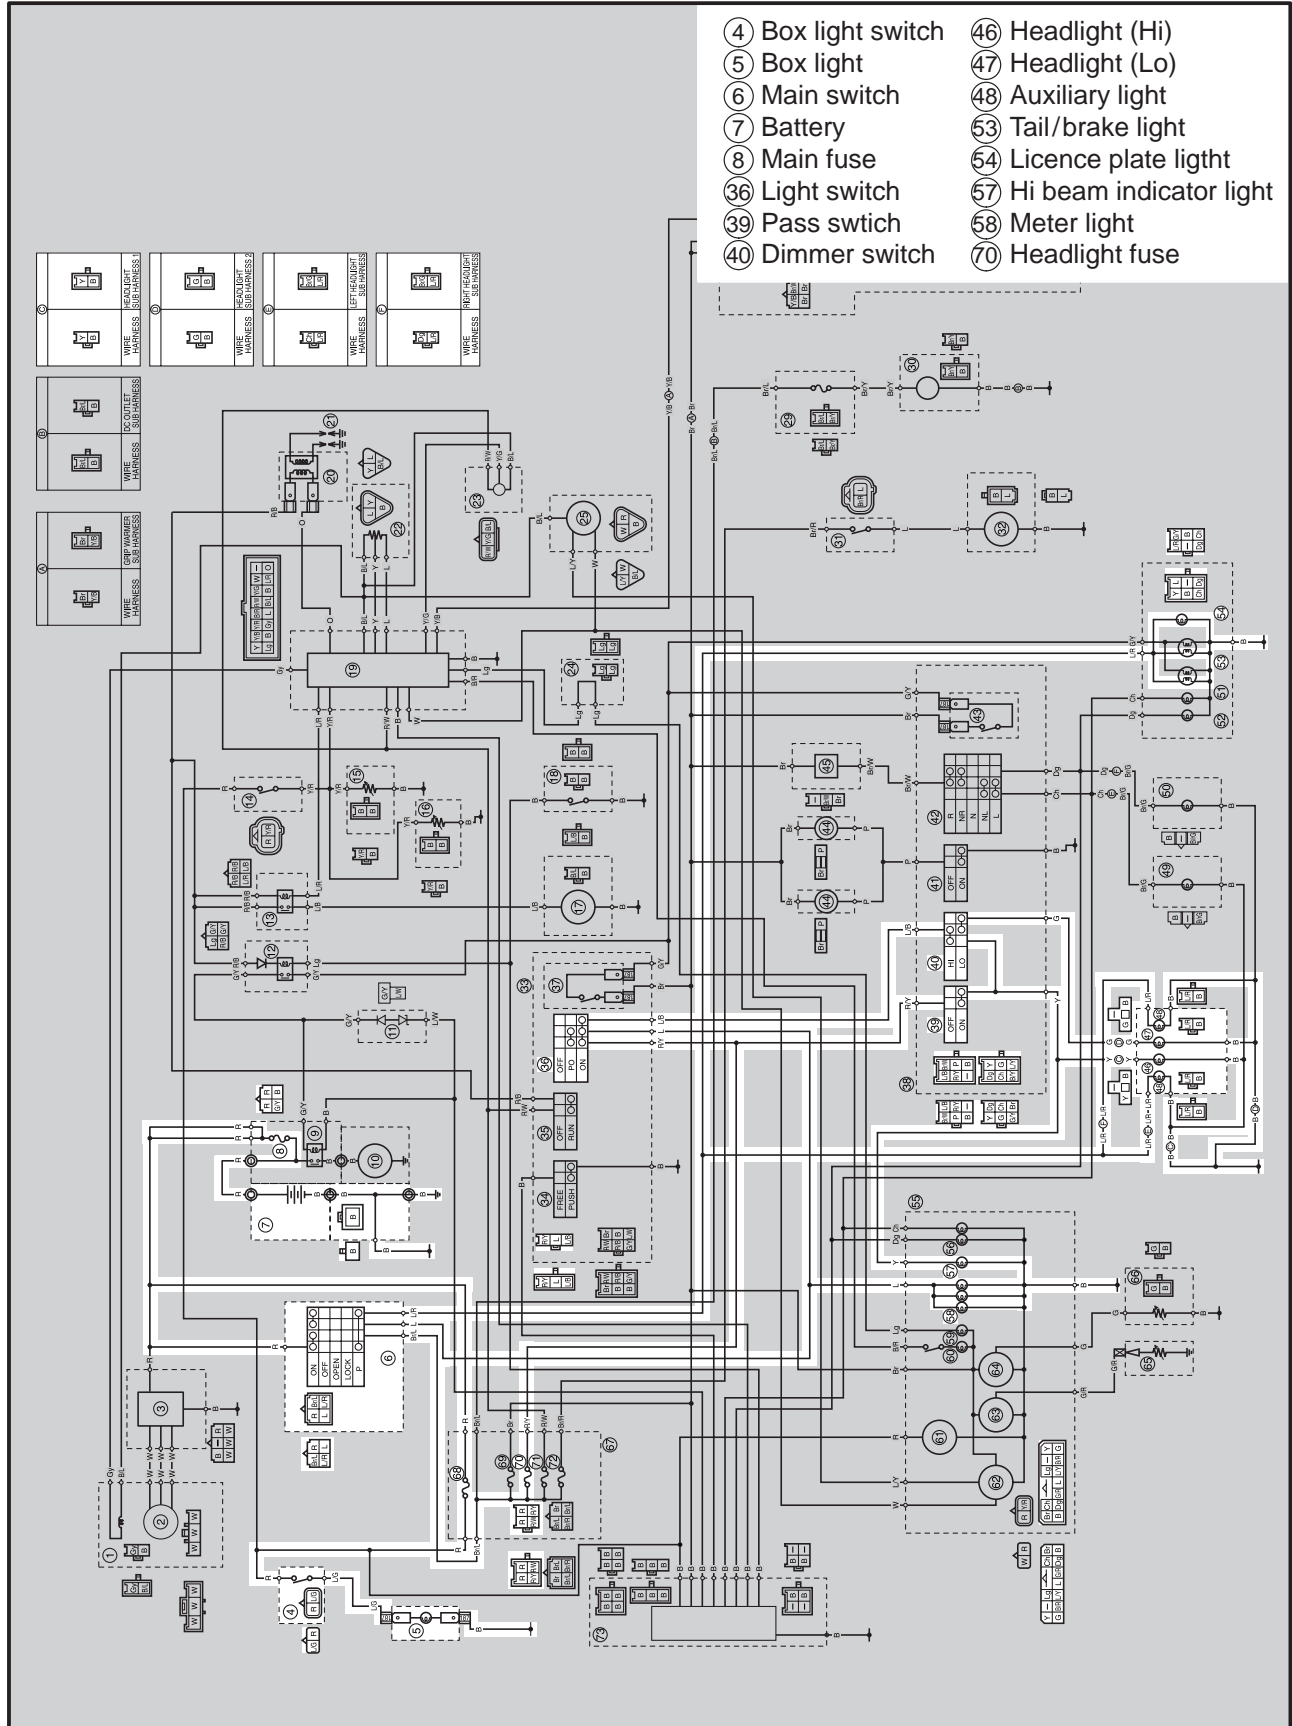

- ④ Box light switch
- ⑤ Box light
- ⑥ Main switch
- ⑦ Battery
- ⑧ Main fuse
- ⑩ Light switch
- ③⑨ Pass switch
- ④⑩ Dimmer switch
- ④⑥ Headlight (Hi)
- ④⑦ Headlight (Lo)
- ④⑧ Auxiliary light
- ⑤③ Tail/brake light
- ⑤④ Licence plate light
- ⑤⑦ Hi beam indicator light
- ⑤⑧ Meter light
- ⑦⑩ Headlight fuse

EB805010

TROUBLESHOOTING


Any of the following fail to light: headlight, high beam indicator light, taillight, auxiliary light or meter light.

Check:

1. Main, and headlight fuses
2. Battery
3. Main switch
4. Light switch
5. Dimmer switch
6. Pass switch
7. Box light switch
8. Wiring
(of the entire charging system)


NOTE:

- Before troubleshooting, remove the following part(-s):
 - 1) Front cawling
 - 2) Handlebar cover
- Troubleshoot with the following special tool(-s).

	<p>Pocket tester 90890-03112</p>
---	---




EB802400

<p>1. Main, and headlight fuses</p> <ul style="list-style-type: none"> • Check the main, and headlight fuses for continuity. Refer to “CHECKING THE FUSES” in chapter 3. • Are the main, signaling system, and headlight fuses OK?
--



Replace the fuse(-s).

EB802401


<p>2. Battery</p> <ul style="list-style-type: none"> • Check the condition of the battery. Refer to “CHECKING AND CHARGING THE BATTERY” in chapter 3. 		
<table border="1"> <tr> <td style="text-align: center;"></td> <td> <p>Open-circuit voltage 12.8 V or more at 20°C</p> </td> </tr> </table>		<p>Open-circuit voltage 12.8 V or more at 20°C</p>
	<p>Open-circuit voltage 12.8 V or more at 20°C</p>	
<ul style="list-style-type: none"> • Is the battery OK? 		



- Clean the battery terminals.
- Recharge or replace the battery.

EB802411

<p>3. Main switch</p> <ul style="list-style-type: none"> • Check the main switch for continuity. Refer to “CHECKING THE SWITCHES”. • Is the main switch OK?



Replace the main switch.

EB805400

<p>4. Light switch (for Europe)</p> <ul style="list-style-type: none"> • Check the lights switch for continuity. Refer to “CHECKING THE SWITCHES”. • Is the lights switch OK?



The lights switch is faulty. Replace the right handlebar switch.

LIGHTING SYSTEM



EB805401

5. Dimmer switch

- Check the dimmer switch for continuity. Refer to "CHECKING THE SWITCHES".
- Is the dimmer switch OK?

↓ YES

↓ NO

The dimmer switch is faulty. Replace the left handlebar switch.

↓ YES

Check the condition of each of the lighting system's circuits. Refer to "CHECKING THE LIGHTING SYSTEM".

↓ NO

Properly connect or repair the lighting system's wiring.

EB805403

6. Pass switch

- Check the pass switch for continuity. Refer to "CHECKING THE SWITCHES".
- Is the pass switch OK?

↓ YES

↓ NO

The pass switch is faulty. Replace the left handlebar switch.

EB805403

7. Box light switch

- Check the clutch switch for continuity. Refer to "CHECKING THE SWITCHES".
- Is the box light switch OK?

↓ YES

↓ NO

Replace the box light switch

EB805404

8. Wiring

- Check the entire lighting system's wiring. Refer to "CIRCUIT DIAGRAM".
- Is the lighting system's wiring properly connected and without defects?



EB805410

CHECKING THE LIGHTING SYSTEM

1. The headlight and the high beam indicator light fail to come on.

1. Headlight bulb and socket

- Check the headlight bulb and socket for continuity. Refer to "CHECKING THE BULBS AND BULB SOCKETS".
- Are the headlight bulb and socket OK?



Replace the headlight bulb, socket or both.

2. High beam indicator light bulb and socket

- Check the high beam indicator light bulb and socket for continuity. Refer to "CHECKING THE BULBS AND BULB SOCKETS".
- Is the high beam indicator light bulb and socket OK?




Replace the high beam indicator bulb, socket or both.

3. Voltage

- Connect the pocket tester (DC 20 V) to the headlight and high beam indicator light couplers as shown.

- A** When the dimmer switch is set to "☀️".
- B** When the dimmer switch is set to "☾".


Headlight coupler (wireharness side)

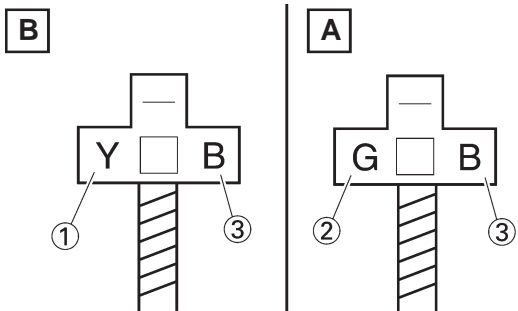

Headlight
 Tester positive probe → yellow ① or green ②
 Tester negative probe → black ③

High beam indicator light
 Tester positive probe → yellow ①
 Tester negative probe → black ③

Meter assembly coupler (wireharness side)

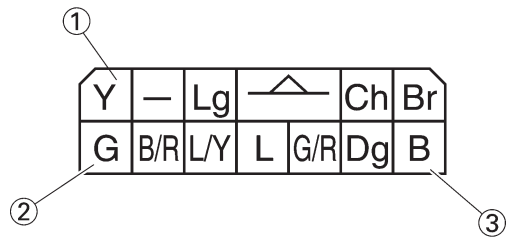

- Set the main switch to "ON".
- Set the light switch to "☀️".
- Set the dimmer switch to "☾" or "☾".
- Measure the voltage (12 V) of yellow (green) ② on the headlight coupler (headlight side).
- Is the voltage within specification?



This circuit is OK.


The wiring circuit from the main switch to the headlight coupler is faulty and must be repaired.

EB805411

2. Meter light fails to come on.

1. Meter light bulb and socket.

- Check the meter light bulb and socket for continuity. Refer to "CHECKING THE BULBS AND BULB SOCKETS".
- Are the meter light bulb and socket OK?




Replace the meter light bulb, socket or both.

2. Voltage

- Connect the pocket tester (20 V) to the meter assembly coupler (wireharness side) as shown.

Tester positive probe → blue ①
 Tester negative probe → black ②

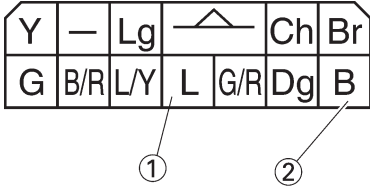

- Set the main switch to "ON".
- Set the light switch to "ΞD ΔΞ" or "☼".
- Measure the voltage (12 V) of blue ① on the meter assembly coupler (wireharness side).
- Is the voltage within specification?

↓ YES

This circuit is OK.


↓ NO

The wiring circuit from the main switch to the meter assembly coupler is faulty and must be repaired.

2. Voltage

- Connect the pocket tester (DC 20 V) to the tail/brake light coupler (wireharness side) as shown.

Tester positive probe → blue/red ①
 Tester negative probe → black ②

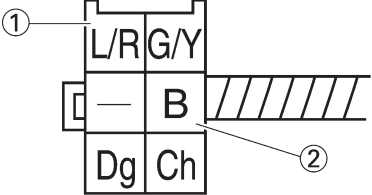

- Set the main switch to "ON".
- Set the light switch to "ΞD ΔΞ" or "☼".
- Measure the voltage (12 V) of blue/red ① on the tail/brake light coupler (wireharness side).
- Is the voltage within specification?

↓ YES

This circuit is OK.

↓ NO

The wiring circuit from the main switch to the tail/brake light coupler is faulty and must be repaired.

EB805412

3. A tail/brake light fails to come on.

1. Tail/brake light bulb and socket

- Check the tail/brake light bulb and socket for continuity. Refer to "CHECKING THE BULBS AND BULB SOCKETS".
- Are the tail/brake light bulb and socket OK?

↓ YES

Replace the tail/brake light bulb, socket or both.

↓ NO

EB805413

4. The auxiliary light fails to come on. (for Europe)

1. Auxiliary light bulb and socket

- Check the auxiliary light bulb and socket for continuity. Refer to "CHECKING THE BULBS AND BULB SOCKETS".
- Are the auxiliary light bulb and socket OK?

↓ YES


Replace the auxiliary light bulb, socket or both.

↓ NO

2. Voltage

- Connect the pocket tester (DC 20 V) to the auxiliary light couplers (wireharness side) as shown.

Tester positive probe → blue/red ①
 Tester negative probe → black ②

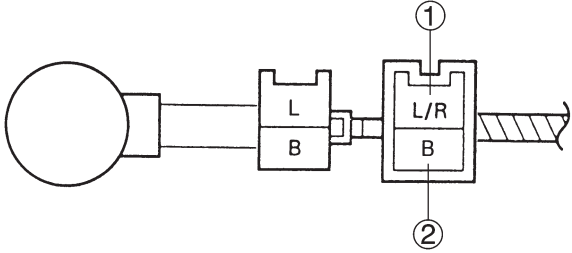

- Set the main switch to "ON".
- Set the light switch to "ΞD ΞΞ" or "☀".
- Measure the voltage (12 V) of blue/red ① on the auxiliary light couplers (wireharness side).
- Is the voltage within specification?

YES

This circuit is OK.


NO

The wiring circuit from the main switch to the auxiliary light coupler is faulty and must be repaired.

2. Voltage

- Connect the pocket tester (20 V) to the licence plate light coupler (wireharness side) as shown.

Tester positive probe → blue/red ①
 Tester negative probe → black ②

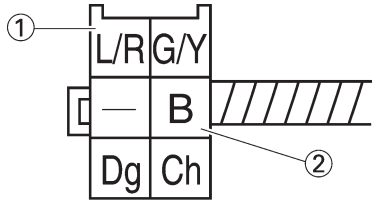

- Set the main switch to "ON".
- Measure the voltage (12 V) of blue/red ① on the meter light coupler (wireharness side).
- Is the voltage within specification?

YES

This circuit is OK.

NO

The wiring circuit from the main switch to the licence plate light coupler is faulty and must be repaired.

5. Licence plate light fails to come on.


1. Licence plate light bulb and socket

- Check the licence plate light and socket for continuity.
- Are the licence plate light bulb and socket OK?


YES

Replace the licence plate light bulb, socket or both.

NO



**SIGNAL SYSTEM
CIRCUIT DIAGRAM**

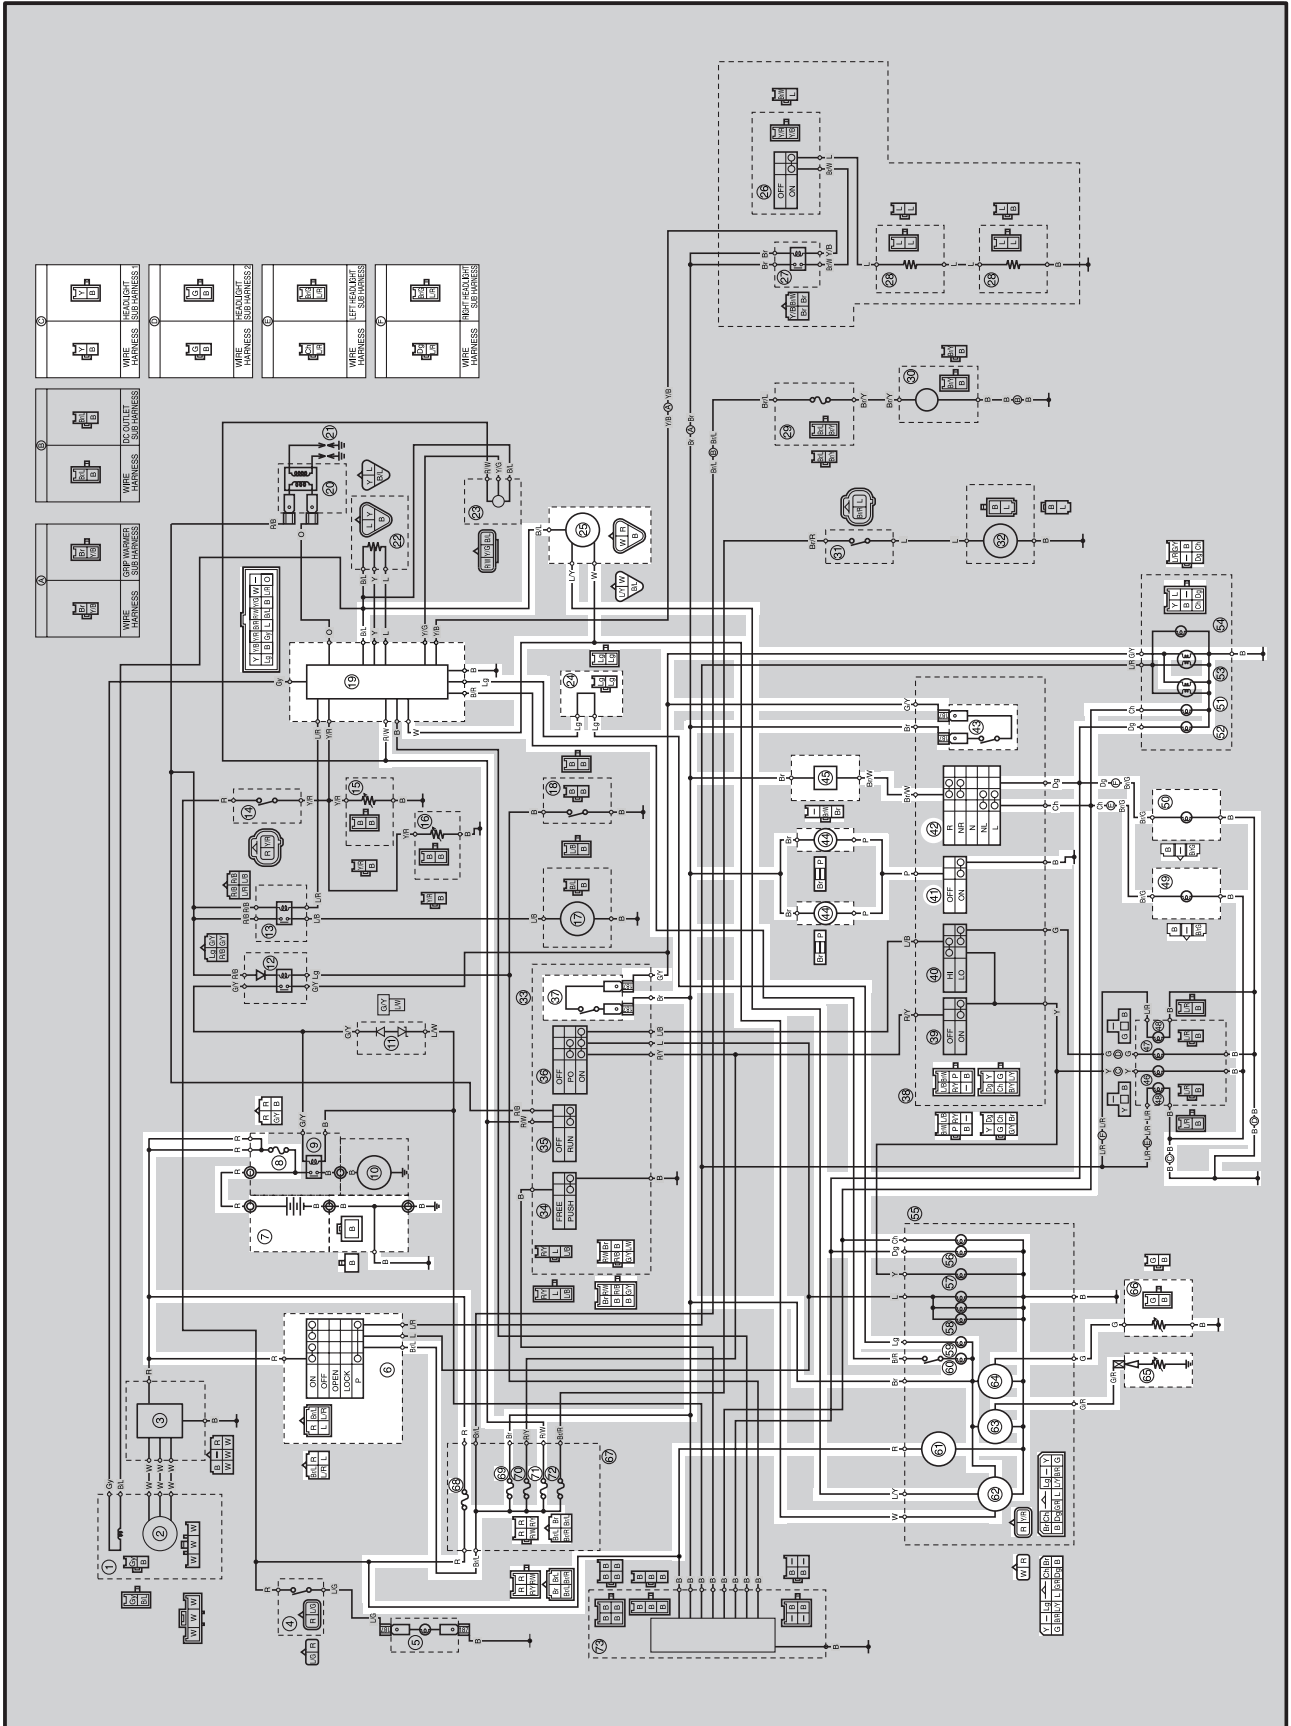



- ⑥ Main switch
- ⑦ Battery
- ⑧ Main fuse
- ⑱ Igniter unit
- ⑳ Reset coupler
- ㉕ Speed sensor
- ㉟ Front brake light switch
- ㊱ Horn switch
- ㊲ Turn signal switch
- ㊳ Rear brake light switch
- ㊴ Horn
- ㊵ Flasher relay
- ㊹ Front turn signal light (Left)
- ㊺ Front turn signal light (Right)
- ㊻ Rear turn signal light (Left)
- ㊼ Rear turn signal light (Right)
- ㊽ Tail/brake light
- ㊾ Turn signal indicator light
- ㊿ V-belt indicator light
- ① Engine oil change indicator light
- ② Clock
- ③ Speedometer
- ④ Water temperature gauge
- ⑤ Fuel gauge
- ⑥ Thermo unit
- ⑦ Fuel level sender
- ⑧ Backup fuse
- ⑨ Signal fuse
- ⑩ Ignition fuse



EAS00794

TROUBLESHOOTING


- Any of the following fail to come on: turn signal light, brake light or indicator light.
- The horn fails to sound.

Check:

1. Main, signal and ignition fuses
2. Battery
3. Main switch
4. Wiring connections (of the entire signal system)

NOTE:

- Before troubleshooting, remove the following part(-s):
 - 1) Front cowling
 - 2) Handlebar cover
- Troubleshoot with the following special tool(-s).

	Pocket tester 90890-03112
--	-------------------------------------


EAS00738

1. Main, signal and ignition fuses
• Check the main, signal and ignition fuses for continuity. Refer to "CHECKING THE FUSES" in CHAPTER 3.
• Are the main, signal and ignition fuses OK?



Replace the fuse (-s).

EAS00739

2. Battery
• Check the condition of the battery. Refer to "CHECKING THE BATTERY" in CHAPTER 3.
 Open-circuit voltage 12.8 V or more at 20°C
• Is the battery OK?



• Clean the battery terminals.
• Recharge or replace the battery.

EAS00749

3. Main switch
• Check the main switch for continuity. Refer to "CHECKING THE SWITCHES".
• Is the main switch OK?



Replace the main switch.

EAS00795

4. Wiring
• Check the entire signal system's wiring. Refer to "CIRCUIT DIAGRAM".
• Is the signaling system's wiring properly connected and without defects?



Check the condition of each of the signal system's circuits. Refer to "CHECKING THE SIGNALING SYSTEM".

Properly connect or repair the signal system's wiring.

EAS00796

CHECKING THE SIGNAL SYSTEM


1. The horn fails to sound.

1. Horn switch
Refer to "CHECKING THE SWITCHES".




Replace the left handlebar switch.

2. Voltage
• Connect the pocket tester (20 V DC) to the horn lead (at the horn terminal) as shown.



Tester positive probe → brown ①
 Tester negative probe → ground

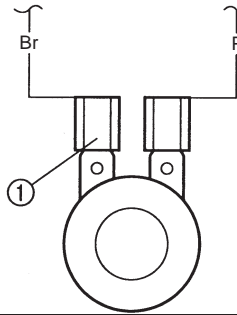


- Set the main switch to "ON".
- Measure the voltage (12 V) of the brown connector at the horn terminal.
- Is the voltage within specification?

↓ YES

↓ NO

The wiring circuit from the main switch to the horn terminal is faulty and must be repaired.

Tester positive probe → pink ①
 Tester negative probe → ground

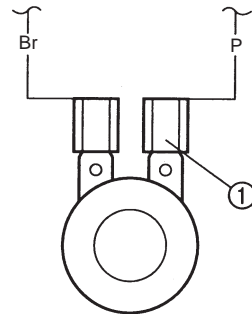

- Set the main switch to "ON".
- Measure the voltage (12 V) of pink ① at the horn terminal.
- Is the voltage within specification?

↓ YES

↓ NO

Repair or adjust the horn.

Replace the horn.

EAS00797

2. The tail/brake light fails to come on.

1. Tail/brake light bulb and socket.

- Check the tail/brake light bulb and socket for continuity.
- Are the tail/brake light bulb and socket OK?

↓ YES

↓ NO

Replace the tail/brake light bulb, socket or both.

2. Brakelight switch

- Check the brakelight switch for continuity. Refer to "CHECKING THE SWITCHES".
- Is the brake switch OK?


↓ YES

↓ NO

Replace the brakelight switch.

3. Horn

- Disconnect the P connector at the horn terminal.
- Connect a jumper lead ① to the horn terminal and ground the jumper lead.
- Set the main switch to "ON".
- Does the horn sound?

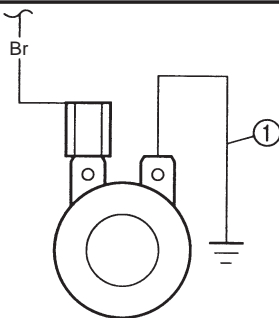

↓ YES

↓ NO

Replace the horn.

4. Voltage


- Connect the pocket tester (20 V DC) to the horn at the pink terminal as shown.

3. Voltage

- Connect the pocket tester (20 V DC) to the tail/brake light coupler (wireharness side) as shown.



Tester positive probe → green/yellow ①
 Tester negative probe → black ②

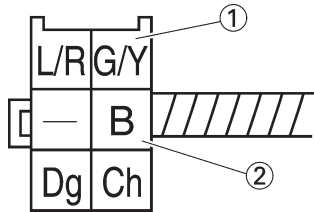

- Set the main switch to “ON”.
- Pull in the brake lever (front or rear).
- Measure the voltage (12 V) of green/yellow ① on the tail/brake light coupler (wireharness side).
- Is the voltage within specification?

↓ YES ↓ NO

This circuit is OK. The wiring circuit from the main switch to the tail/brake light coupler (wireharness side) is faulty and must be repaired.

EAS00799
 3. The turn signal light, turn signal indicator light or both fail to blink.

1. Turn signal indicator light bulb and socket
- Check the turn signal light bulb and socket for continuity.
 - Are the turn signal light bulbs and socket OK?

↓ YES ↓ NO

Replace the turn signal light bulb, socket or both.

2. Turn signal switch
- Check the turn signal switch for continuity. Refer to “CHECKING THE SWITCHES”.
 - Is the turn signal switch OK?


↓ YES ↓ NO

Replace the left handlebar switch.

3. Voltage

- Connect the pocket tester (20 V DC) to the flasher relay coupler (flasher relay side) as shown.

Tester positive probe → brown ①
 Tester negative probe → ground

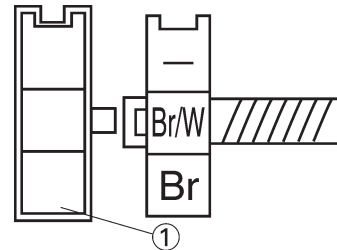

- Set the main switch to “ON”.
- Measure the voltage (12 V) of brown ① at the flasher relay coupler (wireharness side).
- Is the voltage within specification?


↓ YES ↓ NO


The wiring circuit from the main switch to the flasher relay coupler (wireharness side) is faulty and must be repaired.

4. Voltage

- Connect the pocket tester (20 V DC) to the flasher relay coupler (wireharness side) as shown.

Tester positive probe → brown/white ①
 Tester negative probe → ground

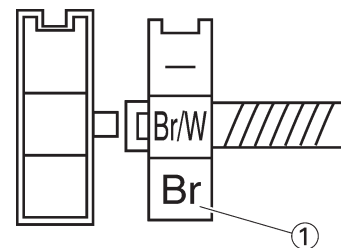

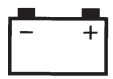

- Set the main switch to "ON".
- Measure the voltage (12 V) on brown/white ① at the flasher relay coupler (wireharness side).
- Is the voltage within specification?

↓ YES


↓ NO

The flasher relay is faulty and must be replaced.

5. Voltage
- Connect the pocket tester (20 V DC) to the turn signal light coupler (wireharness side) as shown.

- A Front turn signal light
- B Rear turn signal light

- Left turn signal light**
 Tester positive probe → chocolate ①
 Tester negative probe → ground
- Right turn signal light**
 Tester positive probe → dark green ②
 Tester negative probe → ground

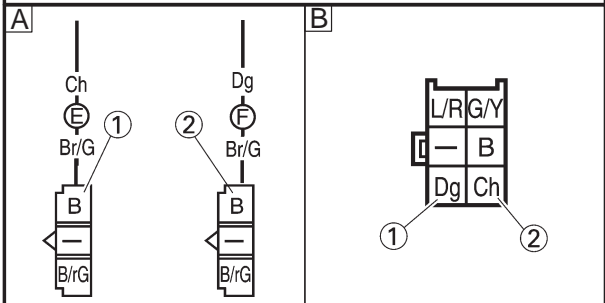

- Set the main switch to "ON".
- Set the turn signal switch to "↔" or "↔".
- Measure the voltage (12 V) of the chocolate ① or dark green ② on the turn signal light coupler (wireharness side).
- Is the voltage within specification?

↓ YES


↓ NO

This circuit is OK.

The wiring circuit from the turn signal switch to the turn signal light connector (wireharness side) is faulty and must be repaired.

6. Voltage
- Connect the pocket tester (20 VDC) to the meter assembly coupler (wireharness side) as shown.

- Left turn signal indicator light**
 Tester positive probe → chocolate ①
 Tester negative probe → ground
- Right turn signal indicator light**
 Tester positive probe → dark green ②
 Tester negative probe → ground

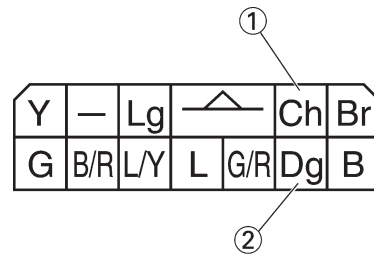


- Set the main switch to "ON".
- Set the turn signal switch to "↔" or "↔".
- Measure the voltage (12 V) of the chocolate ① or dark green ② on the meter assembly coupler (wireharness side).
- Is the voltage within specification?

↓ YES

↓ NO

This circuit is OK.

The wiring circuit from the turn signal switch to the meter assembly coupler (wireharness side) is faulty and must be repaired.



4. The V-belt indicator light fails to come on.

1. V-belt indicator light bulb and socket

- Check the V-belt indicator light bulb and socket for continuity.
- Are the V-belt indicator light bulb and socket OK?



Replace the V-belt indicator light bulb, socket or both.

2. V-belt indicator reset coupler

- Check the V-belt indicator reset coupler for continuity.
- Is the V-belt reset coupler OK?




Replace the V-belt reset coupler.

3. Voltage

- Connect the pocket tester (20 V DC) to the meter assembly coupler (wireharness side) as shown.

Tester positive probe → light green ①
 Tester negative probe → ground

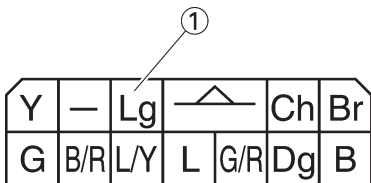

- Set the main switch to "ON".
- Measure the voltage (12 V) of light green ① at the meter assembly coupler.
- Is the voltage within specification?



Replace the meter assembly.


The wiring circuit from the igniter unit to the meter assembly coupler (wireharness side) is faulty and must be repaired.

5. Fuel gauge fails to operate

1. Fuel sender

- Remove the fuel sender from the fuel tank.
- Disconnect the fuel sender coupler from the wireharness.
- Connect the pocket tester ($\Omega \times 10$) to the fuel sender coupler lead.

Tester positive probe → green ①
 Tester negative probe → ground

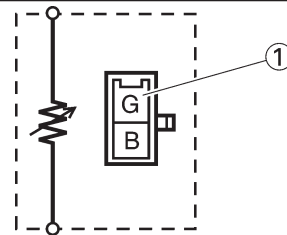

- Measure the fuel sender resistance.



Float position resistance
 UP → 4 ~ 10 Ω
 DOWN → 90 ~ 100 Ω

- Is the fuel sender OK?




Replace the fuel sender.

2. Voltage

- Connect the pocket tester (20 V DC) to the meter assembly coupler (wireharness side) as shown.

Tester positive probe → brown ①
 Tester negative probe → ground

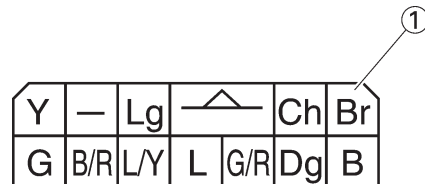




- Set the main switch to "ON".
- Measure the voltage (12 V) of brown ① at the meter assembly coupler. (wireharness side)
- Is the voltage within specification?

↓ YES

↓ NO

The wiring circuit from the signal fuse to the meter assembly coupler (wireharness side) is faulty and must be repaired.

3. Fuel gauge
- Connect the fuel sender coupler.
 - Move the float to "UP" ① or "DOWN" ②.

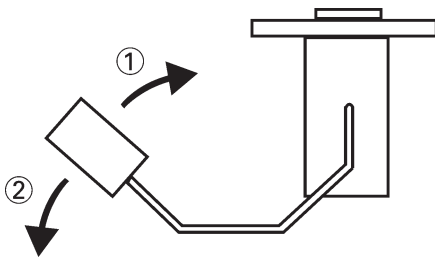

- Set the main switch to "ON".
- Check the fuel gauge needle moves "F" or "E".
- Is the fuel gauge OK?

↓ YES

↓ NO


This circuit is OK.

Replace the fuel gauge.

6. Water temperature gauge fails to operate

1. Thermo unit
- Remove the thermo unit from the cylinder head.
 - Connect the pocket tester ($\Omega \times 10$) to the thermo unit.

Tester positive probe → Thermo unit terminal ①
Tester negative probe → Thermo unit body ②

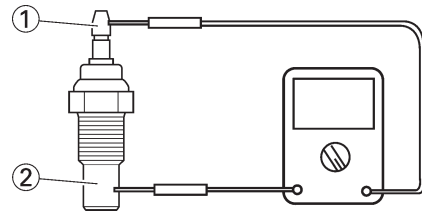

- Measure the thermo unit resistance.



Thermo unit resistance:
 69 Ω at 80°C
 22 Ω at 120°C

- Is the thermo unit OK?

↓ YES


↓ NO

Thermo unit replace.

2. Voltage

- Connect the pocket tester (20 V DC) to the meter assembly coupler (wireharness side) as shown.

Tester positive probe → brown ①
Tester negative probe → ground

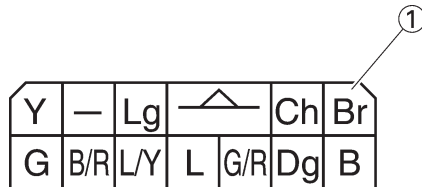

- Set the main switch to "ON".
- Measure the voltage (12 V) of brown ① at the meter assembly coupler. (wireharness side)
- Is the voltage within specification?


↓ YES

↓ NO

The wiring circuit from the signal fuse to the meter assembly coupler (wireharness side) is faulty and must be repaired.

3. Water temperature gauge

- Disconnect the thermo unit connector.
- Set the main switch to "ON".
- Connect the thermo unit connector lead green/red ① and ground with a jumper lead ② as shown.

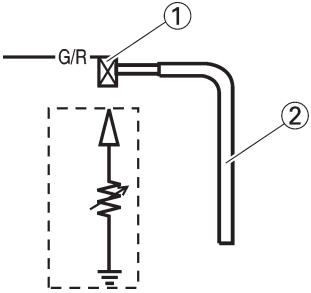

• Is the water temperature gauge OK?

↓ YES

↓ NO

This circuit is OK.


Replace the water temperature gauge.

COOLING SYSTEM



EB807000

COOLING SYSTEM CIRCUIT DIAGRAM

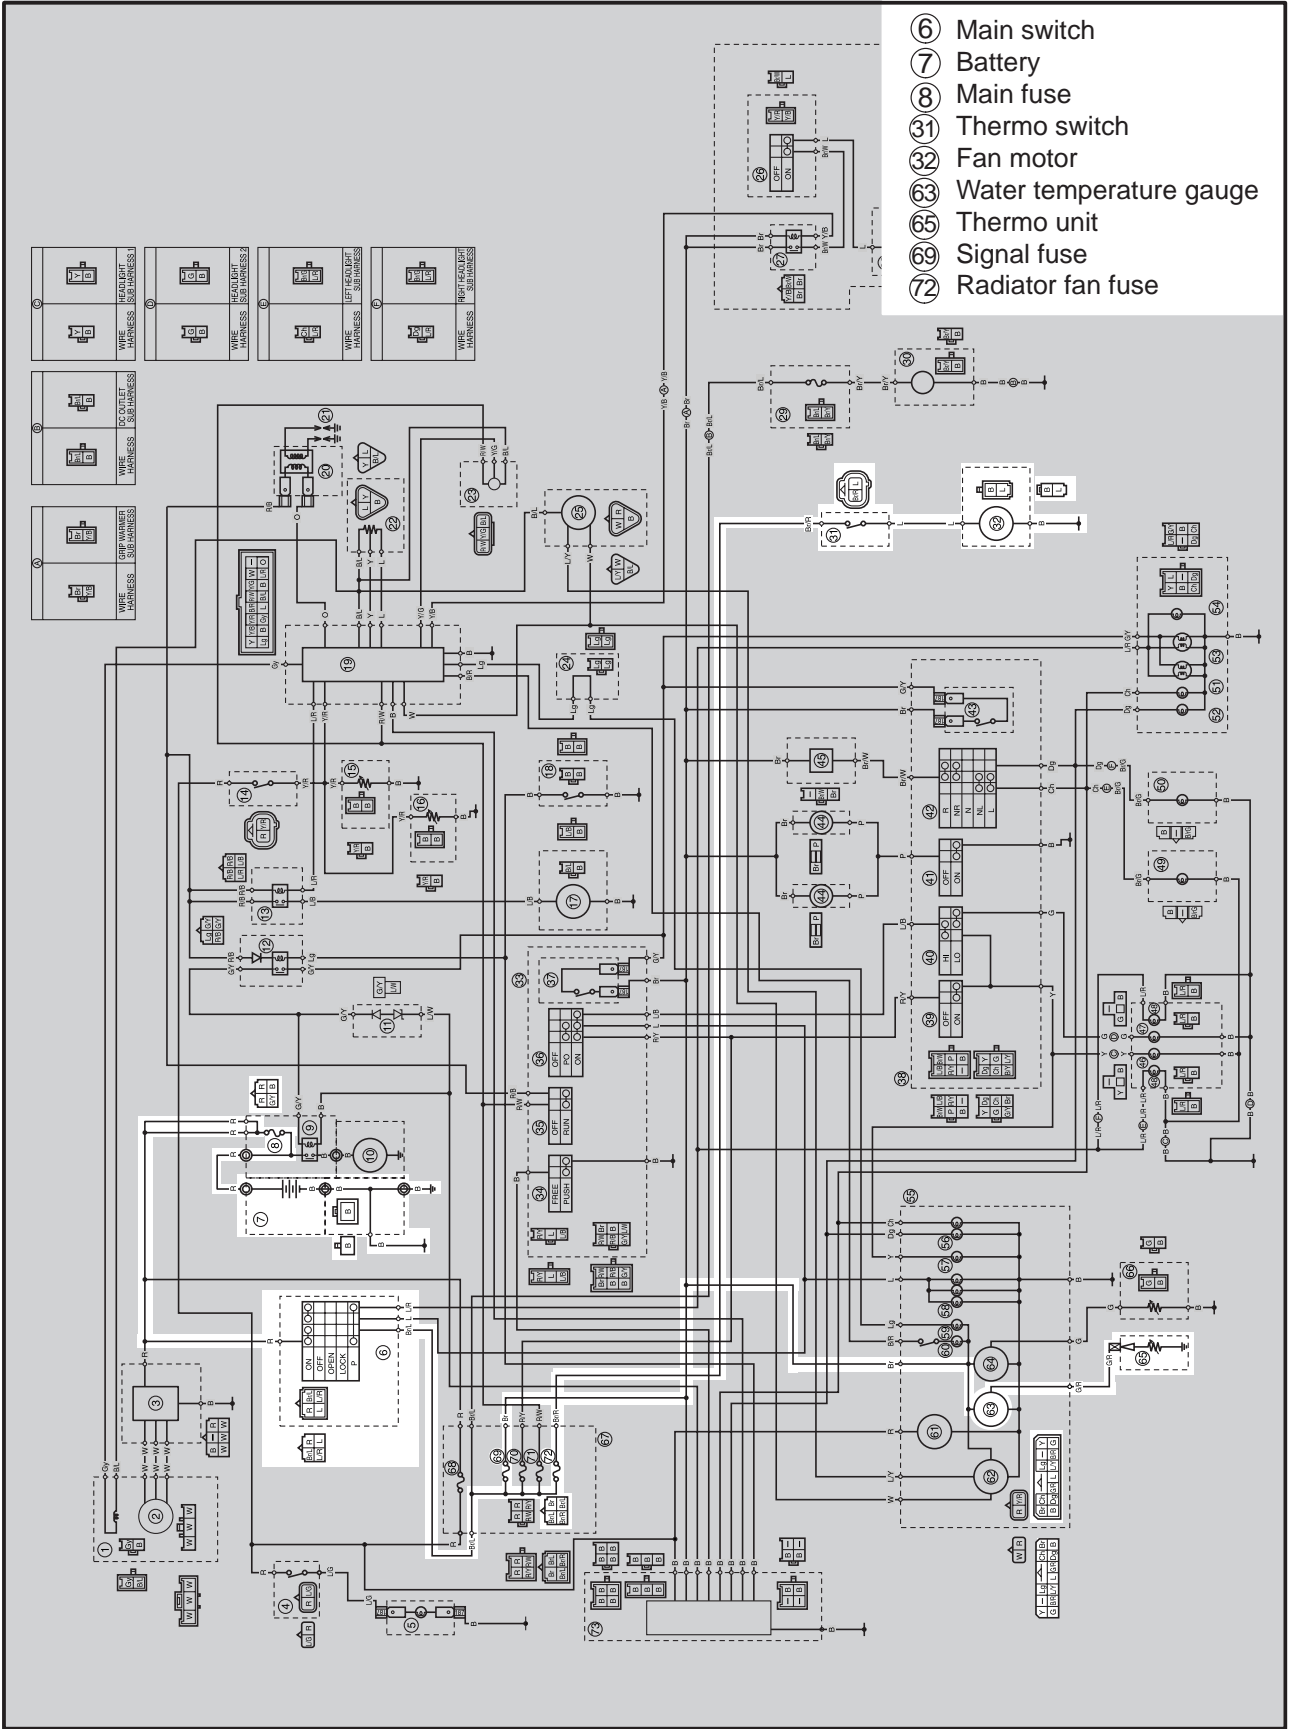

- ⑥ Main switch
- ⑦ Battery
- ⑧ Main fuse
- ③① Thermo switch
- ③② Fan motor
- ⑥③ Water temperature gauge
- ⑥⑤ Thermo unit
- ⑥⑨ Signal fuse
- ⑦② Radiator fan fuse

COOLING SYSTEM



EB807010

TROUBLESHOOTING

• **The radiator fan motor fails to turn.**

Check:

1. Main, and radiator fan motor fuses
2. Battery
3. Main switch
4. Radiator fan motor
5. Thermo switch
6. Wiring
(the entire cooling system)

NOTE:

- Before troubleshooting, remove the following part(-s):
 - 1) Footrest board
 - 2) Legshield
- Troubleshooting with the following special tool (-s).

Pocket tester
90890-03112

EB802400

1. Main, and radiator fan motor fuses

- Check the main, and radiator fan motor fuses for continuity. Refer to “CHECKING THE FUSES” in chapter 3.
- Are the main, and radiator fan motor fuses OK?

↓ YES
↓ NO

Replace the fuse(-s).

EB802401

2. Battery

- Check the condition of the battery. Refer to “CHECKING AND CHARGING THE BATTERY” in chapter 3.

Open-circuit voltage
12.8 V or more at 20° C

• Is the battery OK?

↓ YES
↓ NO

- Clean the battery terminals.
- Recharge or replace the battery.

EB802411

3. Main switch

- Check the main switch for continuity. Refer to “CHECKING THE SWITCHES”.
- Is the main switch OK?

↓ YES
↓ NO


Replace the main switch.

EB807400

4. Radiator fan motor (test 1)

- Disconnect the radiator fan motor coupler from the wireharness.
- Connect the battery (12 V) as shown.

Battery positive lead → blue ①
Battery negative lead → black ②

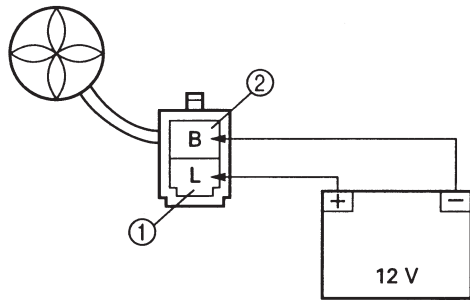

• Does the radiator fan motor turn?

↓ YES
↓ NO

The radiator fan motor is faulty and must be replaced.



EB807400

5. Radiator fan motor (test 2)

- Disconnect the thermo switch coupler.
- Set the main switch to "ON".
- Connect the brown/red ① and blue ② terminals with a jumper lead ③ as shown.

• Does the radiator fan motor turn?



The wiring circuit from the main switch to the radiator fan motor coupler is faulty and must be repaired.

EB807402

6. Thermo switch


- Remove the thermo switch from the radiator.
- Connect the pocket tester ($\Omega \times 1$) to the thermo switch ① as shown.
- Immerse the thermo switch in a container filled with coolant ②.

NOTE: _____
Make sure that the thermo switch terminals do not get wet.

- Place a thermometer ③ in the coolant.
- Slowly heat the coolant, then let it cool to the specified temperature as indicated in the table.
- Check the thermo switch for continuity at the temperatures indicated in the table.

Test step	Coolant temperature	Continuity
	Thermo switch	
1	0 ~ 92 ± 3°C	NO
2	More than 98 ± 3°C	YES
3*	98 ± 3°C to 92 ± 3°C	YES
4*	Less than 92 ± 3°C	NO

Test steps 1 & 2: Heating phase
Test steps 3* & 4*: Cooling phase

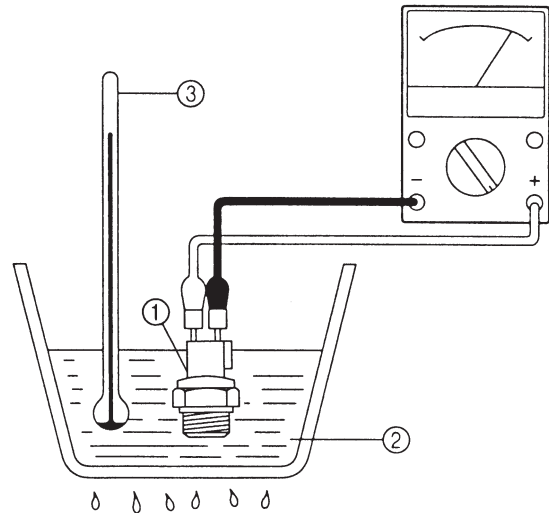


⚠ WARNING

- Handle the thermo switch with special care.
- Never subject the thermo switch to strong shocks. If the thermo switch is dropped, replace it.



Thermo switch
23 Nm (2.3 m•kg)
Three bond sealock® 10

- A** The thermo switch circuit is open and the radiator fan is off.
- B** The thermo switch circuit is closed and the radiator fan is on.

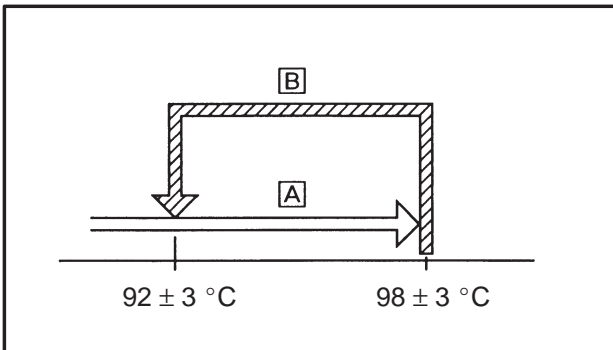

• Does the thermo switch operate properly as described above?

↓ YES

↓ NO

Replace the thermo switch.

EB807403

7. Wiring

- Check the entire cooling system's wiring. Refer to "CIRCUIT DIAGRAM".
- Is the cooling system's wiring properly connected and without defects?

↓ YES


↓ NO

This circuit is OK.


Properly connect or repair the cooling system's wiring.

FUEL PUMP SYSTEM

ELEC



FUEL PUMP SYSTEM CIRCUIT DIAGRAM

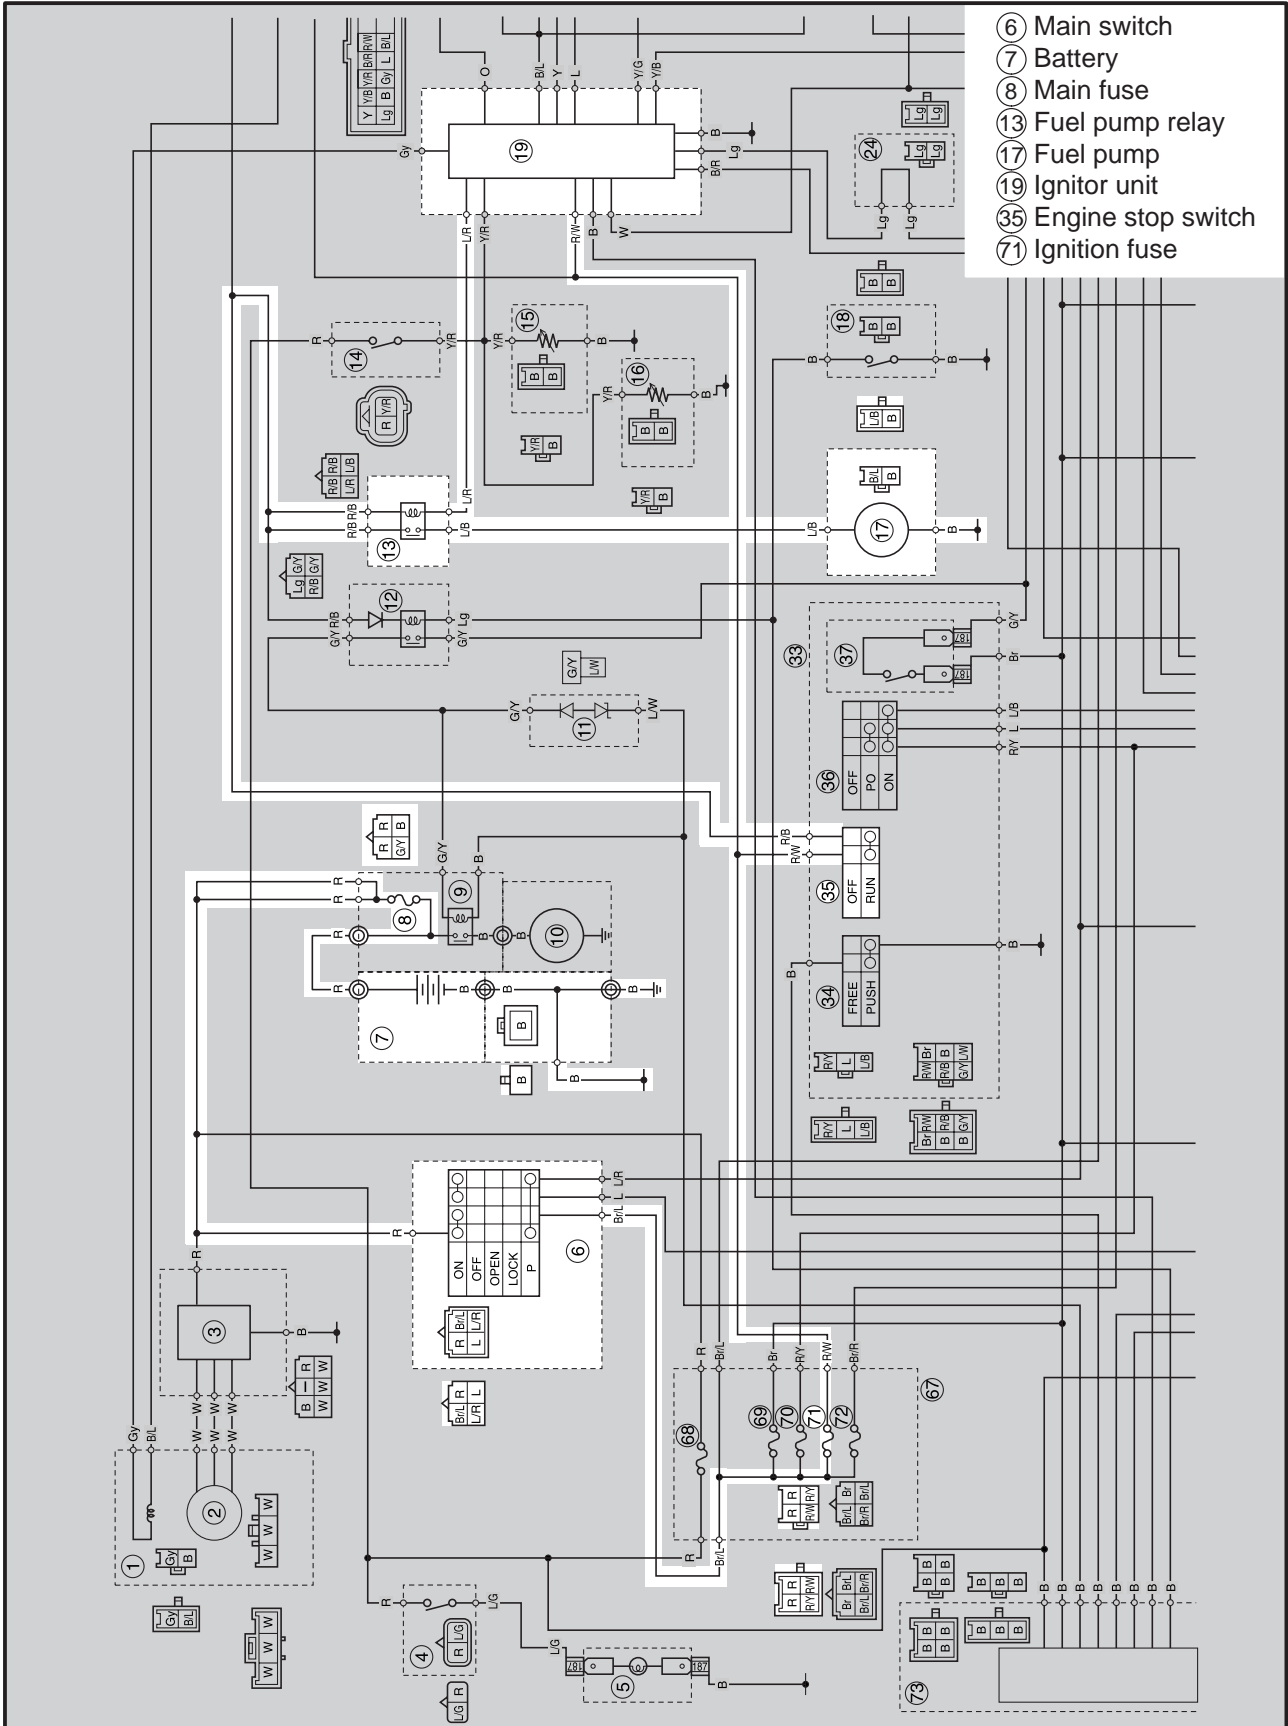

- ⑥ Main switch
- ⑦ Battery
- ⑧ Main fuse
- ⑬ Fuel pump relay
- ⑰ Fuel pump
- ⑲ Ignitor unit
- ⑳ Engine stop switch
- ㉑ Ignition fuse

FUEL PUMP SYSTEM

ELEC




EB808010

FUEL PUMP CIRCUIT OPERATION

The fuel pump circuit consists of the fuel pump relay, fuel pump, engine stop switch and ignitor unit.

The ignitor unit includes the control unit for the fuel pump.

- ① Battery
- ② Main fuse
- ③ Main switch
- ④ Ignition fuse
- ⑤ Engine stop switch
- ⑥ Ignitor unit
- ⑦ Fuel pump relay
- ⑧ Fuel pump
- ⑨ Lean angle cut-off switch

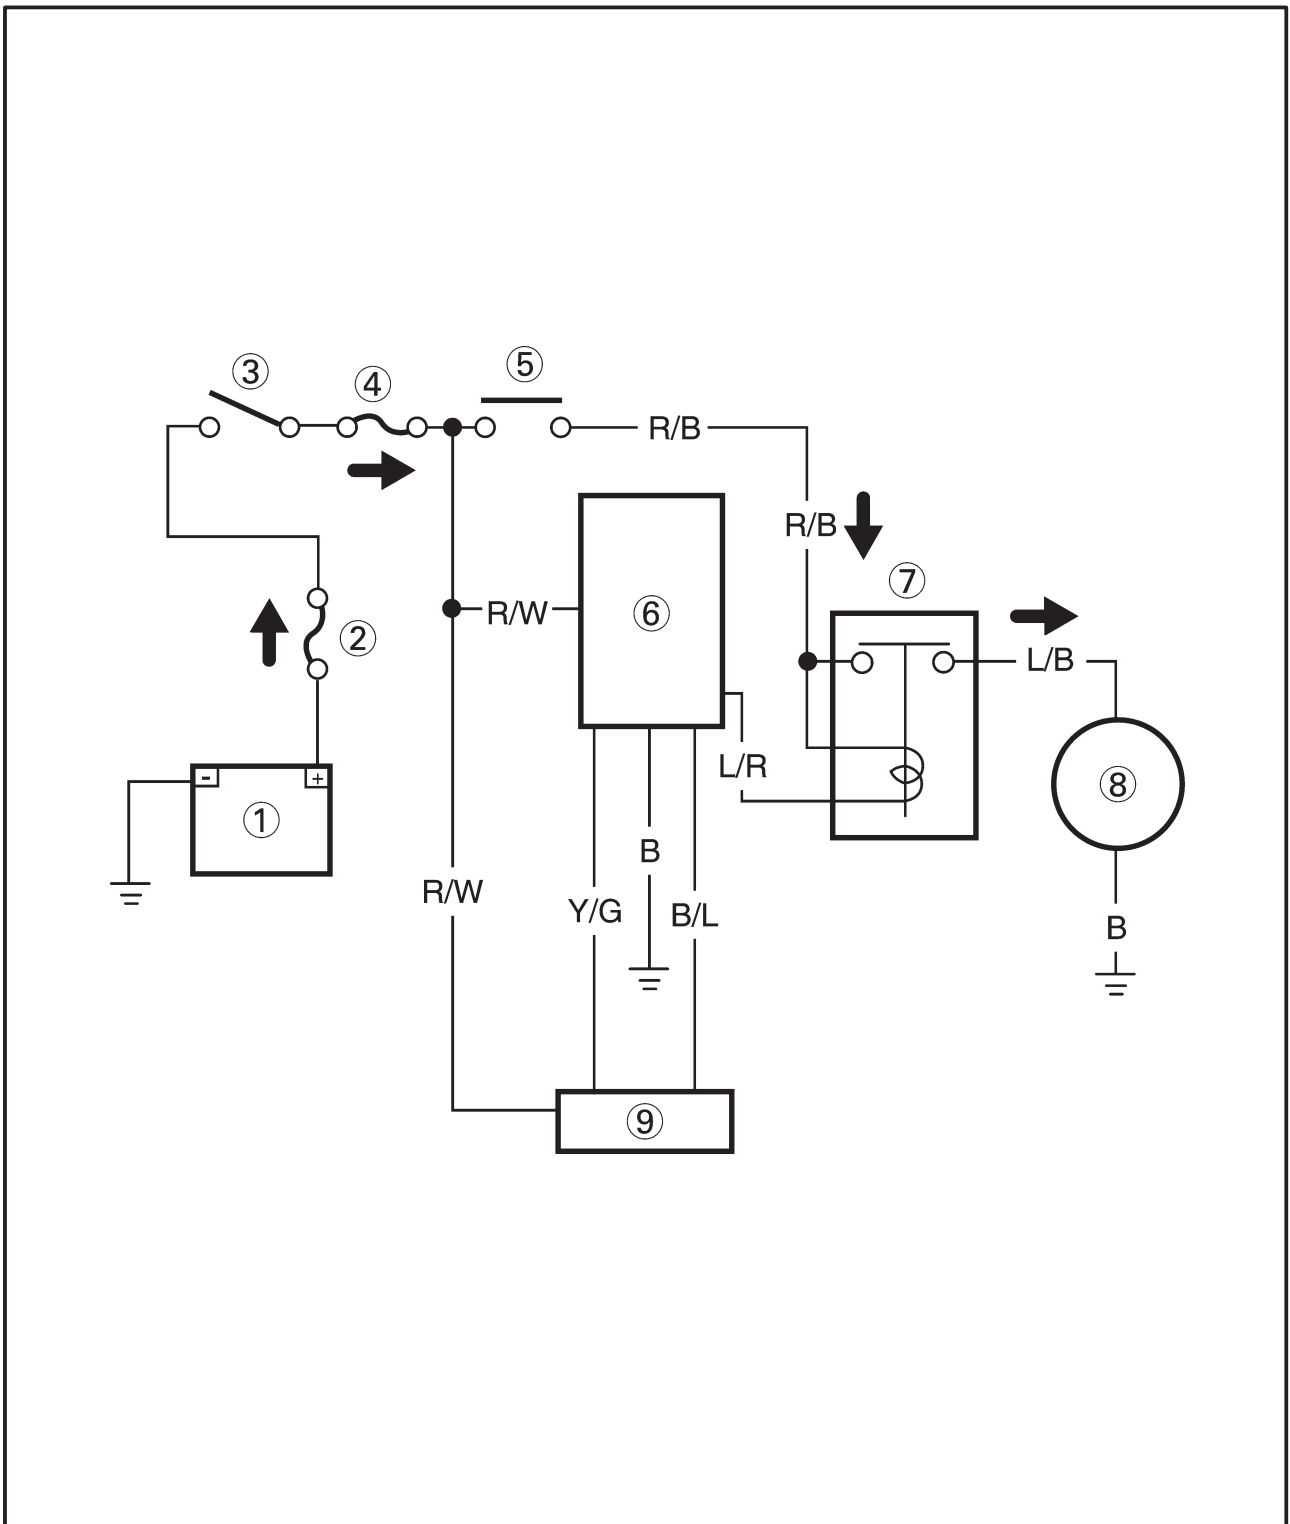



EAS00816

TROUBLESHOOTING

If the fuel pump fails to operate:

Check:

1. Main and ignition fuses
2. Battery
3. Main switch
4. Engine stop switch
5. Fuel pump relay
6. Fuel pump
7. Lean angle cut-off switch
8. Wiring connections
(the entire fuel pump system)

NOTE:

- Before troubleshooting, remove the following part(-s):
 - 1) Footrest board
 - 2) Rear side cover (right)
 - 3) Handlebar cover
- Troubleshoot with the following special tool(-s).



Pocket tester
90890-03112

EAS00738

1. Main, and ignition fuses

- Check the main and ignition fuses for continuity. Refer to "CHECKING THE FUSES" in CHAPTER 3.

- Are the main and ignition fuses OK?

↓ YES

↓ NO

Replace the fuse (-s).

EAS00739

2. Battery

- Check the condition of the battery. Refer to "CHECKING THE BATTERY" in CHAPTER 3.



Open-circuit voltage
12.8 V or more at 20°C

- Is the battery OK?

↓ YES

↓ NO

- Clean the battery terminals.
- Recharge or replace the battery.

EAS00749

3. Main switch

- Check the main switch for continuity. Refer to "CHECKING THE SWITCHES".

- Is the main switch OK?

↓ YES

↓ NO

Replace the main switch.

EAS00750

4. Engine stop switch

- Check the engine stop switch for continuity. Refer to "CHECKING THE SWITCHES".

- Is the engine stop switch OK?

↓ YES

↓ NO

Replace the right handlebar switch.


EAS00759

5. Fuel pump relay

- Disconnect the fuel pump relay coupler from the wireharness.
- Connect the pocket tester ($\Omega \times 1$) and battery (12 V) to the fuel pump relay coupler as shown.

Battery positive terminal → red/black ①
Battery negative terminal → blue/red ②

Tester positive probe → red/black ③
Tester negative probe → blue/black ④

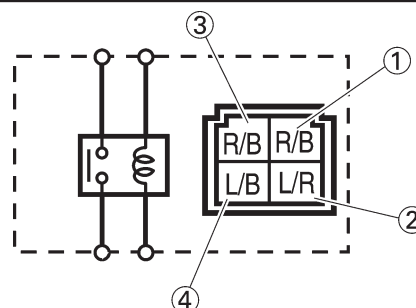

- Does the fuel pump relay have continuity between red/black and blue/black?

↓ YES

↓ NO

Replace the fuel pump relay.




EAS00817

6. Fuel pump resistance

- Disconnect the fuel pump coupler from the wireharness.
- Connect the pocket tester ($\Omega \times 1$) to the fuel pump coupler as shown.

Tester positive probe → black/blue ①
Tester negative probe → black ②

- Measure the fuel pump resistance.

 **Fuel pump resistance**
 4 ~ 30 Ω at 20°C

- Is the fuel pump OK?

↓ YES

↓ NO

Replace the fuel pump.

7. Lean angle cut-off switch

- Check the lean angle cut -off switch. Refer to “SELF-DIAGNOSIS”.
- Is the lean angle cut-off switch OK?

↓ YES

↓ NO

Replace the lean angle cut-off switch.

EAS00818

8. Wiring

- Check the entire fuel pump system’s wiring. Refer to “CIRCUIT DIAGRAM”.
- Is the fuel pump system’s wiring properly connected and without defects?

↓ YES

↓ NO

Replace the ignitor unit.

Properly connect or repair the fuel pump system’s wiring.




EAS00819

CHECKING THE FUEL PUMP

⚠ WARNING

Gasoline is extremely flammable and under certain circumstances there can be a danger of an explosion or fire. Be extremely careful and note the following points:

- Stop the engine before refuelling.
- Do not smoke and keep away from open flames, sparks, or any other source of fire.
- If you do accidentally spill gasoline, wipe it up immediately with dry rags.
- If gasoline touches the engine when it is hot, a fire may occur. Therefore, make sure that the engine is completely cool before performing the following test.

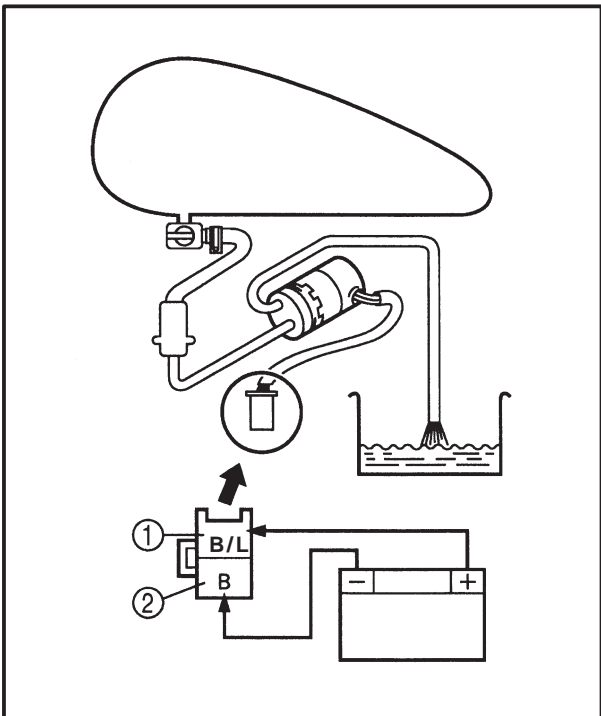

1. Check:
 - fuel pump operation



- a. Fill up the fuel tank.
- b. Put the end of the fuel hose into an open container.
- c. Connect the battery (12 V) to the fuel pump coupler as shown.

Battery positive lead → black/blue ①
Battery negative lead → black ②


- d. If fuel flows out of the fuel hose, the fuel pump is OK.

If fuel does not flow, replace the fuel pump.





**AUTO CHOKE SYSTEM
CIRCUIT DIAGRAM**

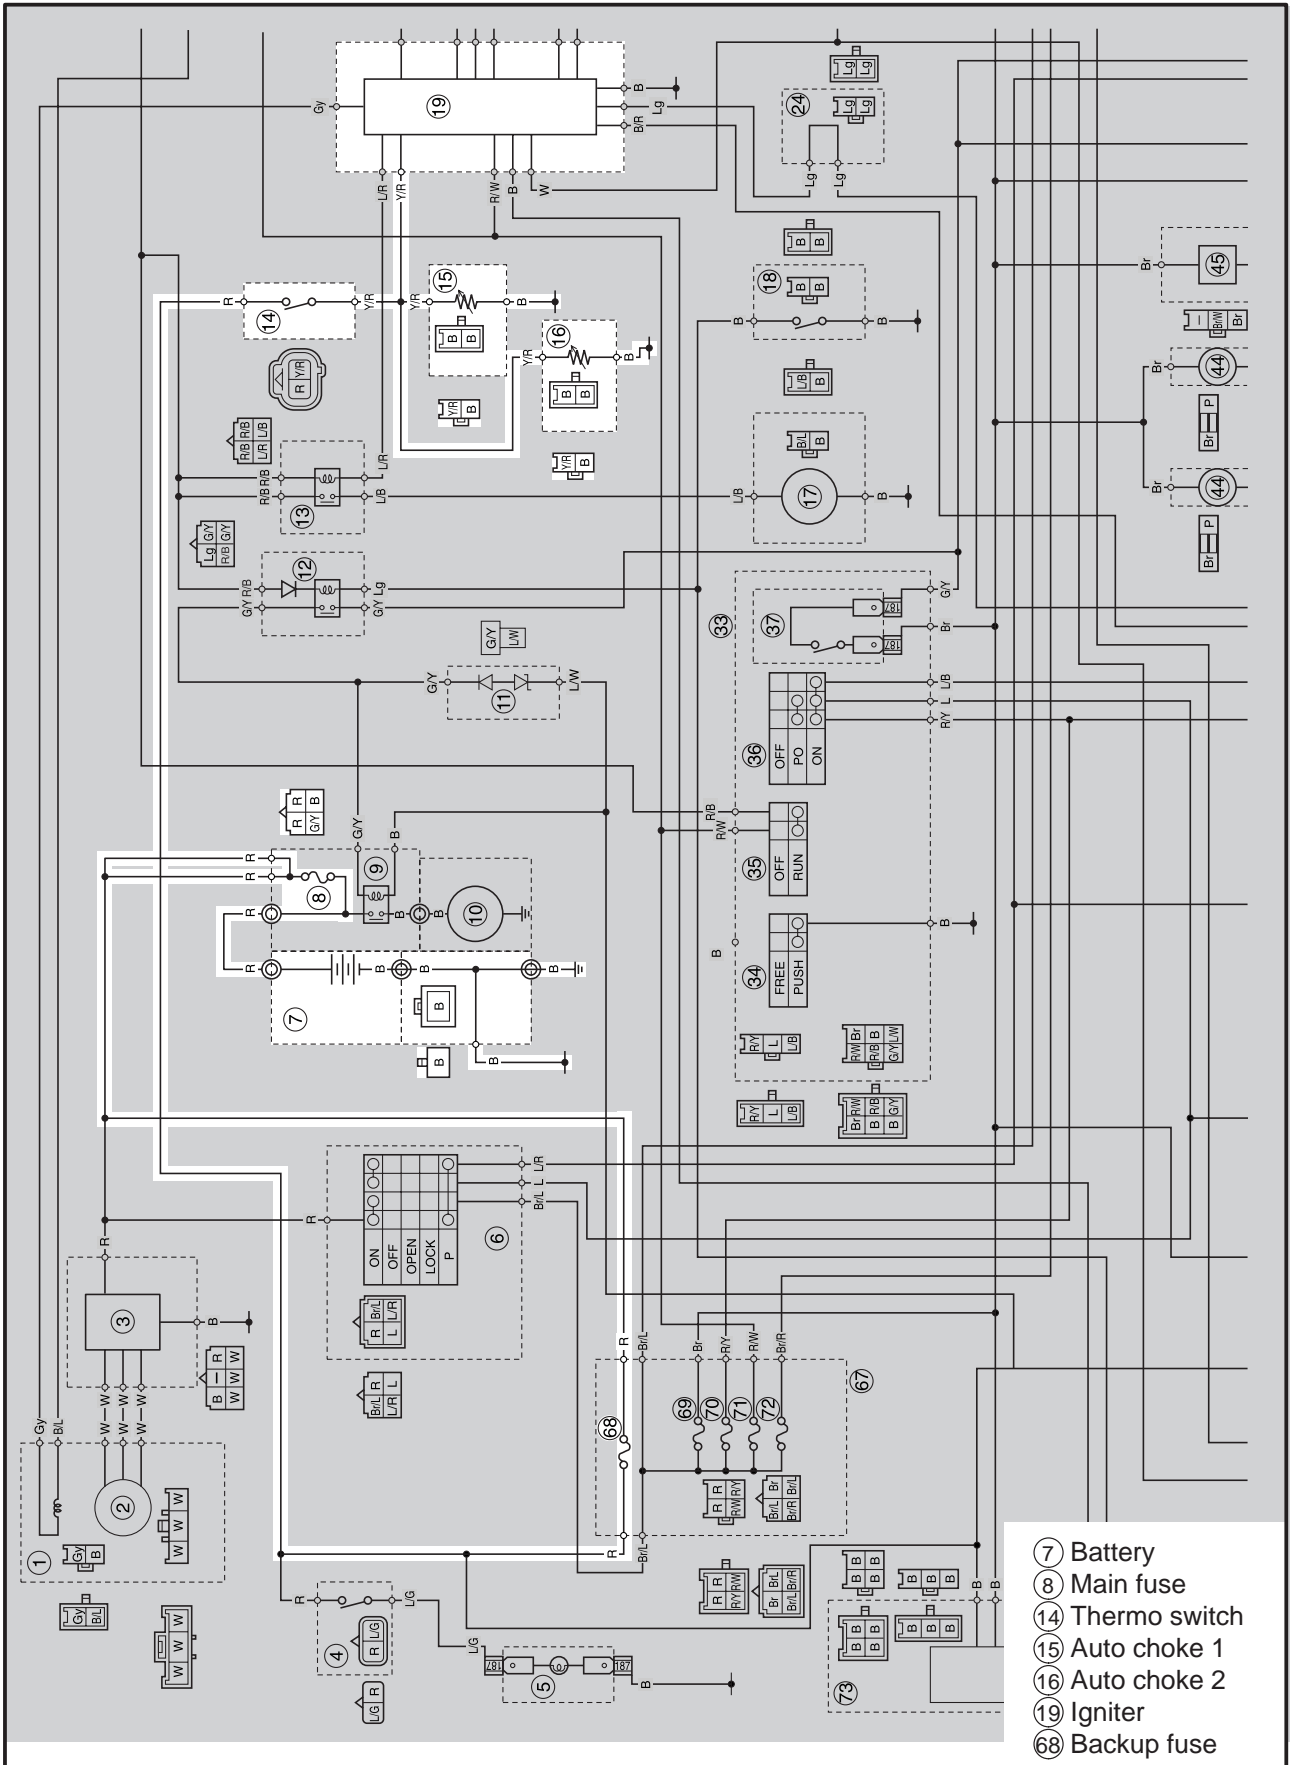

- ⑦ Battery
- ⑧ Main fuse
- ⑭ Thermo switch
- ⑮ Auto choke 1
- ⑯ Auto choke 2
- ⑰ Igniter
- ⑶ Backup fuse



EAS00821

TROUBLESHOOTING

The auto choke system fails to operate.

Check:

1. Main and backup fuses
2. Battery
3. Thermo switch
4. Auto choke 1. 2
5. Igniter unit
6. Wiring connections
(of the entire auto choke system)

NOTE: _____

Before troubleshooting, remove the following part(-s):

- 1) Leg shield

Troubleshoot with the following special tool(-s).

Pocket tester
90890-03112

EAS00738

1. Main, and backup fuses

- Check the main and backup fuses for continuity.
Refer to "CHECKING THE FUSES" in CHAPTER 3.

- Are the main and backup fuses OK?



Replace the fuse (-s).

EAS00739

2. Battery

- Check the condition of the battery.
Refer to "CHECKING THE BATTERY" in CHAPTER 3.



Open-circuit voltage
12.8 V or more at 20° C

- Is the battery OK?



- Clean the battery terminals.
- Recharge or replace the battery.

3. Thermo switch

- Remove the thermo switch from the thermostat housing.
- Connect the pocket tester ($\Omega \times 1$) to the thermo switch ① as shown.
- Immerse the thermo switch in a container filled with coolant ②.

NOTE: _____


Make sure that the thermo switch terminals do not get wet.

- Place a thermometer ③ in the coolant.
- Slowly heat the coolant, then let it cool to the specified temperature as indicated in the table.
- Check the thermo switch for continuity at the temperatures indicated in the table.

Test step	Coolant temperature	Continuity
	Thermo switch	
1	0 ~ 55° C	NO
2	More than 60° C	YES
3*	60 to 55° C	YES
4*	Less than 55° C	NO

Test steps 1 & 2: Heating phase

Test steps 3* & 4*: Cooling phase

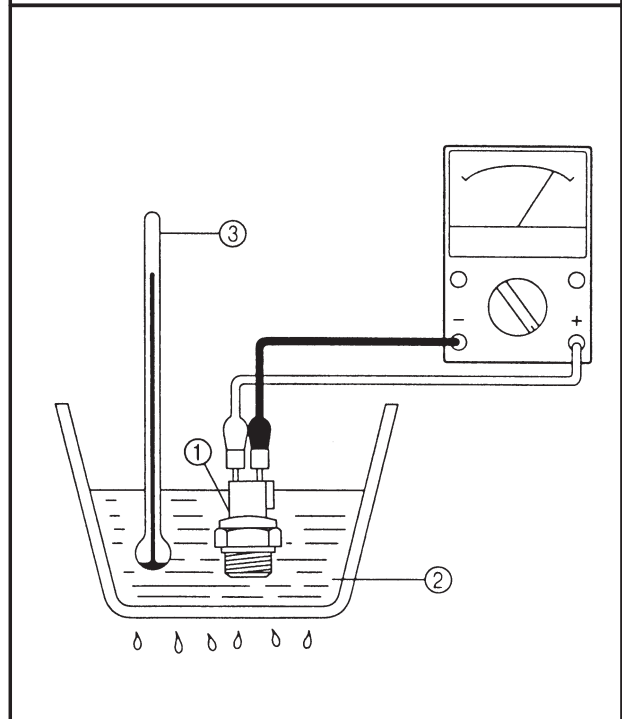


AUTO CHOKE SYSTEM




⚠ WARNING

- Handle the thermo switch with special care.
- Never subject the thermo switch to strong shocks. If the thermo switch is dropped, replace it.

 **Thermo switch**
23 Nm (2.3 m•kg)
Three bond sealock® 10

A COOL DOWN
B HEAT UP

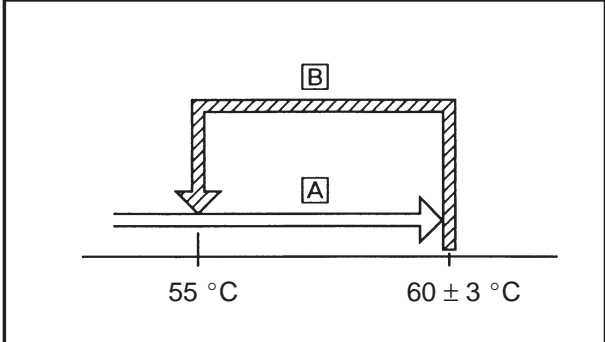

• Does the thermo switch operate properly as described above?

↓ YES ↓ NO


Replace the thermo switch.

EAS00825
 The following procedure applies to all to the auto choke unit.


4. Auto choke unit

- Remove the auto choke unit from the carburetor.
- Connect the pocket tester to the auto choke unit coupler as shown.

Tester positive probe → black ①
Tester negative probe → black ②

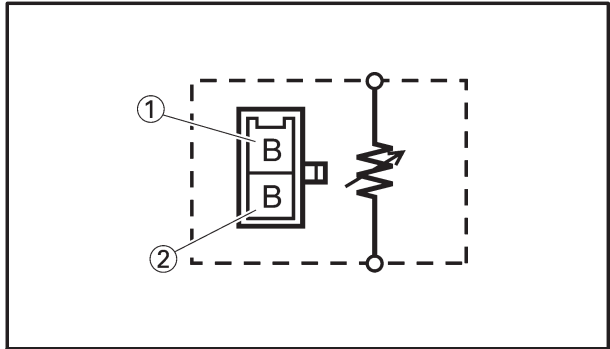

• Measure the auto choke unit resistance.

 **Auto choke resistance**
16 ~ 24 Ω at 20°C

• Is the auto choke OK?

↓ YES ↓ NO

Replace the auto choke.

5. Igniter unit

When the engine is running at a speed of at least 800 r/min.
 OK if one of the auto chokes is on.

↓ NO

Replace the igniter unit.

EAS00826

6. Wiring

- Check the entire auto choke system's wiring. Refer to "CIRCUIT DIAGRAM".
- Is the auto choke system's wiring properly connected and without defects?

↓ NO

Properly connect or repair the auto choke system's wiring.



SELF-DIAGNOSIS

The XP500 features a self-diagnosing system for following circuit (-s).

1. Throttle position sensor (TPS)
2. Speed sensor
3. Lean angle cut-off switch

1. ENGINE TROUBLE INDICATOR LIGHT

When the main switch is turned to “ON”, the following items are monitored and the condition codes are displayed on the engine oil change indicator light (irrespective of whether the engine is running or not).

NOTE:




The XP500 features a self-diagnosing system.

In the XP500, when the main switch is turned on the “Engine oil change indicator light” in the meter assembly comes on for 0.5 seconds then goes off. However, if there is a malfunction, it comes on for 0.5 seconds, goes off and then begins flashing. (However, it is on while the engine is running.)

Item	Condition	Response	Display condition code
Throttle position sensor (TPS)	Disconnected Short-circuit Locked	<ul style="list-style-type: none"> • Enables the motorcycle to run so that the ignition timing is fixed when the throttle is fully opened. • Displays the condition code on the engine oil change indicator light. 	Blinks in Fault code [1]
Speed sensor	Illegality pulse Disconnected Short-circuit	<ul style="list-style-type: none"> • Displays the condition code on the engine oil change indicator light. 	Blinks in Fault code [2]
Lean angle cut-off switch	Disconnected Short-circuit	<ul style="list-style-type: none"> • Displays the condition code on the engine oil change indicator light. 	Blinks in Fault code [3]


Display order on the engine warning light

When one item being monitored

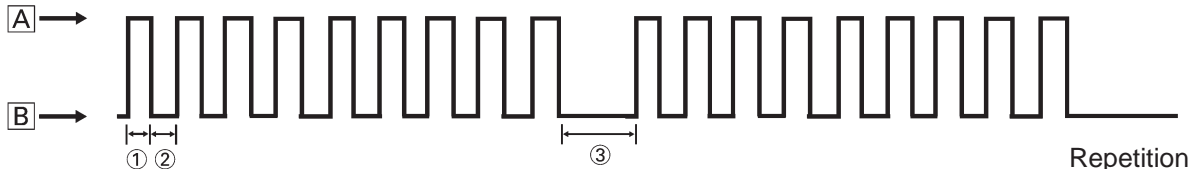Code	Condition
[1]	 <p>Repetition</p>
[2]	 <p>Repetition</p>
[3]	 <p>Repetition</p>

- ① 0.5 seconds **A** Light on
- ② 0.5 seconds **B** Light off
- ③ 3 seconds

When more than one item is being monitored

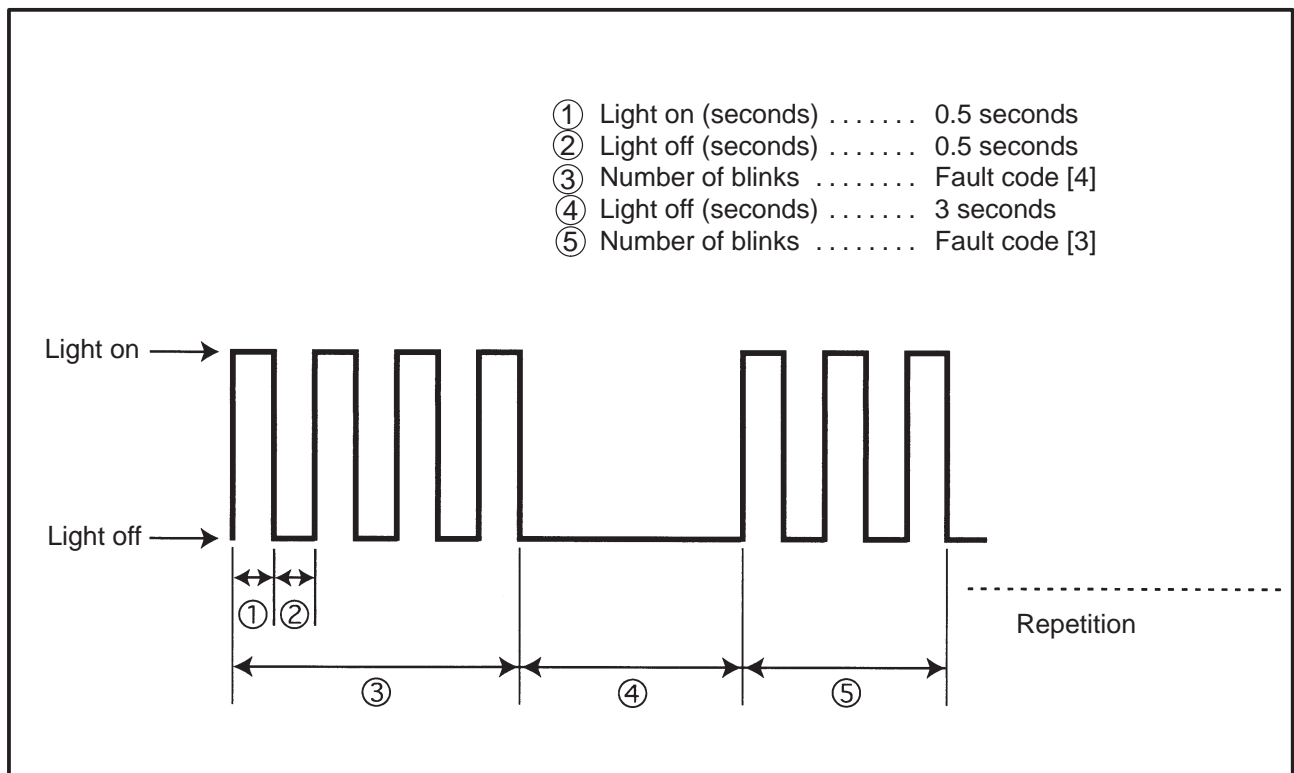

EAS00835

TROUBLESHOOTING

The tachometer starts to display the self-diagnosis sequence.

Check:

1. Throttle position sensor
2. Speed sensor
3. Lean angle cut-off switch

NOTE:


- Before troubleshooting, remove the following part(-s):
 - 1) Front cowling
 - 2) Footrest board
- Troubleshoot with the following special tool(-s).



Pocket tester
90890-03112

EAS00836

1. Throttle position sensor
CIRCUIT DIAGRAM

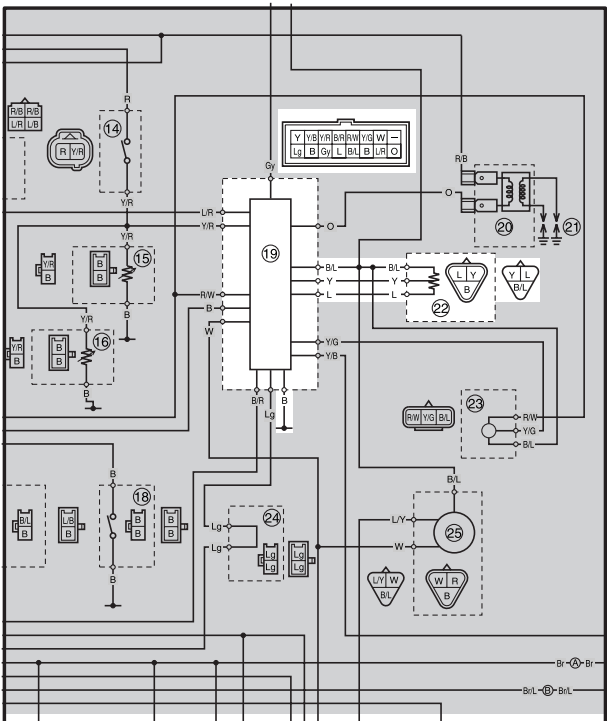

- ① Igniter unit
- ② Throttle position sensor

1. Wire harness

- Check the wire harness for continuity. Refer to "CIRCUIT DIAGRAM".
- Is the wire harness OK?



Repair or replace the wire harness.

EB812401


2. Throttle position sensor

- Check the throttle position sensor for continuity. Refer to "CHECKING AND ADJUSTING THE THROTTLE POSITION SENSOR" in chapter 6.
- Is the throttle position sensor OK?




Replace the igniter unit.

Replace the throttle position sensor.



**2. Speed sensor
CIRCUIT DIAGRAM**

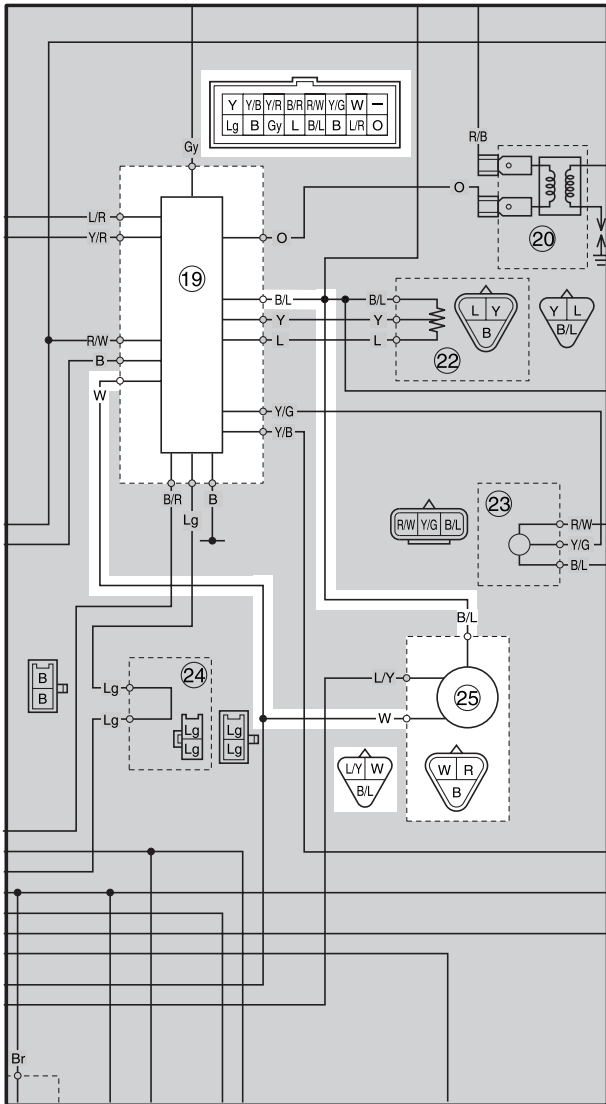

- ①9 Igniter unit
- ②5 Speed sensor

1. Wireharness

- Check the wireharness for continuity. Refer to "CIRCUIT DIAGRAM".
- Is the wireharness OK?

↓ YES ↓ NO

Repair or replace the wireharness.

EB812401

2. Speedometer


- Check the speedometer operation.
- Is the speedometer OK?

↓ YES ↓ NO

Replace the igniter unit.

Replace the speed sensor.

**3. Lean angle cut-off switch
CIRCUIT DIAGRAM**

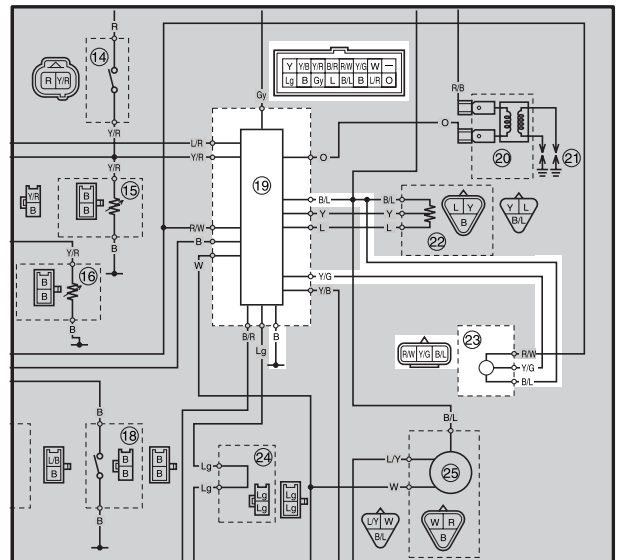

- ①9 Igniter unit
- ②3 Lean angle cut-off switch

1. Wireharness

- Check the wireharness for continuity. Refer to "CIRCUIT DIAGRAM".
- Is the wireharness OK?

↓ YES ↓ NO

Repair or replace the wireharness.

EB812401

2. Lean angle cut-off switch

- Replace with a lean angle cut-off switch that is operating correctly, and if the diagnosis generates a lean angle cut-off switch condition code again, replace the lean angle cut-off switch.
- Is the lean angle cut-off switch OK?

 YES

 NO

Replace the igniter unit.

Replace the lean angle cut-off switch.

?

TRBL
SHTG

9

**CHAPTER 9
TROUBLESHOOTING**

STARTING PROBLEMS 9-1

ENGINE 9-1

FUEL SYSTEM 9-1

ELECTRICAL SYSTEM 9-1

INCORRECT ENGINE IDLING SPEED 9-2

ENGINE 9-2

FUEL SYSTEM 9-2

ELECTRICAL SYSTEMS 9-2

POOR MEDIUM-AND-HIGH-SPEED PERFORMANCE 9-2

ENGINE 9-2

FUEL SYSTEM 9-2

FAULTY CLUTCH 9-3

ENGINE OPERATE BUT SCOOTER WILL NOT MOVE 9-3

POOR STARTING PERFORMANCE 9-3

POOR SPEED PERFORMANCE 9-3

OVERHEATING 9-3

ENGINE 9-3

COOLING SYSTEM 9-3

FUEL SYSTEM 9-3

OVERCOOLING 9-3

COOLING SYSTEM 9-3

POOR BRAKING PERFORMANCE 9-4

FAULTY FRONT FORK LEGS 9-4

LEAKING OIL 9-4

MALFUNCTION 9-4

UNSTABLE HANDLING 9-4

FAULTY SIGNALING SYSTEM 9-5

HEADLIGHT DOES NOT LIGHT 9-5

HEADLIGHT BULB BURNT OUT 9-5

TURN SIGNAL DOES NOT LIGHT 9-5

TURN SIGNAL BLINKS SLOWLY 9-5

TURN SIGNAL REMAINS LIT 9-5

TURN SIGNAL BLINKS QUICKLY 9-5

HORN DOES NOT SOUND 9-5

TRBL SHTG

?

TROUBLESHOOTING**NOTE:**

The following guide for troubleshooting does not cover all the possible causes of trouble. It should be helpful, however, as a guide to basic troubleshooting. Refer to the relative procedure in this manual for inspection, adjustment, and replacement of parts.

STARTING FAILURE/HARD STARTING**ENGINE****Cylinder(-s) and cylinder head(-s)**

- Loose spark plug
- Loose cylinder head or cylinder
- Damaged cylinder head gasket
- Damaged cylinder gasket
- Worn or damaged cylinder
- Incorrect valve clearance
- Improperly sealed valve
- Incorrect valve-to-valve-seat contact
- Incorrect valve timing
- Faulty valve spring
- Seized valve

Piston(-s) and piston ring(-s)

- Improperly installed piston ring
- Damaged, worn or fatigued piston ring
- Seized piston ring
- Seized or damaged piston

Air filter

- Improperly installed air filter
- Clogged air filter element

Crankcase and crankshaft

- Improperly assembled crankcase
- Seized crankshaft

ELECTRICAL SYSTEMS**Battery**

- Improperly charged battery
- Faulty battery

Fuse(-s)

- Blown, damaged or incorrect fuse
- Improperly installed fuse

Spark plug(-s)

- Incorrect spark plug gap
- Incorrect spark plug heat range
- Fouled spark plug
- Worn or damaged electrode
- Worn or damaged insulator
- Faulty spark plug cap

FUEL SYSTEM**Fuel tank**

- Empty fuel tank
- Clogged fuel tank cap breather hole
- Deteriorated or contaminated fuel
- Clogged or damaged fuel hose

Fuel pump

- Faulty fuel pump
- Faulty fuel pump relay
- Damaged vacuum hose
- Improperly routed hose

Carburetor(-s)

- Deteriorated or contaminated fuel
- Clogged pilot jet
- Clogged pilot air passage
- Sucked-in air
- Damaged float
- Worn needle valve
- Improperly installed needle valve seat
- Incorrect fuel level
- Improperly adjusted pilot air screw
- Improperly installed pilot jet
- Clogged starter jet
- Clogged emulsion tube

Autochoke unit

- Faulty starter plunger
- Improperly adjusted starter cable
- Faulty igniter unit
- Faulty thermo switch

Ignition coil(-s)

- Broken or shorted primary or secondary coils
- Faulty spark plug lead
- Cracked or broken ignition coil body

Ignition system

- Faulty ignitor unit
- Faulty pickup coil
- Broken generator rotor woodruff key

INCORRECT ENGINE IDLING SPEED/ POOR MEDIUM-AND-HIGH-SPEED PERFORMANCE

TRBL
SHTG



Switches and wiring

- Faulty main switch
- Faulty engine stop switch
- Broken or shorted wiring
- Faulty front, rear or both brake switches
- Faulty start switch
- Faulty sidestand switch
- Improperly grounded circuit
- Loose connections

Starting system

- Faulty starter motor
- Faulty starter relay
- Faulty starting circuit cut-off relay
- Faulty starter clutch

EAS00847

INCORRECT ENGINE IDLING SPEED ENGINE

Cylinder(-s) and cylinder head(-s)

- Incorrect valve clearance
- Damaged valve train components

Air filter

- Clogged air filter element

FUEL SYSTEM

Carburetor(-s)

- Faulty starter plunger
- Loose or clogged pilot jet
- Loose or clogged pilot air jet
- Damaged or loose carburetor joint
- Improperly synchronized carburetors
- Improperly adjusted engine idling speed (throttle stop screw)
- Improper throttle cable free play (at the flange of the throttle grip)
- Flooded carburetor

Autochoke unit

- Faulty starter plunger
- Improperly adjusted starter cable
- Faulty ignitor unit

ELECTRICAL SYSTEMS

Battery

- Improperly charged battery
- Faulty battery

Spark plug(-s)

- Incorrect spark plug gap
- Incorrect spark plug heat range
- Fouled spark plug
- Worn or damaged electrode
- Worn or damaged insulator
- Faulty spark plug cap

Ignition coil(-s)

- Faulty spark plug lead

Ignition system

- Faulty ignitor unit
- Faulty pickup coil

EAS00849

POOR MEDIUM-AND-HIGH-SPEED PERFORMANCE

Refer to "STARTING PROBLEMS".

ENGINE

Air filter

- Clogged air filter element

Air intake system

- Bent, clogged or disconnected carburetor air vent hose
- Clogged or leaking air duct

FUEL SYSTEM

Carburetor(-s)

- Faulty diaphragm
- Incorrect fuel level
- Loose or clogged main jet

Fuel pump

- Faulty fuel pump

EAS00853

FAULTY CLUTCH

ENGINE OPERATES BUT SCOOTER WILL NOT MOVE

V-belt

- Bent, damaged or worn V-belt
- Slipping V-belt

Primary pulley cam and primary pulley slider

- Damaged or worn primary pulley cam
- Damaged or worn primary pulley slider

Clutch spring(-s)

- Damaged clutch spring

Transmission gear(-s)

- Damaged transmission gear

CLUTCH SLIPS

Clutch shoe spring(-s)

- Damaged, loose or worn clutch shoe spring

Clutch shoe(-s)

- Damaged or worn clutch shoe

Primary sliding sheave

- Seized primary sliding sheave

POOR STARTING PERFORMANCE

V-belt

- V-belt slips
- Oil or grease on the V-belt

Primary sliding sheave

- Faulty operation
- Worn pin groove
- Worn pin

Clutch shoe(-s)

- Bent, damaged or worn clutch shoe

POOR SPEED PERFORMANCE

V-belt

- Oil or grease on the V-belt

Primary pulley weight(-s)

- Faulty operation
- Worn primary pulley weight

Primary fixed sheave

- Worn primary fixed sheave

Primary sliding sheave

- Worn primary sliding sheave

Secondary fixed sheave

- Worn secondary fixed sheave

Secondary sliding sheave

- Worn secondary sliding sheave

EAS00855

OVERHEATING

ENGINE

Clogged coolant passages

Cylinder head(-s) and piston(-s)

- Heavy carbon buildup

Engine oil

- Incorrect oil level
- Incorrect oil viscosity
- Inferior oil quality

COOLING SYSTEM

Coolant

- Low coolant level

Radiator

- Damaged or leaking radiator
- Faulty radiator cap
- Bent or damaged radiator fins

Water pump

Damaged or defective water pump

Thermostat

Thermostat stays closed

Oil cooler

Clogged or damaged oil cooler

Hose(-s) and pipe(-s)

Damaged hose

Improperly connected hose

Damaged pipe

Improperly connected pipe

FUEL SYSTEM

Carburetor(-s)

- Incorrect main jet setting
- Incorrect fuel level
- Air leak at carburetor joint

Air filter

- Clogged air filter element

CHASSIS

Brake(-s)

- Dragging brake

ELECTRICAL SYSTEMS

Spark plug(-s)

- Incorrect spark plug gap
- Incorrect spark plug heat range

Ignition system

- Faulty ignitor unit

EAS00856

OVERCOOLING

COOLING SYSTEM

Thermostat

Thermostat stays open

POOR BRAKING PERFORMANCE/FAULTY FRONT FORK LEGS/UNSTABLE HANDLING

TRBL
SHTG



EAS00857

POOR BRAKING PERFORMANCE

Disc brake

- Worn brake pad
- Worn brake disc
- Air in hydraulic brake system
- Leaking brake fluid
- Faulty brake caliper kit
- Faulty brake caliper seal
- Loose union bolt
- Damaged brake hose
- Oil or grease on the brake disc
- Oil or grease on the brake pad
- Incorrect brake fluid level

EAS00861

FAULTY FRONT FORK LEGS

LEAKING OIL

- Bent, damaged or rusty inner tube
- Cracked or damaged outer tube
- Improperly installed oil seal.
- Damaged oil seal lip
- Incorrect oil level (high)
- Loose damper rod bolt
- Damaged damper rod bolt copper washer
- Cracked or damaged cap bolt O-ring

MALFUNCTION

- Bent, deformed or damaged inner tube
- Bent, deformed or damaged outer tube
- Damaged fork spring
- Worn or damaged outer tube bushing
- Bent or damaged damper rod
- Incorrect oil viscosity
- Incorrect oil level

EAS00862

UNSTABLE HANDLING

Handlebar

- Bent or improperly installed handlebar

Steering

- Improperly installed upper bracket
- Improperly installed lower bracket (improperly tightened ring nut)
- Bent steering stem
- Damaged ball bearing or bearing race

Front fork leg(-s)

- Uneven oil levels (both front fork legs)
- Uneven fork spring tension (both front fork legs)
- Broken fork spring
- Bent or damaged inner tube
- Bent or damaged outer tube

Swingarm

- Worn bearing or bushing
- Bent or damaged swingarm

Rear shock absorber assembly(-ies)

- Faulty rear shock absorber spring
- Leaking oil or gas

Tire(-s)

- Uneven tire pressures (front and rear)
- Incorrect tire pressure
- Uneven tire wear

Wheel(-s)

- Incorrect wheel balance
- Deformed cast wheel
- Damaged wheel bearing
- Bent or loose wheel axle
- Excessive wheel runout

Frame

- Bent frame
- Damaged steering head pipe
- Improperly installed bearing race



EAS00866

FAULTY SIGNALING SYSTEM

HEADLIGHT DOES NOT LIGHT

- Wrong headlight bulb
- Too many electrical accessories
- Hard charging
- Incorrect connection
- Incorrect ground
- Poor contacts (main or light switch)
- Burnt-out headlight bulb

HEADLIGHT BULB BURNT OUT

- Wrong headlight bulb
- Faulty battery
- Faulty rectifier/regulator
- Incorrect ground
- Faulty main switch
- Faulty light switch
- Headlight bulb life expired

TURN SIGNAL DOES NOT LIGHT

- Faulty turn signal switch
- Faulty flasher relay
- Burnt-out turn signal bulb
- Incorrect connection
- Damaged or defective wire harness
- Incorrect ground
- Discharged battery
- Blown, damaged or incorrect fuse

TURN SIGNAL BLINKS SLOWLY

- Faulty flasher relay
- Faulty main switch
- Faulty turn signal switch
- Incorrect turn signal bulb

TURN SIGNAL REMAINS LIT

- Faulty flasher relay
- Burnt-out turn signal bulb


TURN SIGNAL BLINKS QUICKLY

- Incorrect turn signal bulb
- Faulty flasher relay
- Burnt-out turn signal bulb

HORN DOES NOT SOUND

- Improperly adjusted horn
- Damaged or faulty horn
- Faulty main switch
- Faulty horn switch
- Faulty battery
- Blown, damaged or incorrect fuse
- Faulty wire harness

XP500 WIRING DIAGRAM (for EUR)

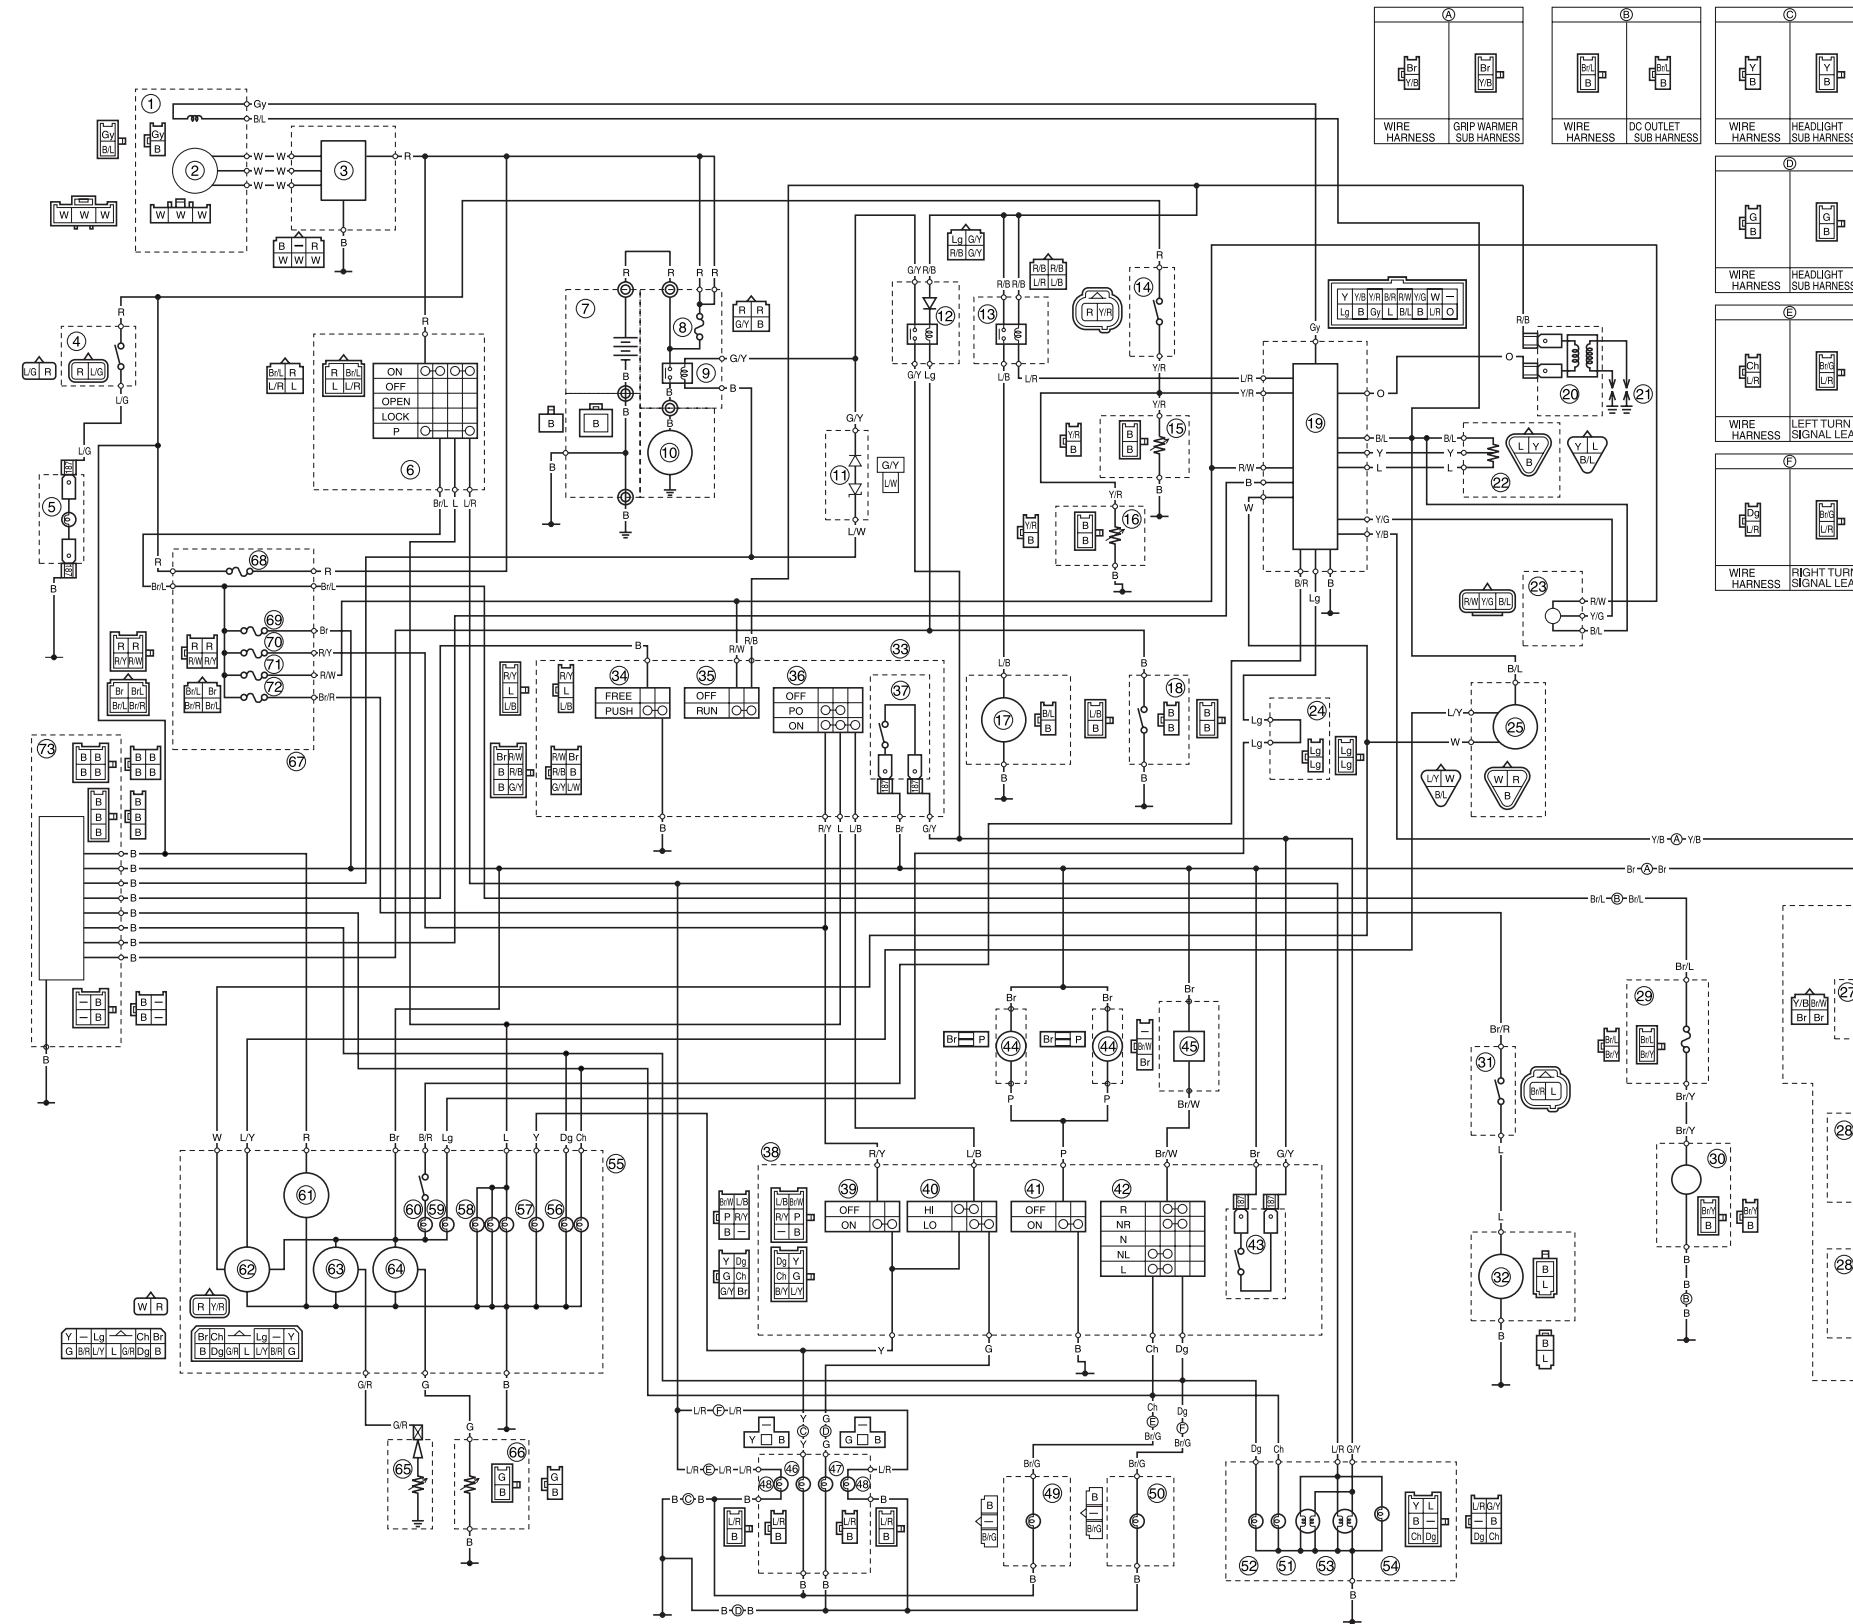


- ① Pickup coil
- ② A.C. magneto
- ③ Rectifier / regulator
- ④ Box light switch
- ⑤ Box light
- ⑥ Main switch
- ⑦ Battery
- ⑧ Main fuse
- ⑨ Starter relay
- ⑩ Starter motor
- ⑪ Diode
- ⑫ Starting circuit cut-off relay
- ⑬ Fuel pump relay
- ⑭ Thermo switch (Auto choke)
- ⑮ Auto choke 1
- ⑯ Auto choke 2
- ⑰ Fuel pump
- ⑱ Sidestand switch
- ⑲ Ignition unit
- ⑳ Ignition coil
- ㉑ Spark plug
- ㉒ Throttle position sensor
- ㉓ Lean angle cut-off switch
- ㉔ Reset coupler
- ㉕ Speed sensor
- ㉖ Grip warmer switch (OPTION)
- ㉗ Grip warmer relay (OPTION)
- ㉘ Grip warmer (OPTION)
- ㉙ DC outlet fuse
- ㉚ DC outlet
- ㉛ Thermo switch (Fan)
- ㉜ Radiator fan motor
- ㉝ Right handlebar switch
- ㉞ Start switch
- ㉟ Engine stop switch
- ㊱ Light switch
- ㊲ Front brake light switch
- ㊳ Left handlebar switch
- ㊴ Pass switch
- ㊵ Dimmer switch
- ㊶ Horn switch
- ㊷ Turn signal switch
- ㊸ Rear brake light switch
- ㊹ Horn
- ㊺ Flasher relay
- ㊻ Headlight (Hi)
- ㊼ Headlight (Low)
- ㊽ Auxiliary light
- ㊾ Front turn signal light (Left)
- ㊿ Front turn signal light (Right)
- 1 Front turn signal light (Left)
- 2 Rear turn signal light (Right)
- 3 Tail / brake light
- 4 License plate light
- 5 Meter assembly
- 6 Trun signal indicator light
- 7 Hi beam indicator light
- 8 Meter light
- 9 V-belt indicator light
- 10 Engine oil change indicator light
- 11 Clock
- 12 Speedometer
- 13 Water temperature gauge
- 14 Fuel gauge
- 15 Thermo unit (Water temperature)
- 16 Fuel level sender
- 17 Backup fuse
- 18 Signal fuse
- 19 Headlight fuse
- 20 Ignition fuse
- 21 Radiator fan fuse
- 22 Alarm (OPTION)

COLOR CODE

B	Black	Br/G	Brown/Green
Br	Brown	Br/L	Brown/Blue
Ch	Chocolate	Br/R	Brown/Red
Dg	Dark green	Br/Y	Brown/Yellow
G	Green	Br/W	Brown/White
Gy	Gray	G/R	Green/Red
L	Blue	G/Y	Green/Yellow
Lg	Light green	L/B	Blue/Black
O	Orange	L/G	Blue/Green
P	Pink	L/R	Blue/Red
R	Red	L/Y	Blue/Yellow
Y	Yellow	L/W	Blue/White
W	White	R/B	Red/Black
B/R	Black/Red	R/Y	Red/Yellow
B/Y	Black/Yellow	R/W	Red/White
B/W	Black/White	Y/B	Yellow/Black
B/L	Black/Blue	Y/R	Yellow/Red

XP500 WIRING DIAGRAM (for OCE)

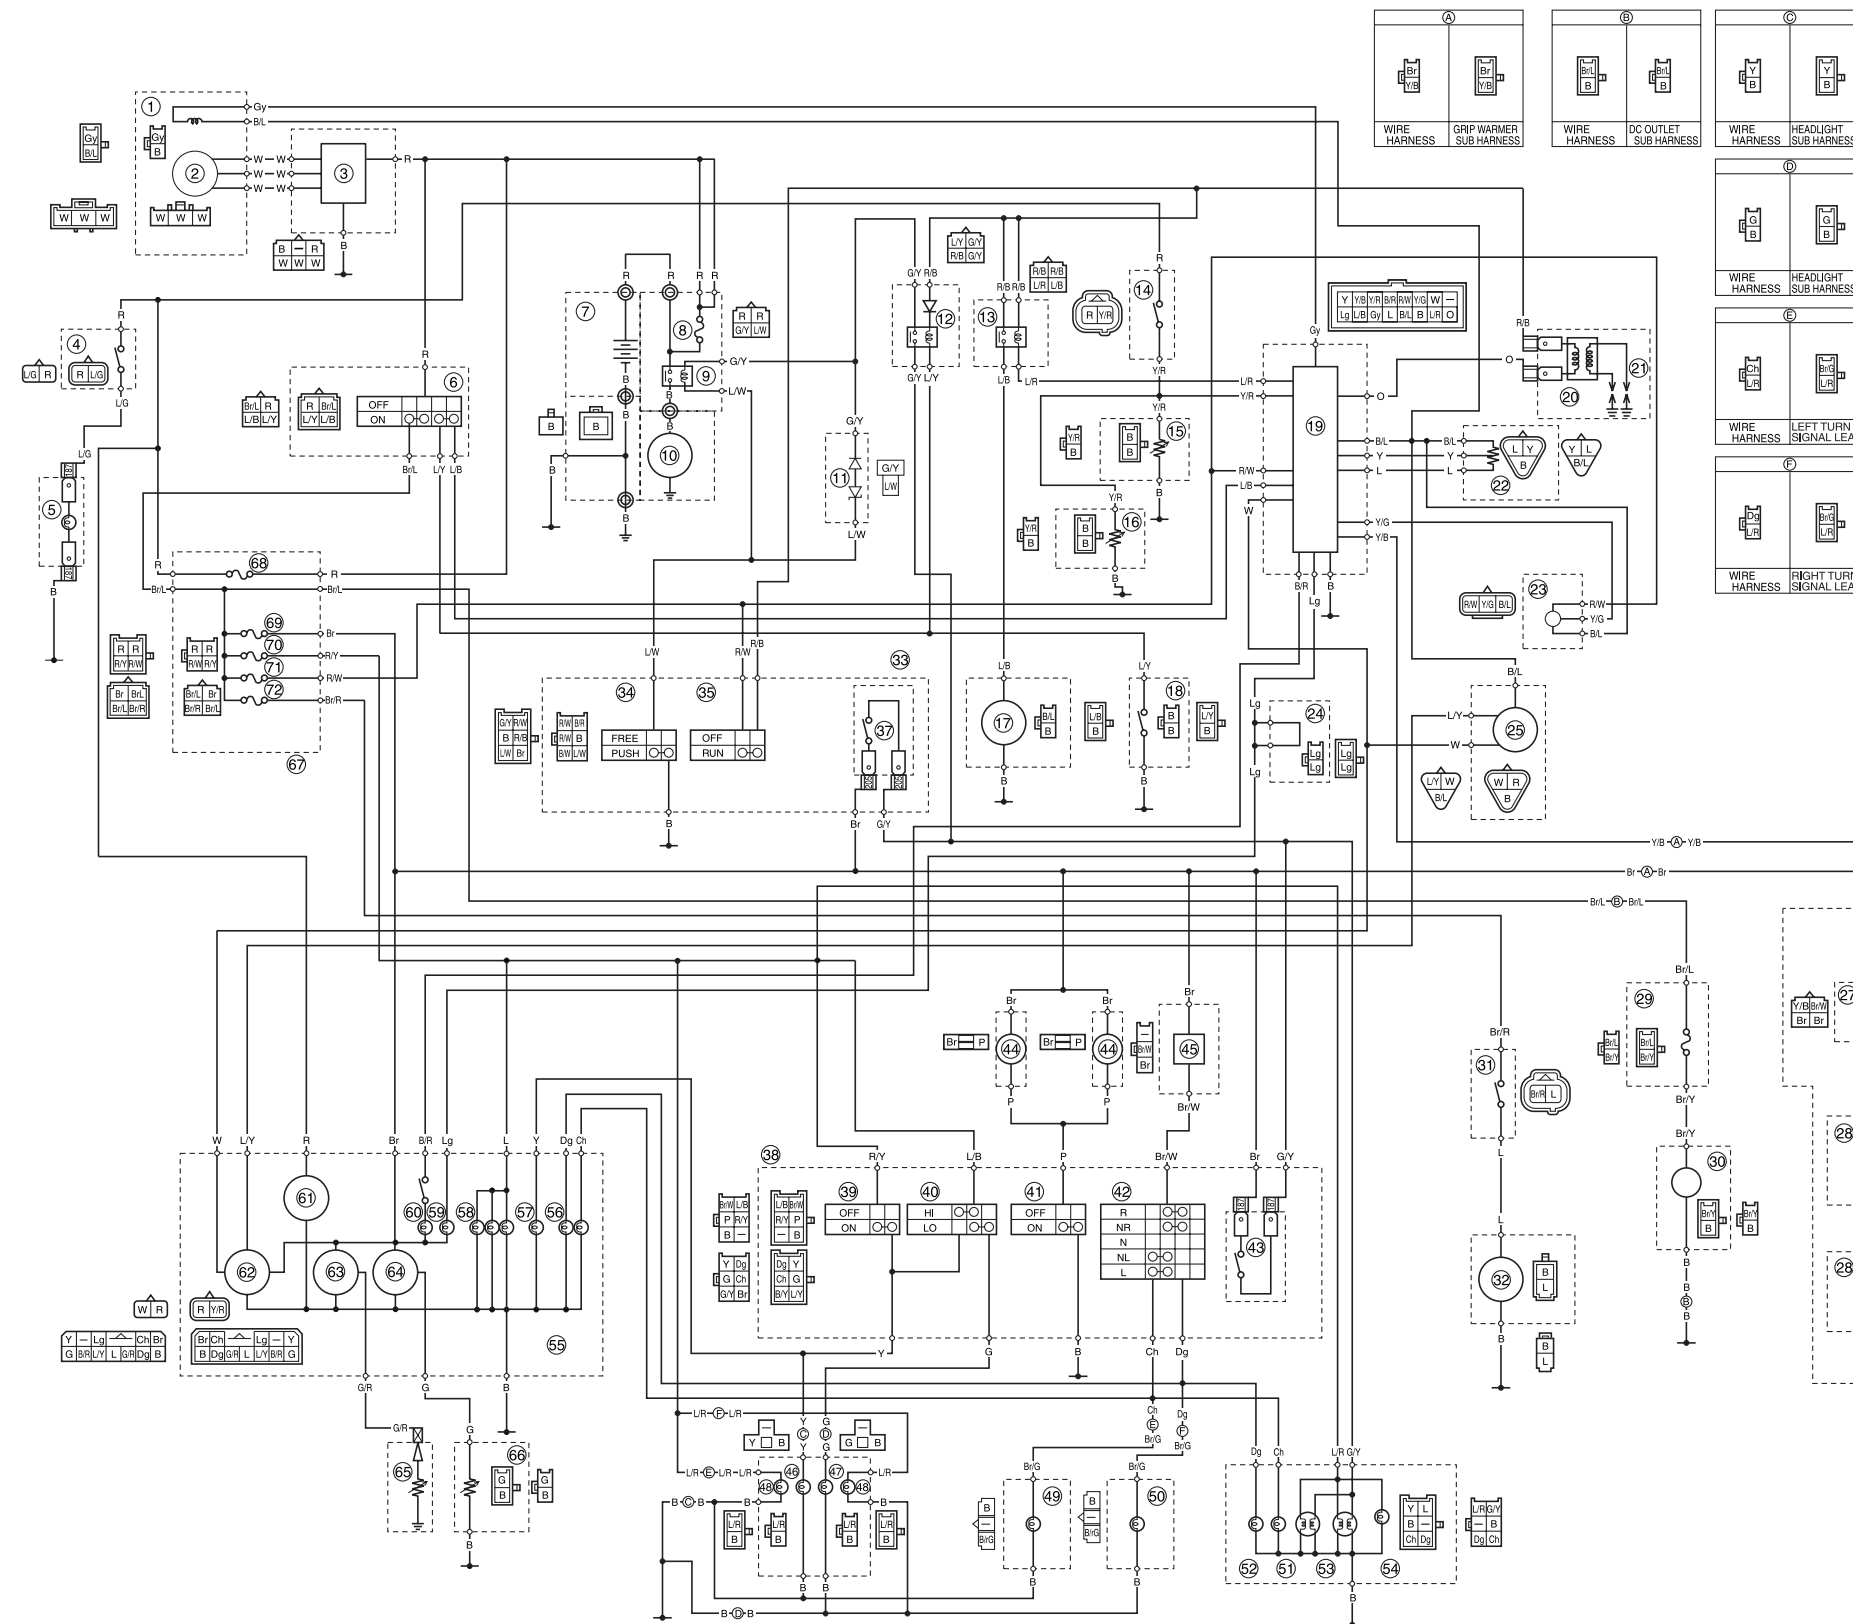

- ① Pickup coil
- ② A.C. magneto
- ③ Rectifier/regulator
- ④ Box light switch
- ⑤ Box light
- ⑥ Main switch
- ⑦ Battery
- ⑧ Main fuse
- ⑨ Starter relay
- ⑩ Starter motor
- ⑪ Diode
- ⑫ Starting circuit cut-off relay
- ⑬ Fuel pump relay
- ⑭ Thermo switch (Auto choke)
- ⑮ Auto choke 1
- ⑯ Auto choke 2
- ⑰ Fuel pump
- ⑱ Sidestand switch
- ⑲ Igniter unit
- ⑳ Ignition coil
- ㉑ Spark plug
- ㉒ Throttle position sensor
- ㉓ Lean angle cut-off switch
- ㉔ Reset coupler
- ㉕ Speed sensor
- ㉖ Grip warmer switch (OPTION)
- ㉗ Grip warmer relay (OPTION)
- ㉘ Grip warmer (OPTION)
- ㉙ DC outlet fuse
- ㉚ DC outlet
- ㉛ Thermo switch (Fan)
- ㉜ Radiator fan motor
- ㉝ Right handlebar switch
- ㉞ Start switch
- ㉟ Engine stop switch
- ㊱ Front brake light switch
- ㊲ Left handlebar switch
- ㊳ Pass switch
- ㊴ Dimmer switch
- ㊵ Horn switch
- ㊶ Turn signal switch
- ㊷ Rear brake light switch
- ㊸ Horn
- ㊹ Flasher relay
- ㊺ Headlight (Hi)
- ㊻ Headlight (Low)
- ㊼ Auxiliary light
- ㊽ Front turn signal light (Left)
- ㊾ Front turn signal light (Right)
- ㊿ Rear turn signal light (Left)
- 1 Front turn signal light (Right)
- 2 Tail / brake light
- 3 License plate light
- 4 Meter assembly
- 5 Trun signal indicator light
- 6 Hi beam indicator light
- 7 Meter light
- 8 V-belt indicator light
- 9 Engine oil change indicator light
- 10 Clock
- 11 Speedometer
- 12 Water temperature gauge
- 13 Fuel gauge
- 14 Thermo unit (Water temperature)
- 15 Fuel level sender
- 16 Backup fuse
- 17 Signal fuse
- 18 Headlight fuse
- 19 Ignition fuse
- 20 Radiator fan fuse

COLOR CODE

B	Black	Br/G	Brown/Green
Br	Brown	Br/L	Brown/Blue
Ch	Chocolate	Br/R	Brown/Red
Dg	Dark green	Br/Y	Brown/Yellow
G	Green	Br/W	Brown/White
Gy	Gray	G/R	Green/Red
L	Blue	G/Y	Green/Yellow
Lg	Light green	L/B	Blue/Black
O	Orange	L/G	Blue/Green
P	Pink	L/R	Blue/Red
R	Red	L/Y	Blue/Yellow
Y	Yellow	L/W	Blue/White
W	White	R/B	Red/Black
B/R	Black/Red	R/Y	Red/Yellow
B/Y	Black/Yellow	R/W	Red/White
B/W	Black/White	Y/B	Yellow/Black
B/L	Black/Blue	Y/R	Yellow/Red